


JVC

SERVICE MANUAL

DIGITAL HD VIDEO CAMERA

JY-HD10US

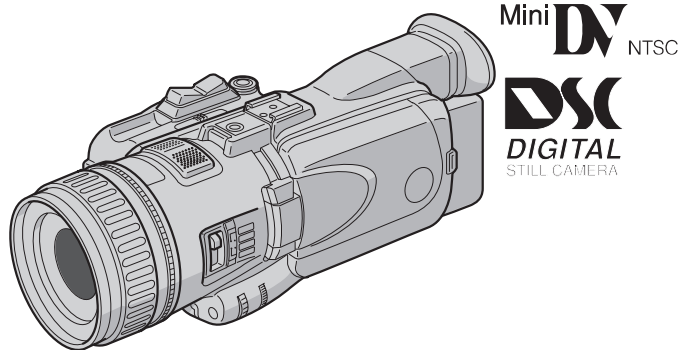

JY-HD10US [M3D8L3]

For disassembling and assembling of MECHANISM ASSEMBLY, refer to the SERVICE MANUAL No.86700 (MECHANISM ASSEMBLY).
Regarding service information other than these sections, refer to the service manual No. 86772 (GR-HD1US).
Also, be sure to note important safety precautions provided in the service manual.

SPECIFICATION

■Camcorder

For General	Power supply		DC 6.3 V (Using AC Power Adapter/Charger) DC 7.2 V (Using battery pack)
	Power consumption	LCD monitor off, viewfinder on	Approx. 6.8 W (DV)/8.0 W (HD, SD)
		LCD monitor on, viewfinder off	Approx. 8.5 W (DV)/9.7 W (HD, SD)
	Dimensions (W x H x D)		114.5 mm × 99 mm × 271.5 mm (4-9/16" × 3-15/16" × 10-3/4") (with the LCD monitor closed and the viewfinder pushed back in)
	Weight		Approx. 1270 g (2.8 lbs) (without cassette, memory card and battery) Approx. 1490 g (3.3 lbs) (incl. cassette, memory card and battery)
	Operating temperature		0°C to 40°C (32°F to 104°F)
	Operating humidity		35% to 80%
	Storage temperature		-20°C to 50°C (-4°F to 122°F)
	Pickup		1/3" CCD
	Lens		F 1.8, f = 5.2 mm to 52 mm, 10:1 power zoom lens
	Filter diameter		Ø52 mm
	LCD monitor		3.5" diagonally measured, LCD panel/TFT active matrix system
	Viewfinder		Electronic viewfinder with 0.44" color LCD
	Speaker		Monaural
For Digital Video Camera	Signal format		NTSC standard
	Cassette		Mini DV cassette
	Tape speed		SP: 18.8 mm/s LP: 12.5 mm/s
	Maximum recording time (using 80 min. cassette)		SP: 80 min. LP: 120 min.
For Digital Still Camera	Storage media		SD Memory Card/MultiMediaCard
	Compression system		JPEG (compatible)
	File size		2 modes (1280 × 960 pixels/640 × 480 pixels)
	Picture quality		2 modes (FINE/STANDARD)
For Connectors	S/AV	S-Video input	Y: 0.8 V to 1.2 V (p-p), 75Ω, analog C: 0.2 V to 0.4 V (p-p), 75Ω, analog
		S-Video output	Y: 1.0 V (p-p), 75Ω, analog C: 0.29 V (p-p), 75Ω, analog
		Video input	Y: 0.8 V to 1.2 V (p-p), 75Ω, analog
		Video output	Y: 1.0 V (p-p), 75Ω, analog
		Audio input	300 mV (rms), 50 kΩ, analog, stereo
		Audio output	300 mV (rms), 1 kΩ, analog, stereo
	Headphone output		Stereo
	Microphone input		Stereo
	i.LINK	Input/output	4-pin, IEEE 1394 compliant
	USB		5-pin
	Y/Pb/Pr output		Y: 1.0 V (p-p), 75Ω, analog Pb: 0.7 V (p-p), 75Ω, analog Pr: 0.7 V (p-p), 75Ω, analog

■AC Power Adapter/Charger

For General	Power requirement	U.S.A. and Canada	AC 120 V, 60 Hz
		Other countries	AC 110 V to 240 V, 50 Hz/60 Hz
	Power consumption		23W
	Output	Charge	DC 7.2 V, 1.2 A
		VTR	DC 6.3 V, 1.8 A

Specifications shown are for SP mode unless otherwise indicated. E & O.E. Design and specifications subject to change without notice.

JVC SERVICE & ENGINEERING COMPANY OF AMERICA
DIVISION OF JVC AMERICAS CORP.

www.jvcservice.com(US Only)

JVC CANADA INC.

Head office : 21 Finchdene Square Scarborough, Ontario M1X 1A7

(416)293-1311


JVC®

JVC

SERVICE MANUAL

DIGITAL HD VIDEO CAMERA

GR-HD1US

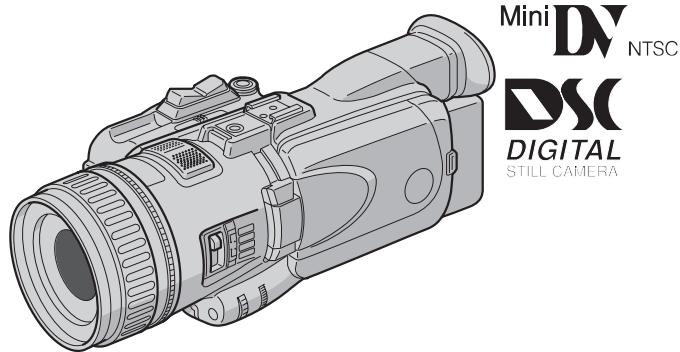

GR-HD1US [M3D8L3]

For disassembling and assembling of MECHANISM ASSEMBLY, refer to the SERVICE MANUAL No.86700 (MECHANISM ASSEMBLY).

TABLE OF CONTENTS

1	PRECAUTIONS	1-3
2	SPECIFIC SERVICE INSTRUCTIONS	1-5
3	DISASSEMBLY	1-6
4	ADJUSTMENT	1-19
5	TROUBLE SHOOTING	1-22

SPECIFICATION

■Camcorder

For General	Power supply		DC 6.3 V (Using AC Power Adapter/Charger) DC 7.2 V (Using battery pack)
	Power consumption	LCD monitor off, viewfinder on	Approx. 6.8 W (DV)/8.0 W (HD, SD)
		LCD monitor on, viewfinder off	Approx. 8.5 W (DV)/9.7 W (HD, SD)
	Dimensions (W x H x D)		114.5 mm × 99 mm × 271.5 mm (4-9/16" × 3-15/16" × 10-3/4") (with the LCD monitor closed and the viewfinder pushed back in)
	Weight		Approx. 1270 g (2.8 lbs) (without cassette, memory card and battery) Approx. 1490 g (3.3 lbs) (incl. cassette, memory card and battery)
	Operating temperature		0°C to 40°C (32°F to 104°F)
	Operating humidity		35% to 80%
	Storage temperature		-20°C to 50°C (-4°F to 122°F)
	Pickup		1/3" CCD
	Lens		F 1.8, f = 5.2 mm to 52 mm, 10:1 power zoom lens
	Filter diameter		Ø52 mm
	LCD monitor		3.5" diagonally measured, LCD panel/TFT active matrix system
	Viewfinder		Electronic viewfinder with 0.44" color LCD
	Speaker		Monaural
For Digital Video Camera	Signal format		NTSC standard
	Cassette		Mini DV cassette
	Tape speed		SP: 18.8 mm/s LP: 12.5 mm/s
	Maximum recording time (using 80 min. cassette)		SP: 80 min. LP: 120 min.
For Digital Still Camera	Storage media		SD Memory Card/MultiMediaCard
	Compression system		JPEG (compatible)
	File size		2 modes (1280 × 960 pixels/640 × 480 pixels)
	Picture quality		2 modes (FINE/STANDARD)
For Connectors	S/AV	S-Video input	Y: 0.8 V to 1.2 V (p-p), 75Ω, analog C: 0.2 V to 0.4 V (p-p), 75Ω, analog
		S-Video output	Y: 1.0 V (p-p), 75Ω, analog C: 0.29 V (p-p), 75Ω, analog
		Video input	Y: 0.8 V to 1.2 V (p-p), 75Ω, analog
		Video output	Y: 1.0 V (p-p), 75Ω, analog
		Audio input	300 mV (rms), 50 kΩ, analog, stereo
		Audio output	300 mV (rms), 1 kΩ, analog, stereo
	Headphone output		Stereo
	Microphone input		Stereo
	i.LINK	Input/output	4-pin, IEEE 1394 compliant
	USB		5-pin
	Y/Pb/Pr output		Y: 1.0 V (p-p), 75Ω, analog Pb: 0.7 V (p-p), 75Ω, analog Pr: 0.7 V (p-p), 75Ω, analog

■AC Power Adapter/Charger

For General	Power requirement	U.S.A. and Canada	AC 120 Vd, 60 Hz
		Other countries	AC 110 V to 240 Vd, 50 Hz/60 Hz
	Power consumption		23W
	Output	Charge	DC 7.2 V, 1.2 A
		VTR	DC 6.3 V, 1.8 A

Specifications shown are for SP mode unless otherwise indicated. E & O.E. Design and specifications subject to change without notice.

SECTION 1 PRECAUTIONS

1.1 SAFETY PRECAUTIONS

Prior to shipment from the factory, JVC products are strictly inspected to conform with the recognized product safety and electrical codes of the countries in which they are to be sold. However, in order to maintain such compliance, it is equally important to implement the following precautions when a set is being serviced.

1.1.1 Precautions during Servicing

- (1) Locations requiring special caution are denoted by labels and inscriptions on the cabinet, chassis and certain parts of the product. When performing service, be sure to read and comply with these and other cautionary notices appearing in the operation and service manuals.
- (2) Parts identified by the  symbol and shaded () parts are critical for safety. Replace only with specified part numbers.

NOTE :

Parts in this category also include those specified to comply with X-ray emission standards for products using cathode ray tubes and those specified for compliance with various regulations regarding spurious radiation emission.

- (3) Fuse replacement caution notice.
Caution for continued protection against fire hazard.
Replace only with same type and rated fuse(s) as specified.
- (4) Use specified internal wiring. Note especially:
 - Wires covered with PVC tubing
 - Double insulated wires
 - High voltage leads
- (5) Use specified insulating materials for hazardous live parts.
Note especially:
 - Insulation Tape
 - PVC tubing
 - Spacers
 - Insulation sheets for transistors
 - Barrier
- (6) When replacing AC primary side components (transformers, power cords, noise blocking capacitors, etc.) wrap ends of wires securely about the terminals before soldering.

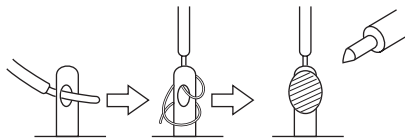


Fig.1-1-1

- (7) Observe that wires do not contact heat producing parts (heatsinks, oxide metal film resistors, fusible resistors, etc.)
- (8) Check that replaced wires do not contact sharp edged or pointed parts.
- (9) When a power cord has been replaced, check that 10-15 kg of force in any direction will not loosen it.

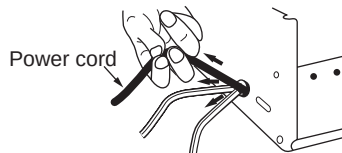


Fig.1-1-2

- (10) Also check areas surrounding repaired locations.
- (11) Products using cathode ray tubes (CRTs) In regard to such products, the cathode ray tubes themselves, the high voltage circuits, and related circuits are specified for compliance with recognized codes pertaining to X-ray

emission. Consequently, when servicing these products, replace the cathode ray tubes and other parts with only the specified parts. Under no circumstances attempt to modify these circuits. Unauthorized modification can increase the high voltage value and cause X-ray emission from the cathode ray tube.


- (12) Crimp type wire connector In such cases as when replacing the power transformer in sets where the connections between the power cord and power transformer primary lead wires are performed using crimp type connectors, if replacing the connectors is unavoidable, in order to prevent safety hazards, perform carefully and precisely according to the following steps.

• **Connector part number** :E03830-001

• **Required tool** : Connector crimping tool of the proper type which will not damage insulated parts.

• **Replacement procedure**

- a) Remove the old connector by cutting the wires at a point close to the connector. Important : Do not reuse a connector (discard it).

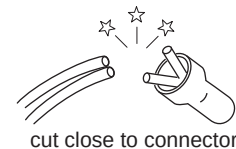

cut close to connector

Fig.1-1-3

- b) Strip about 15 mm of the insulation from the ends of the wires. If the wires are stranded, twist the strands to avoid frayed conductors.

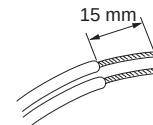


Fig.1-1-4

- c) Align the lengths of the wires to be connected. Insert the wires fully into the connector.

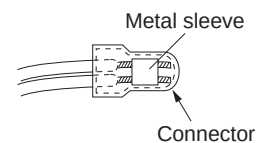


Fig.1-1-5

- d) As shown in Fig.1-1-6, use the crimping tool to crimp the metal sleeve at the center position. Be sure to crimp fully to the complete closure of the tool.

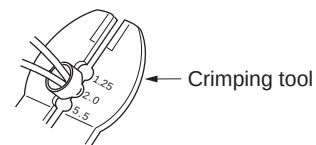


Fig.1-1-6

- e) Check the four points noted in Fig.1-1-7.


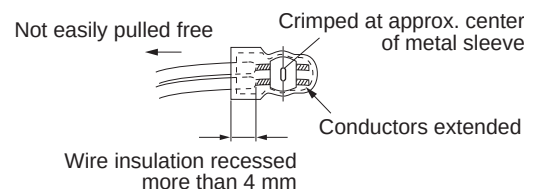


Fig.1-1-7


1.1.2 Safety Check after Servicing

Examine the area surrounding the repaired location for damage or deterioration. Observe that screws, parts and wires have been returned to original positions. Afterwards, perform the following tests and confirm the specified values in order to verify compliance with safety standards.


- (1) Insulation resistance test
- Confirm the specified insulation resistance or greater between power cord plug prongs and externally exposed parts of the set (RF terminals, antenna terminals, video and audio input and output terminals, microphone jacks, earphone jacks, etc.).See table 1 below.
- (2) Dielectric strength test
- Confirm specified dielectric strength or greater between power cord plug prongs and exposed accessible parts of the set (RF terminals, antenna terminals, video and audio input and output terminals, microphone jacks, earphone jacks, etc.). See Fig.1-1-11 below.
- (3) Clearance distance
- When replacing primary circuit components, confirm specified clearance distance (d), (d') between soldered terminals, and between terminals and surrounding metallic parts. See Fig.1-1-11 below.

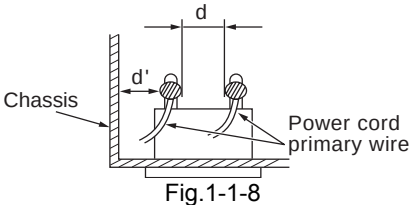

- (4) Leakage current test
- Confirm specified or lower leakage current between earth ground/power cord plug prongs and externally exposed accessible parts (RF terminals, antenna terminals, video and audio input and output terminals, microphone jacks, earphone jacks, etc.).
- Measuring Method : (Power ON)Insert load Z between earth ground/power cord plug prongs and externally exposed accessible parts. Use an AC voltmeter to measure across both terminals of load Z. See Fig.1-1-9 and following Fig.1-1-12.

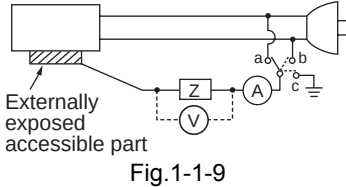

- (5) Grounding (Class 1 model only)
- Confirm specified or lower grounding impedance between earth pin in AC inlet and externally exposed accessible parts (Video in, Video out, Audio in, Audio out or Fixing screw etc.).Measuring Method:
- Connect milli ohm meter between earth pin in AC inlet and exposed accessible parts. See Fig.1-1-10 and grounding specifications.

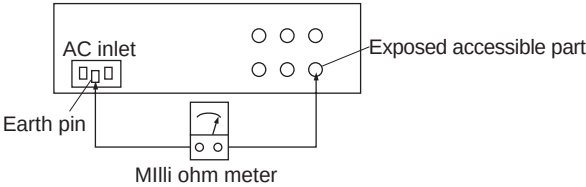

Grounding Specifications	
Region	Grounding Impedance (Z)
USA & Canada	$Z \leq 0.1 \text{ ohm}$
Europe & Australia	$Z \leq 0.5 \text{ ohm}$

AC Line Voltage	Region	Insulation Resistance (R)	Dielectric Strength	Clearance Distance (d), (d')
100 V	Japan	$R \geq 1 \text{ M}\Omega/500 \text{ V DC}$	AC 1 kV 1 minute	$d, d' \geq 3 \text{ mm}$
100 to 240 V			AC 1.5 kV 1 minute	$d, d' \geq 4 \text{ mm}$
110 to 130 V	USA & Canada	$1 \text{ M}\Omega \leq R \leq 12 \text{ M}\Omega/500 \text{ V DC}$	AC 1 kV 1 minute	$d, d' \geq 3.2 \text{ mm}$
110 to 130 V 200 to 240 V	Europe & Australia	$R \geq 10 \text{ M}\Omega/500 \text{ V DC}$	AC 3 kV 1 minute (Class II) AC 1.5 kV 1 minute (Class I)	$d \geq 4 \text{ mm}$ $d' \geq 8 \text{ mm}$ (Power cord) $d' \geq 6 \text{ mm}$ (Primary wire)

AC Line Voltage	Region	Load Z	Leakage Current (i)	a, b, c
100 V	Japan		$i \leq 1 \text{ mA rms}$	Exposed accessible parts
110 to 130 V	USA & Canada		$i \leq 0.5 \text{ mA rms}$	Exposed accessible parts
110 to 130 V 220 to 240 V	Europe & Australia		$i \leq 0.7 \text{ mA peak}$ $i \leq 2 \text{ mA dc}$	Antenna earth terminals
			$i \leq 0.7 \text{ mA peak}$ $i \leq 2 \text{ mA dc}$	Other terminals

NOTE :
These tables are unofficial and for reference only. Be sure to confirm the precise values for your particular country and locality.

SECTION 2

SPECIFIC SERVICE INSTRUCTIONS

This service manual does not describe SPECIFIC SERVICE INSTRUCTIONS.

SECTION 3 DISASSEMBLY

3.1 BEFORE ASSEMBLY AND DISASSEMBLY

3.1.1 Precautions

- Be sure to disconnect the power supply unit prior to mounting and soldering of parts.
- Prior to removing a component part that needs to disconnect its connector(s) and its screw(s), first disconnect the wire(s) from the connector(s), and then remove the screw(s).
- When connecting/disconnecting wires, pay enough attention not to damage the connectors.
- When inserting the flat wire to the connector, pay attention to the direction of the flat wire.
- Be careful in removing the parts to which some spacer or shield is attached for reinforcement or insulation.
- When replacing chip parts (especially IC parts), first remove the solder completely to prevent peeling of the pattern.
- Tighten screws properly during the procedures. Unless specified otherwise, tighten screws at a torque of 0.118N·m (1.2kgf·cm). However, 0.118N·m (1.2kgf·cm) is a value at the time of production. At the time of service, perform the procedure at a torque 10% less than 0.118N·m (1.2kgf·cm). (See "SERVICE NOTE" as for tightening torque.)

3.1.2 Destination of connectors

Two kinds of double-arrows in connection tables respectively show kinds of connector/wires.

↔ : Flat wire ↔ : Wire ↔ : Board to board (B-B)
 □ : The connector of the side to remove

CONN. No.	CONNECTOR				PIN No.	
CN2a	MAIN	CN101	↔	MONI/BW	CN761	40
CN2b	MAIN	CN103	↔	MIC	CN762	2

3.1.3 Disconnection of connectors (Wires)

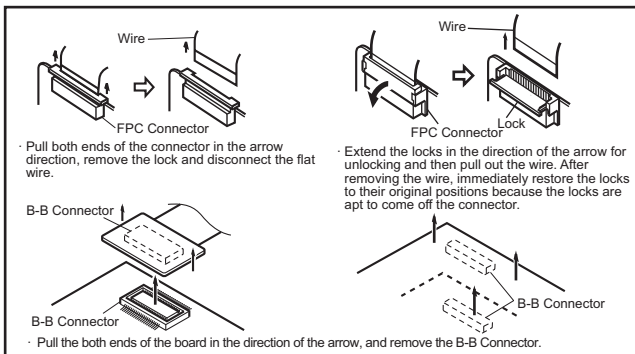


Fig.2-1-1

3.1.4 Tools required for disassembly and assembly

Torque driver YTU94088	Bit YTU94088-003	Tweezers P-895
Chip IC replacement jig PTS40844-2	Cleaning cloth KSMM-01	

Fig.2-1-2

• Torque driver

Be sure to use to fastening the mechanism and exterior parts because those parts must strictly be controlled for tightening torque.

• Bit

This bit is slightly longer than those set in conventional torque drivers.

• Tweezers

To be used for removing and installing parts and wires.

• Chip IC replacement jig

To be used for replacement of IC.

• Cleaning cloth

Recommended cleaning cloth to wipe down the video heads, mechanism (tape transport system), optical lens surface.

3.2 ASSEMBLY AND DISASSEMBLY OF MAIN PARTS

3.2.1 Assembly and disassembly

When reassembling, perform the step(s) in reverse order.

STEP No.	PART	Fig. No.	POINT	NOTE
[1]	TOP COVER ASSEMBLY	Fig.C1	S1,2(L1)	-
[2]	UPPER ASSEMBLY (Inc. VF ASSEMBLY, SPEAKER/MONITOR)	Fig.C2-1	S2a,2(S2b),3(S2c) 2(S2d),S2e,S2c L2,CN2a,b	-
[8]	VF ASSEMBLY	Fig.C2-2	2(S8),L8,CN8a	NOTE 8a NOTE 8b
(*1)	(*2)	(*3)	(*4)	(*5)

(*1) Order of steps in Procedure

When reassembling, perform the step(s) in the reverse order. These numbers are also used as the identification (location) No. of parts Figures.

(*2) Part to be removed or installed.

(*3) Fig. No. showing Procedure or Part Location.

C = CABINET

(*4) Identification of part to be removed, unhooked, unlocked, released, unplugged, unclamped or unsoldered.

S = Screw

L = Lock, Release, Hook

SD = Solder

CN = Connector

[Example]

- 4 (S1a) = Remove four S1a screws.
- 3 (L1a) = Disengage three L1a hooks.
- 2 (SD1a) = Unsolder two SD1a points.
- CN1a = Remove a CN1a connector.

(*5) Adjustment information for installation.

3.2.2 ASSEMBLY/DISASSEMBLY OF CABINET PARTS AND ELECTRICAL PARTS

●Disassembly procedure

STEP No.	PART	Fig. No.	POINT	NOTE
[1]	SHOE	Fig.C1	3(S1)	-
[2]	TOP COVER ASSEMBLY		3(S2a),(S2b),(L2a),(L2b)	-
[3]	HOLDER(SHOE)	Fig.C2	2(S3),2(L3)	-
[4]	ORNAMENT		-	NOTE4
[5]	SD COVER ASSEMBLY	Fig.C3-1	(S5a),(S5b)	-
[6]	UPPER ASSEMBLY		JACK COVER,2(S6a),(S6b) 3(S6c),4(S6d),CN6a,b	NOTE6a b,c,d
[21]	MON/OPE BOARD ASSEMBLY	Fig.C3-2	CN21a,b,c,2(S21) SPEAKER BRACKET 8(S21),SHIELD,SPEAKER KNOB(SLIDE)1,2	NOTE21a,b
[22]	MONITOR ASSEMBLY		2(S22a),(S22b),(L22a), HINGE CASE(U),(S22b),(L22b), HINGE CASE(L),3(S22c)	NOTE22a,b
[7]	VF ASSEMBLY	Fig.C4	(S7a),2(S7b)	NOTE7a,b
[8]	D4 BOARD ASSEMBLY	Fig.C5	CN8	-
[9]	HEAT SINK	Fig.C6	4(S9a),2(S9b),SHIELD(D.PWB)	NOTE9a,b
[10]	DIGITAL BOARD ASSEMBLY	Fig.C7	CN10a,b,c,d,e,(S10),CN10f,g,h	NOTE10
[11]	ANALOG BOARD ASSEMBLY	Fig.C8	CN11a,b,c,d,e,f,g,h,3(S11),CN11j,k,m	NOTE11
[12]	GRIP ASSEMBLY	Fig.C9-1	4(S12)	NOTE12
[23]	PREMDA BOARD ASSEMBLY		2(S23a),4(S23b),CN23a,b,c	NOTE23a,b
[24]	MECHANISM ASSEMBLY	Fig.C9-2	ROTARY GRIP ASSEMBLY	
[23]	PREMDA BOARD ASSEMBLY		CN23d,e,f,g,h,j,2(S23a),4(S23c), 2(S23d),2(S23c)	NOTE24
[24]	MECHANISM ASSEMBLY		3(S24),BRACKET(MECHA)ASSEMBLY	-
[13]	LOWER CASE ASSEMBLY	Fig.C10	3(S13a),2(S13b),2(S13a),(S13c) (S13a),(S13d),(L13),HOLDER(SD)	NOTE13
[14]	REAR ASSEMBLY	Fig.C11	(S14)	-
[15]	BOTTOM BOARD ASSEMBLY	Fig.C12	2(S15)	NOTE15
[16]	MIC ASSEMBLY	Fig.C13	2(S16),CN16	-
[17]	FRONT ASSEMBLY	Fig.C14	CN17a,b,2(S17),2(L17a) L17b,2(L17c),L17d	NOTE17
[18]	MIC/WB BOARD ASSEMBLY	Fig.C15	2(S18),2(L18)	NOTE18
[19]	OP BLOCK ASSEMBLY	Fig.C16	4(S19)	NOTE19a,b,c
[25]	/CCD BOARD ASSEMBLY			
[20]	GYRO BOARD ASSEMBLY	Fig.C17	2(S20),2(L20)	NOTE20

NOTE4:

This part is attached by using double-side adhesive tape. In removing the tape, be careful not to damage the reverse side of the ornament.

NOTE6a:

A screw NO. 21 is beside the tripod base/guide knob hole on the FRAME ASSEMBLY.

NOTE6b:

After removing the UPPER ASSEMBLY, electrical parts and board assembly are not covered with anything. Take care not to damage parts, especially WB sensor and Exposure Adjustment Wheel.

NOTE6c:

In attaching the UPPER ASSEMBLY, put the lever of the OP BLOCK ASSEMBLY (MAIN FRAME) in the slot of the BRACKET (SLIDE) ASSEMBLY.

Note6d:

In attaching the UPPER ASSEMBLY, be careful about the FPC and the position of D4 BOARD ASSEMBLY.

Note7a:

Since the VF ASSEMBLY is inserted in a narrow space between a part and another part, be careful not to damage or deform the bracket in removing the VF ASSEMBLY.

Note7b:

For the disassembly procedure of [7] VF ASSEMBLY, see "3.2.3 DISASSEMBLY/ASSEMBLY OF [7] VF ASSEMBLY"

NOTE9a:

Remove the two screws (No.46 and 47), and remove the heatsink. In removing the heatsink, peel the shield so that the heatsink is easy to be removed.

NOTE9b:

Since the heatsink is stuck to the IC on the DIGITAL BOARD ASSEMBLY, be careful not to damage the parts in removing the heatsink.

NOTE10:

In removing the DIGITAL BOARD ASSEMBLY, first disconnect some of the connectors, and remove the screws, and then disconnect the rest of the connectors. Then, remove the DIGITAL BOARD ASSEMBLY.

Be careful not to damage the B-B connector since B-B connector is connected on the backside of the DIGITAL BOARD ASSEMBLY.

NOTE11:

Remove the screws, and remove the FPC while removing the ANALOG BOARD ASSEMBLY since CN212 is on the backside of the ANALOG BOARD ASSEMBLY.

NOTE12:

In removing the GRIP ASSEMBLY, be careful not to cut or damage FPC and wires.

NOTE13:

In removing the LOWER CASE ASSEMBLY, remove the holder (SD) together with the LOWER CASE ASSEMBLY.

NOTE15:

In removing the BOTTOM BOARD ASSEMBLY, first remove the FPC connected to the BOTTOM BOARD ASSEMBLY since it is attached to the frame. Then, remove the screws, and remove the BOTTOM BOARD ASSEMBLY.

NOTE17:

In removing the FRONT ASSEMBLY, a lens part of the OP BLOCK ASSEMBLY is not covered with anything. Be careful not to damage the lens.

NOTE18:

In removing the MIC/WB BOARD ASSEMBLY, first remove the FPC connected to the MIC/WB BOARD ASSEMBLY since it is attached to the frame. Then, remove the screws, and remove the MIC/WB BOARD ASSEMBLY.

NOTE19a:

In removing the OP BLOCK ASSEMBLY/CCD BASE ASSEMBLY, be careful not to damage or cut the FPC, wires, and lens part.

NOTE19b:

In attaching the OP BLOCK ASSEMBLY/CCD BASE ASSEMBLY, be careful not to damage or cut the FPC and wires.

NOTE19c:

As for the assembly/disassembly procedures of [19] OP BLOCK ASSEMBLY/[25] CCD BOARD ASSEMBLY, see "3.2.5 ASSEMBLY/DISASSEMBLY OF [19] OP BLOCK ASSEMBLY/[25] CCD BOARD ASSEMBLY".

NOTE20:

Handle the parts on the GYRO BOARD ASSEMBLY carefully since they are easy to be broken.

NOTE21a:

In removing the MON/OPE BOARD ASSEMBLY, be careful not to damage the shields attached inside the UPPER ASSEMBLY.

NOTE21b:

In removing the MON/OPE BOARD ASSEMBLY, be careful in handling the knobs (SLIDE) 1 and 2 since they are also removed.

In attaching the MON/OPE BOARD ASSEMBLY, be careful about the position of switch.

Note22a:

In removing the MONITOR ASSEMBLY, fold the hold plate inside the UPPER ASSEMBLY in an inner direction.

Note22b:

For the disassembly procedure of [22] MONITOR ASSEMBLY, see "3.2.4 DISASSEMBLY/ASSEMBLY OF [22] MONITOR ASSEMBLY".

NOTE23a/24

First remove the PREMDA ASSEMBLY together with the MECHANISM ASSEMBLY inside the GRIP ASSEMBLY, and then remove the PREMDA ASSEMBLY from the MECHANISM ASSEMBLY.

NOTE23b:

In removing the ROTARY GRIP ASSEMBLY, disconnect the wires in the order from short wire to long wire.

●Destination of connectors

CONN. No.	CONNECTOR					PIN No.
CN6a	MON/OPE	CN303	↔	VF BL	CN703	22
CN6b	ANALOG	CN209	↔	MON/OPE	CN301	51
CN8	DIGITAL	CN105	↔	D4	CN806	14
CN10a	DIGITAL	CN102	↔	CCD	-	24
CN10b	DIGITAL	CN103	↔	CCD	-	2
CN10c	DIGITAL	CN104	↔	BOTTOM	CN801	18
CN10d	DIGITAL	CN106	↔	PREMDA	CN411	6
CN10e	DIGITAL	CN109	↔	REAR	CN602	16
CN10f	DIGITAL	CN108	↔	ANALOG	CN208	6
CN10g	ANALOG	CN201	↔	CONNECT	CN502	150
CN10h	DIGITAL	CN107	↔	PREMDA	CN410	22
CN11a	ANALOG	CN205	↔	GYRO	CN804	10
CN11b	ANALOG	CN202	↔	OP BLOCK	-	26
CN11c	ANALOG	CN207	↔	MIC/WB	CN902	6
CN11d	ANALOG	CN210	↔	PREMDA	CN412	5
CN11e	ANALOG	CN206	↔	MIC/WB	CN901	10
CN11f	ANALOG	CN203	↔	OP BLOCK	-	12
CN11g	ANALOG	CN215	↔	REAR	CN603	8
CN11h	ANALOG	CN214	↔	REAR	CN601	6
CN11j	ANALOG	CN213	↔	PREMDA	CN415	14
CN11k	ANALOG	CN211	↔	PREMDA	CN414	20
CN11m	ANALOG	CN212	↔	PREMDA	CN413	15
CN16	MIC	-	↔	MIC/WB	CN903	4
CN17a	M.ZOOM RING	-	↔	MIC/WB	CN905	6
CN17b	M.FOCUS RING	-	↔	MIC/WB	CN904	6
CN21a	MON/OPE	CN302	↔	MON BL	CN701	39
CN21b	MON/OPE	CN304	↔	SW	CN805	6
CN21c	MON/OPE	CN305	↔	SPEAKER	-	2
CN23a	PREMDA	CN401	↔	POWER OPERATION	-	11
CN23b	PREMDA	CN409	↔	ZOOM UNIT	-	6
CN23c	PREMDA	CN408	↔	EJECT	CN803	8
CN23d	PREMDA	CN406	↔	SENSOR	-	16
CN23e	PREMDA	CN405	↔	CAPSTAN MOTOR	-	18
CN23f	PREMDA	CN404	↔	DRUM MOTOR	-	11
CN23g	PREMDA	CN402	↔	HEAD	-	8
CN23h	PREMDA	CN403	↔	LOADING MOTOR	-	6
CN23j	PREMDA	CN407	↔	ROTARY ENCODER	-	6

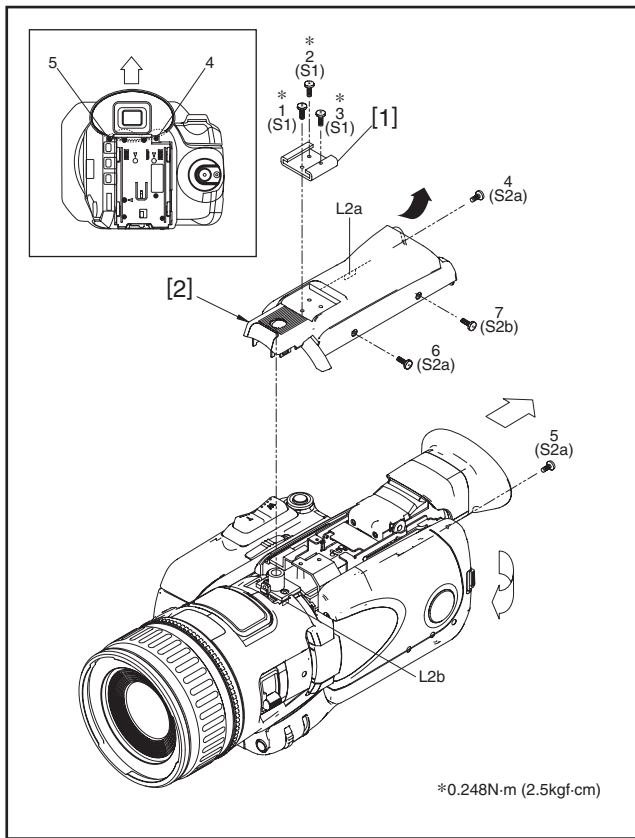


Fig.C1

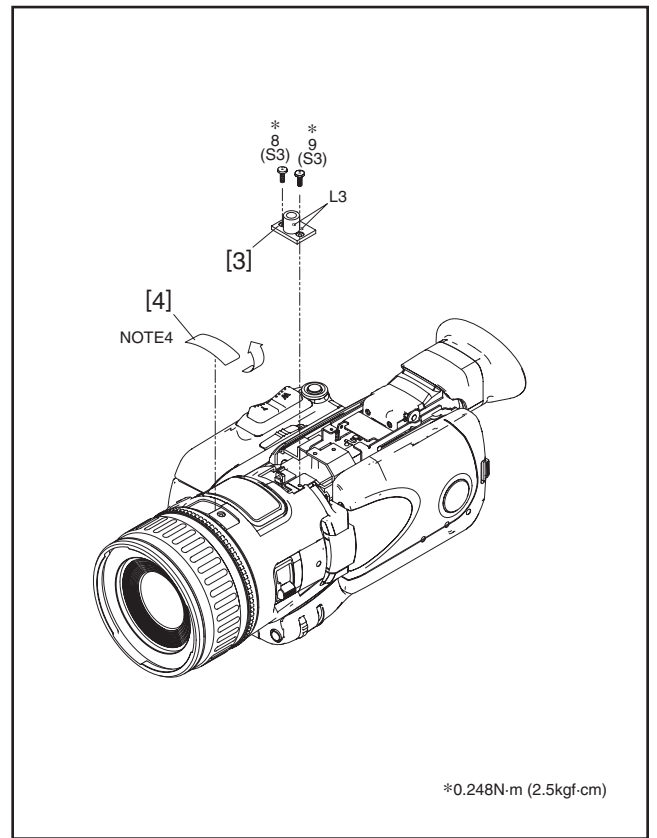


Fig.C2

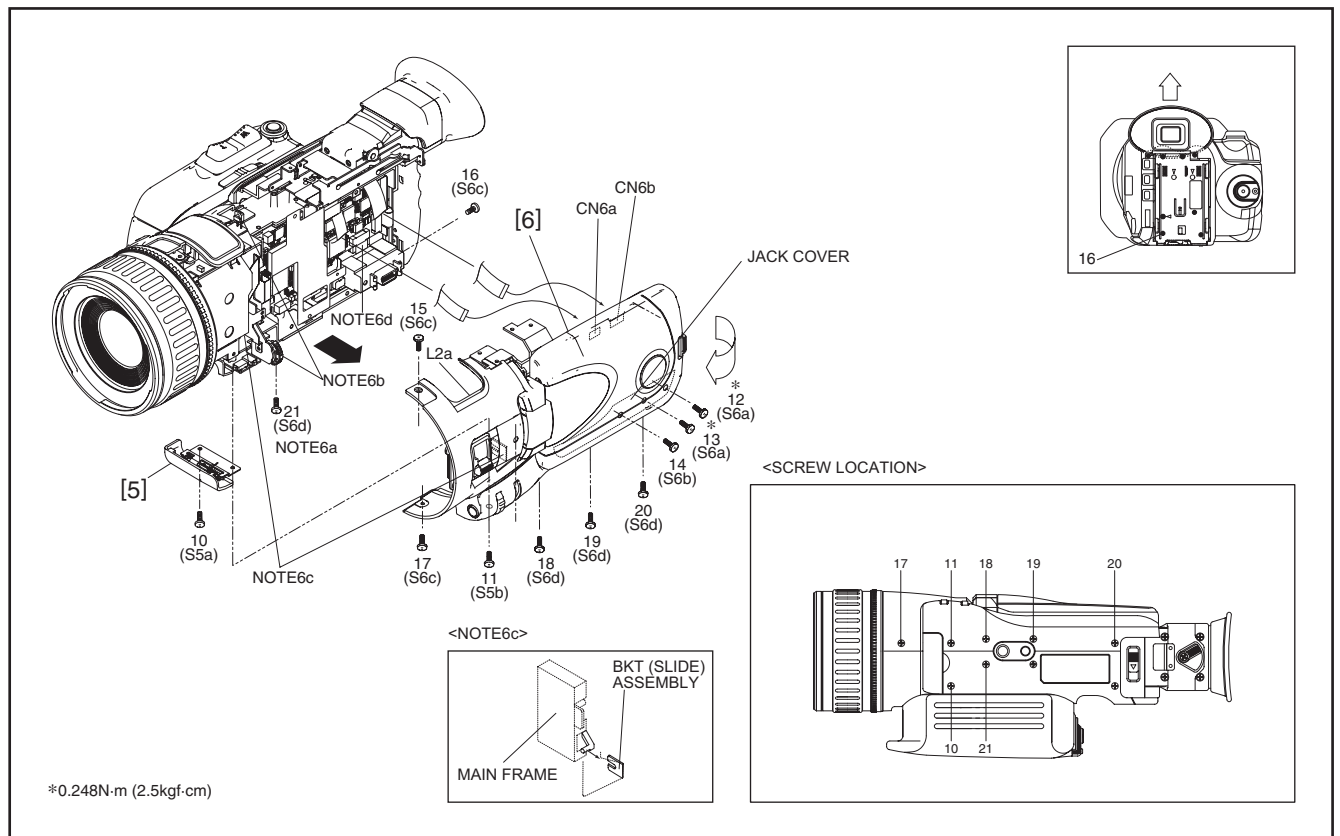


Fig.C3-1

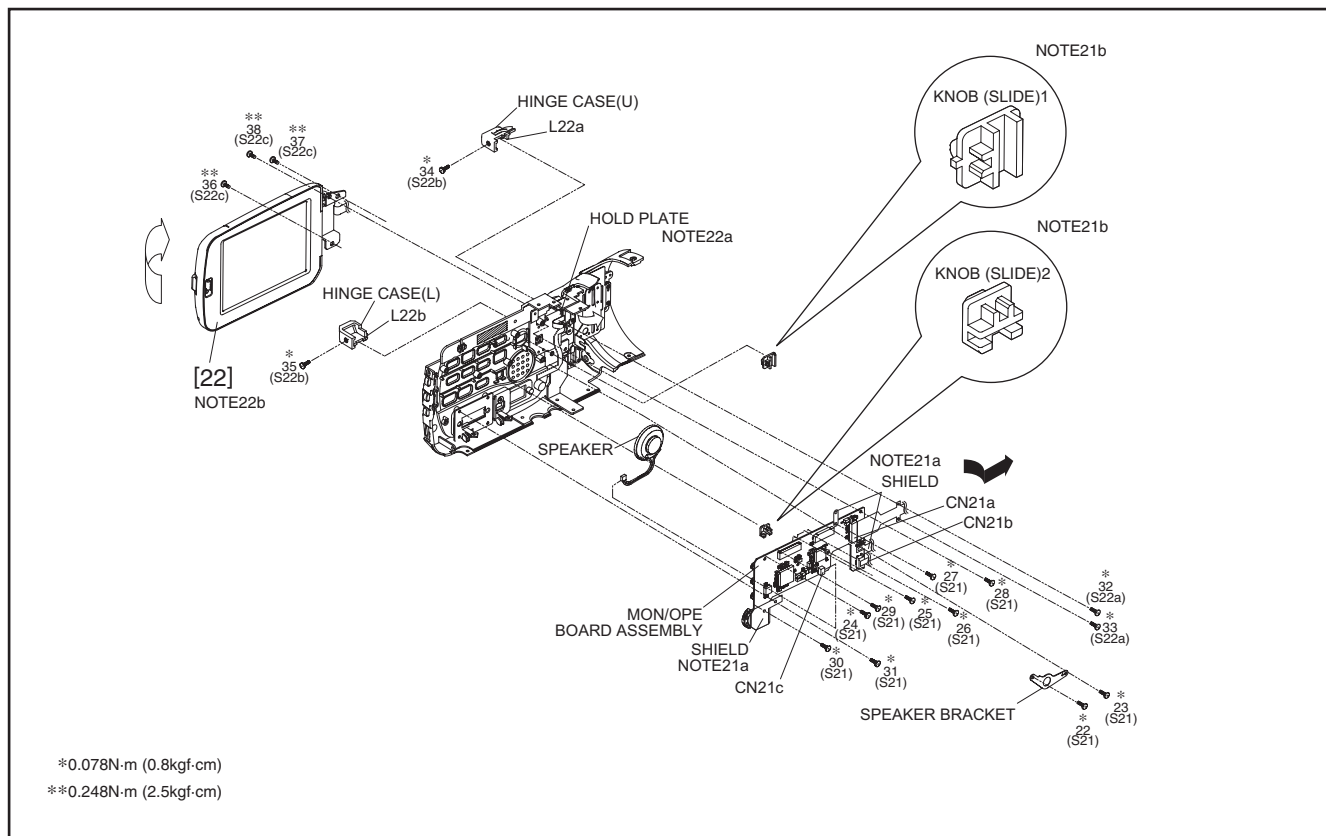


Fig.C3-2

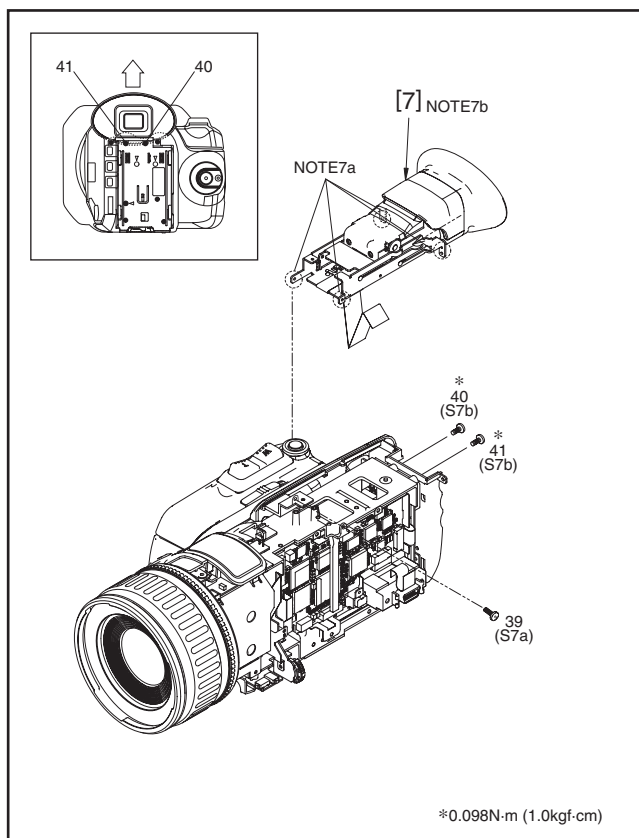


Fig.C4

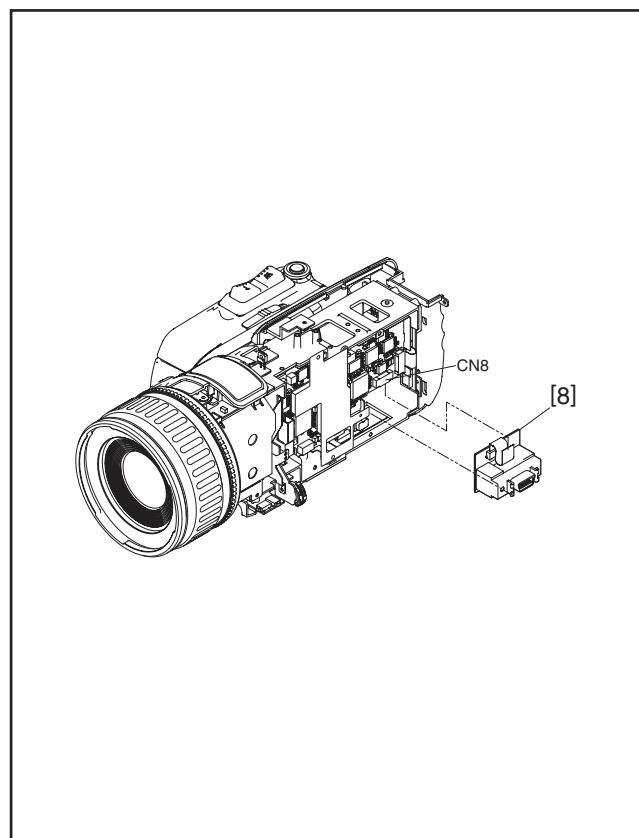
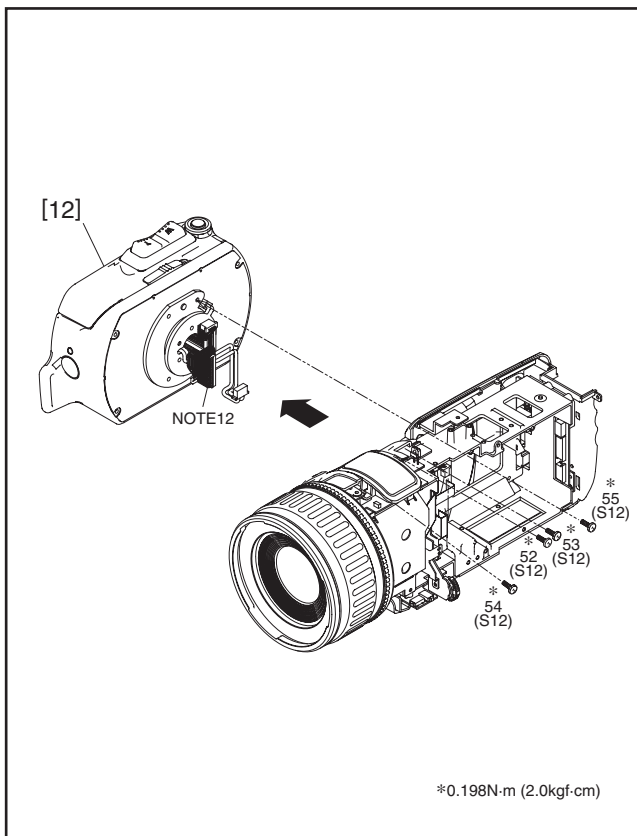
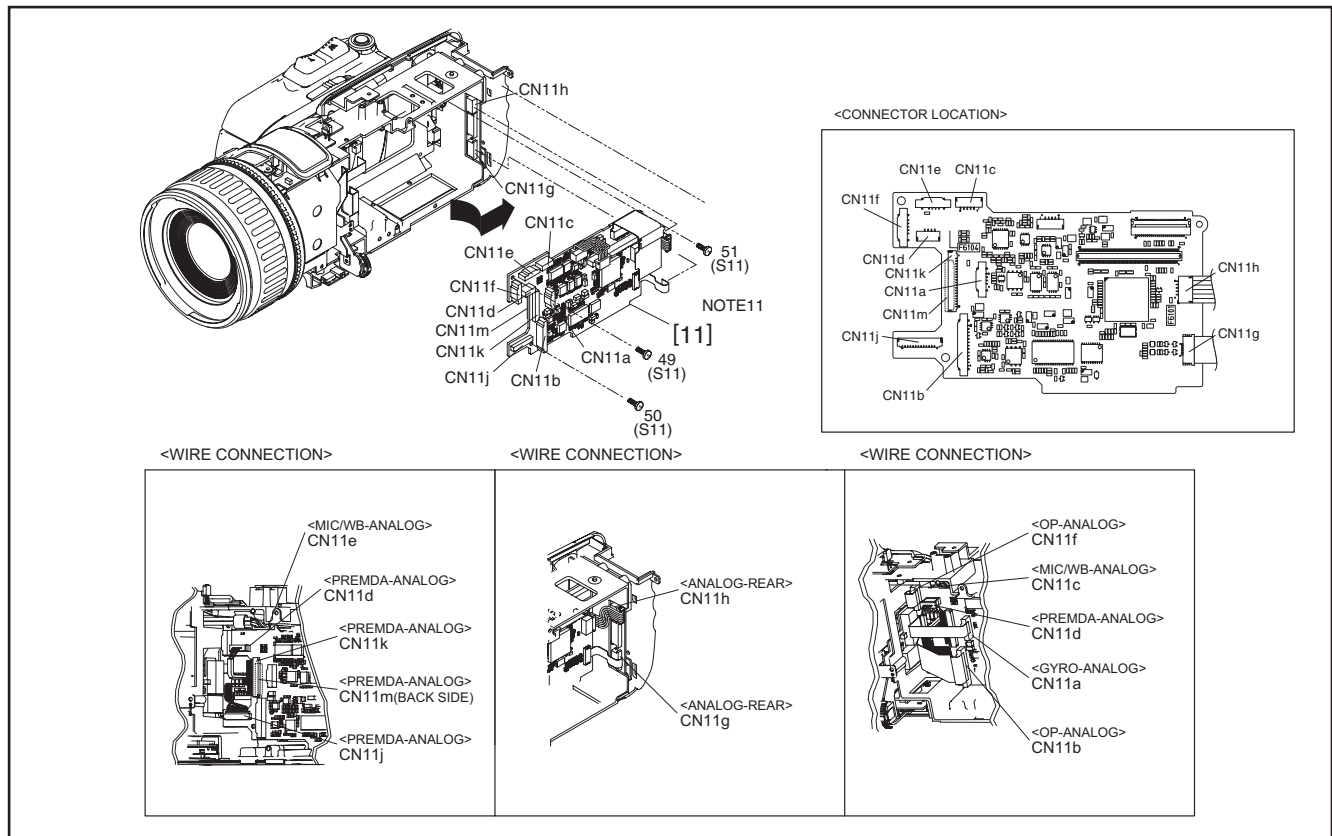


Fig.C5





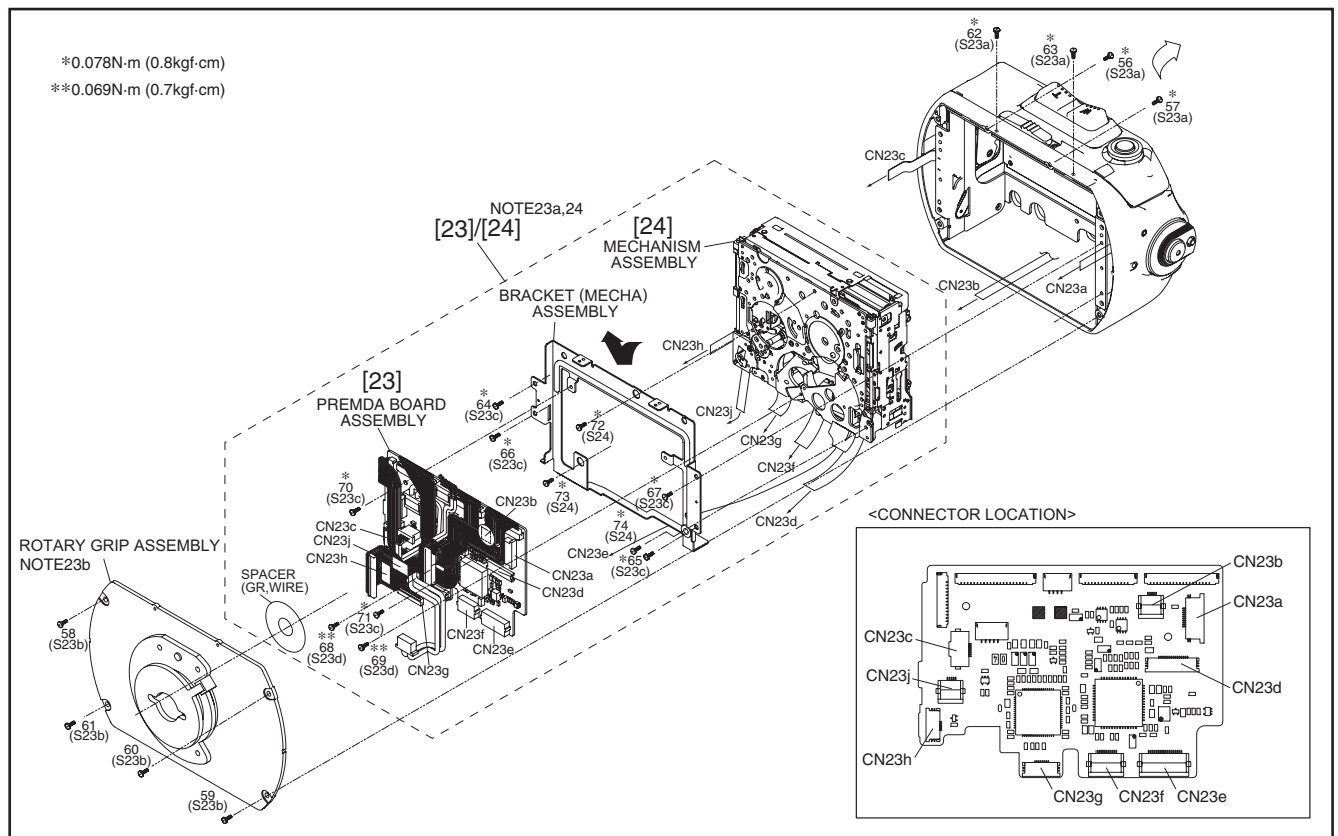


Fig.C9-2

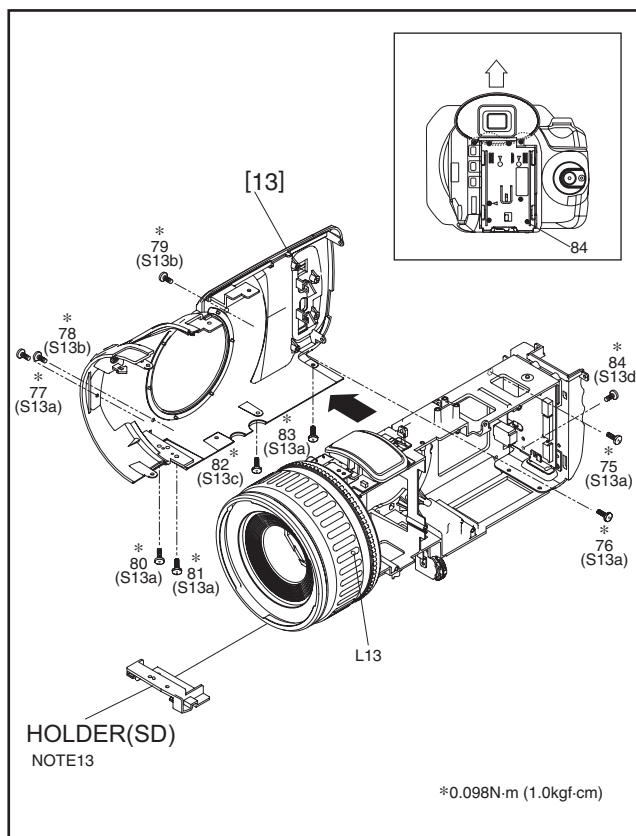


Fig.C10

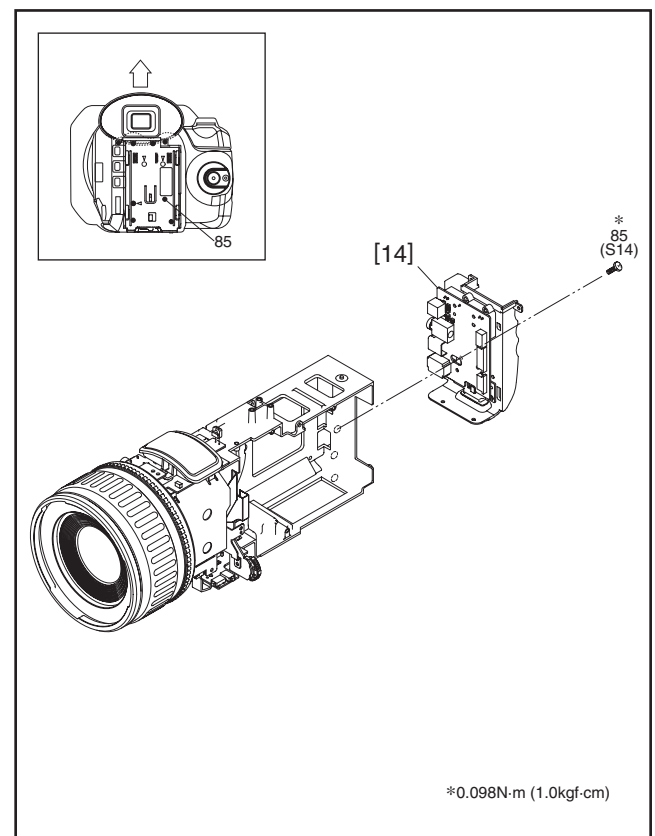


Fig.C11

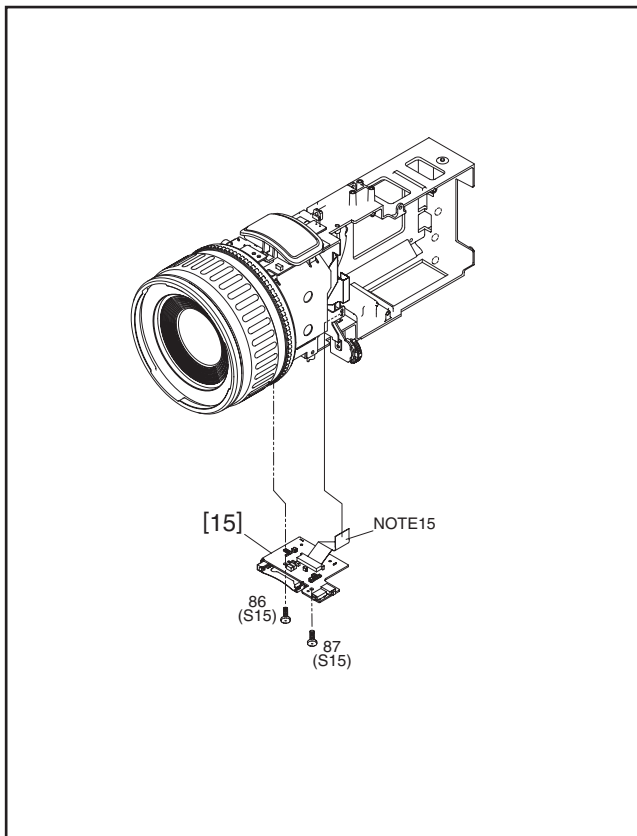


Fig.C12

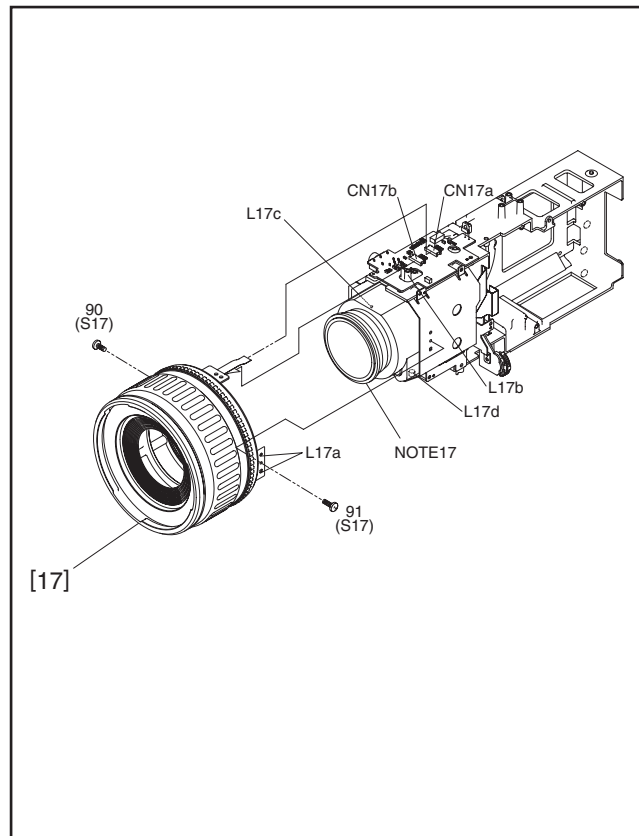


Fig.C14

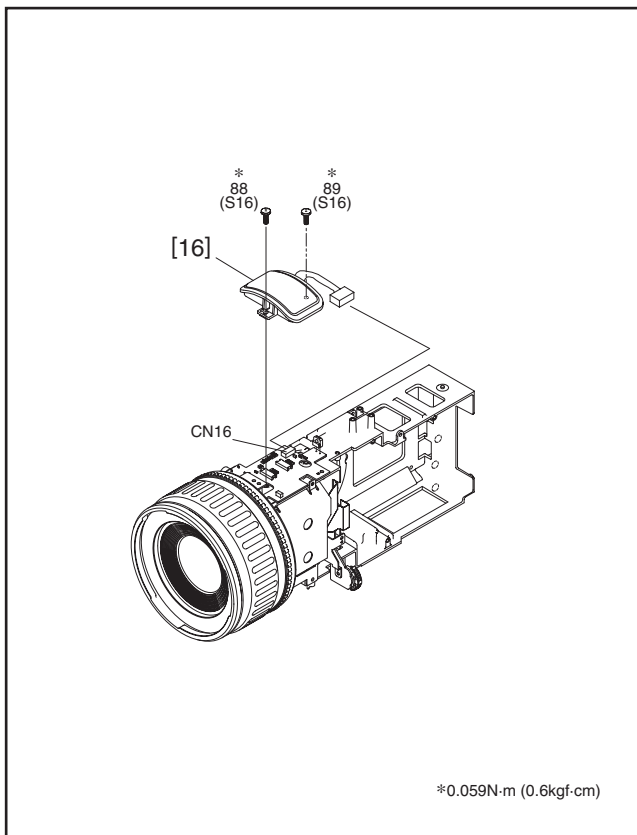


Fig.C13

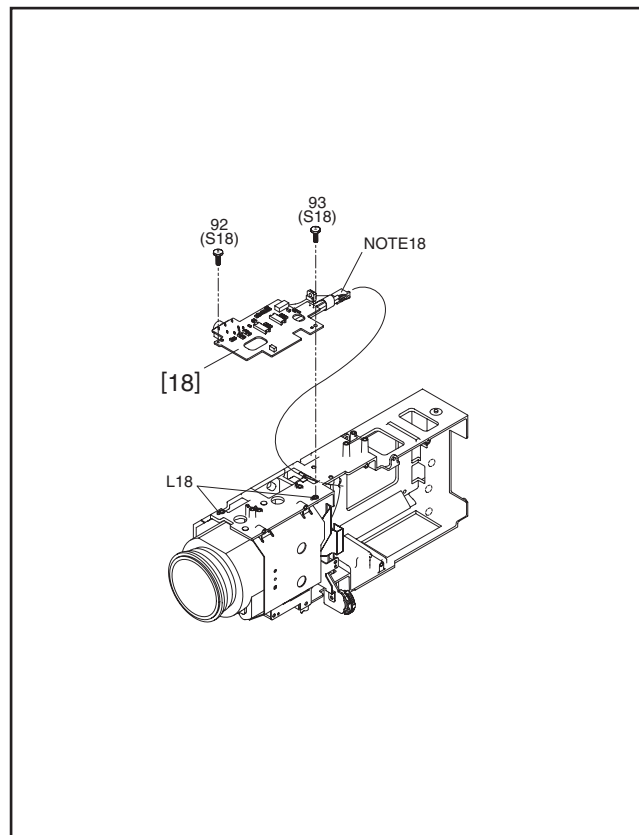


Fig.C15

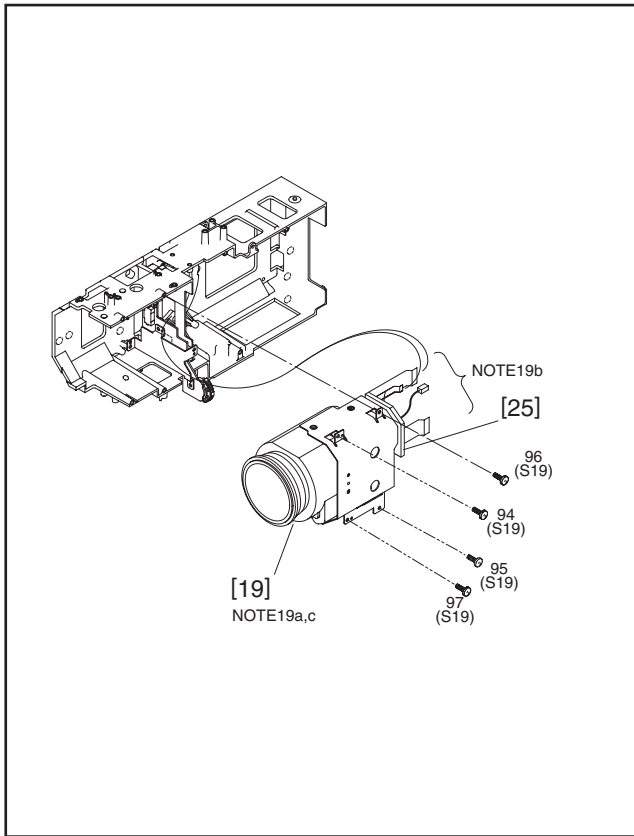


Fig.C16

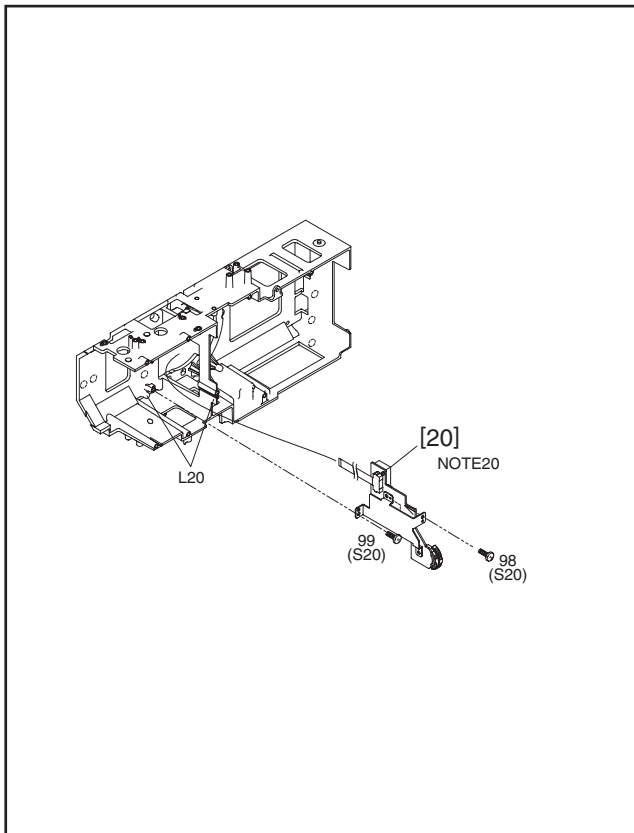


Fig.C17

3.2.3 DISASSEMBLY/ASSEMBLY OF [7] VF ASSEMBLY

●Disassembly of VF ASSEMBLY

- (1) Remove the two screws (1 and 2), and remove the EYE CUP.
- (2) Remove the four screws (3-6), and make the SWITCH BOARD ASSEMBLY (PUSH SWITCH) and FPC ASSEMBLY (VF) move easily.
- (3) Remove the four screws (7-10), and remove the FPC ASSEMBLY (VF) from the HOLDER ASSEMBLY (VF) while lifting the VF CASE (TOP COVER and BOTTOM COVER ASSEMBLY) upwards.

NOTE7a:

During the procedure, be careful not to damage or cut the FPC ASSEMBLY (VF) since it is attached to the HOLDER ASSEMBLY (VF).

- (4) Remove the two screws (11 and 12), and remove the TOP COVER.
- (5) Remove the whole LCD UNIT from the BOTTOM COVER ASSEMBLY.
- (6) Remove one screw (13), and remove the LEVER (LENS), HOLDER (LENS) ASSEMBLY, LINK (LENS), and SPACER B.

NOTE7b:

When attaching the VF ASSEMBLY, confirm that the HOLDER (LENS) ASSEMBLY slides properly.

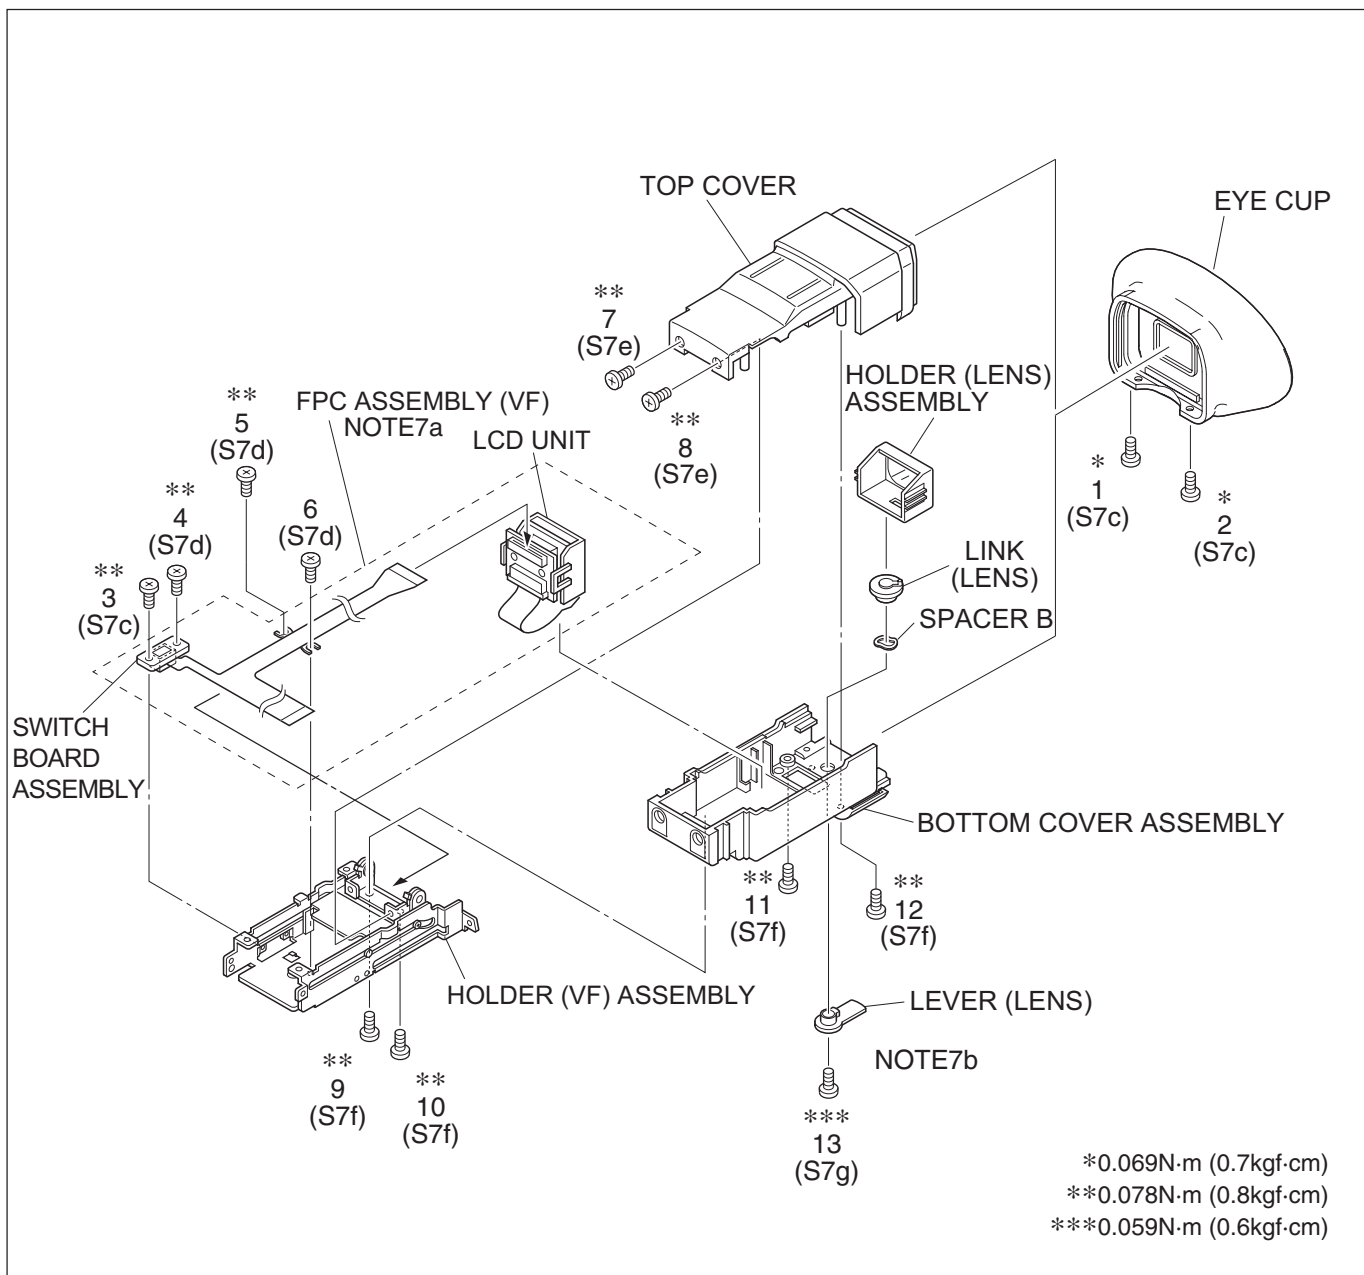


Fig.3-2-3

3.2.4 DISASSEMBLY/ASSEMBLY OF [22] MONITOR ASSEMBLY

●CAUTION

- (1) Be careful in handling the LCD module, especially not to damage or soil the monitor screen. If it is soiled with fingerprints, etc., gently clean it with chamois or the cleaning cloth.
- (2) Since the BACKLIGHT is soldered to the ASSEMBLY BOARD, the BACKLIGHT should not be separated from the ASSEMBLY BOARD except when replacing the BACKLIGHT.

●Disassembly procedure of MONITOR ASSEMBLY

- (1) While removing the four screws (1-4) in numerical order and disengaging the six hooks (L22a-L22f) in alphabetical order, remove the MONITOR COVER ASSY.
- (2) Remove the SENSOR BOARD ASSEMBLY from the MONITOR CASE ASSEMBLY.
- (3) Unlock one connector (CN22a), and then disconnect the FPC and remove the HINGE ASSEMBLY while lifting the HINGE ASSEMBLY/FPC ASSEMBLY upwards.
- (4) Remove the BRACKET (MONITOR).
- (5) Disconnect the FPC of the LCD MODULE from one connector (CN22b).
- (6) Remove one screw (5), and remove the MON BL BOARD ASSEMBLY together with the BACKLIGHT.
- (7) Remove the D BEF SHEET.
- (8) While disengaging the four hooks (L22g-L22k) in alphabetical order, remove the LCD MODULE.

●Disassembly procedure of HINGE ASSEMBLY/FPC ASSEMBLY

- (1) While removing the two screws (6 and 7) and disengaging the four hooks (L22m-L22p) in alphabetical order, remove the HINGE COVER (U).
- (2) Remove the HINGE COVER (L),

NOTE22a:

Be careful not to lose the magnet.
When attaching magnet, be careful about the attachment direction.

- (3) Remove the FPC ASSEMBLY from the HINGE ASSEMBLY.

NOTE22b:

When attaching the FPC ASSEMBLY, wind the FPC around the HINGE ASSEMBLY 3.5 times. Be careful not to cut or damage the FPC.

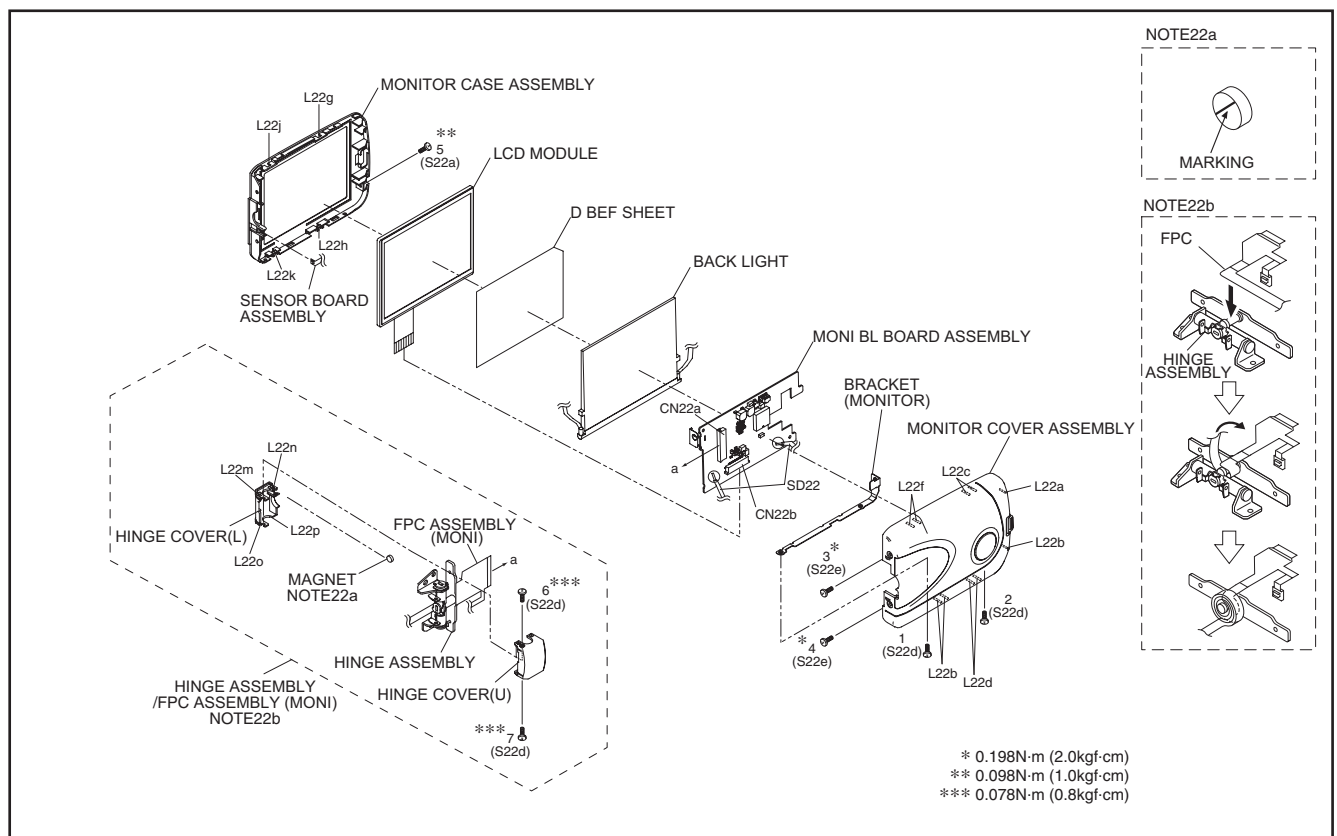


Fig.3-2-4

3.2.5 ASSEMBLY/DISASSEMBLY OF [19] OP BLOCK ASSEMBLY/[25] CCD BOARD ASSEMBLY

●CAUTIONS

- (1) Be careful in handling the CCD image sensor, OP LPF, and lens etc., especially not to damage or soil their surface.
If it is soiled with fingerprints, etc., gently clean it with chamois or the cleaning cloth.
- (2) When the CCD image sensor is shipped from the factory, there are protection seals applied onto the transparent glass. Leave the protector as it is, and take it off just before assembling the CCD image sensor to the OP block.

●Disassembly procedure of OP BLOCK ASSEMBLY/CCD BOARD ASSEMBLY

- (1) Remove the three screws (1-3), and remove the OP BRACKET ASSEMBLY.
- (2) Unsolder the sixteen soldered parts (SD19) on the CCD BOARD ASSEMBLY, and remove the CCD BOARD ASSEMBLY.
- (3) Remove the two screws (4 and 5), and remove the CCD BASE ASSEMBLY.

NOTE19a

In removing the CCD BASE ASSEMBLY, be careful in handling a sheet and OP LPF since a sheet or OP LPF is removed together with the CCD BASE ASSEMBLY.

NOTE19b

In replacing the CCD image sensor, don't remove the CCD image sensor from the CCD BASE ASSEMBLY. Instead, replace the whole CCD BASE ASSEMBLY.

- (4) Remove the sheet and OP LPF.
- (5) Remove the two screws (6 and 7), and remove the MAIN FRAME ASSEMBLY.

NOTE19c

When attaching OP LPF to the OP BLOCK ASSEMBLY, be careful about the attachment direction.

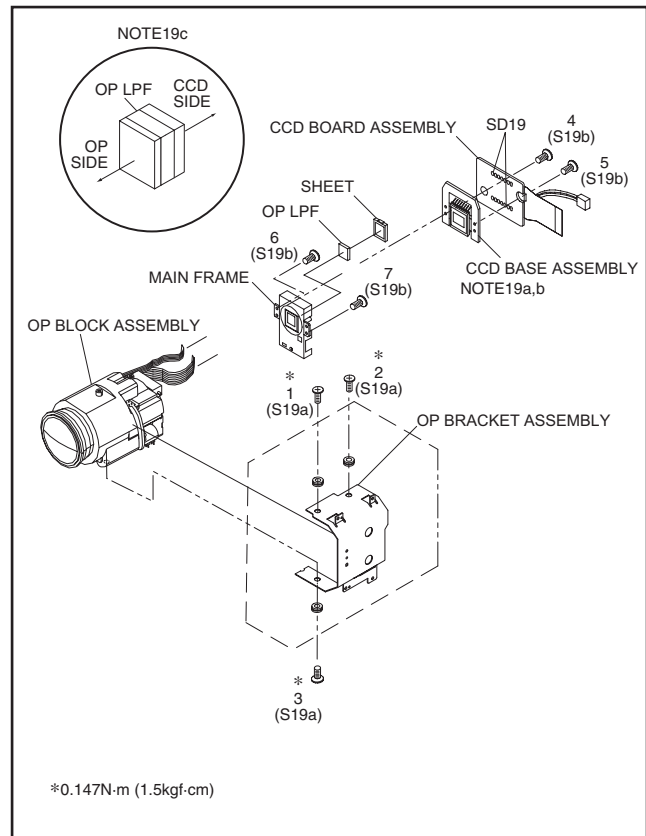


Fig.3-2-5

SECTION 4 ADJUSTMENT

4.1 PREPARATION

4.1.1 Precaution

Camera system and deck system of this model are specially adjusted by using PC.

However, if parts such as the following are replaced, an adjustment is required. The adjustment must be performed in a Service Center equipped with the concerned facilities.

- OP BLOCK ASSEMBLY
- EEP ROM (IC1003 of DIGITAL board)
















In the event of malfunction with electrical circuits, first find a defective portion with the aid of proper test instruments as shown in the following electrical adjustment procedure, and then commence necessary repair/ replacement/adjustment.

- In observing chip TP, use IC clips, etc. to avoid any stress. Prior to replacement of chip parts (especially IC), remove the solder completely to prevent peeling of the pattern.
- Use a patch cord if necessary. As for a patch cord, see the BOARD INTERCONNECTIONS.
- Since connectors are fragile, carefully handle them in disconnecting and connecting the FPC.

4.1.2 REQUIRED TEST EQUIPMENT

- Personal computer (for Windows)
- Color TV monitor
- Oscilloscope (dual-trace type, observable 100MHz or higher frequency). The one observable 300 MHz or higher frequency is recommended.
- Digital voltmeter
- DC power supply or AC adapter
- Frequency counter (with threshold level adjuster)

4.1.3 TOOLS REQUIRED FOR ADJUSTMENT

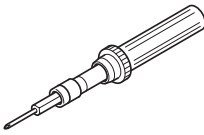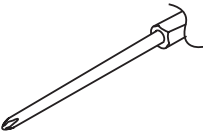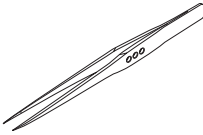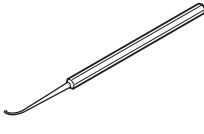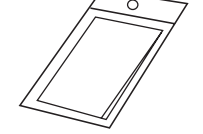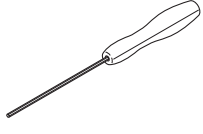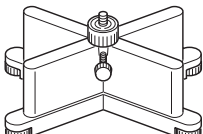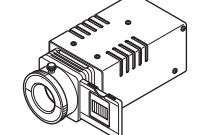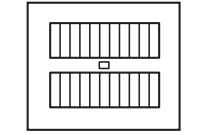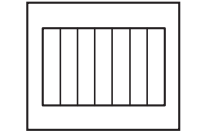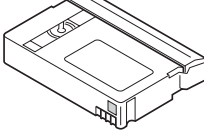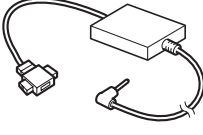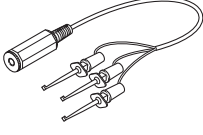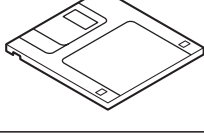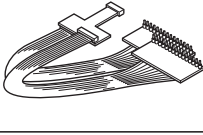Torque Driver YTU94088	Bit YTU94088-003	Tweezers P-895
		
Chip IC Replacement Jig PTS40844-2	Cleaning Cloth KSM-01	Guide Driver (Hexagonal) D-770-1.27
		
INF Adjustment Lens YTU92001B	INF Adjustment Lens Holder YTU94087	Camera Stand YTU93079
		
Light box Assembly YTU93096A	Gray Scale Chart YTU94133A	Color Bar Chart YTU94133C
		
Alignment Tape MC-1	PC Cable QAM0099-002	Communication Cable YTU93107A
		
Service Support System YTU94057-72	Jig Connector Cable YTU93082C	
		

- **Torque driver**

Be sure to use to fastening the mechanism and exterior parts because those parts must strictly be controlled for tightening torque.

- **Bit**

This bit is slightly longer than those set in conventional torque drivers.

- **Tweezers**

To be used for removing and installing parts and wires.

- **Chip IC replacement jig**

To be used for adjustment of the camera system.

- **Cleaning cloth**

Recommended the Cleaning cloth to wipe down the video heads, mechanism (tape transport system), optical lens surface.

- **Guide driver (Hexagonal)**

To be used to turn the guide roller to adjustment of the linearity of playback envelope.

- **INF adjustment lens**

To be used for adjustment of the camera system. For the usage of the INF adjustment lens, refer to the Service Bulletin No. YA-SB-10035.

- **INF lens holder**

To be used together with the Camera stand for operating the Videocamera in the stripped-down condition such as the status without the exterior parts or for using commodities that are not yet conformable to the interchangeable ring. For the usage of the INF lens holder, refer to the Service Bulletin No. YA-SB-10035.

- **Camera stand**

To be used together with the INF adjustment lens holder. For the usage of the Camera stand, refer to the Service Bulletin No. YA-SB-10035.

- **Light box assembly**

To be used for adjustment of the camera system. For the usage of the Light box assembly, refer to the Service Bulletin No. YA-SB-10035.

- **Gray scale chart**

To be used for adjustment of the camera system. For the usage of the INF adjustment lens, refer to the Service Bulletin No. YA-SB-10035.

- **Color bar chart**

To be used for adjustment of the camera system. For the usage of the INF adjustment lens, refer to the Service Bulletin No. YA-SB-10035.

- **Alignment tape**

To be used for check and adjustment of interchangeability of the mechanism.

- **PC cable**

To be used to connect the Videocamera and a personal computer with each other when a personal computer issued for adjustment.

- **Communication cable**

Connect the Communication cable between the PC cable and Jig connector cable when performing a PC adjustment.

- **Service support system**


To be used for adjustment with a personal computer. Software can be downloaded also from JS-net.

- **Jig connector cable**

Connected to CN110 of the main board and used for electrical adjustment, etc.

4.2 JIG CONNECTOR CABLE CONNECTION

■ Connection procedure

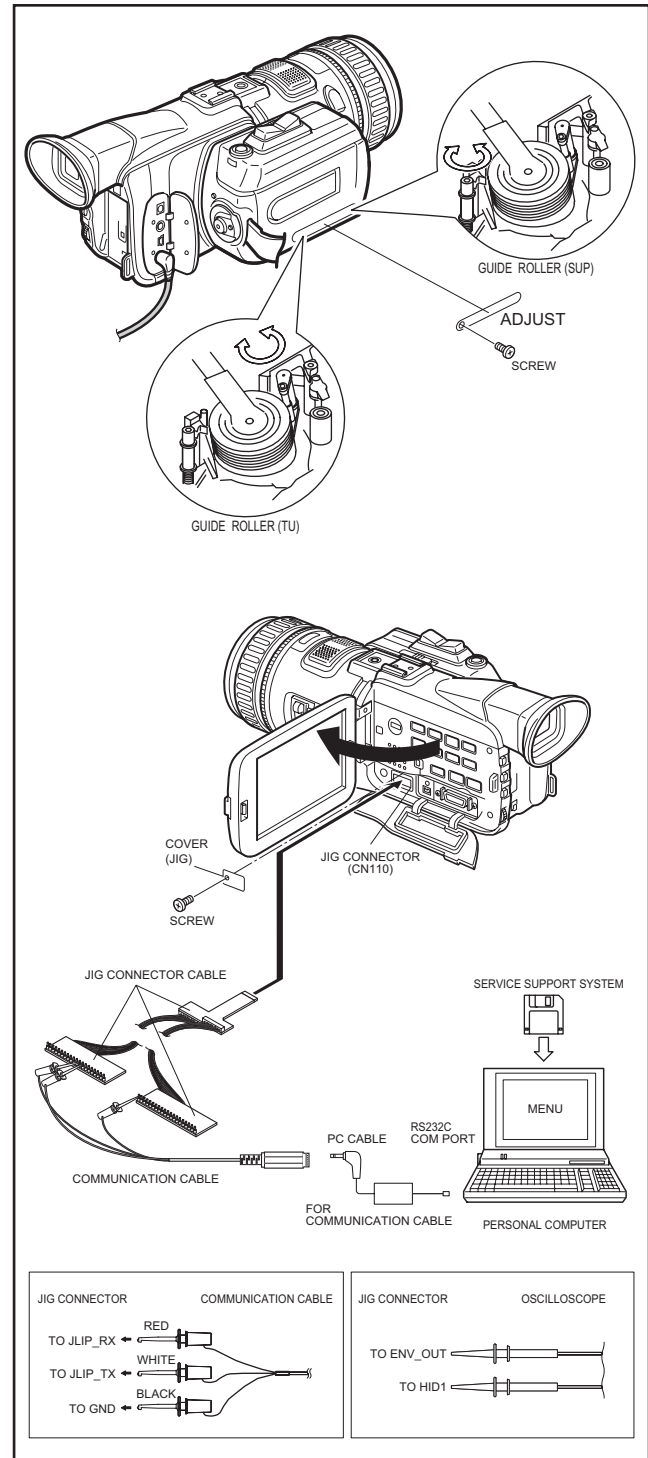

■ Jig connector diagrams

JIG CONNECTORCABLE(YTU93082C)															
JIG BOARD ASSEMBLY(14PIN)														JIG BOARD ASSEMBLY(15PIN)	
1	NC	2	SRV_TX	3	CJIG_RST	4	IF_TX	5	Flashwrt	6	FS_PLL	7	ATF1	1	JLIP_RX
2	SRV_TX	3	CJIG_RST	4	IF_TX	5	Flashwrt	6	FS_PLL	7	ATF1	8	MAIN_VCO	2	TX_DSC
3	IF_TX	4	Flashwrt	5	FS_PLL	6	ATF1	7	MAIN_VCO	8	ENV_OUT	9	PB_CLK	3	RX_DSC
4	Flashwrt	5	FS_PLL	6	ATF1	7	MAIN_VCO	8	ENV_OUT	9	PB_CLK	10	HID1	4	SRV_RX
5	FS_PLL	6	ATF1	7	MAIN_VCO	8	ENV_OUT	9	PB_CLK	10	HID1	11	GND	5	AL_3VSYS
6	ATF1	7	MAIN_VCO	8	ENV_OUT	9	PB_CLK	10	HID1	11	GND	12	JLIP_TX	6	DRST
7	MAIN_VCO	8	ENV_OUT	9	PB_CLK	10	HID1	11	GND	12	JLIP_TX	13	VPPD	7	DISCRI
8	ENV_OUT	9	PB_CLK	10	HID1	11	GND	12	JLIP_TX	13	VPPD	14		8	GND
9	PB_CLK	10	HID1	11	GND	12	JLIP_TX	13	VPPD	14		15		9	SBE
10	HID1	11	GND	12	JLIP_TX	13	VPPD	14		15		16		10	SPA
11	GND	12	JLIP_TX	13	VPPD	14		15		16		17		11	TRST
12	JLIP_TX	13	VPPD	14		15		16		17		18		12	TCK
13	VPPD	14		15		16		17		18		19		13	TMS
14		15		16		17		18		19		20		14	TDO
15		16		17		18		19		20		21		15	TDI

4.3 MECHANISM COMPATIBILITY ADJUSTMENT

4.3.1 Tape pattern adjustment

NOTE:

Prior to the adjustment, remove the cover (ADJUST).

- (1) Play back the compatibility adjustment tape.
- (2) While triggering the HID1, observe the waveform of ENV_OUT.
- (3) Set the manual tracking mode (ATF OFF).
- (4) Confirm that the waveform is entirely parallel and straight, and free from remarkable level-down, through the tracking operation.
Make the confirmation as follows if necessary.
- (5) If level-down is observed on the left hand side of the waveform, straighten the level by turning the GUIDE ROLLER (SUP).
If level-down is observed on the right hand side of the waveform, straighten the level by turning the GUIDE ROLLER (TU).
- (6) After the adjustment, try the unloading motion once, and confirm that the waveform is flat when the tape has been played back again.
- (7) Play back the self-recording.
- (8) Confirm that the waveform is flat.

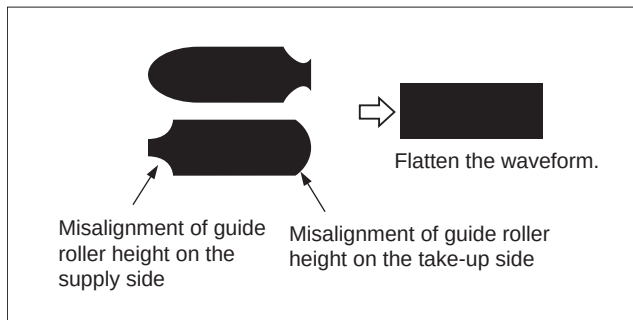


Fig.4-3-1

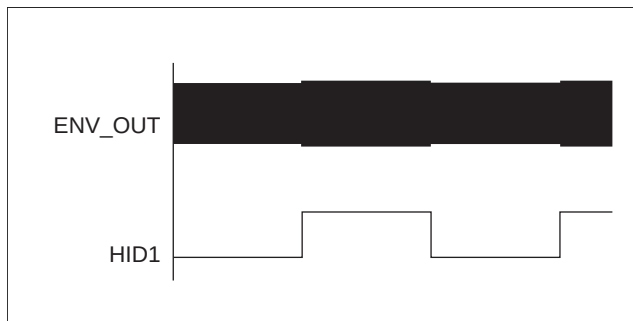


Fig.4-3-2

4.4 ELECTRICAL ADJUSTMENT

Electrical adjustment is performed by using a personal computer and software for SERVICE SUPPORT SYSTEM. Read README.TXT file to use the software properly. As for the connection of cables, see "4.2 JIG CONNECTOR CABLE CONNECTION".

SECTION 5 TROUBLE SHOOTING

5.1 SERVICE NOTE

CABINET PARTS AND ELECTRICAL PARTS

Symbol No.		[1]		[2]		[3]		[4]		[5]		[6]		[21]	
Removing order of screw		1	2	3	4	5	6	7	8	9	-	-	-	22	23
Place to stick screw														24	25
Reference drawing (Fig.No.)		a		b		a		b		b		b		c	
Screw tightening torque		C1		C2		C3-1		C3-2		C3-1		C3-2		C3-2	

Symbol No.		[21]		[22]		[7]		[8]		[9]		[10]		[11]	
Removing order of screw		28	29	30	31	32	33	34	35	36	37	38	39	40	41
Place to stick screw										*	*	*			
Reference drawing (Fig.No.)		c		C3-2		C4		C5		C6		C7		C8	
Screw tightening torque		C3-1		C3-2		C4		C5		C6		C7		C8	

Symbol No.		[12]		[23]/[24]		[23]		[24]	
Removing order of screw		52	53	54	55	56	57	58	59
Place to stick screw		*	*	*	*	*	*	*	*
Reference drawing (Fig.No.)		d		C9-1		C9-2		C9-2	
Screw tightening torque		C9-1		C9-2		C9-2		C9-2	

Symbol No.		[13]		[14]		[15]		[16]		[17]		[18]		[19]		[20]	
Removing order of screw		75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90
Place to stick screw			*	*	*	*	*	*	*	*	*	*	*	*	*	*	*
Reference drawing (Fig.No.)		f		C10		C11		C12		C13		C14		C15		C16	
Screw tightening torque		C10		C11		C12		C13		C14		C15		C16		C17	

[7] VF ASSEMBLY

Symbol No.		[7]		[13]		[14]		[15]		[16]		[17]		[18]		[19]		[20]	
Removing order of screw		1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18
Place to stick screw			*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*	*
Reference drawing (Fig.No.)		e		f		C11		C12		C13		C14		C15		C16		C17	
Screw tightening torque		3-2-3		C11		C12		C13		C14		C15		C16		C17		C17	

[22] MONITOR ASSEMBLY

Symbol No.		[22]		[23]		[24]	
Removing order of screw		1	2	3	4	5	6
Place to stick screw		*	*	*	*	*	*
Reference drawing (Fig.No.)		b		d		f	
Screw tightening torque		3-2-4		3-2-4		3-2-4	

[19] OP BLOCK ASSEMBLY/[25]CD BOARD ASSEMBLY

Symbol No.		[19]/[25]		[20]		[21]	
Removing order of screw		1	2	3	4	5	6
Place to stick screw							
Reference drawing (Fig.No.)		h		b		b	
Screw tightening torque		3-2-5		3-2-5		3-2-5	

NOTE:

- * : Don't reuse the screw, because screw lock bond was applied to them.
- Pay careful attention to tightening torque for each screw.

Torque setting value of torque driver is limited. At the values over the maximum torque setting value, fasten a screw manually not to damage the screw thread.

a : 0.248N·m (2.5kgf·cm) b : 0.118N·m (1.2kgf·cm) c : 0.078N·m (0.8kgf·cm)

d : 0.198N·m (2.0kgf·cm) e : 0.069N·m (0.7kgf·cm) f : 0.098N·m (1.0kgf·cm)

g : 0.059N·m (0.6kgf·cm) h : 0.147N·m (1.5kgf·cm)

5.2 TAKE OUT CASSETTE TAPE

- (1) Remove the Power Unit (battery or DC code) from the set.
- (2) Remove one screw, and remove a plate (ADJ).

NOTE:

For more efficient operation, loosen and move the grip belt prior to the procedure (2).

- (3) Open the CASSETTE COVER till it is completely opened and fixed.
- (4) Attach a PVC tape as shown in the figure.

NOTE:

Be careful of cassette tape damage caused because the CASSETTE HOUSING ASSEMBLY is moved upward at the unloading end (EJECT mode).

- (5) To set the SLIDE DECK ASSEMBLY to the unloading end, apply DC 3V to the electrode (terminal) on the top surface of the LOADING MOTOR ASSEMBLY that is seen through a hole under the plate removed in the procedure (2).

NOTE:

Be careful not to attach grease or a similar substance to the surface of the cassette tape on the tape transport system.

- (6) Wind the cassette tape by directly turning the REEL DISK ASSEMBLY (SUP) from the backside of the SLIDE DECK ASSEMBLY by using a sharp tool (Chip IC replacement tool).
- (7) Confirm that the cassette tape is completely wound, and then peel off the PVC tape from the CASSETTE HOUSING ASSEMBLY and take out the cassette tape.

NOTE:

To confirm that the cassette tape is completely wound, confirm that one REEL DISK ASSEMBLY (TU) rotates as you rotate the other REEL DISK ASSEMBLY (SUP).

- (8) Make sure that grease or a similar substance is not attached to the surface of the tape taken out in the procedure (7). Similarly, also make sure that grease or a similar substance is not attached on the MECHANISM ASSEMBLY, especially the tape transport system.

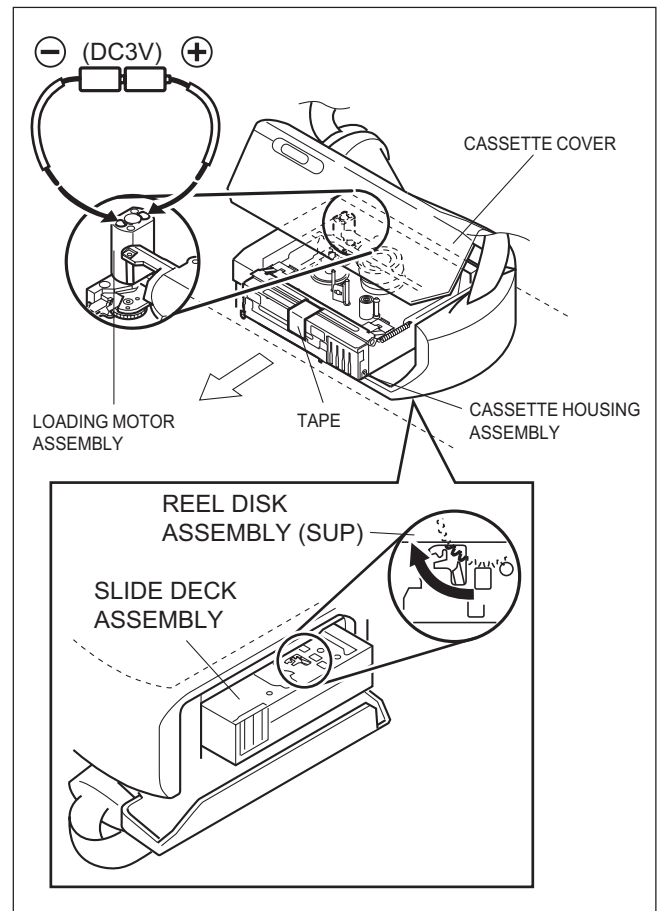



Fig.5-2-1

5.3 EMERGENCY DISPLAY

Whenever some abnormal signal is input to the syscon CPU, an error number (E01, as an example) is displayed on the LCD monitor or (in the electronic view finder). In every error status, such the message as shown below alter nately appear over and over.

- In an emergency mode, all operations except turning on/off the POWER switch are ineffectual.

Example (in case of the error number E01):

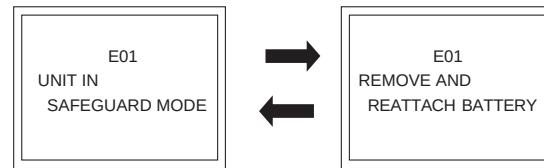

LCD display	Emergency mode	Details	Possible cause
E01	LOADING	In the case the encoder position is not shifted to the next point though the loading motor has rotated in the loading direction for 4 seconds or more. This error is defined as [E01].	1. The mechanism is locked during mode shift. 2. The mechanism is locked at the mechanism loading end, because the encoder position is skipped during mechanism mode shift. 3. No power is supplied to the loading MDA.
E02	UNLOADING	In the case the encoder position is not shifted to the next point though the loading motor has rotated in the unloading direction for 4 seconds or more. This error is defined as [E02].	1. The mechanism is locked during mode shift. 2. The mechanism is locked at the mechanism loading end, because the encoder position is skipped during mechanism mode shift.
E03	TU & SUP REEL FG	In the case no REEL FG is produced for 4 seconds or more in the capstan rotation mode after loading was complete, the mechanism mode is shifted to STOP with the pinch roller set off. This error is defined as [E03]. However, no REEL EMG is detected in the SLW/STILL mode.	1. The idler gear does not engage with the reel disk well. 2. Though the idler gear and reel disk are engaged with each other, the tape is not wound because of overload to the mechanism. 3. No FG pulse is output from the reel sensor. 4. No power is supplied to the reel sensor. 5. Tape transport operation takes place with a cassette having no tape inside. 6. The tape slackens and no pulse is produced until the slack is taken up and the tape comes into the normal status.
E04	DRUM FG	In the case there is no DRUM FG input in the drum rotation mode for 4 seconds or more. This error is defined as [E04], and the mechanism mode is shifted to STOP with the pinch roller set off.	1. The drum cannot be started or drum rotation is stopped because tape transport load is too high. 1) Tape tension is extremely high. 2) The tape is damaged or soiled with grease, etc. 2. The DRUM FG signal is not received by the syscon CPU. 1) Disconnection in the middle of the signal line. 2) Failure of the DRUM FG pulse generator (hall element). 3. No drum control voltage is supplied to the MDA. 4. No power is supplied to the DRUM MDA.
E05	-	-	-
E06	CAPSTAN FG	In the case no CAPSTAN FG is produced in the capstan rotation mode for 2 seconds or more. This error is defined as [E06], and the mechanism mode is shifted to STOP with the pinch roller set off. However, no CAPSTAN EMG is detected in the STILL/FF/REW mode.	1. The CAPSTAN FG signal is not received by the syscon CPU. 1) Disconnection in the middle of the signal line. 2) Failure of the CAPSTAN FG pulse generator (MR element). 2. No capstan control voltage is supplied to the MDA. 3. The capstan cannot be started or capstan rotation is stopped because tape transport load is too high. 1) Tape tension is extremely high. (Mechanical locking) 2) The tape is damaged or soiled with grease, etc. (Tape tangling occurs, etc.)

Fig.5-3-1

JVC SERVICE & ENGINEERING COMPANY OF AMERICA
DIVISION OF JVC AMERICAS CORP.

www.jvcservice.com(US Only)

JVC CANADA INC.

Head office : 21 Finchdene Square Scarborough, Ontario M1X 1A7

(416)293-1311

JVC[®]


JVC

SCHEMATIC DIAGRAMS

DIGITAL HD VIDEO CAMERA

GR-HD1US

CD-ROM No.SML200306

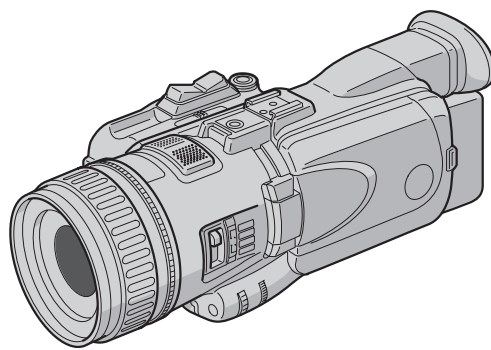

Mini DV NTSC
DSC
DIGITAL
STILL CAMERA

GR-HD1US [M3D8L3]

CHARTS AND DIAGRAMS

NOTES OF SCHEMATIC DIAGRAM

Safety precautions

The Components identified by the symbol  are critical for safety. For continued safety, replace safety critical components only with manufacturer's recommended parts.

1. Units of components on the schematic diagram

Unless otherwise specified.

- 1) All resistance values are in ohm. 1/6 W, 1/8 W (refer to parts list).

Chip resistors are 1/16 W.

K: K Ω (1000 Ω), M: M Ω (1000K Ω)

- 2) All capacitance values are in μ F, (P: PF).
- 3) All inductance values are in μ H, (m: mH).
- 4) All diodes are 1SS133, MA165 or 1N4148M (refer to parts list).

Note: The Parts Number, value and rated voltage etc. in the Schematic Diagram are for references only. When replacing the parts, refer to the Parts List.

2. Indications of control voltage


AUX : Active at high.

$\overline{\text{AUX}}$ or AUX(L) : Active at low.


3. Interpreting Connector indications




Removable connector




Wire soldered directly on board



Non-removable Board connector



Board to Board



Connected pattern on board
The arrows indicate signal path

Note: For the destination of each signal and further line connections that are cut off from the diagram, refer to "BOARD INTERCONNECTIONS"

4. Voltage measurement

- 1) Regulator (DC/DC CONV) circuits


REC : Colour bar signal.

PB : Alignment tape (Colour bar).

— : Unmeasurable or unnecessary to measure.

- 4) Indication on schematic diagram

Voltage Indications for REC and PB mode on the schematic diagram are as shown below.

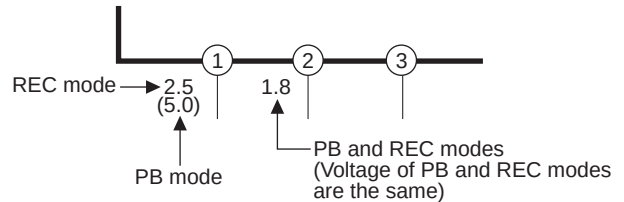


Note: If the voltages are not indicated on the schematic diagram, refer to the voltage charts.


5. Signal path Symbols

The arrows indicate the signal path as follows.

NOTE : The arrow is DVC unique object.

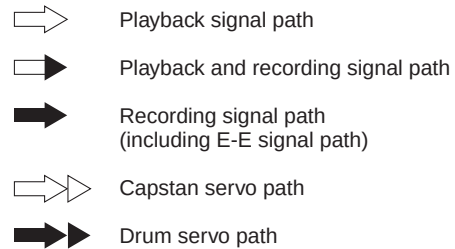

(Example)



6. Indication of the parts for adjustments

The parts for the adjustments are surrounded with the circle as shown below.



7. Indication of the parts not mounted on the circuit board

"OPEN" is indicated by the parts not mounted on the circuit board.




CIRCUIT BOARD NOTES

1. Foil and Component sides

- 1) Foil side (B side) :
Parts on the foil side seen from foil face (pattern face) are indicated.
- 2) Component side (A side) :
Parts on the component side seen from component face (parts face) indicated.

2. Parts location guides


Parts location are indicated by guide scale on the circuit board.

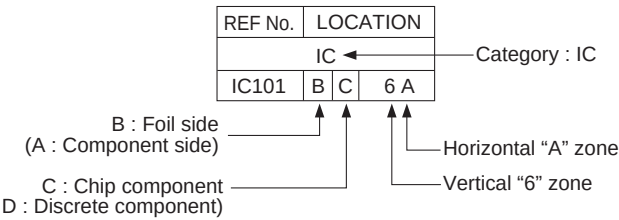

Note: For general information in service manual, please refer to the Service Manual of GENERAL INFORMATION Edition 4 No. 82054D (January 1994).

BOARD INTERCONNECTIONS

(NOTE) *: The number of patch cords are indicated by inter connected.

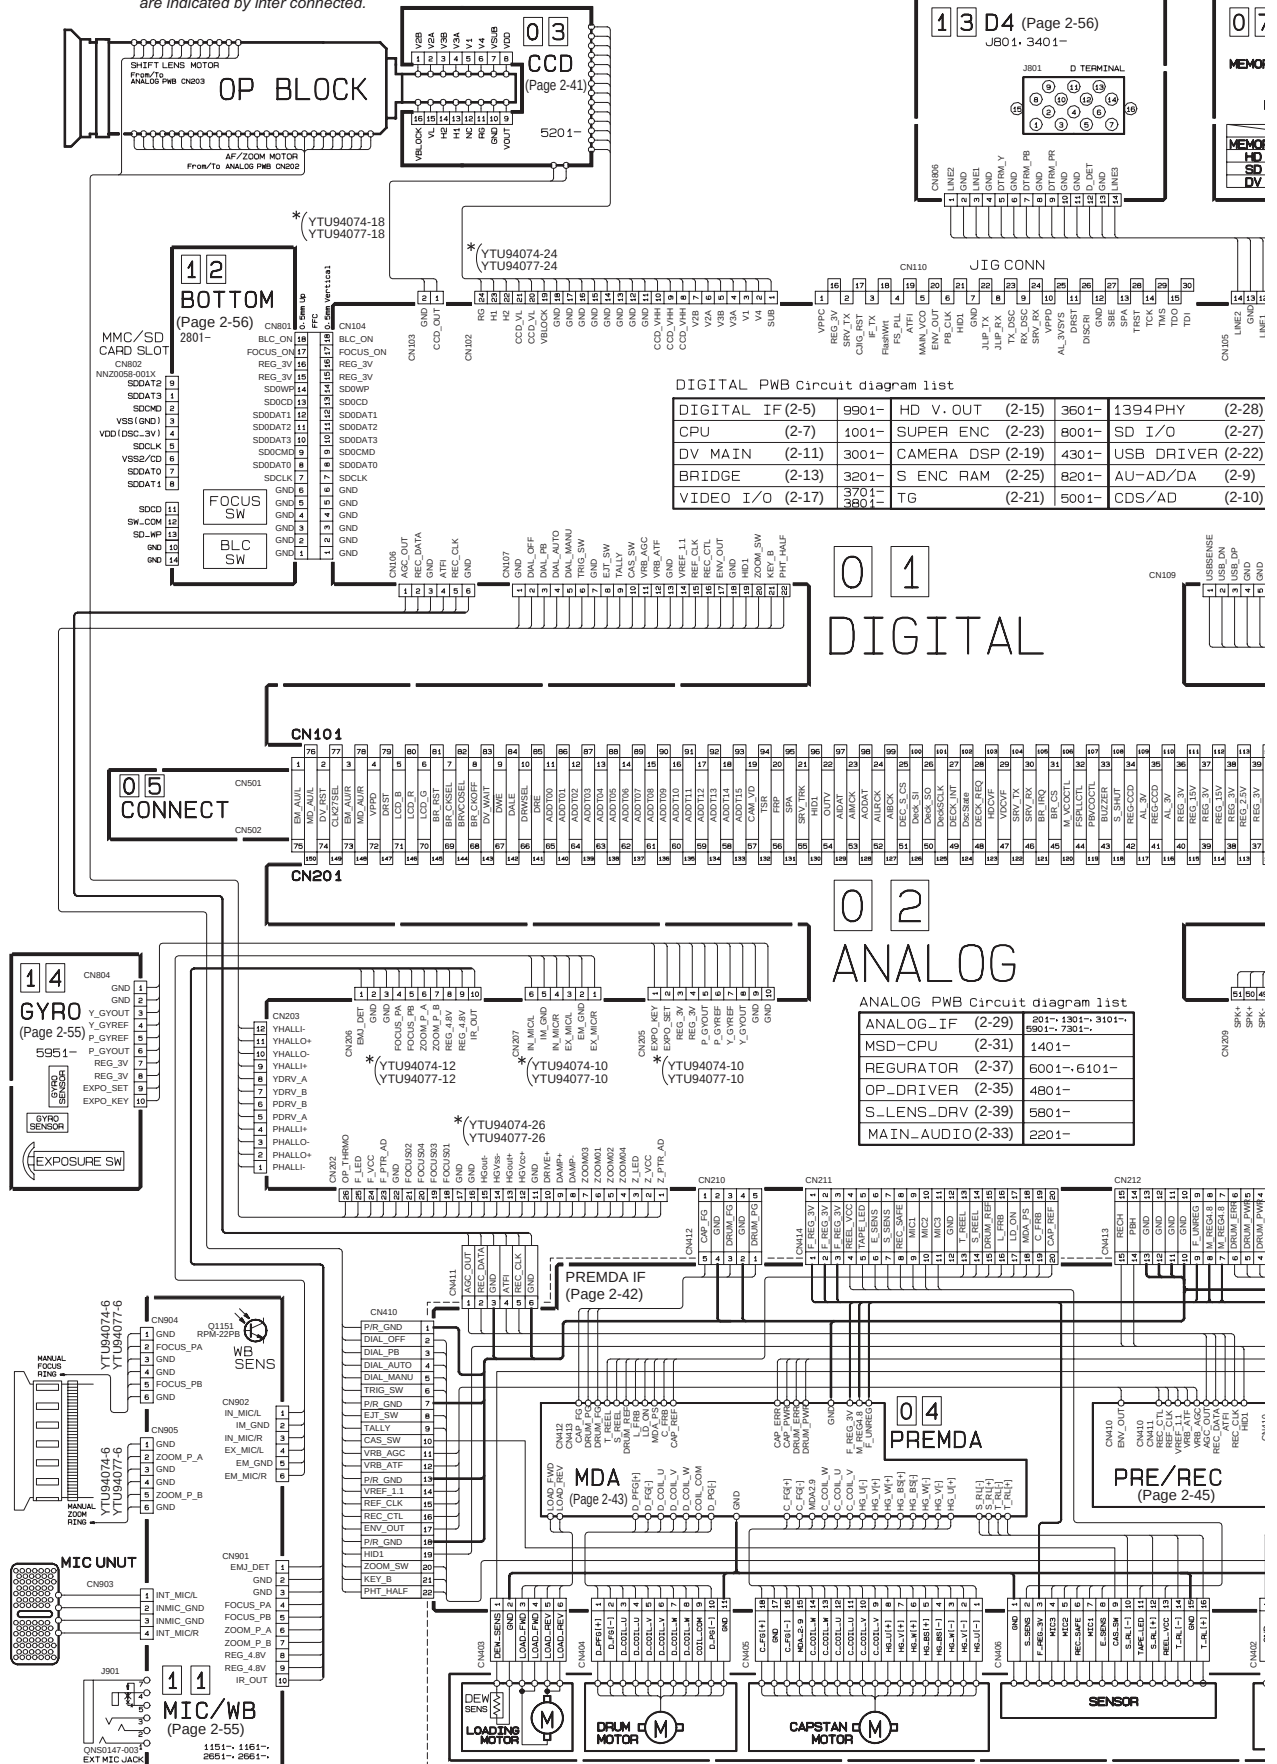


A

B


C

D

DIGITAL(DIGITAL IF) SCHEMATIC DIAGRAM

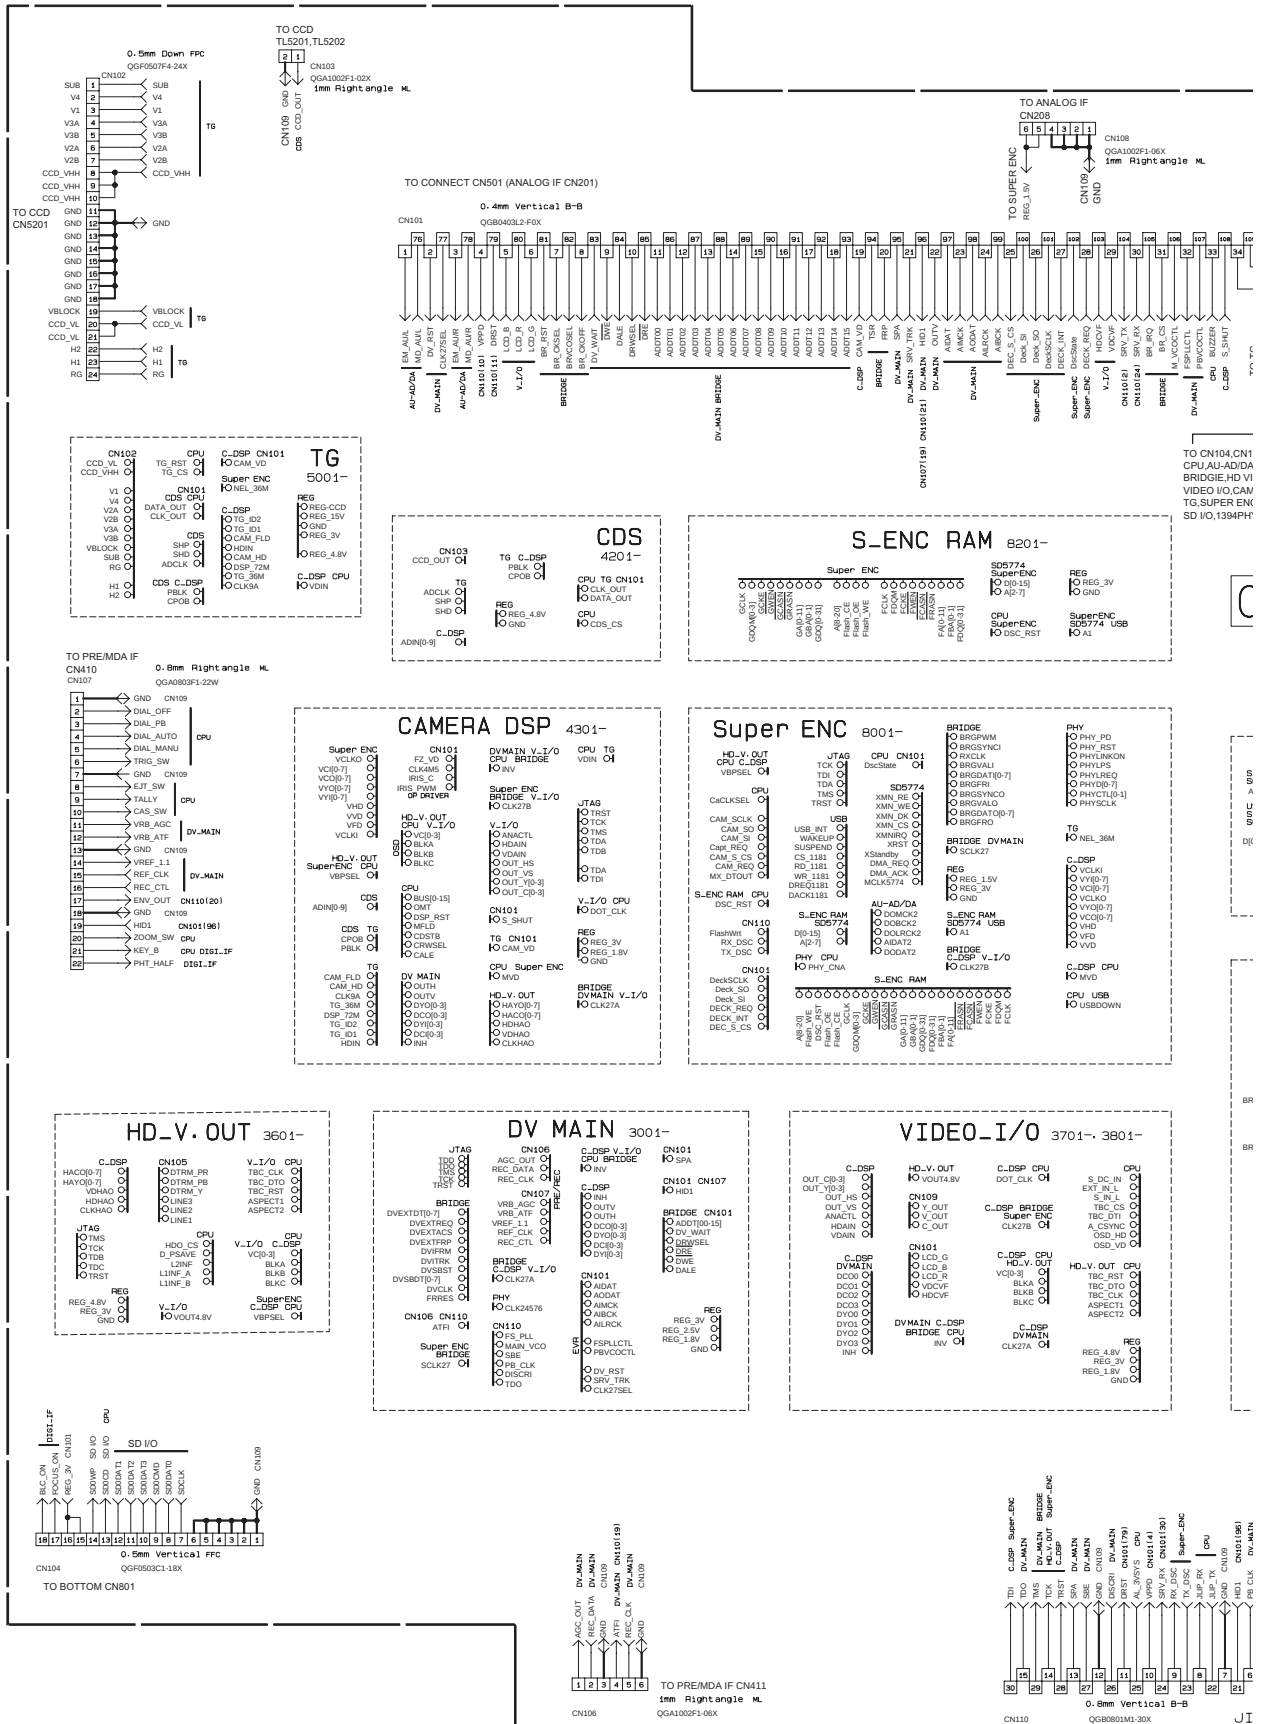


■ DIGITAL(CPU) SCHEMATIC DIAGRAM

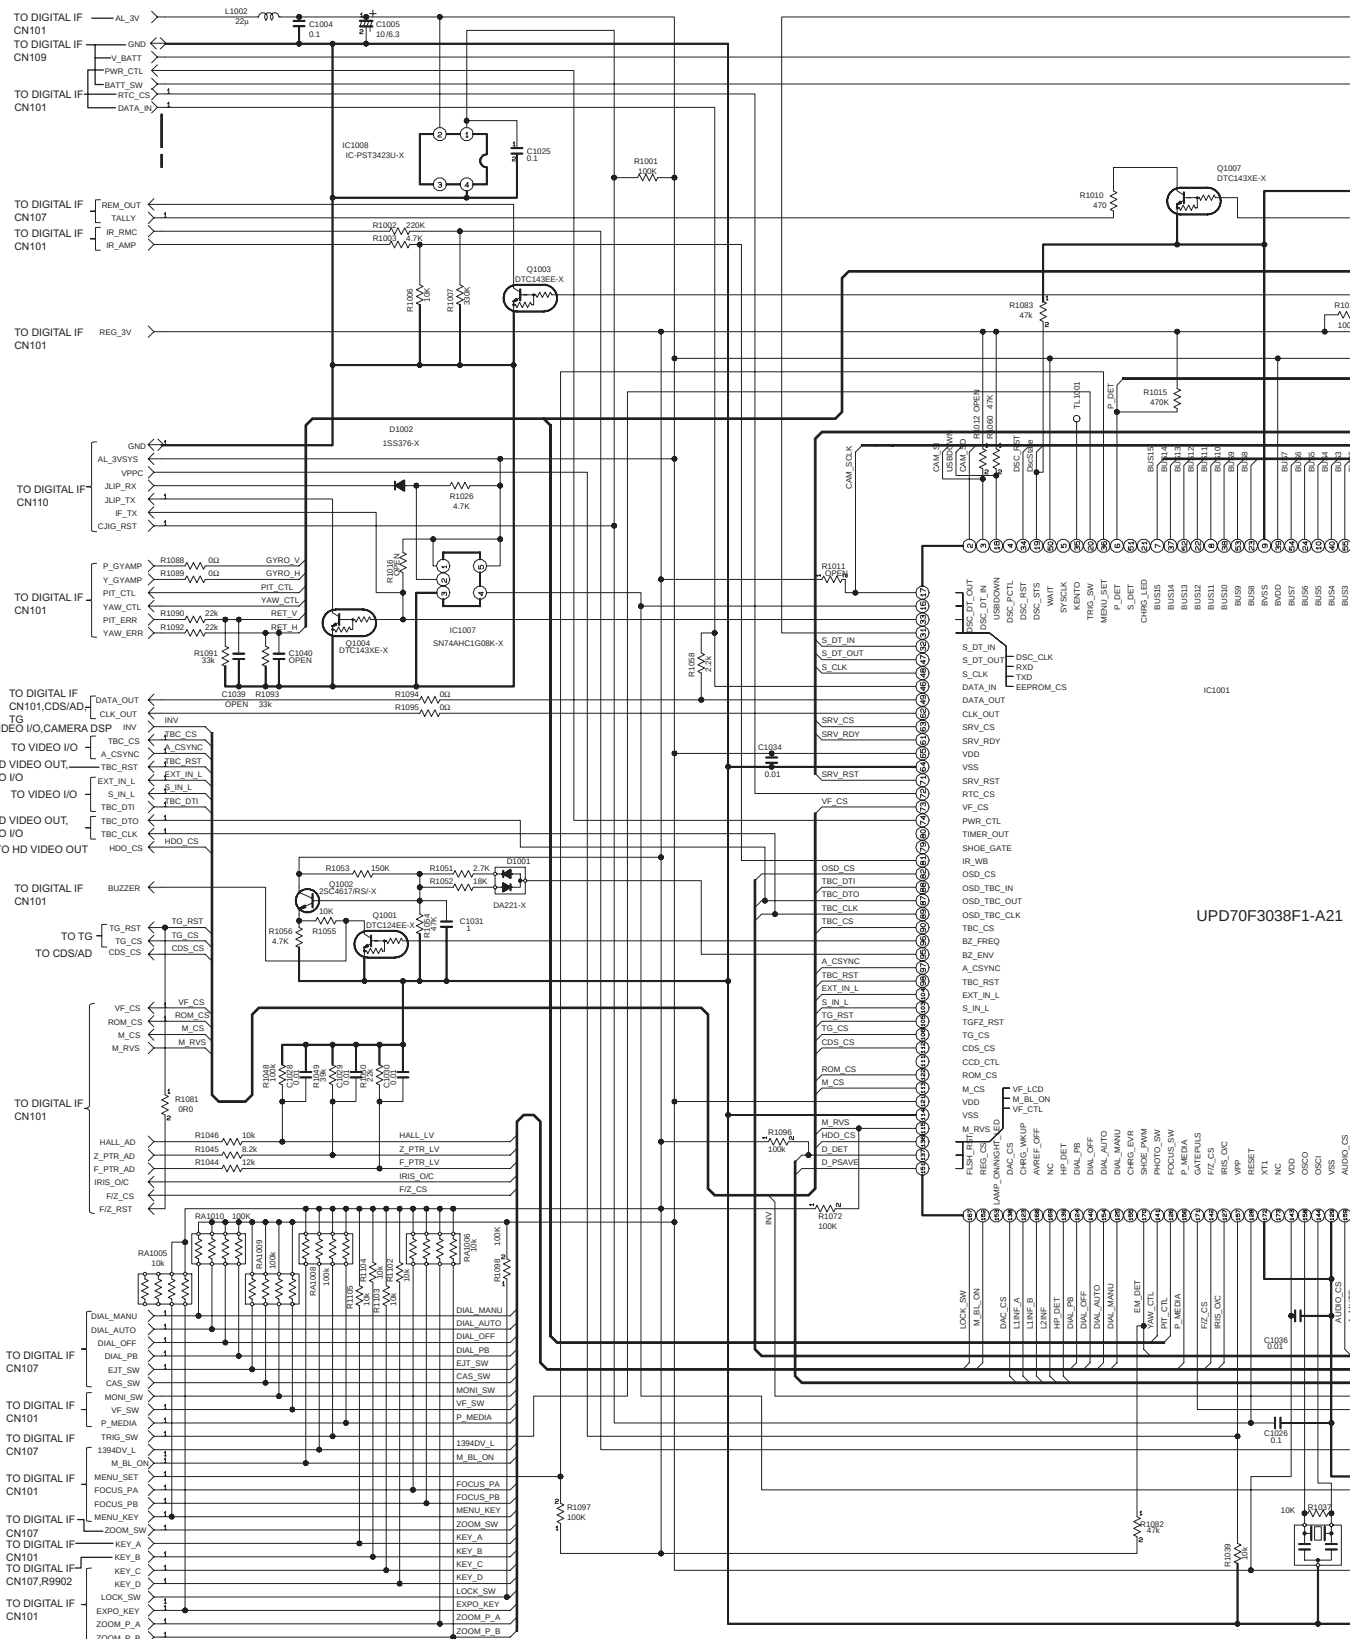





■ DIGITAL(AUDIO AD/DA) SCHEMATIC DIAGRAM

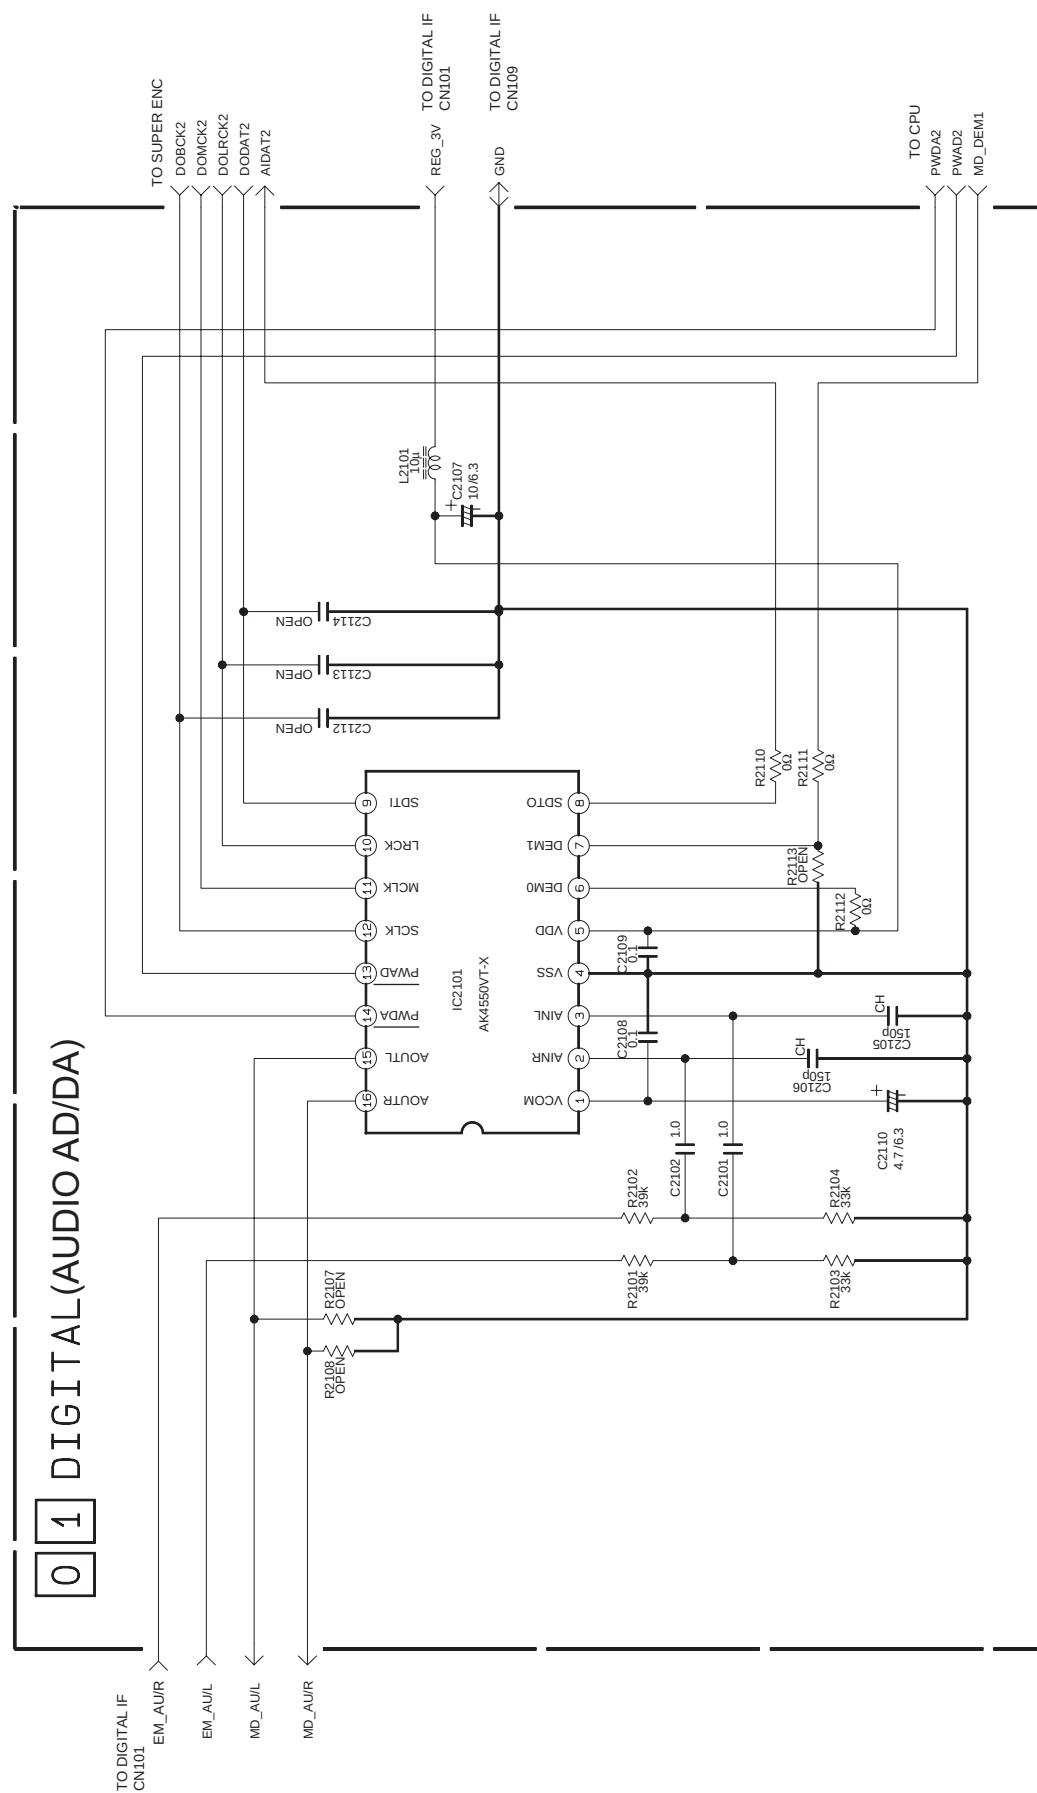


DIGITAL(CDS/AD) SCHEMATIC DIAGRAM

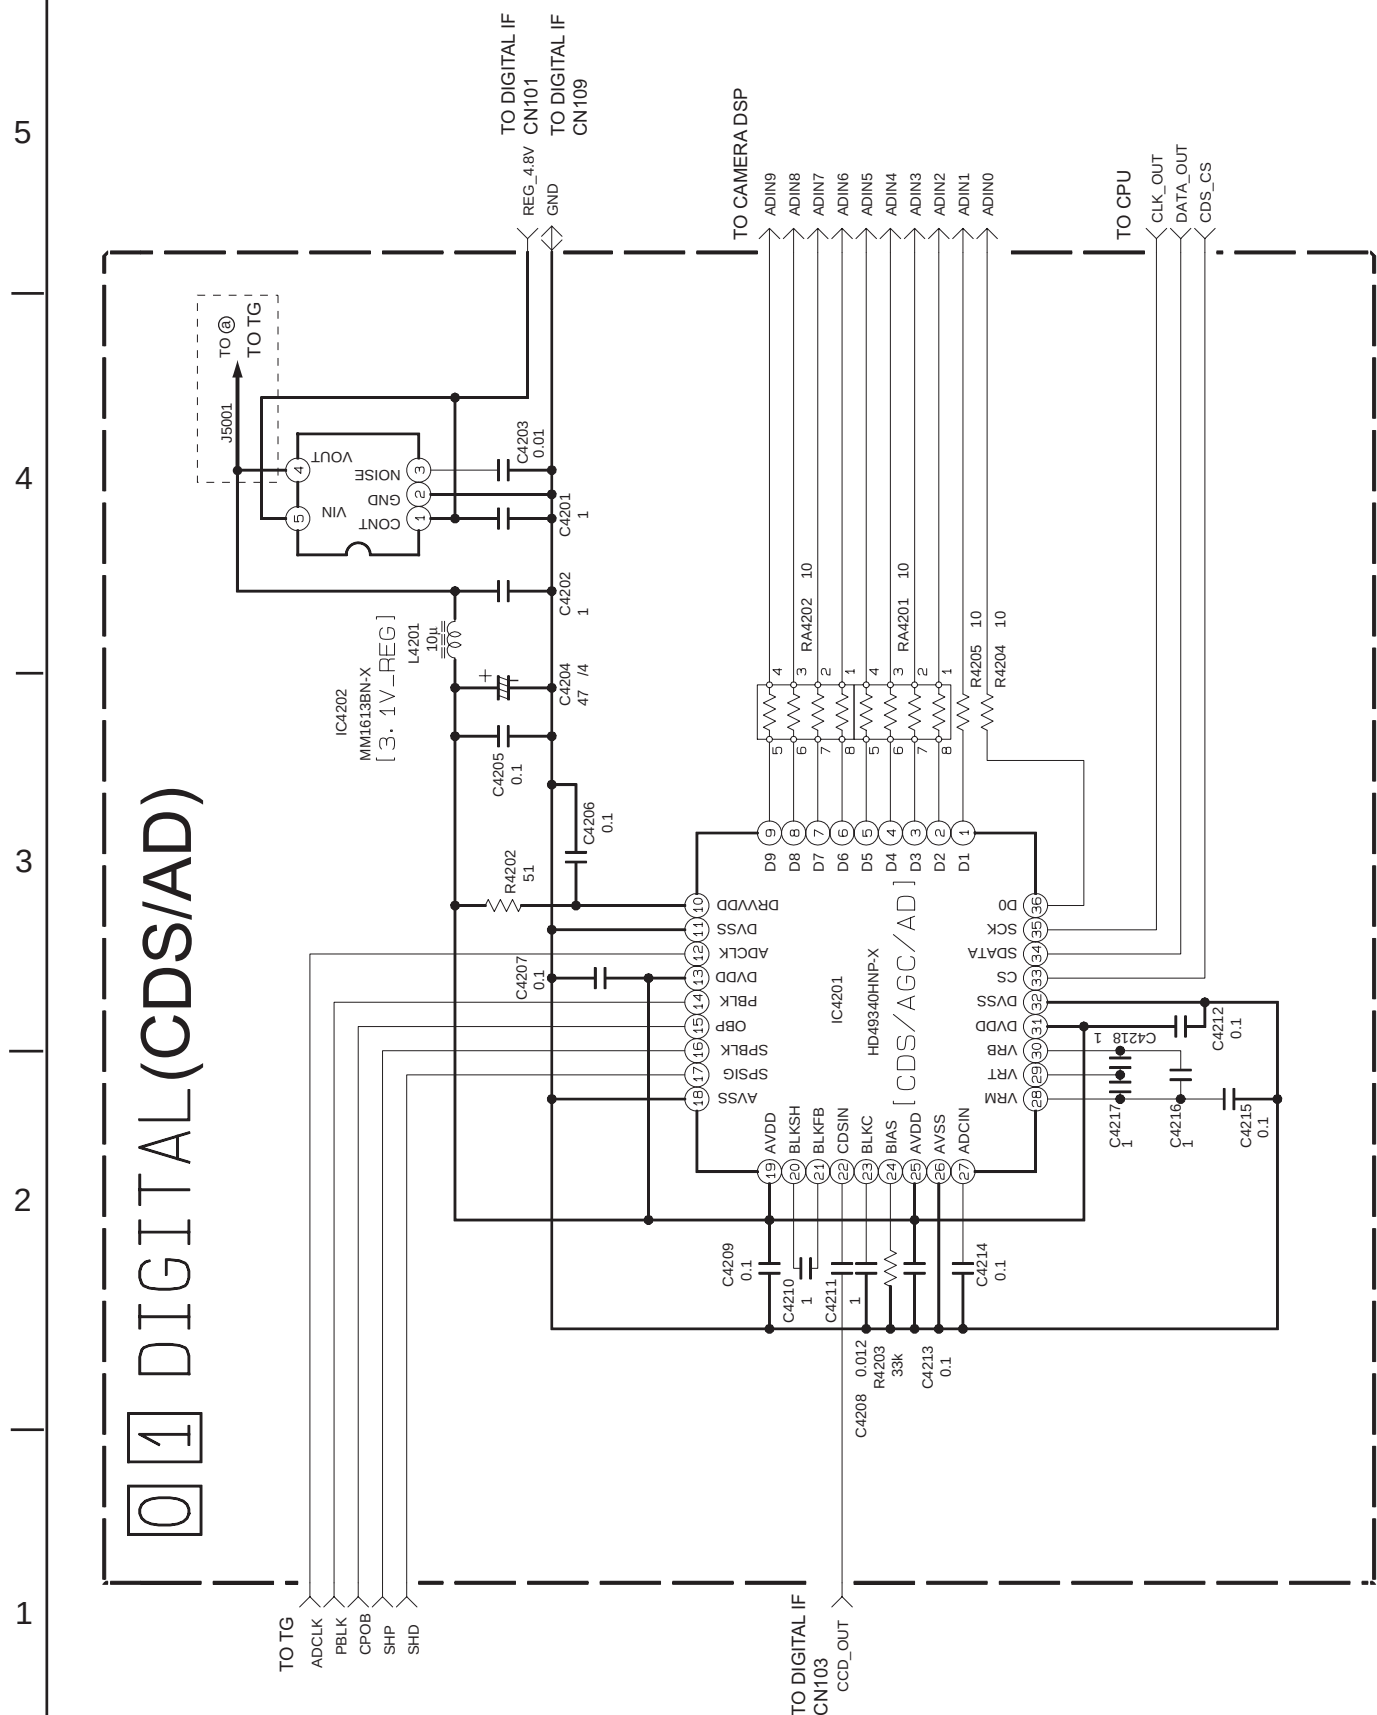



■ DIGITAL(DV MAIN) SCHEMATIC DIAGRAM

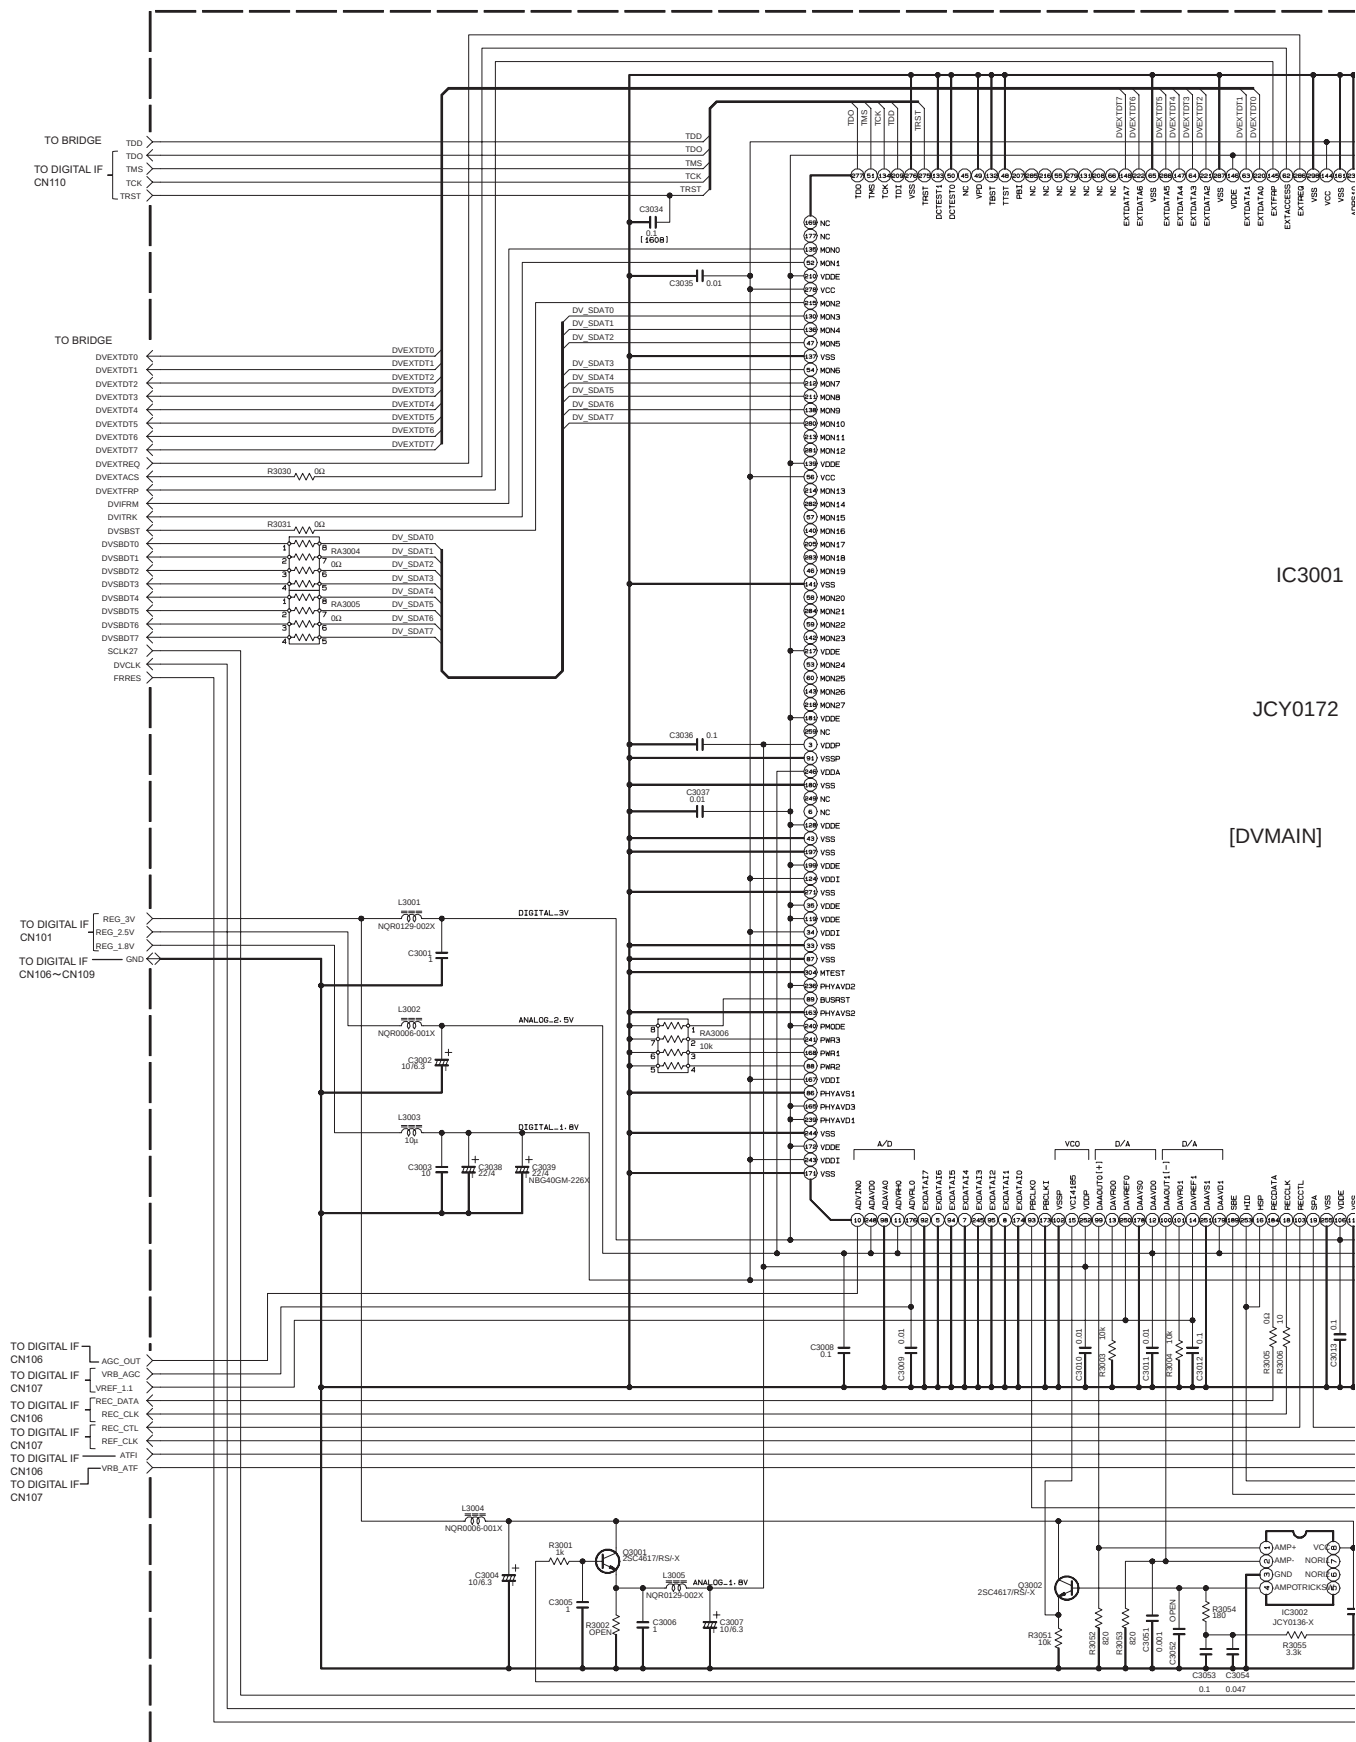

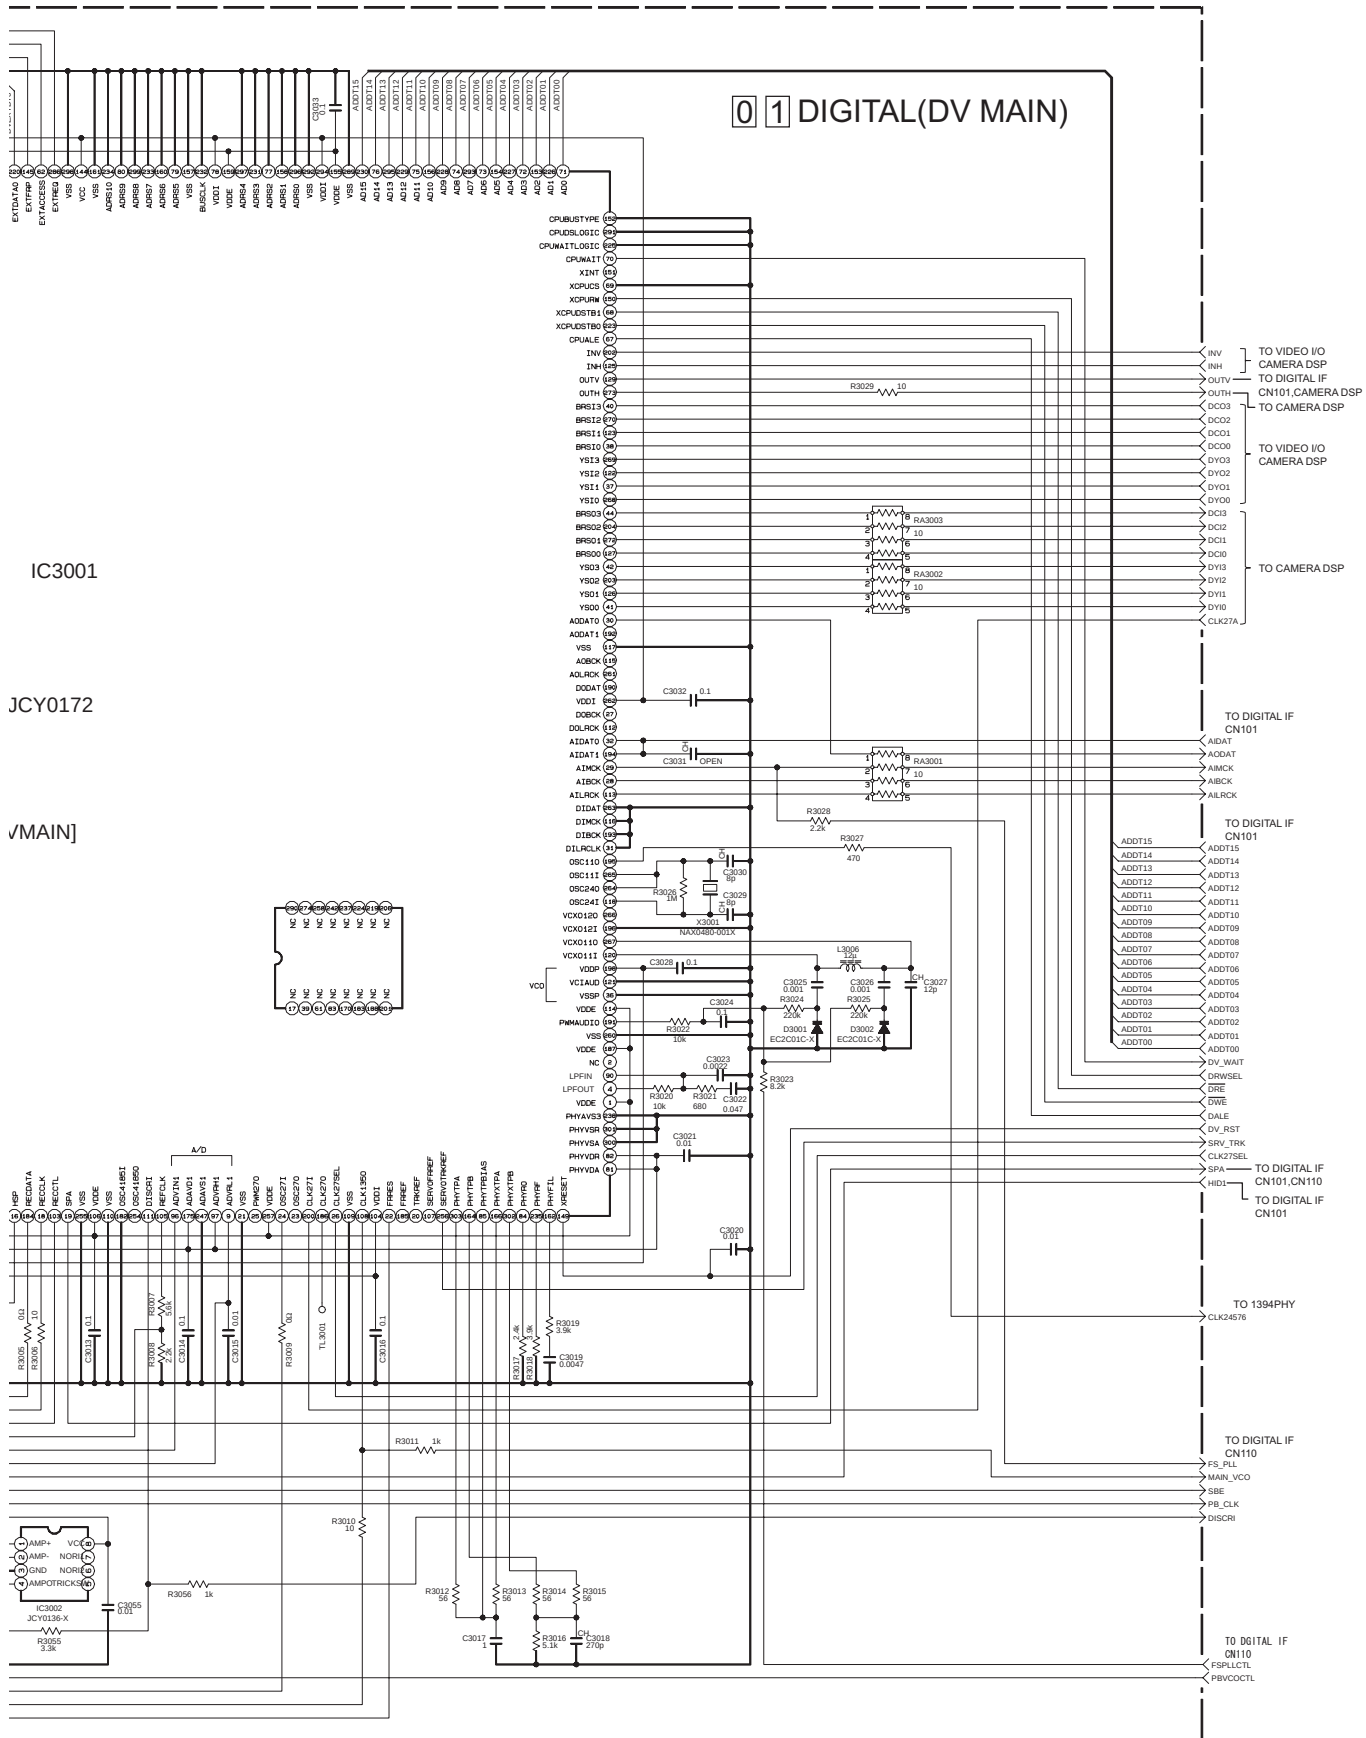


■ DIGITAL(BRIDGE) SCHEMATIC DIAGRAM

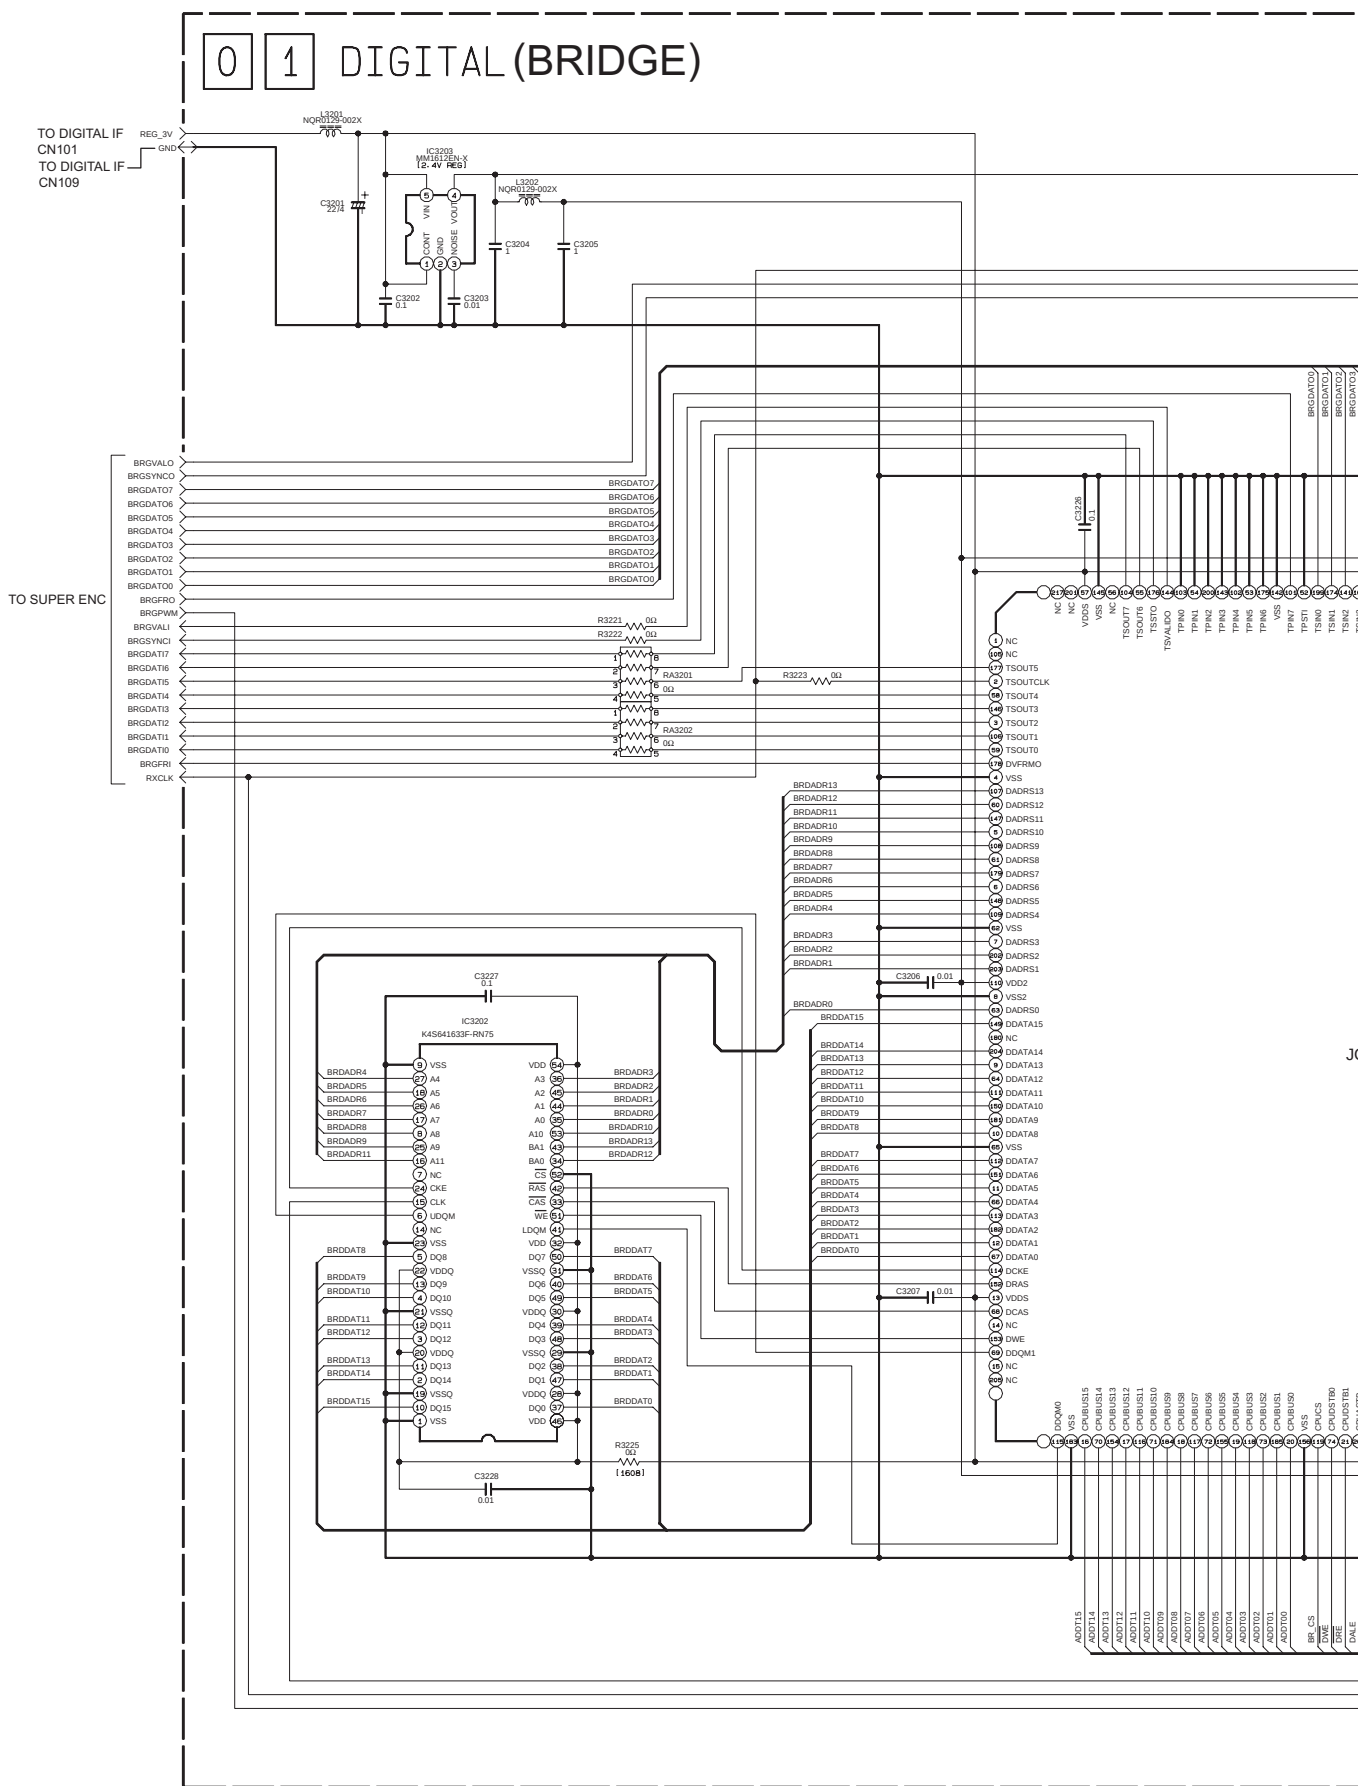

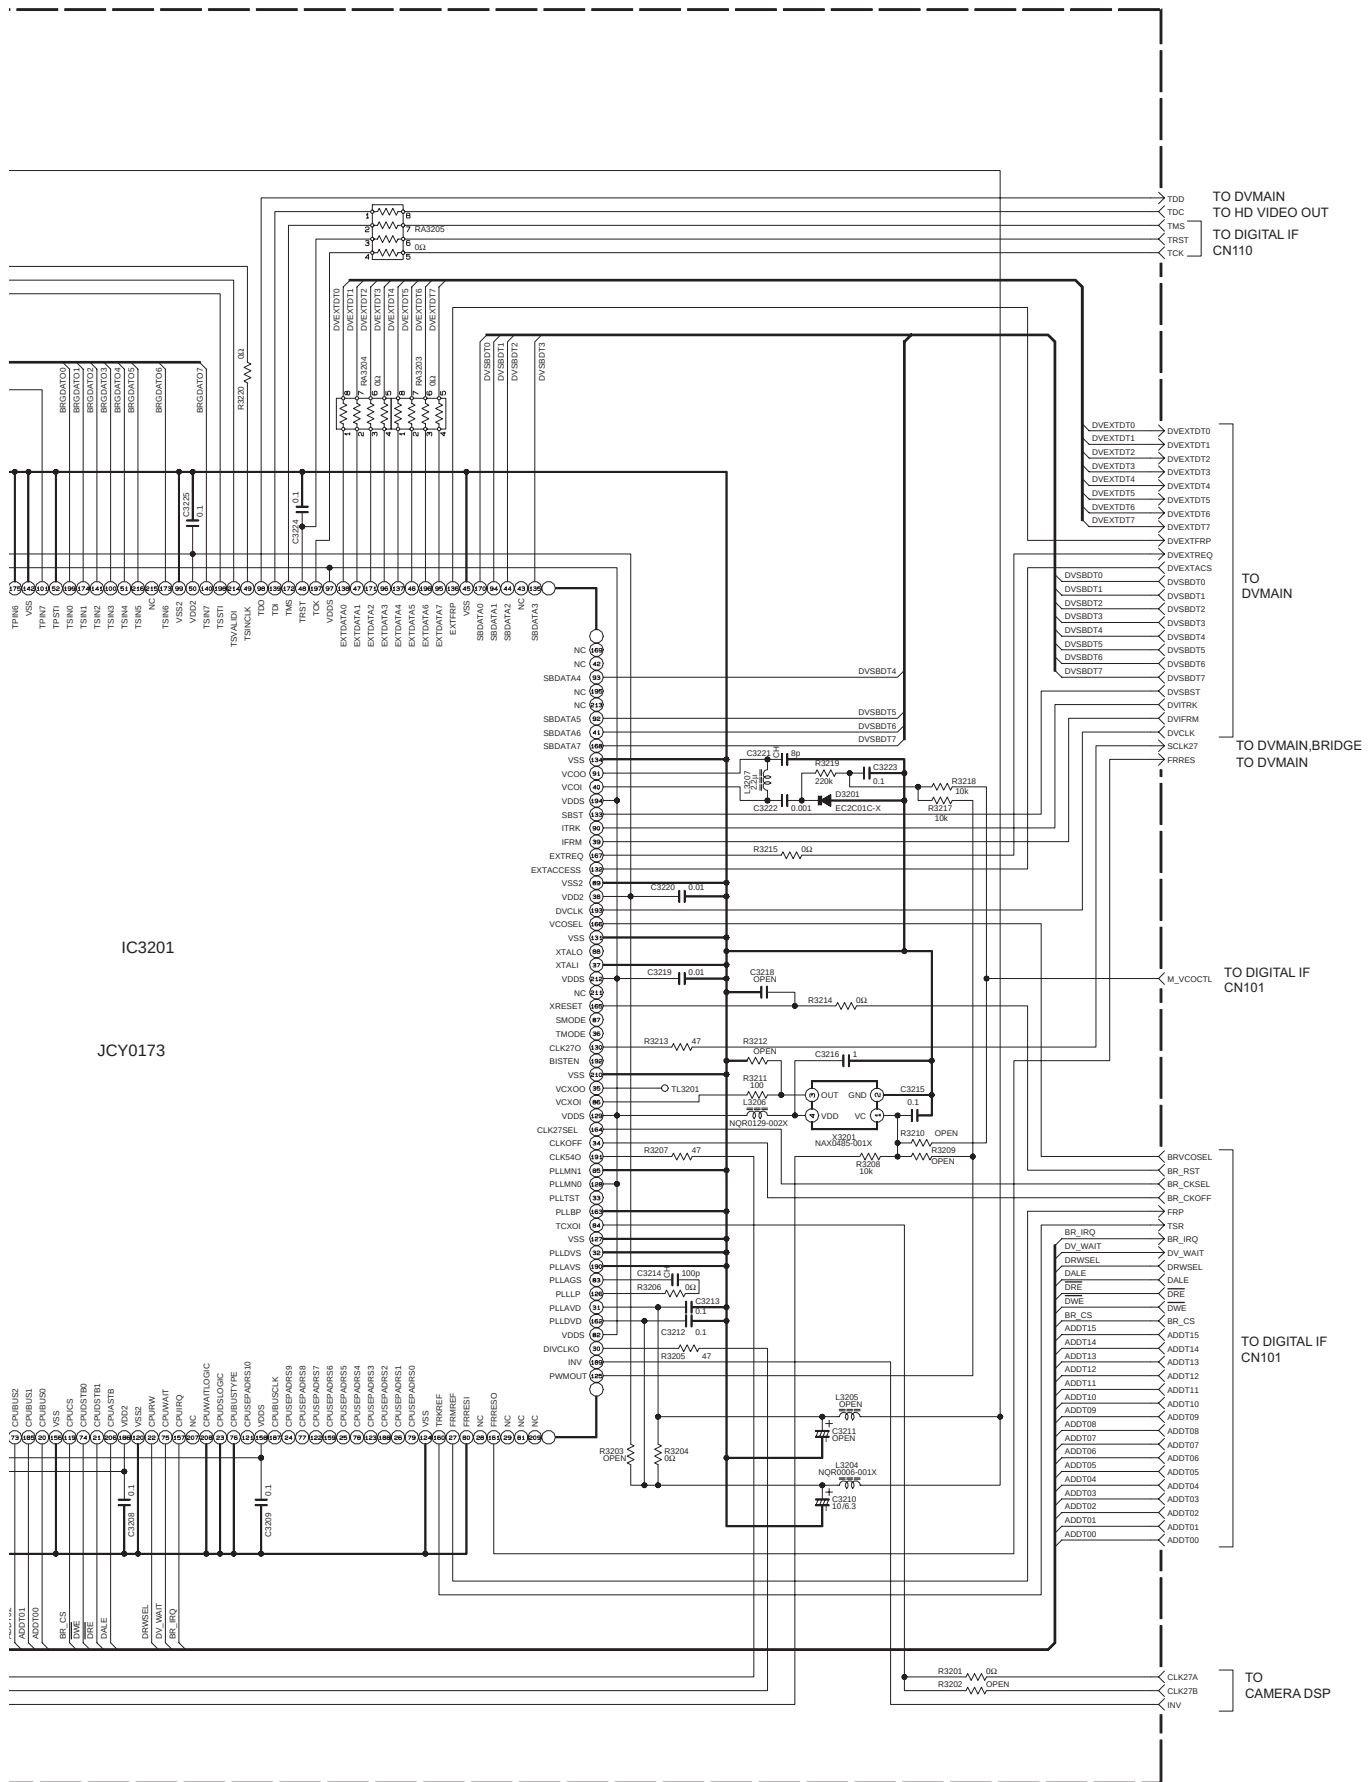



■ DIGITAL(HD VIDEO OUT) SCHEMATIC DIAGRAM

☐ 0 ☐ 1 DIGITAL (HD VIDEO OUT)

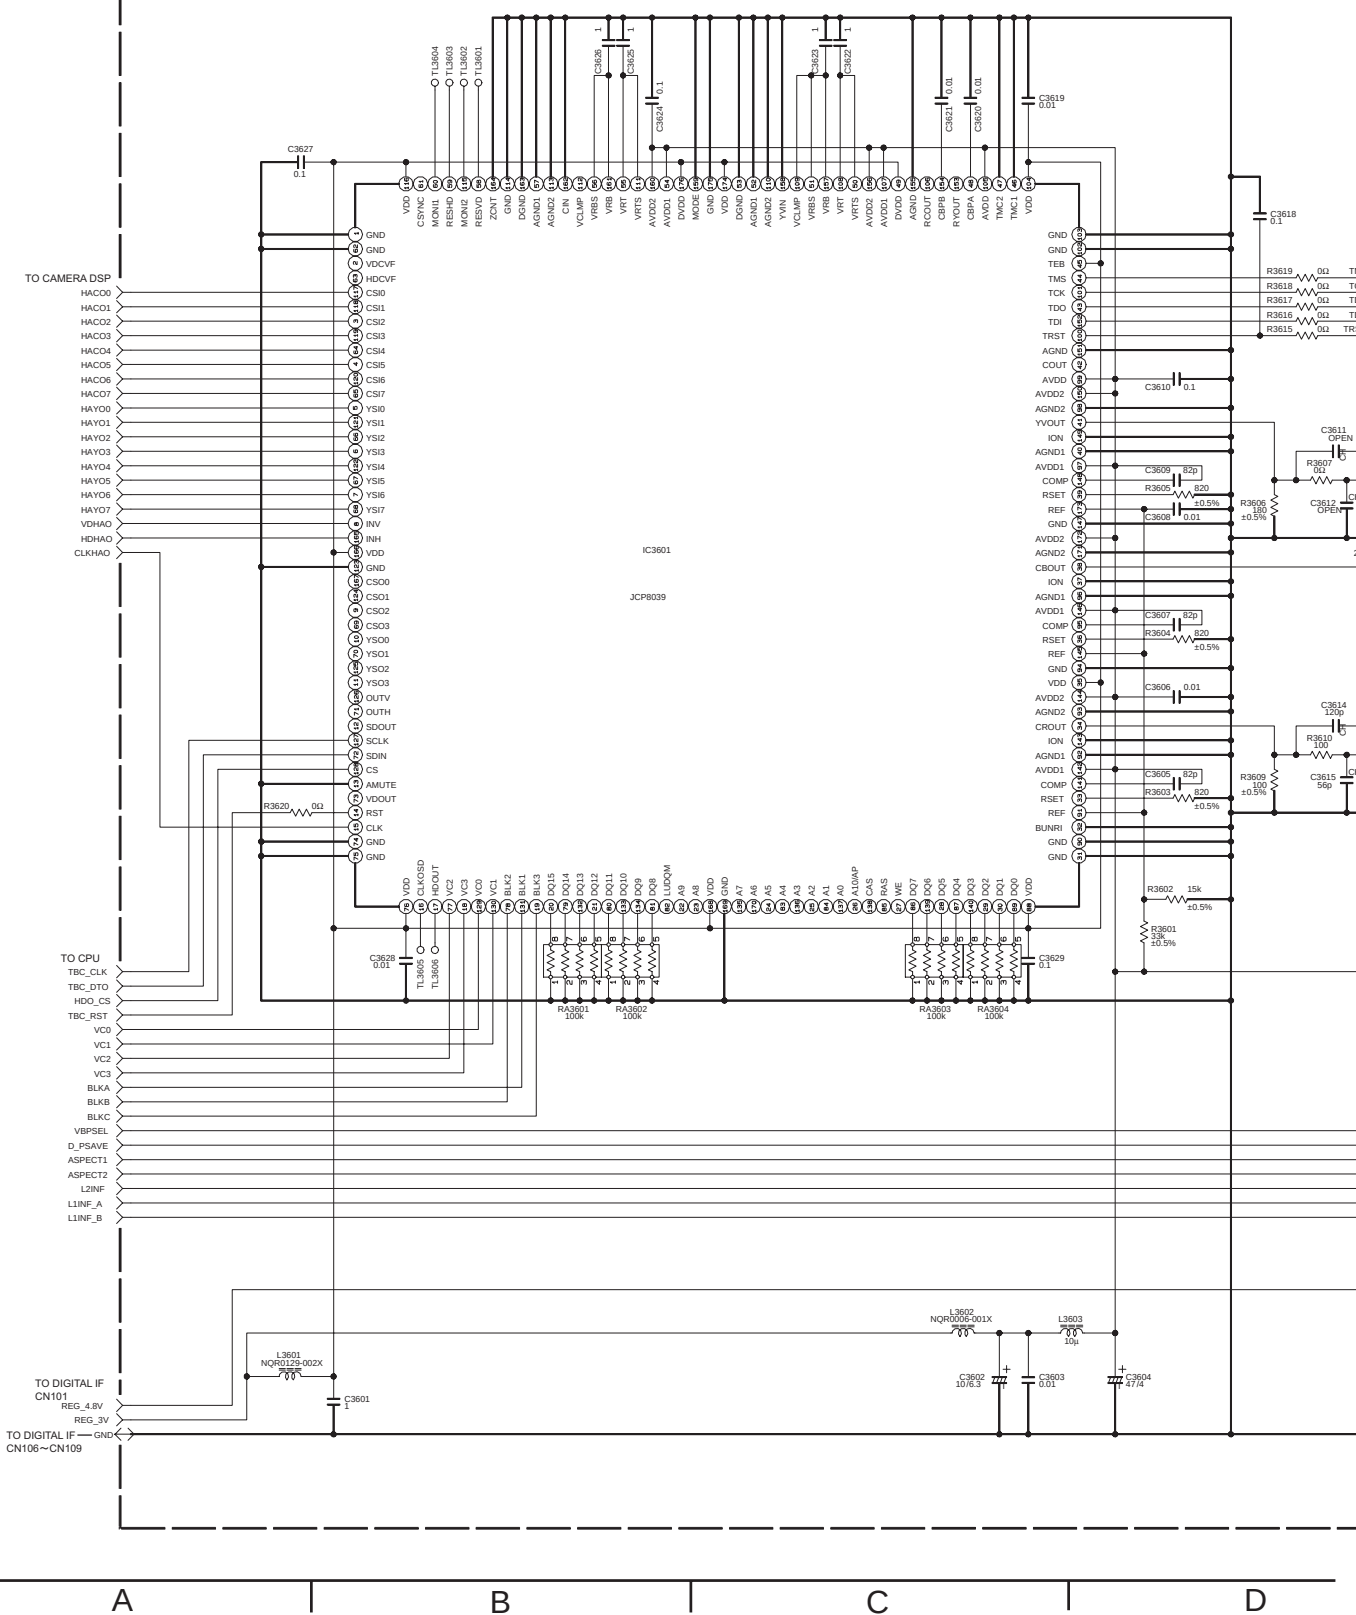


■ DIGITAL(VIDEO I/O) SCHEMATIC DIAGRAM

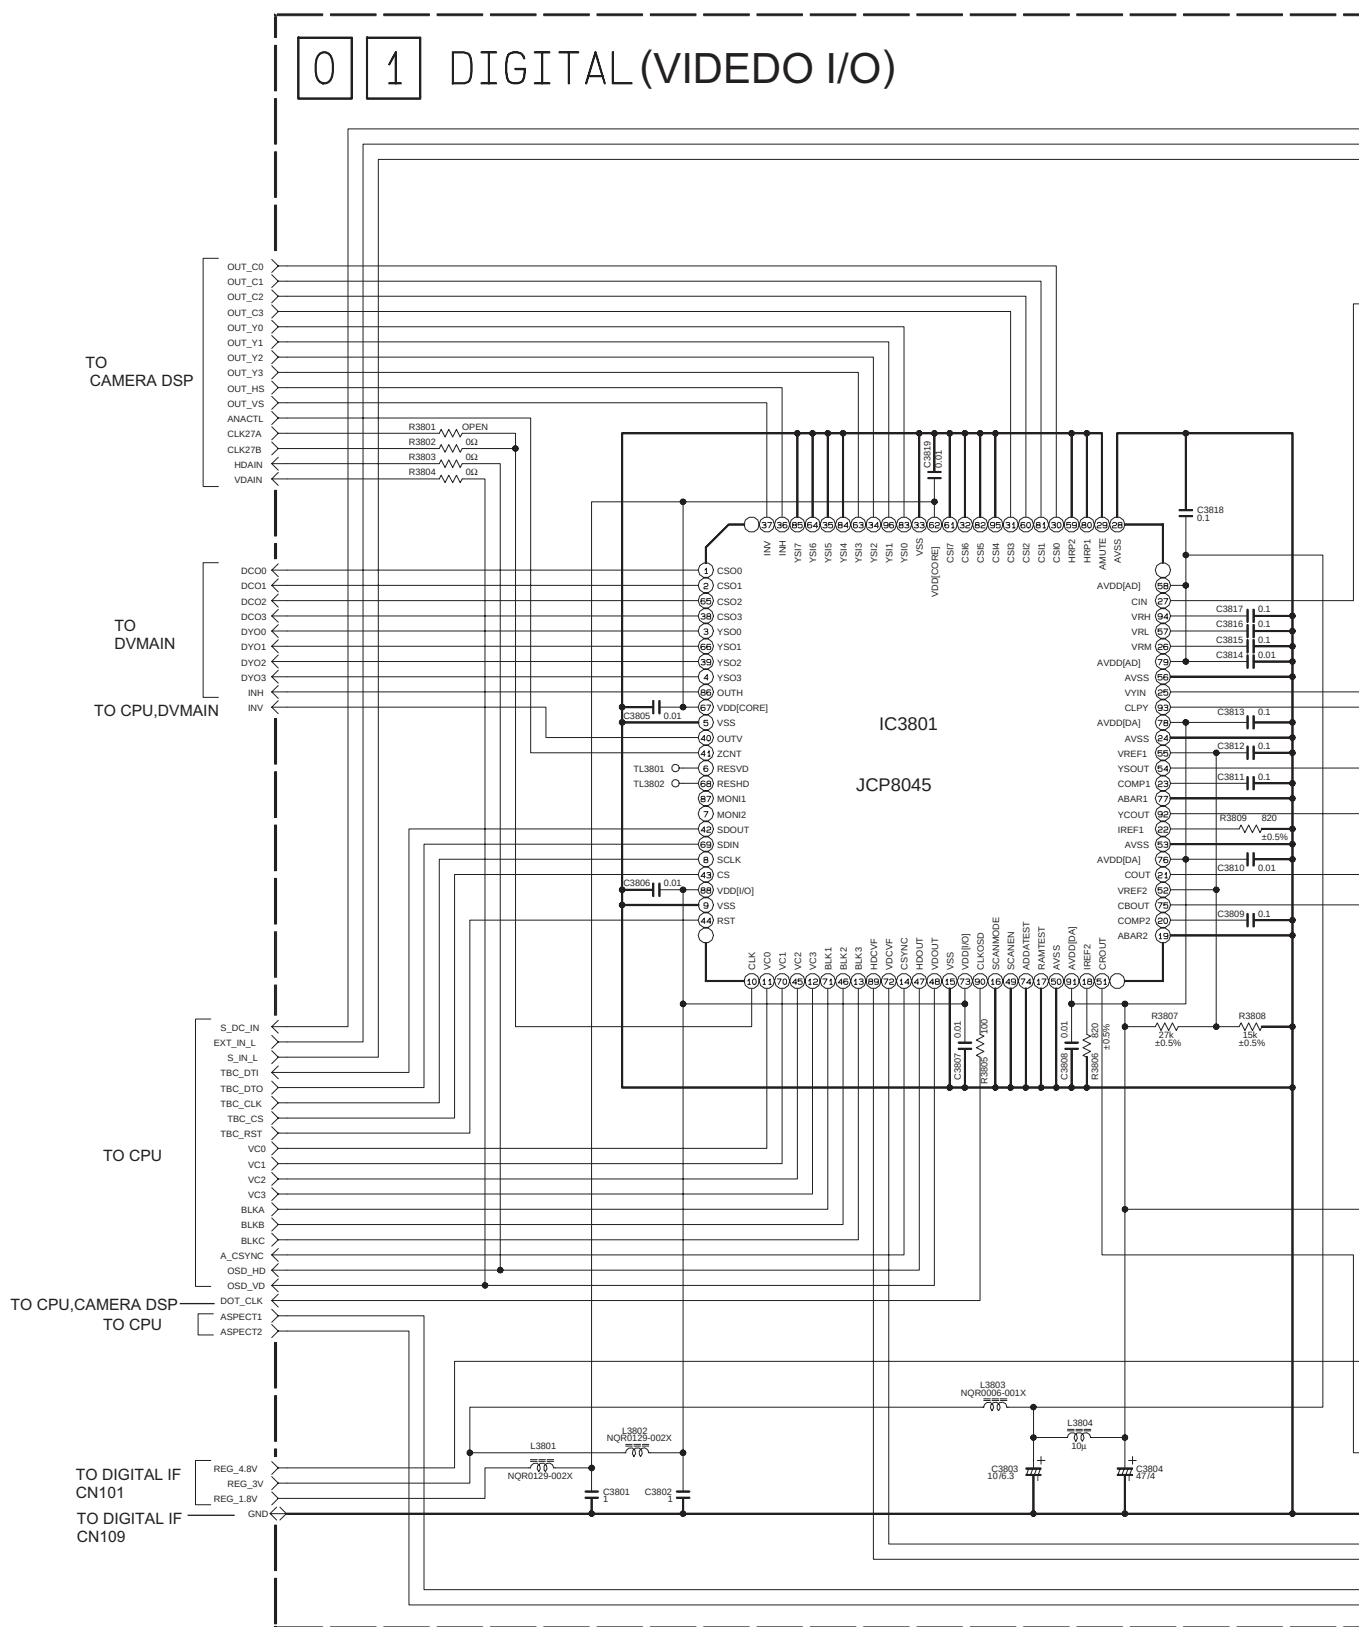

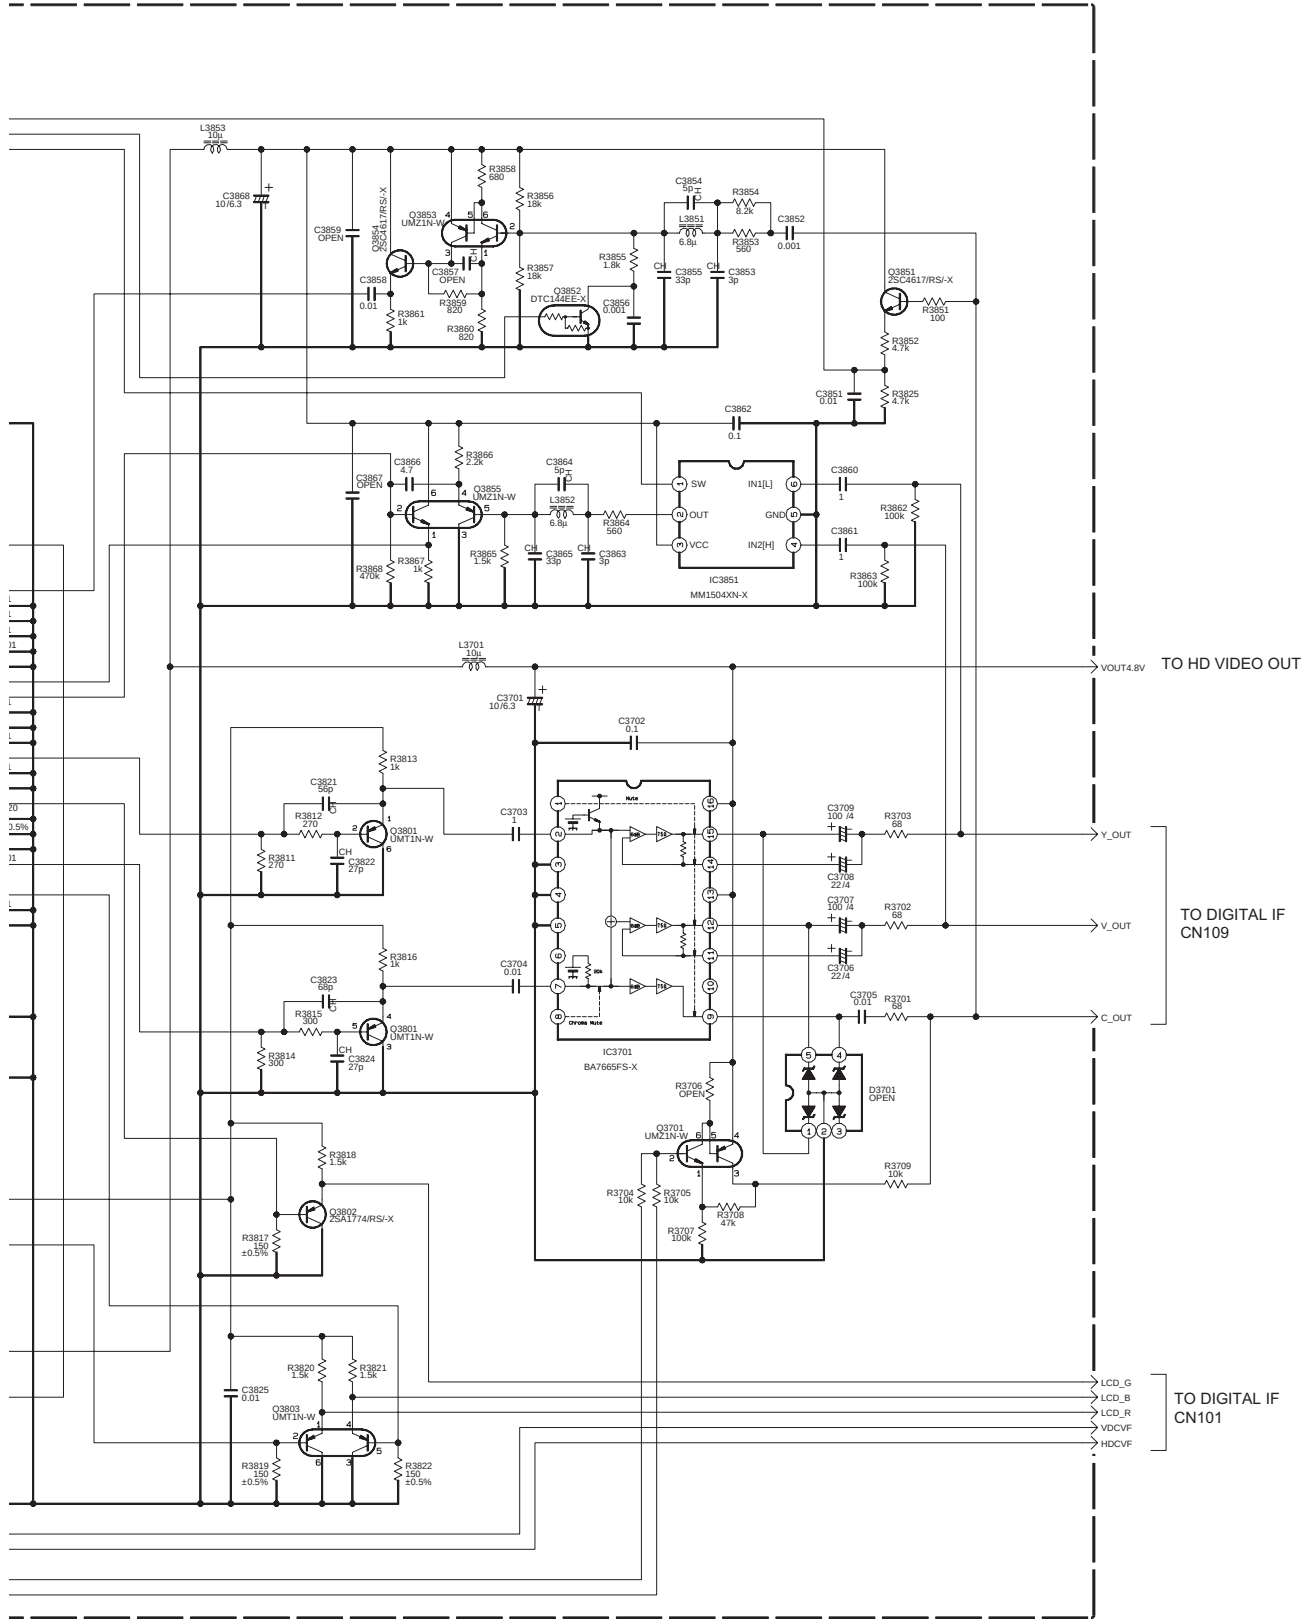


■ DIGITAL(CAMERA DSP) SCHEMATIC DIAGRAM

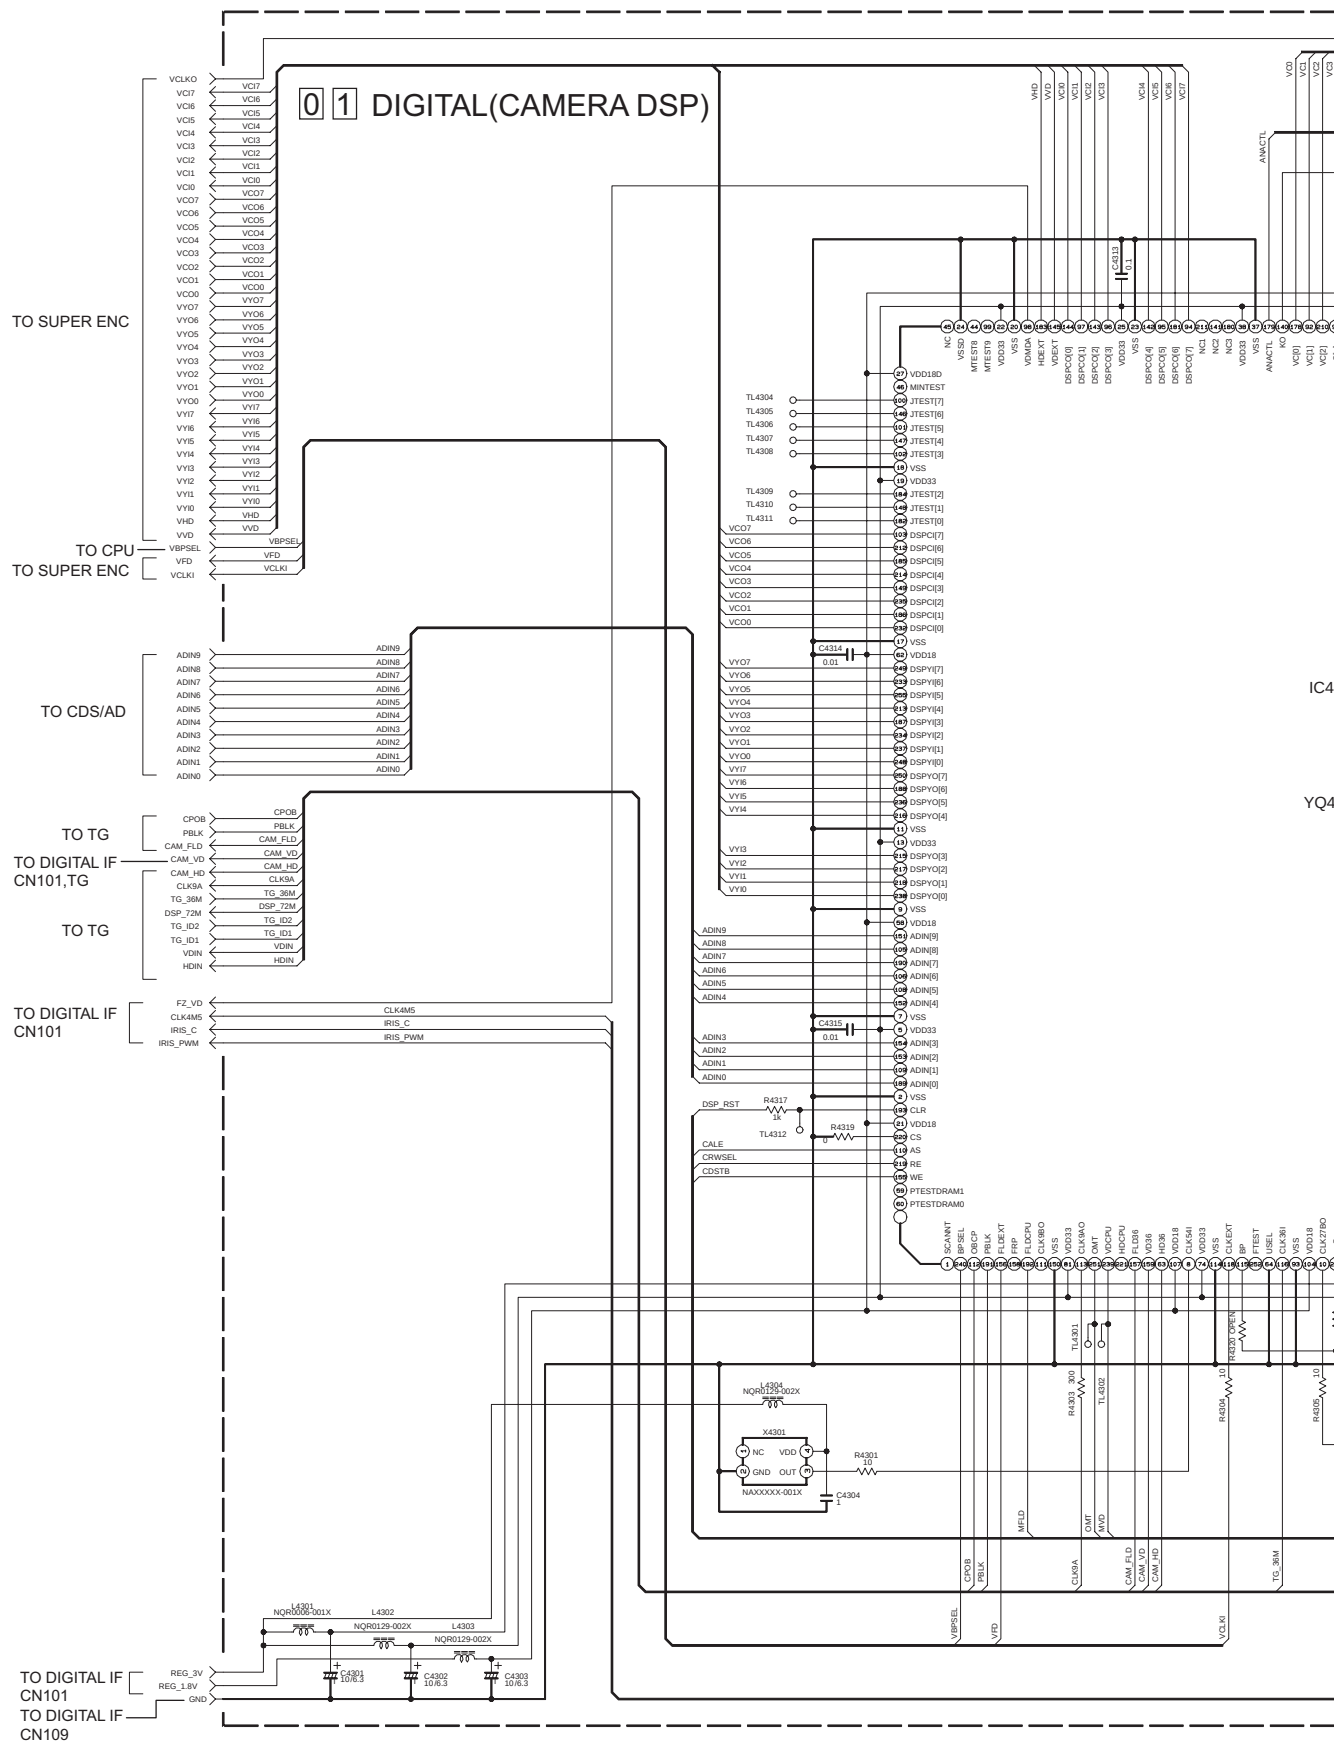


DIGITAL(TG) SCHEMATIC DIAGRAM

0 1 DIGITAL(TG)

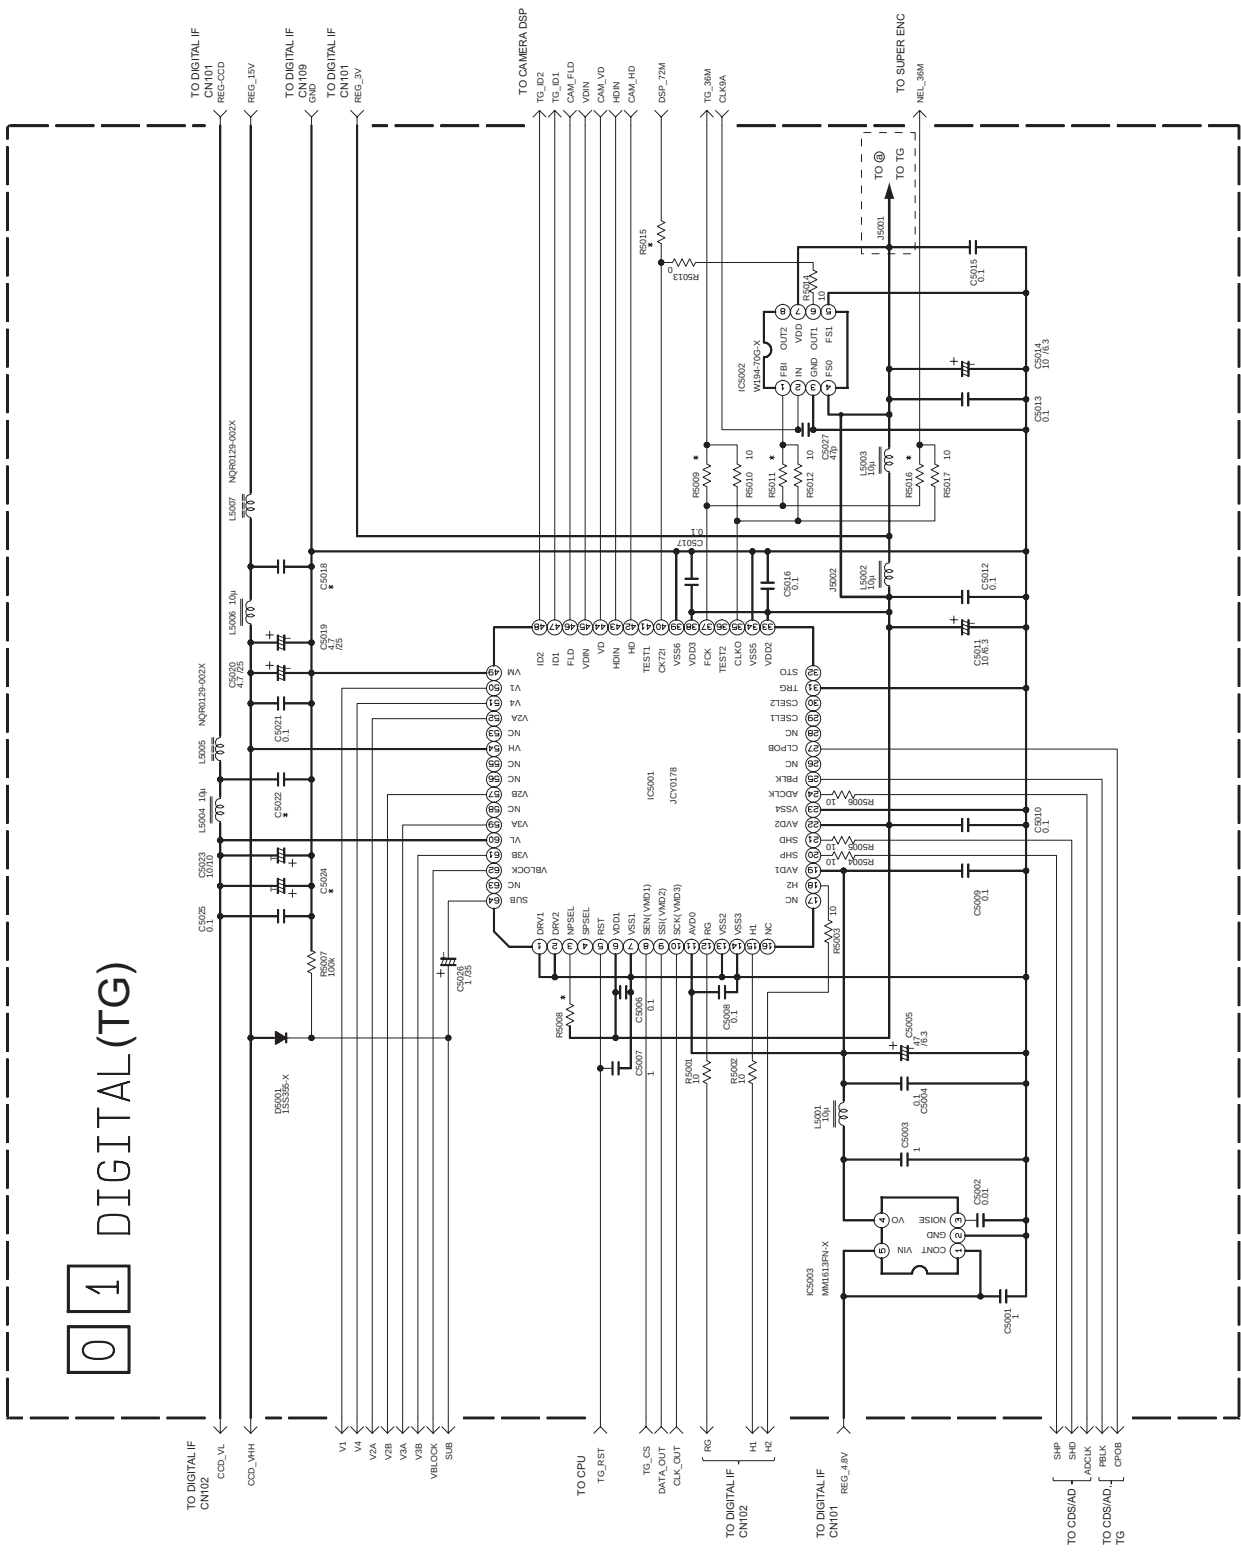


NOTE: The parts with marked (*) is not used.

■ DIGITAL(USB DRIVER) SCHEMATIC DIAGRAM

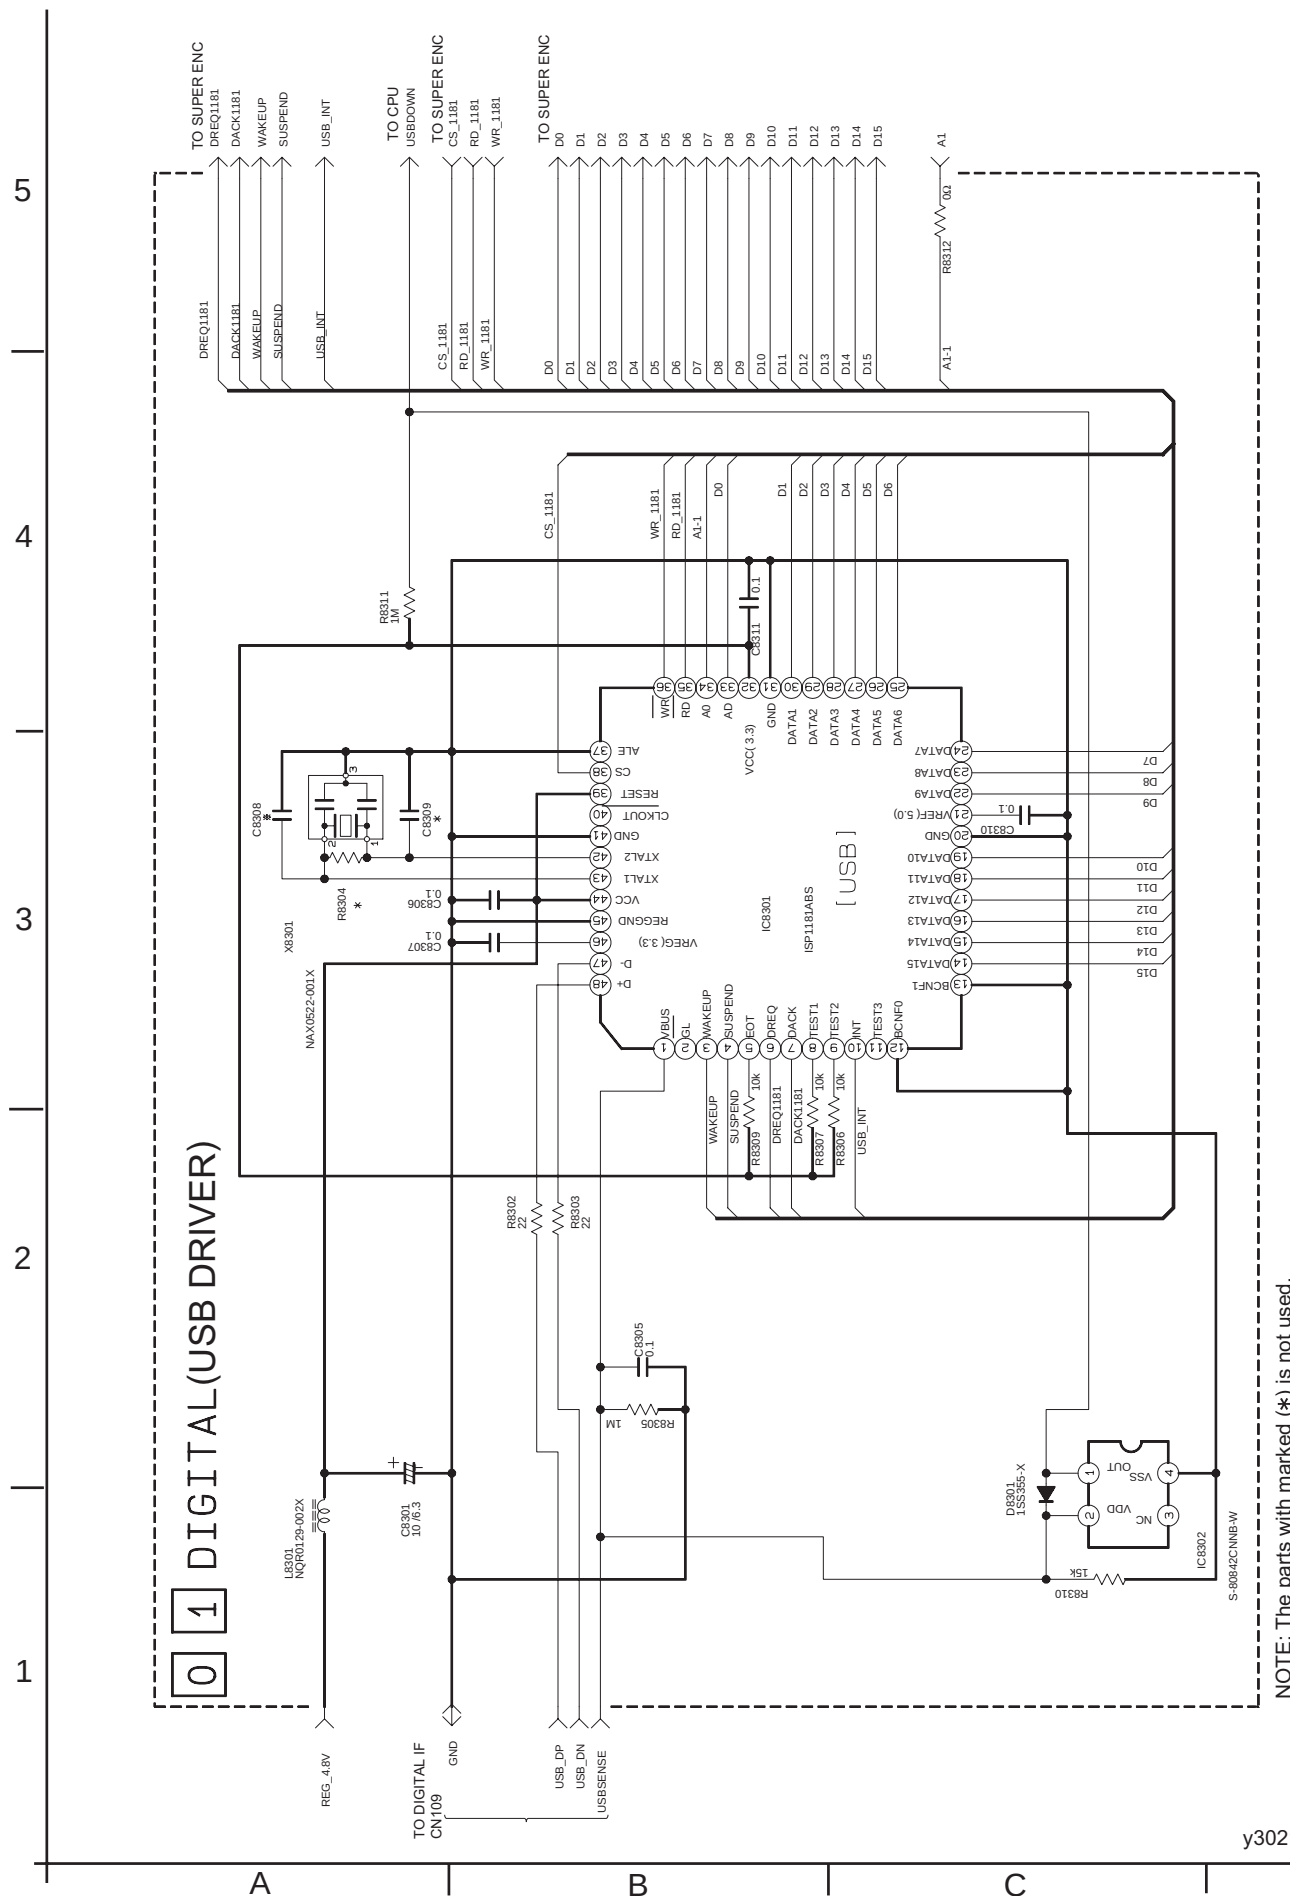


DIGITAL(SUPER ENC) SCHEMATIC DIAGRAM


01 DIGITAL (SUPER ENC)

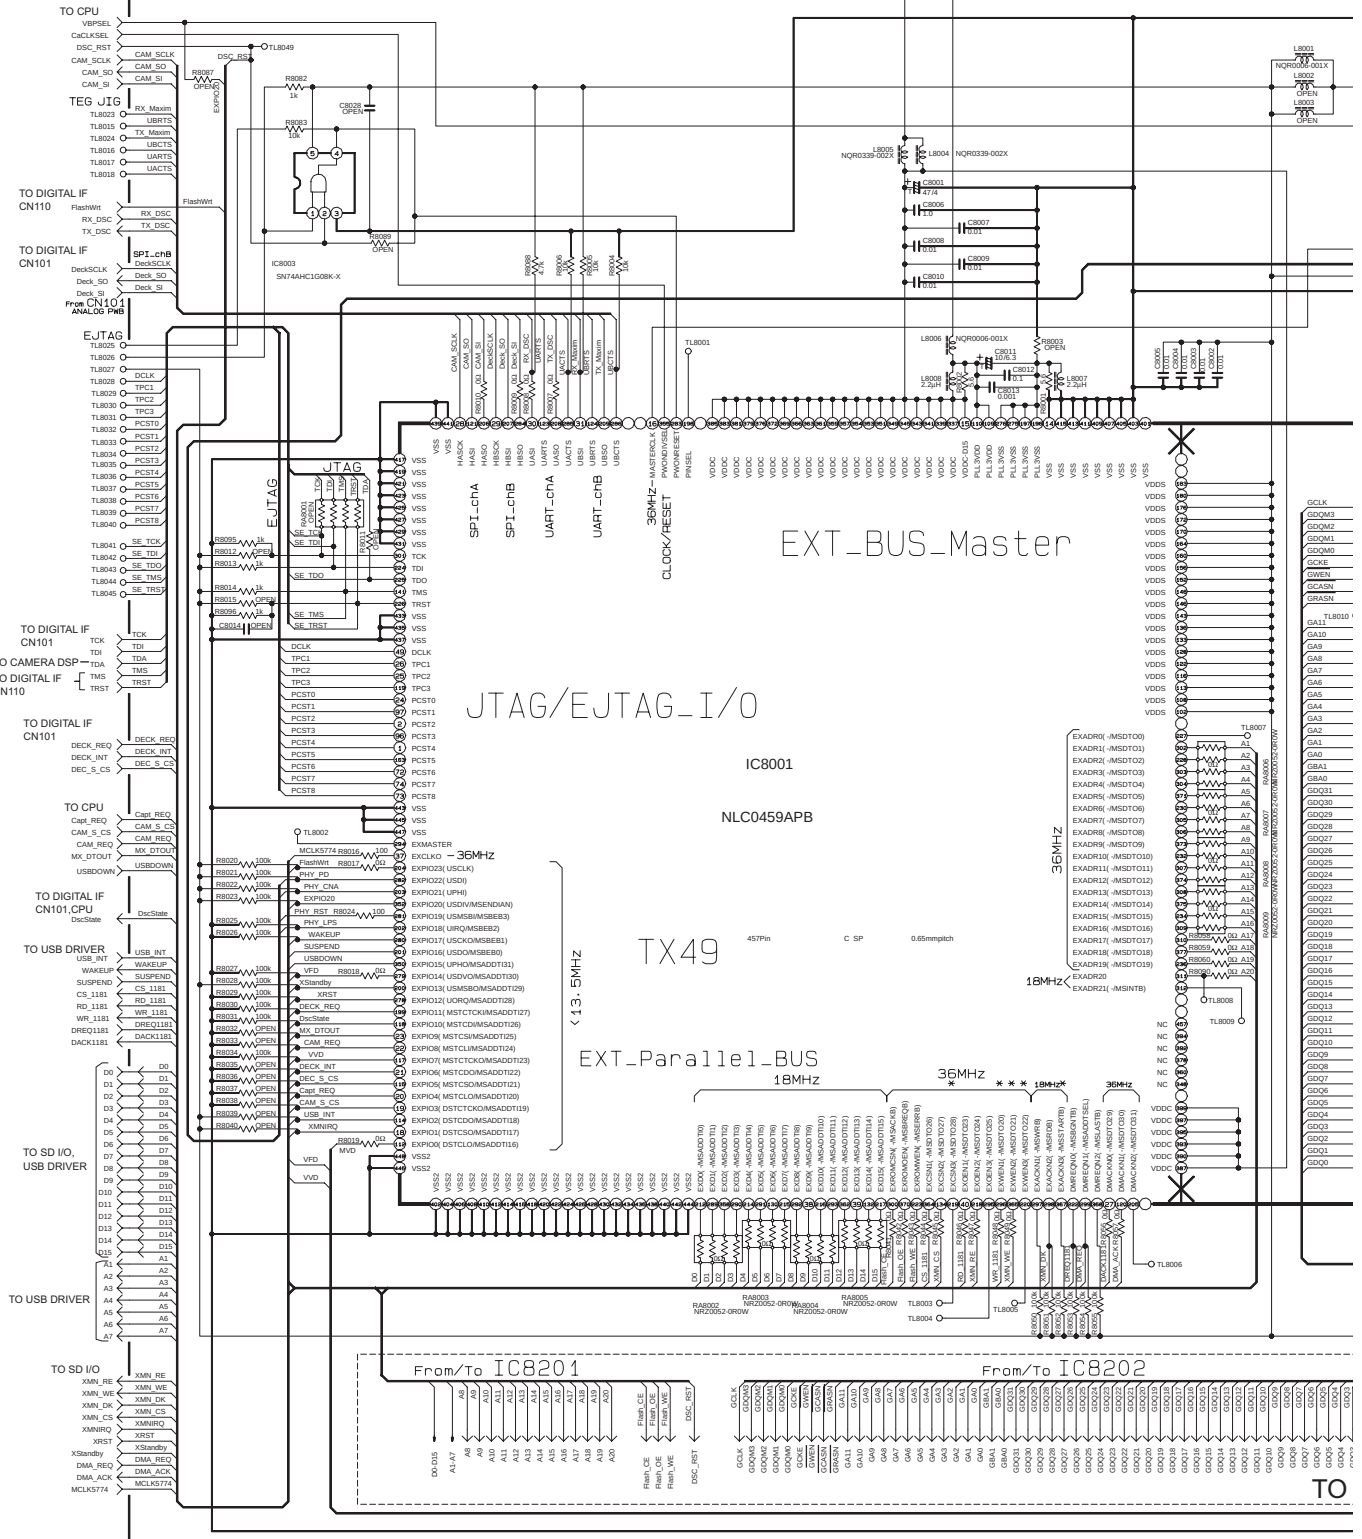

■ DIGITAL(SUPER ENC RAM) SCHEMATIC DIAGRAM

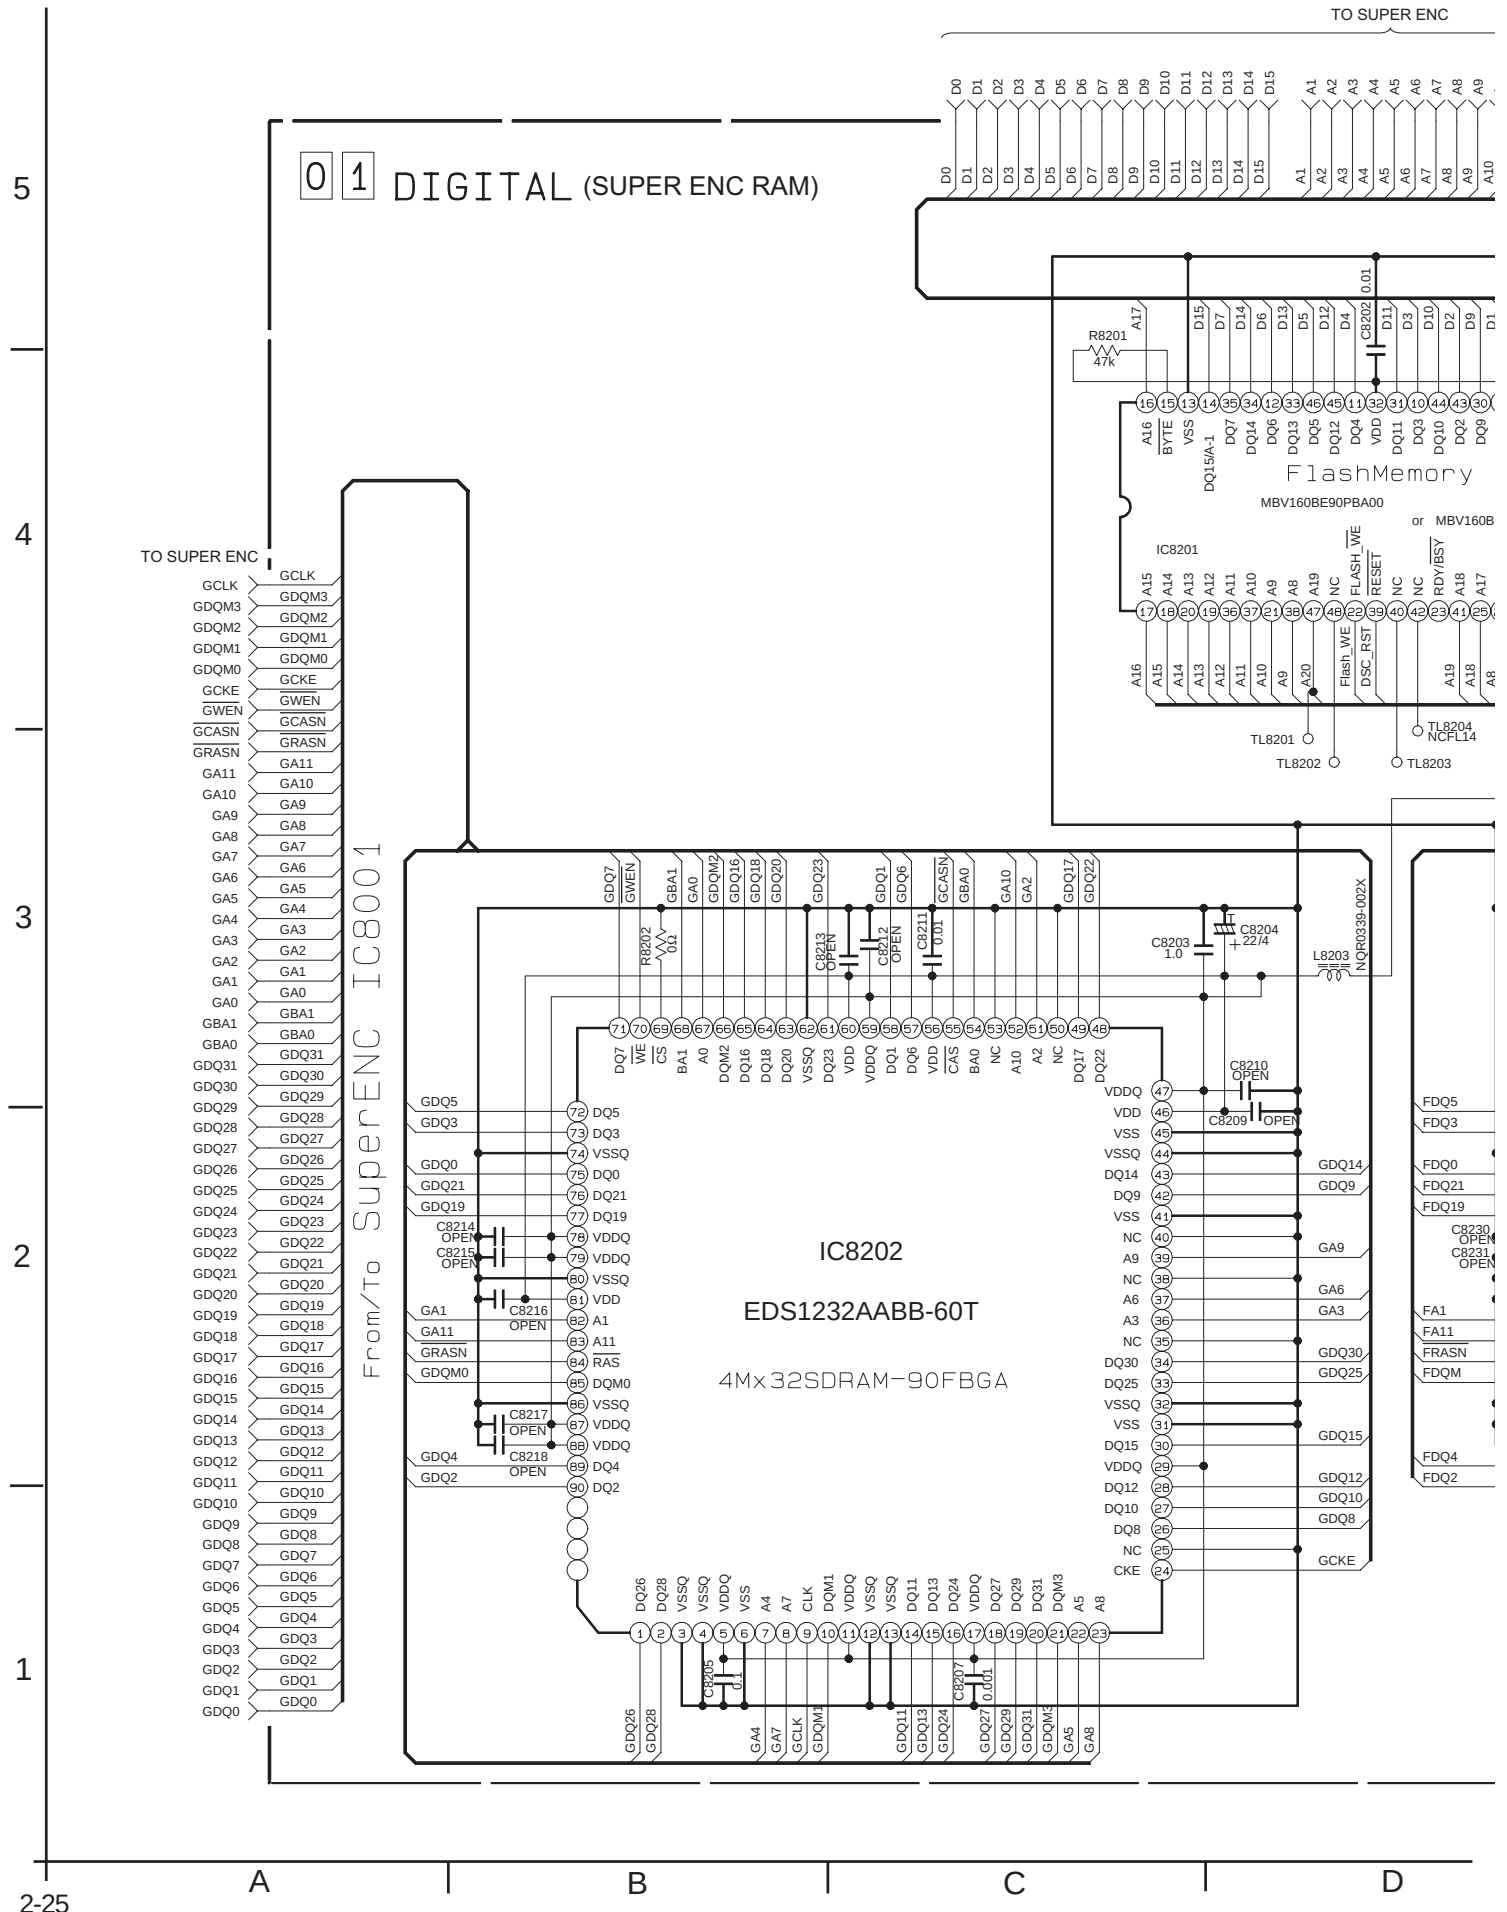

ENC

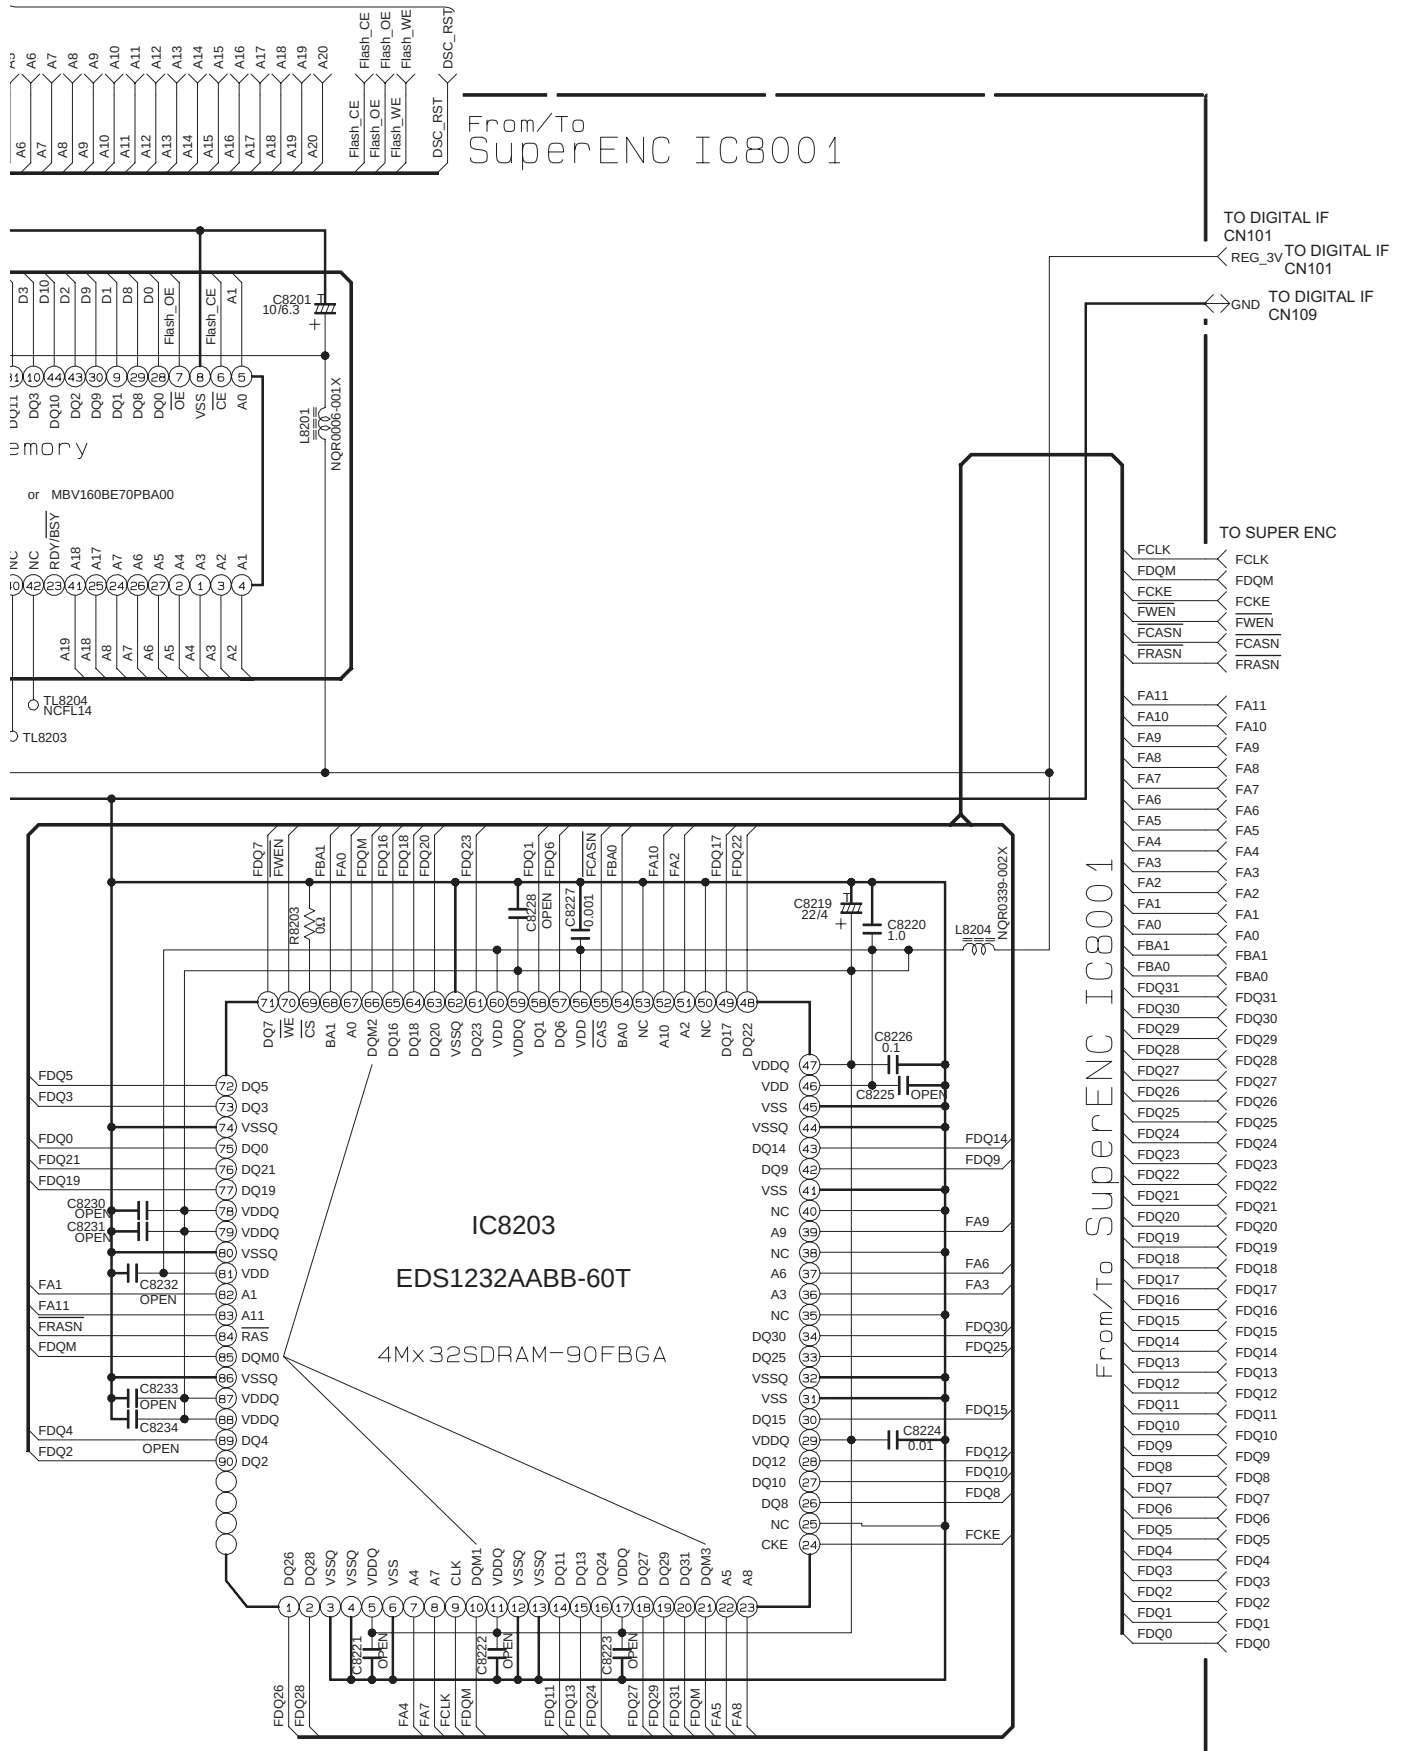

y20239001a_rev0.1


D

E

F


G

■ DIGITAL(SD I/O) SCHEMATIC DIAGRAM

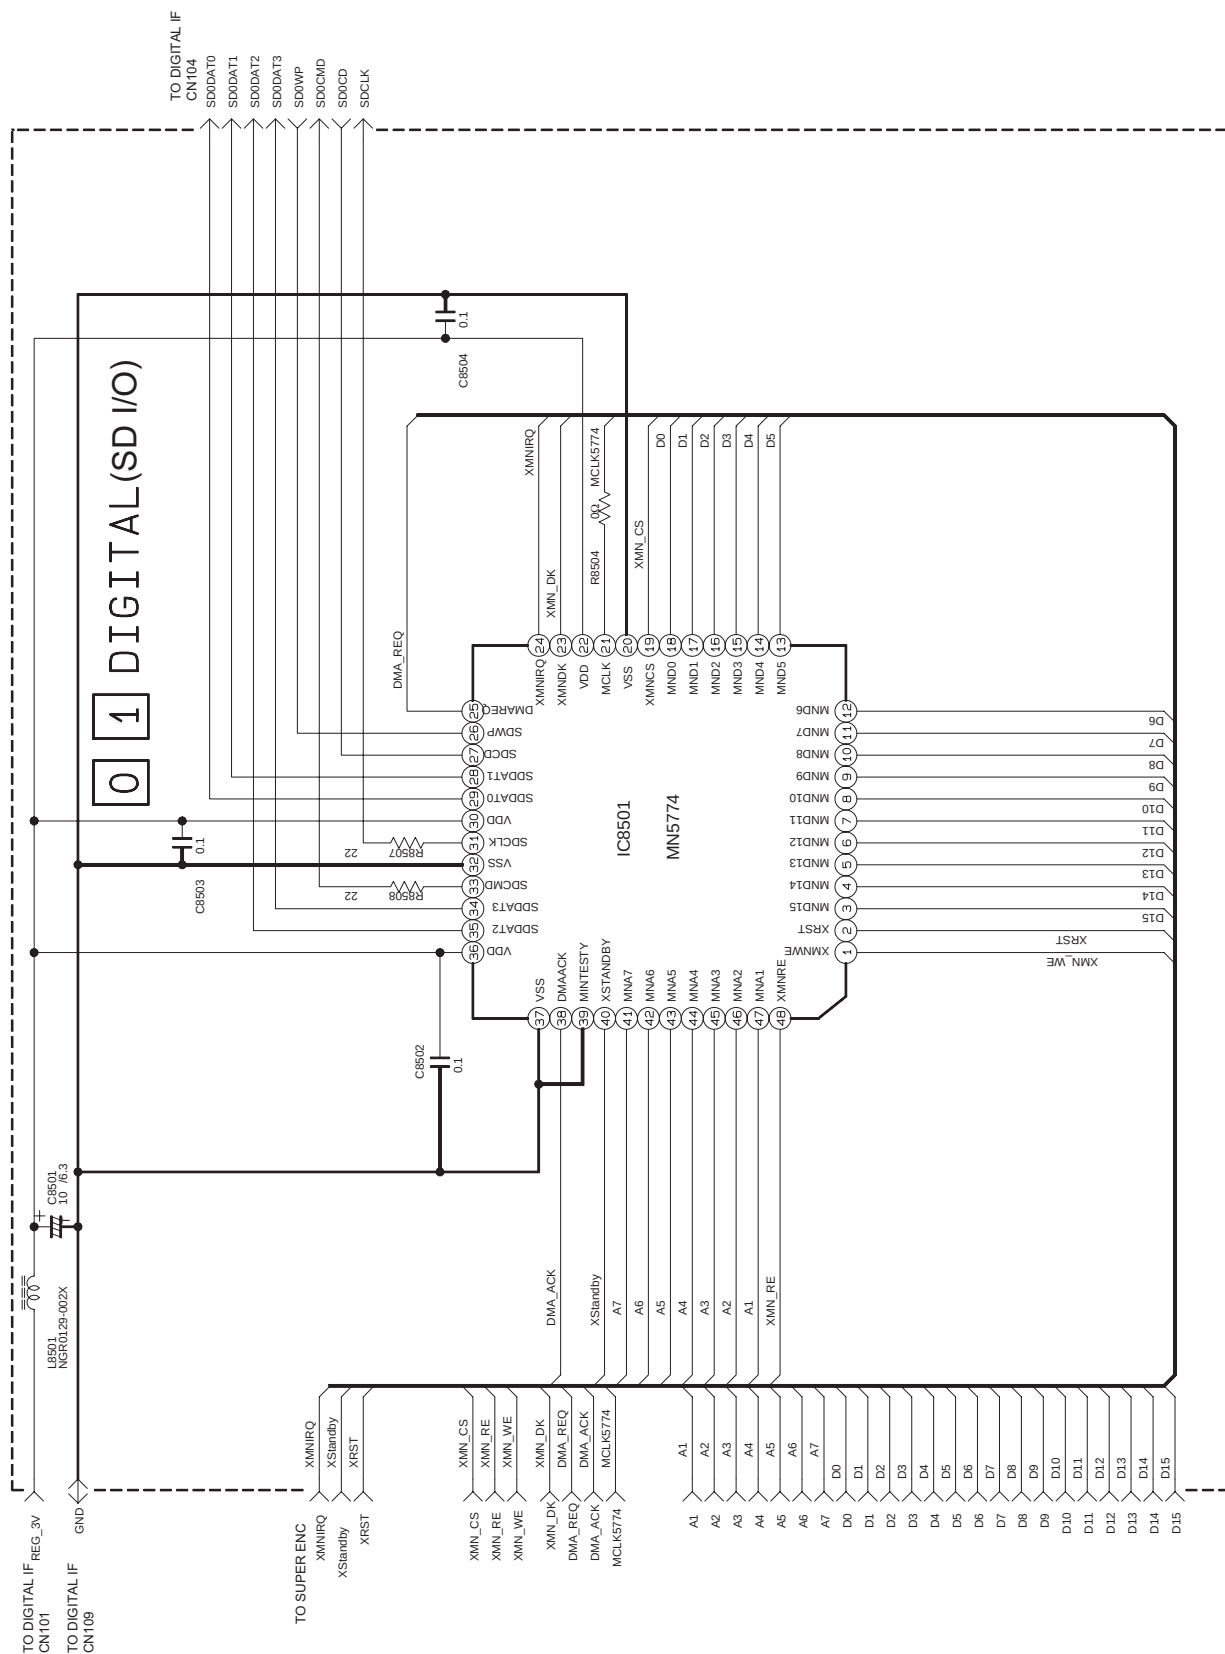


y30218001a_rev0.1


■ DIGITAL(1394PHY) SCHEMATIC DIAGRAM

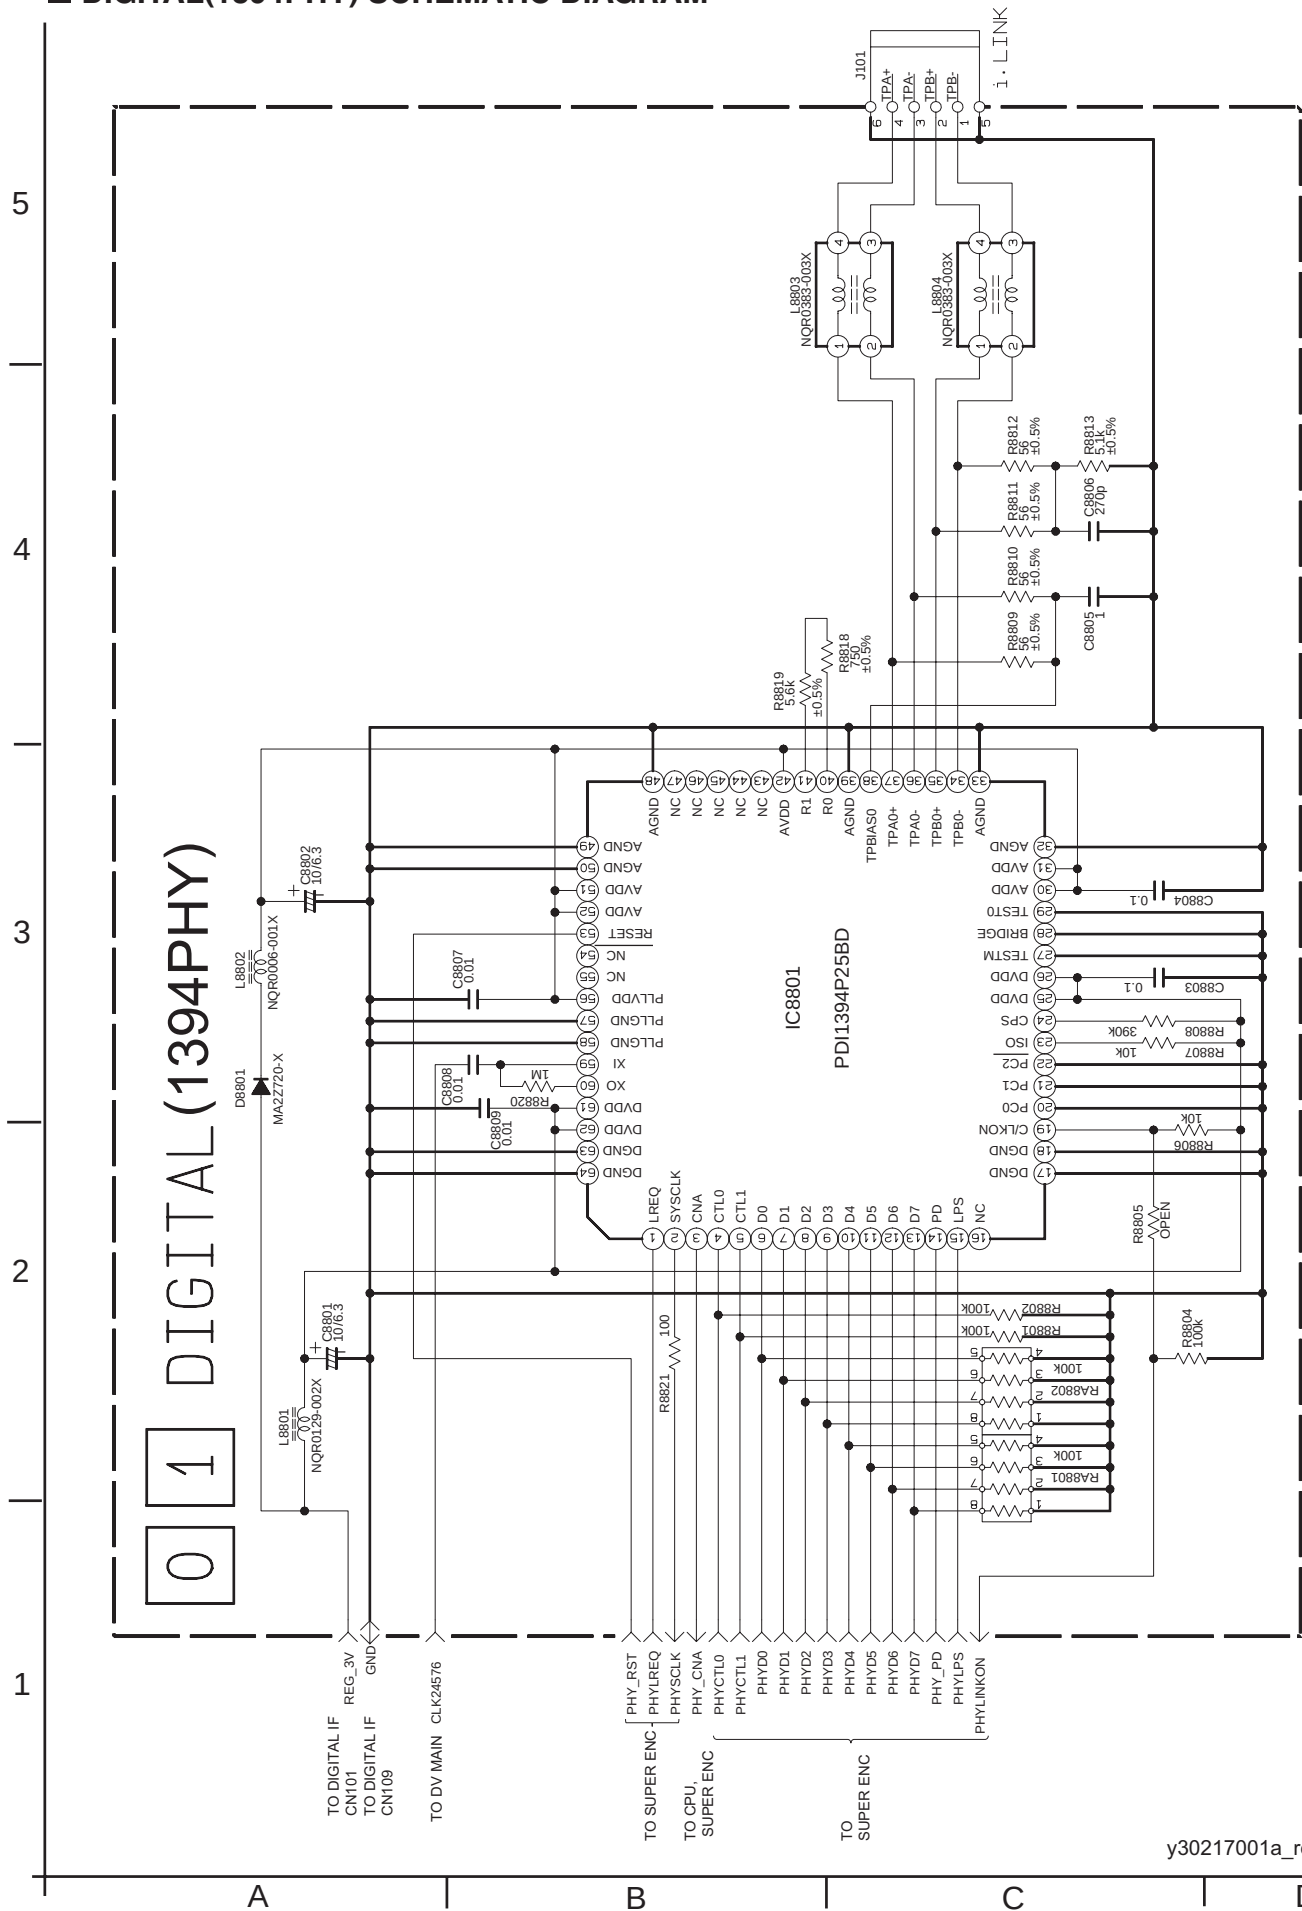

y30217001a_rev0.1

■ ANALOG(MSD-CPU) SCHEMATIC DIAGRAM

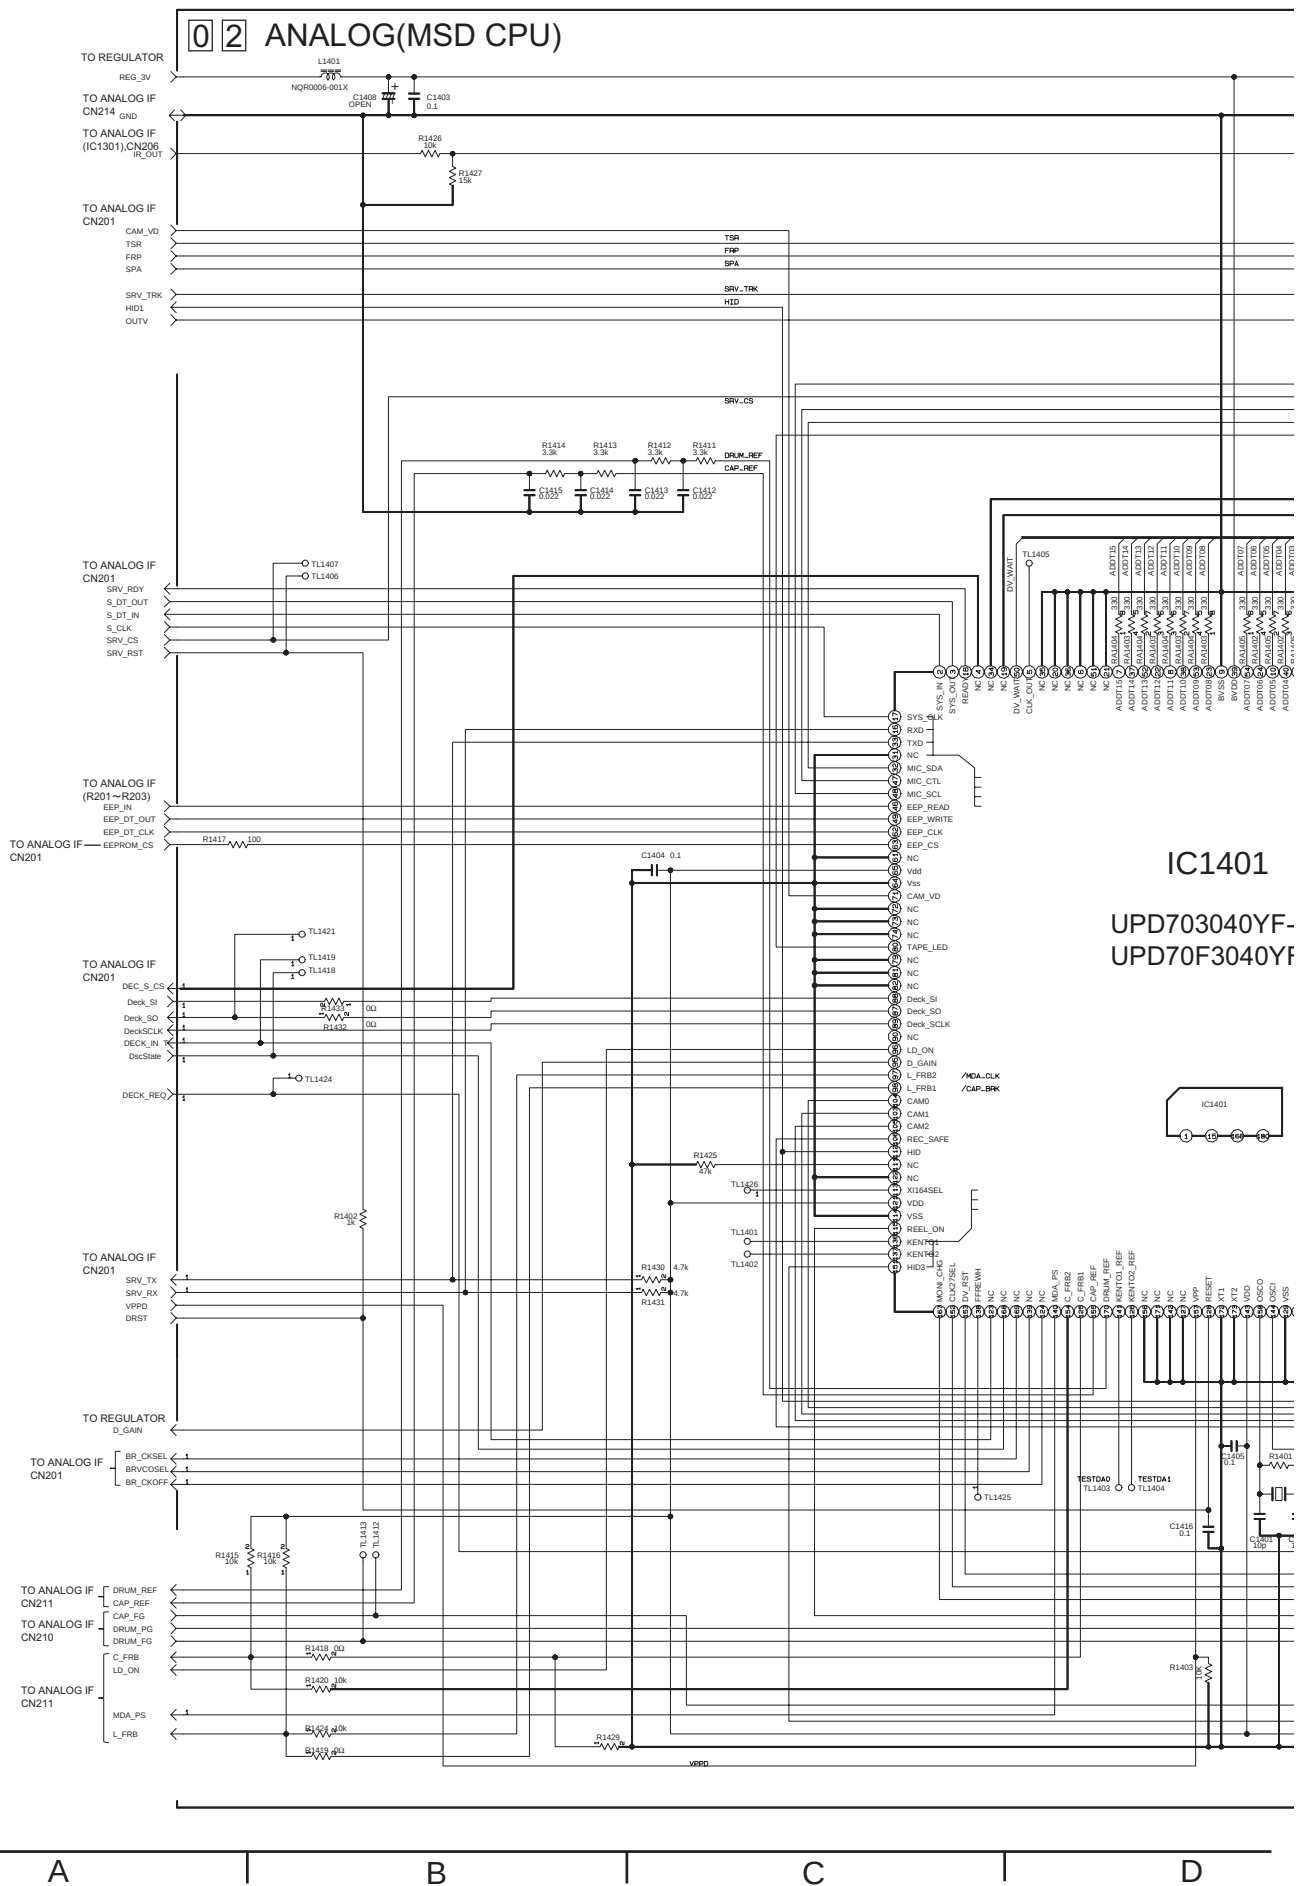

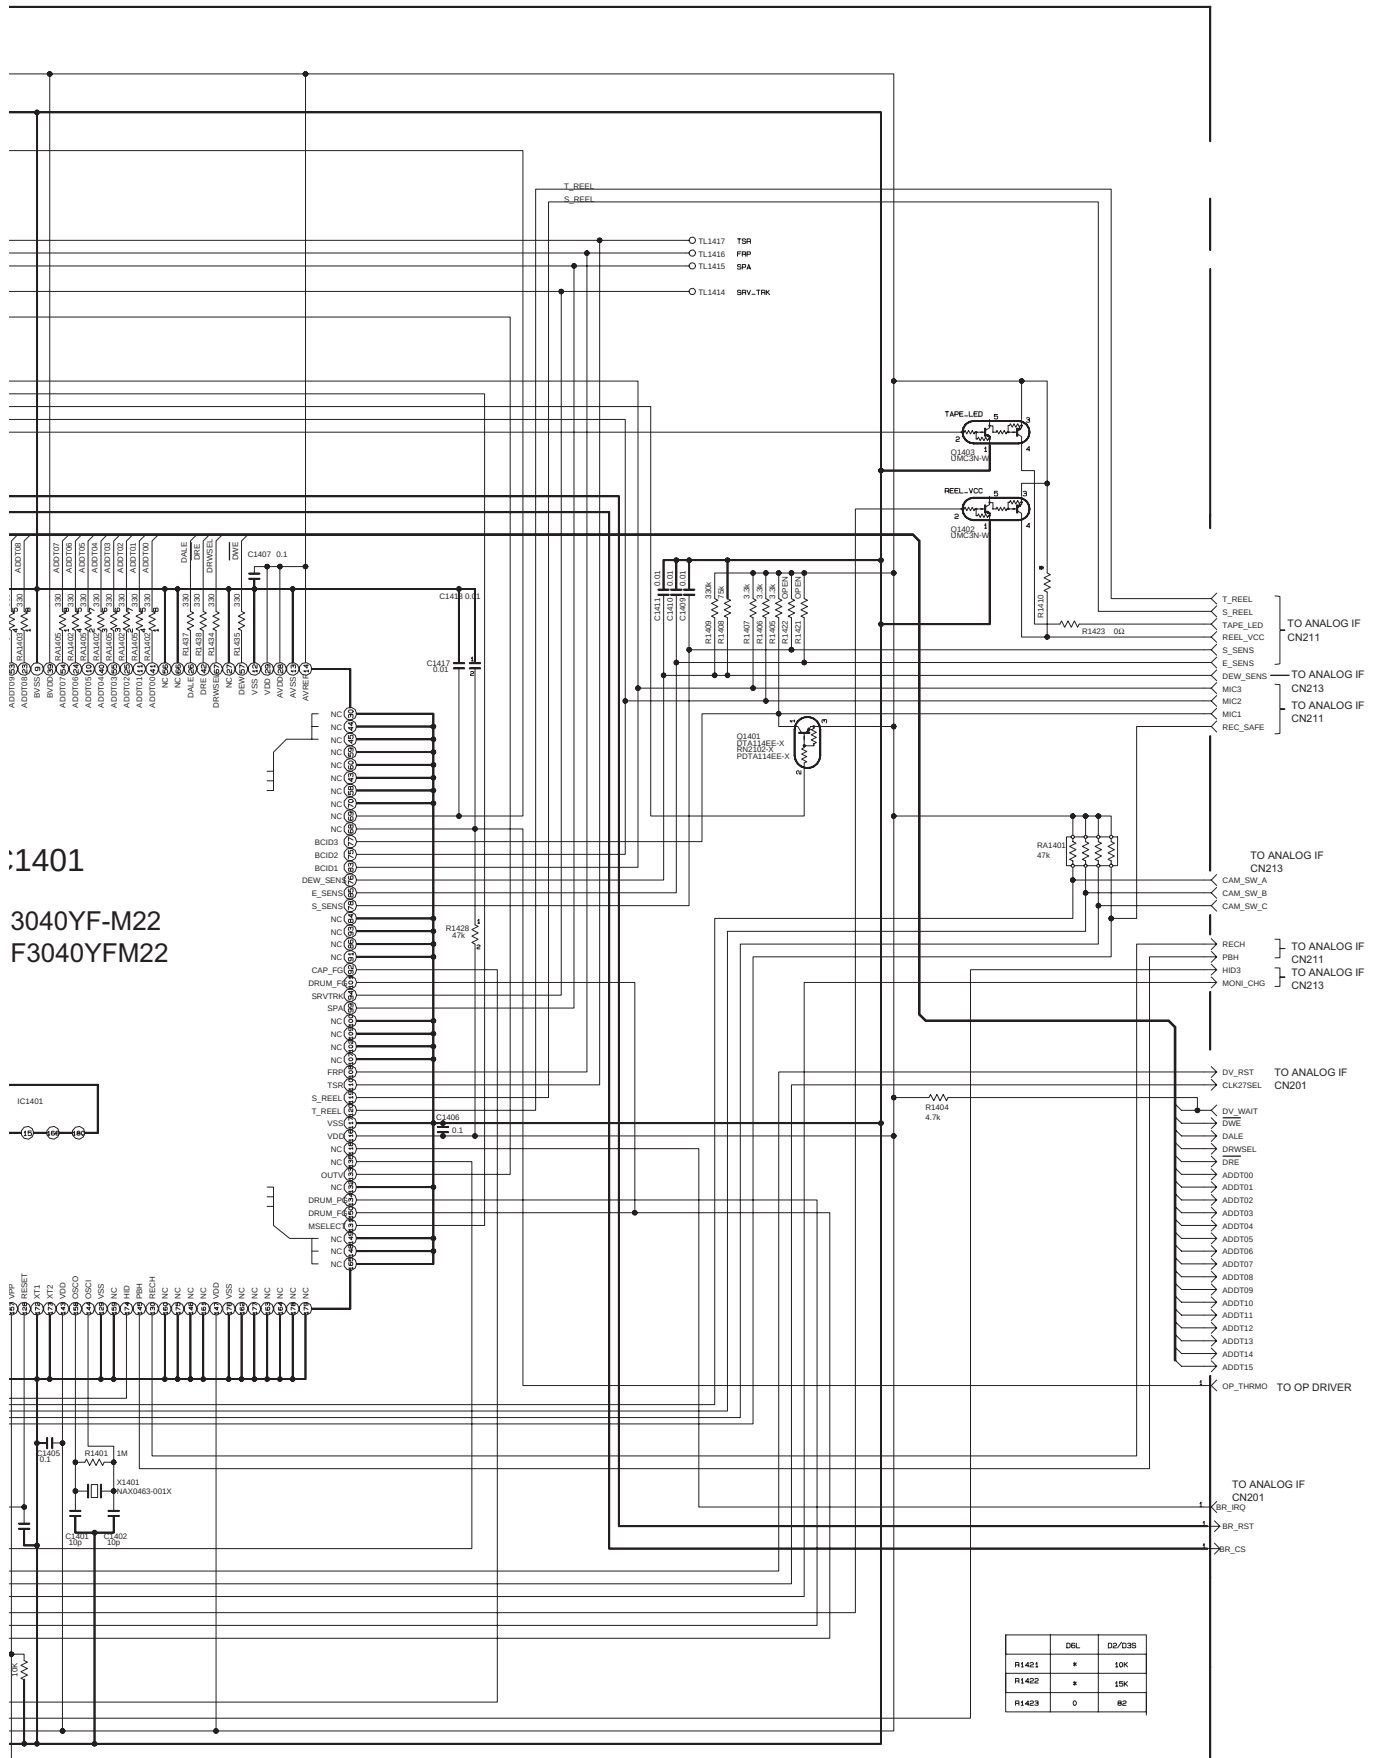

y10351001a_rev0.1


D


E

F


G

■ ANALOG(MAIN AUDIO) SCHEMATIC DIAGRAM

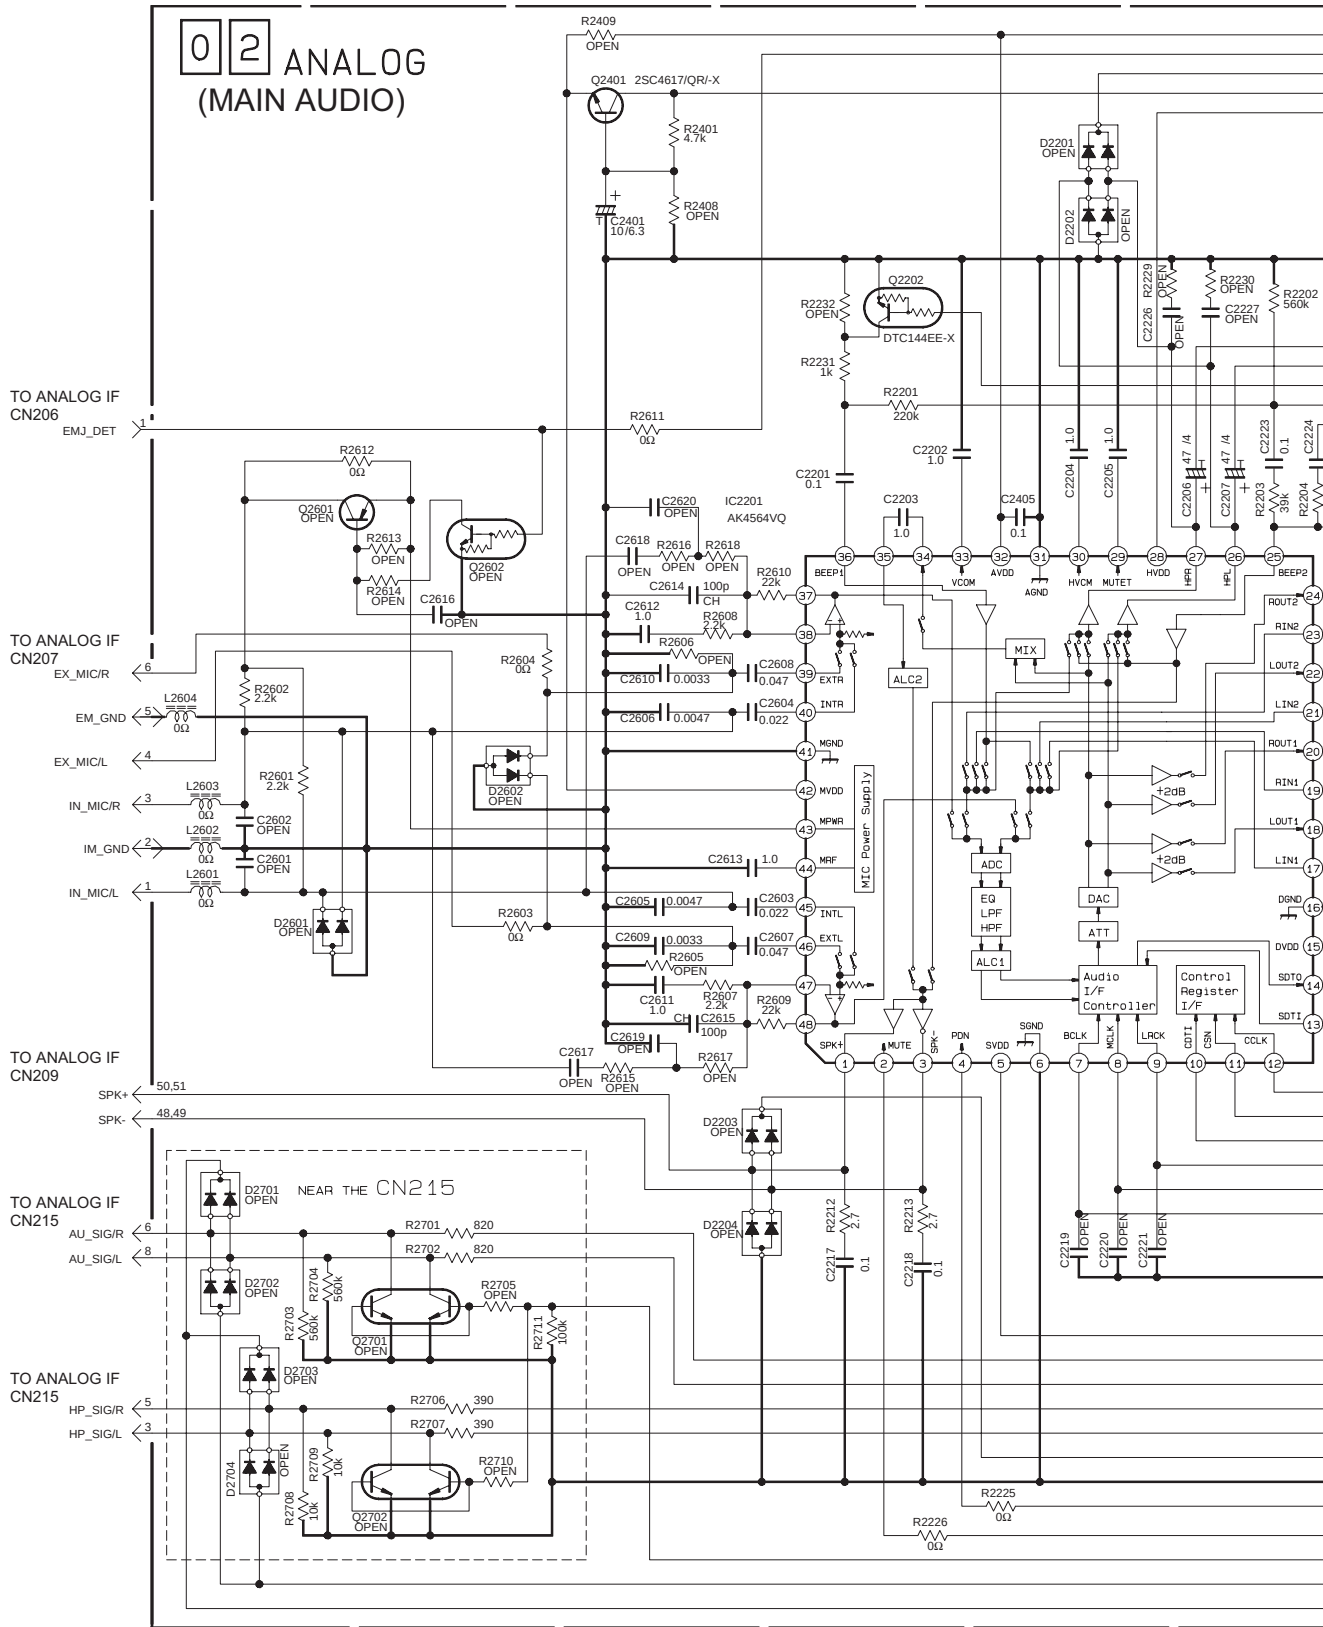


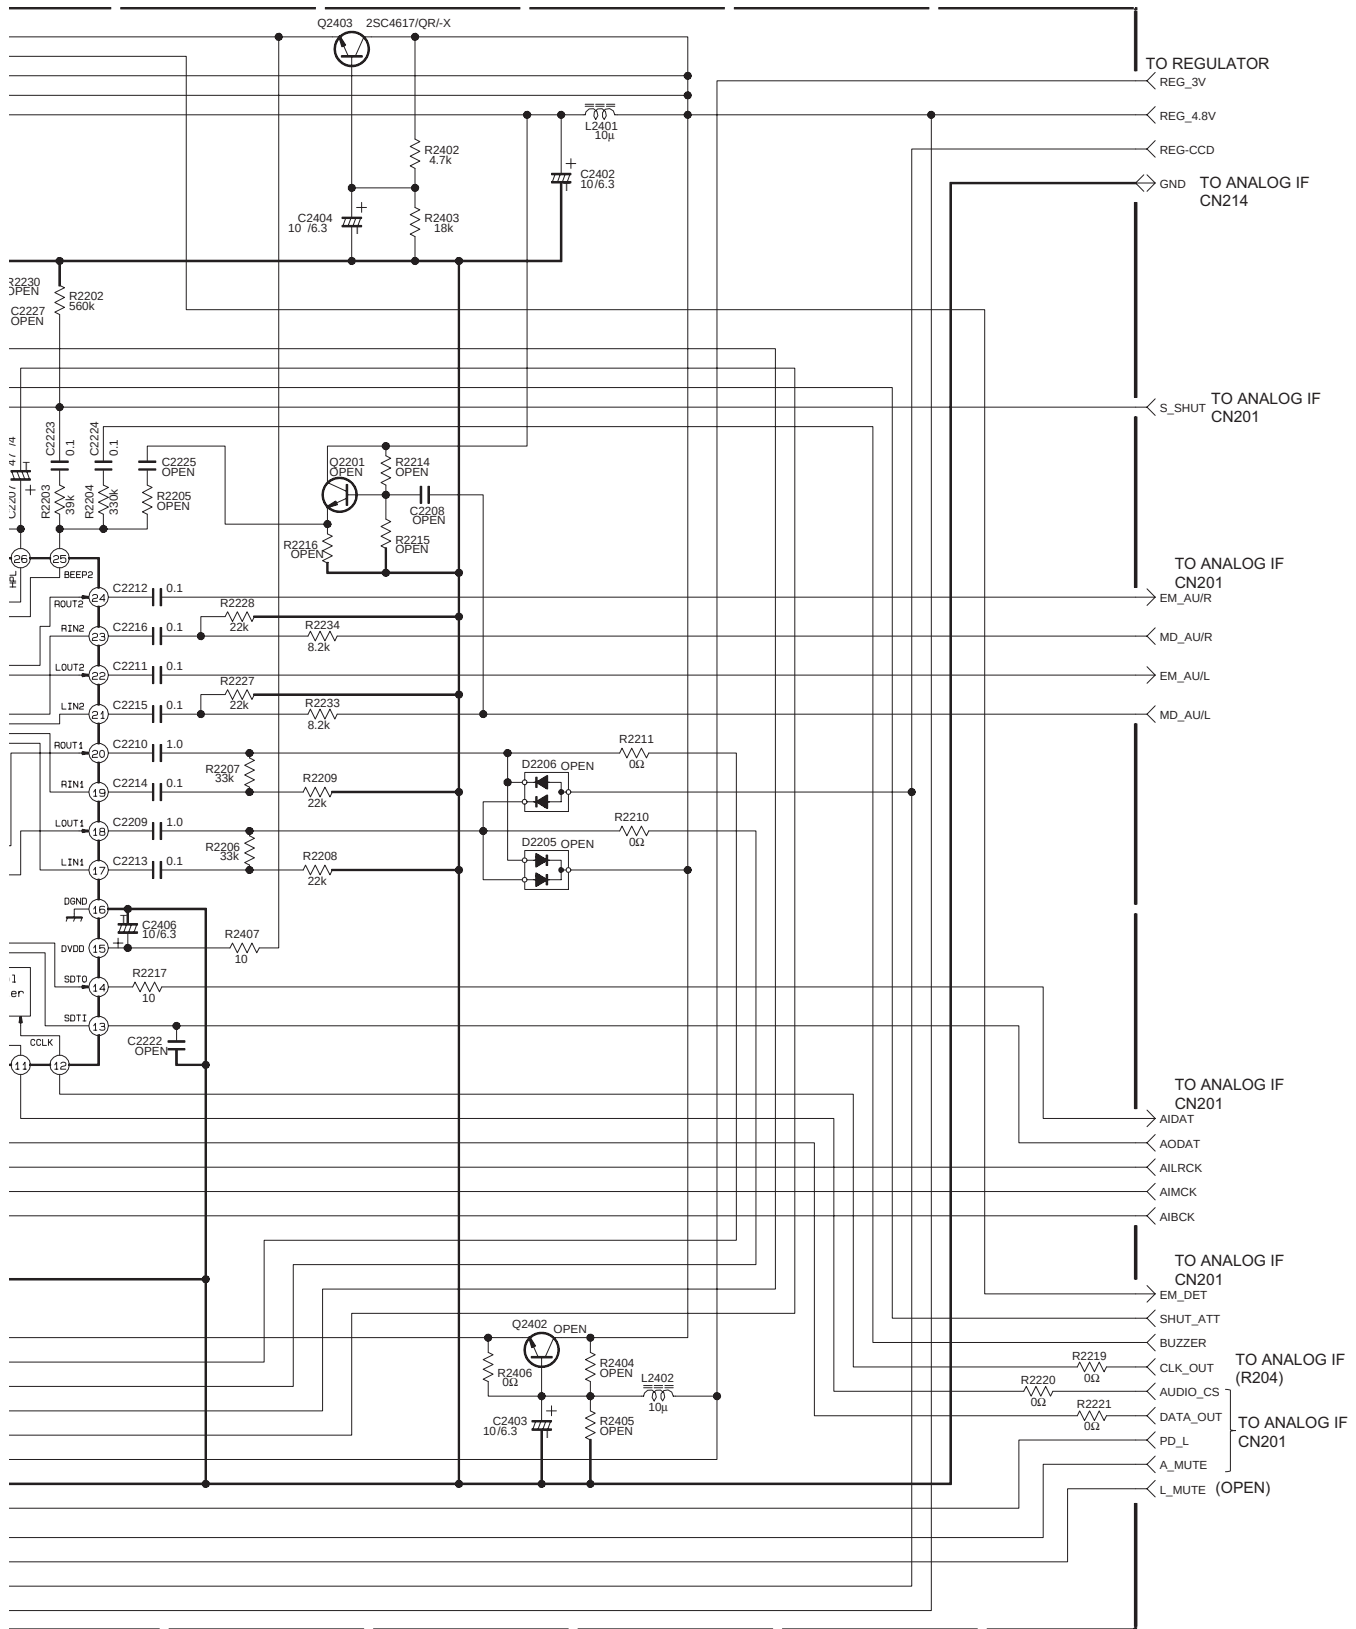

■ ANALOG(OP DRIVER) SCHEMATIC DIAGRAM

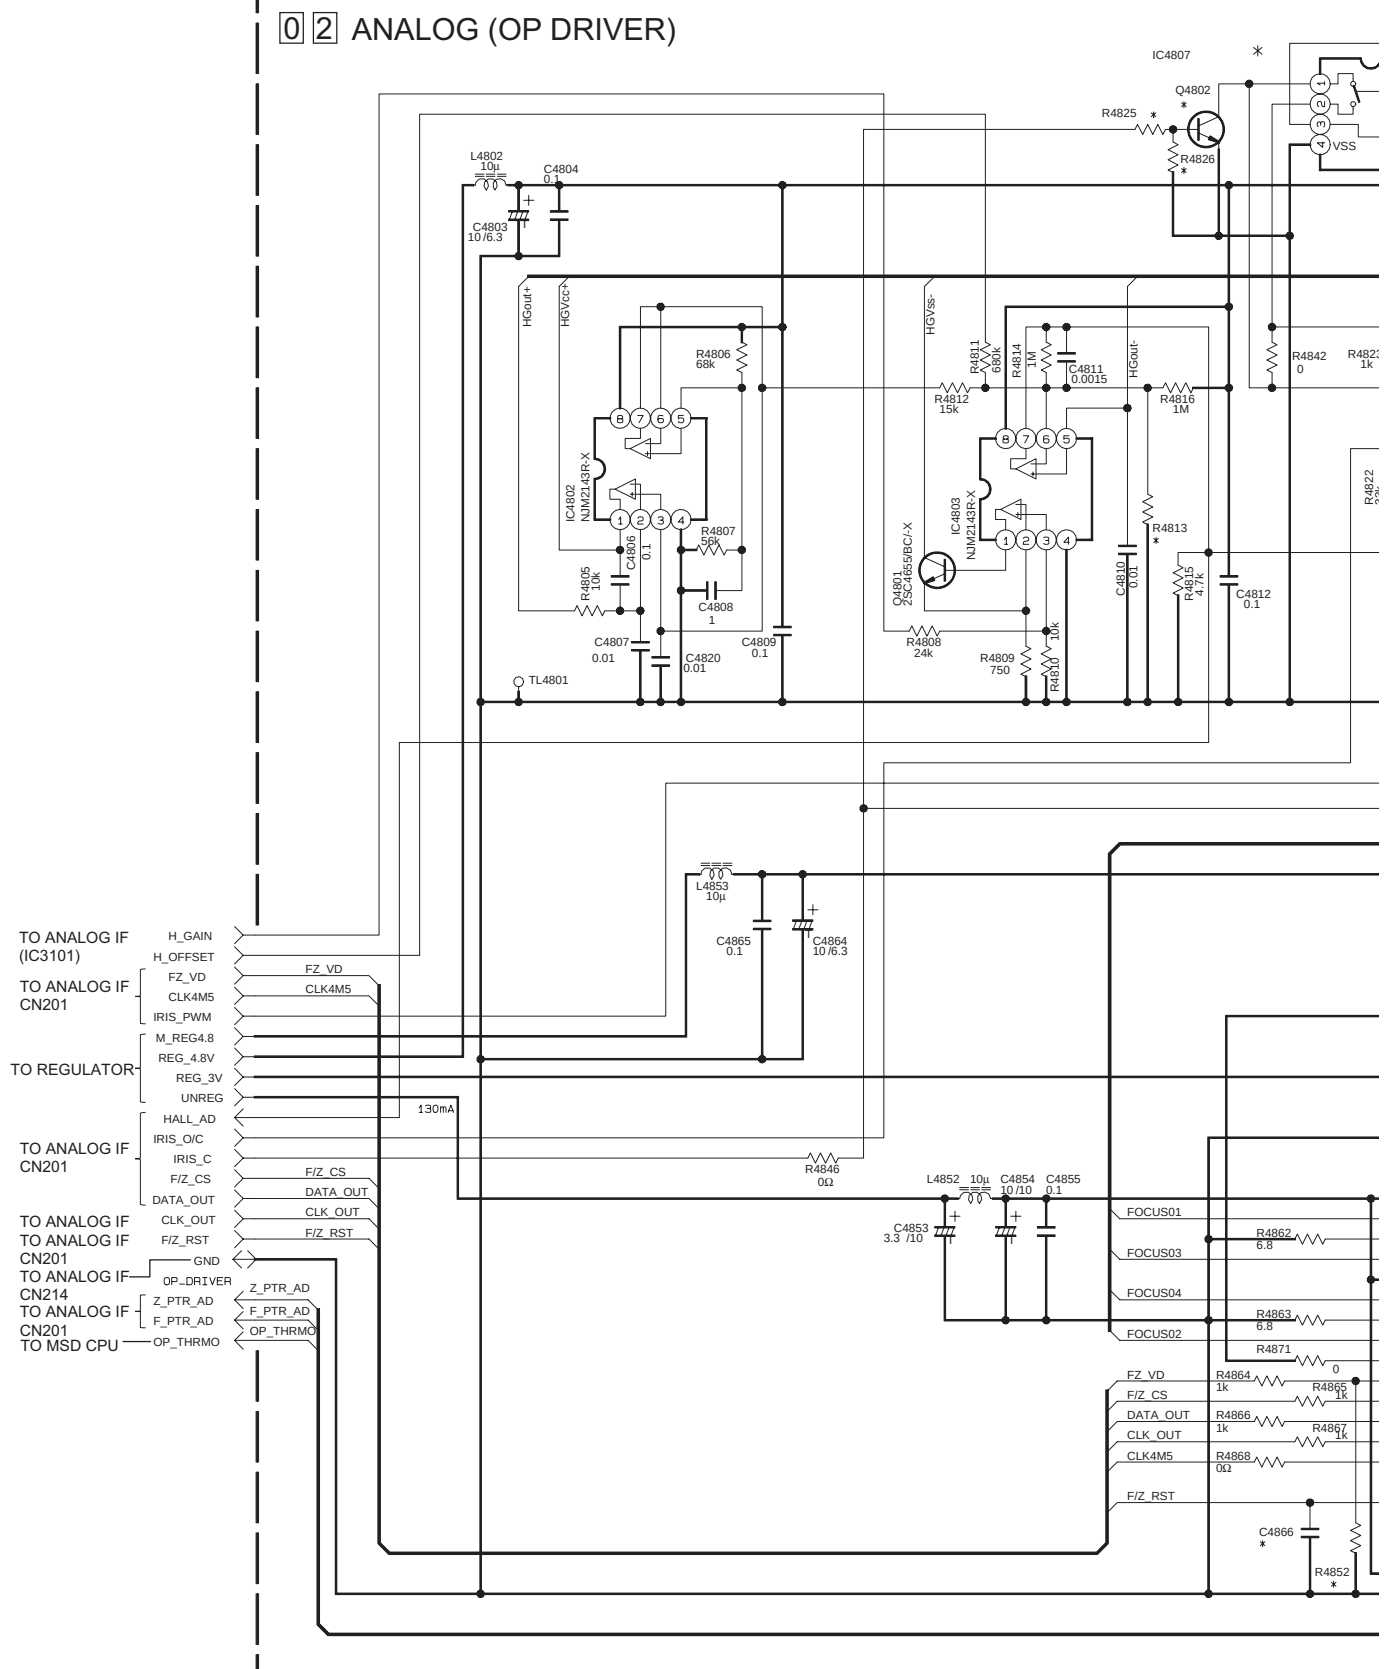


NOTE: The parts with marked (*) is not used.

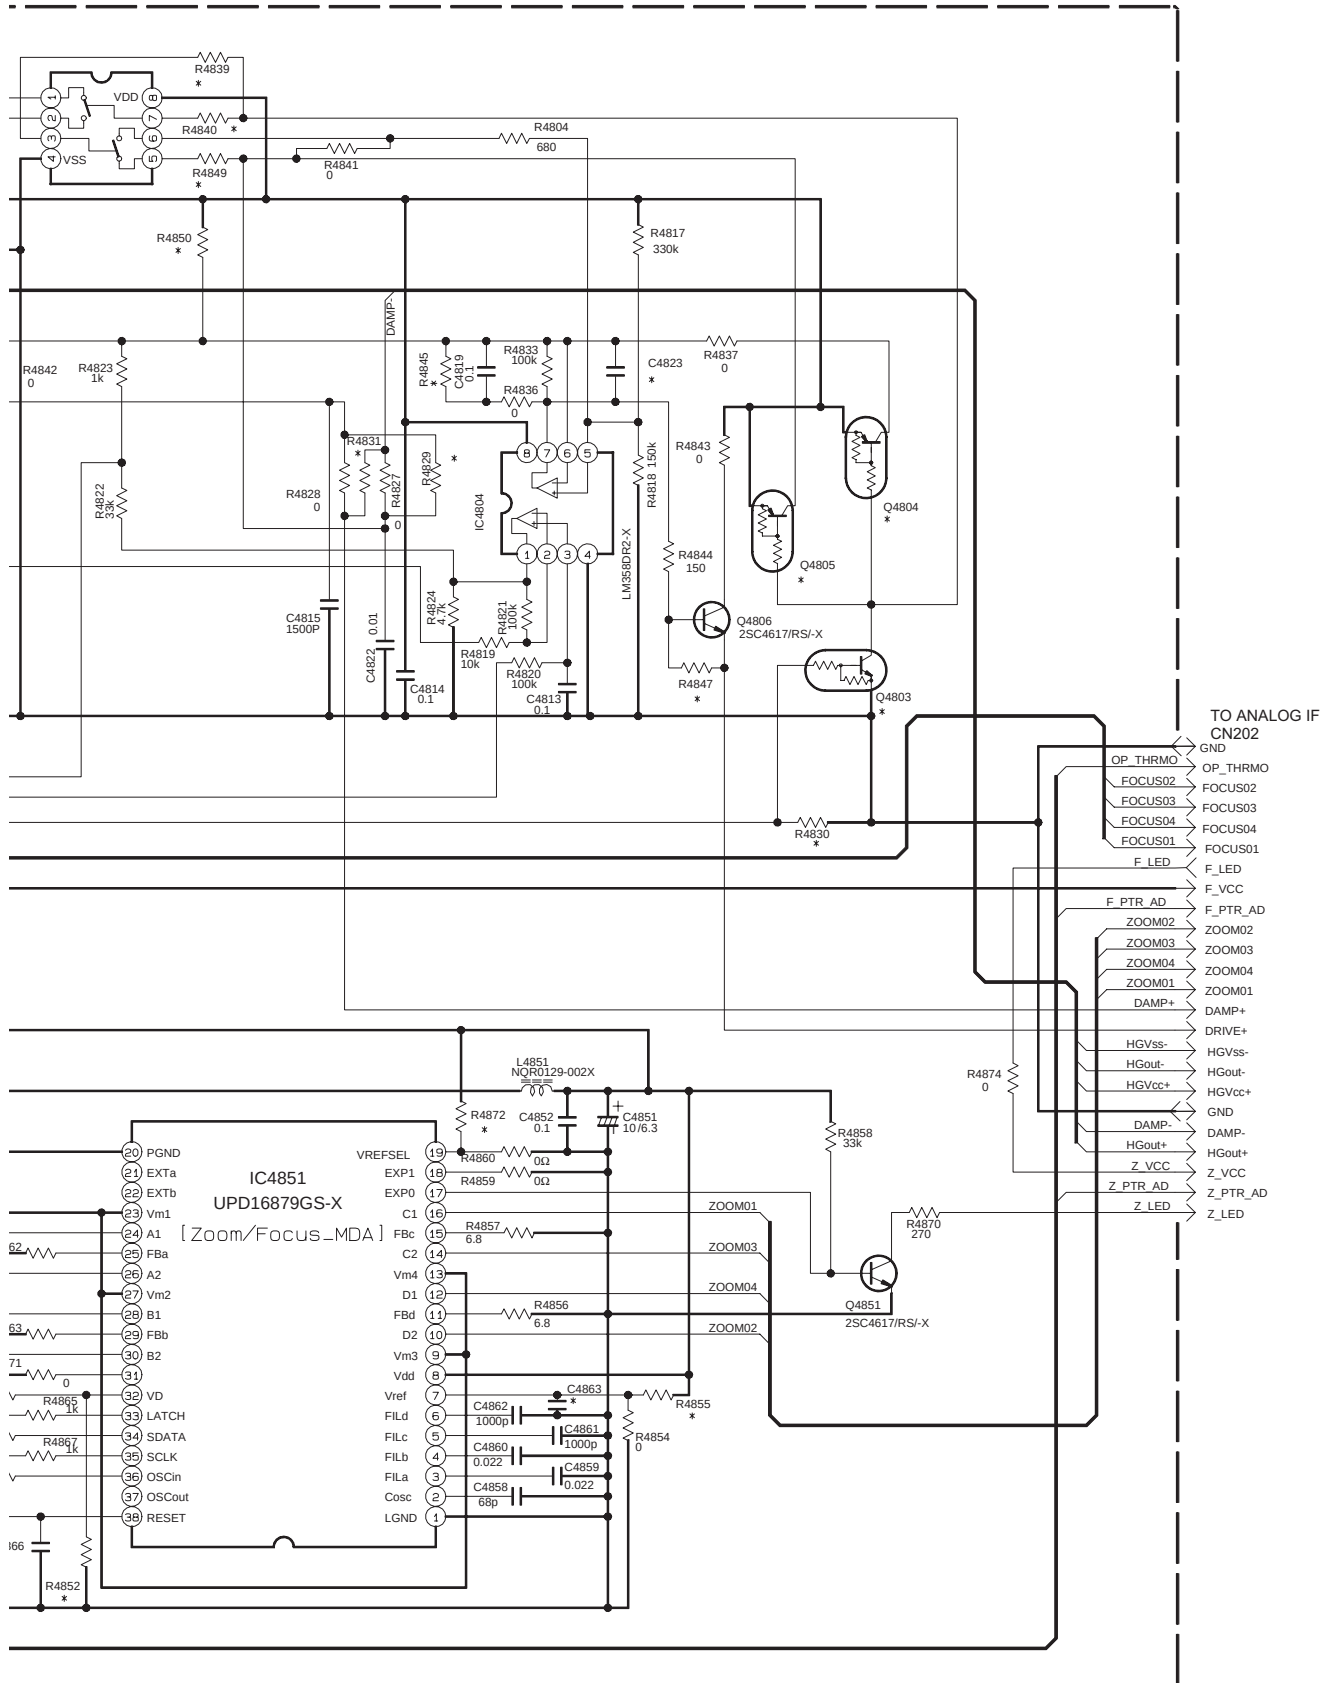

■ ANALOG(REGULATOR) SCHEMATIC DIAGRAM


02 ANALOG (REGULATOR)

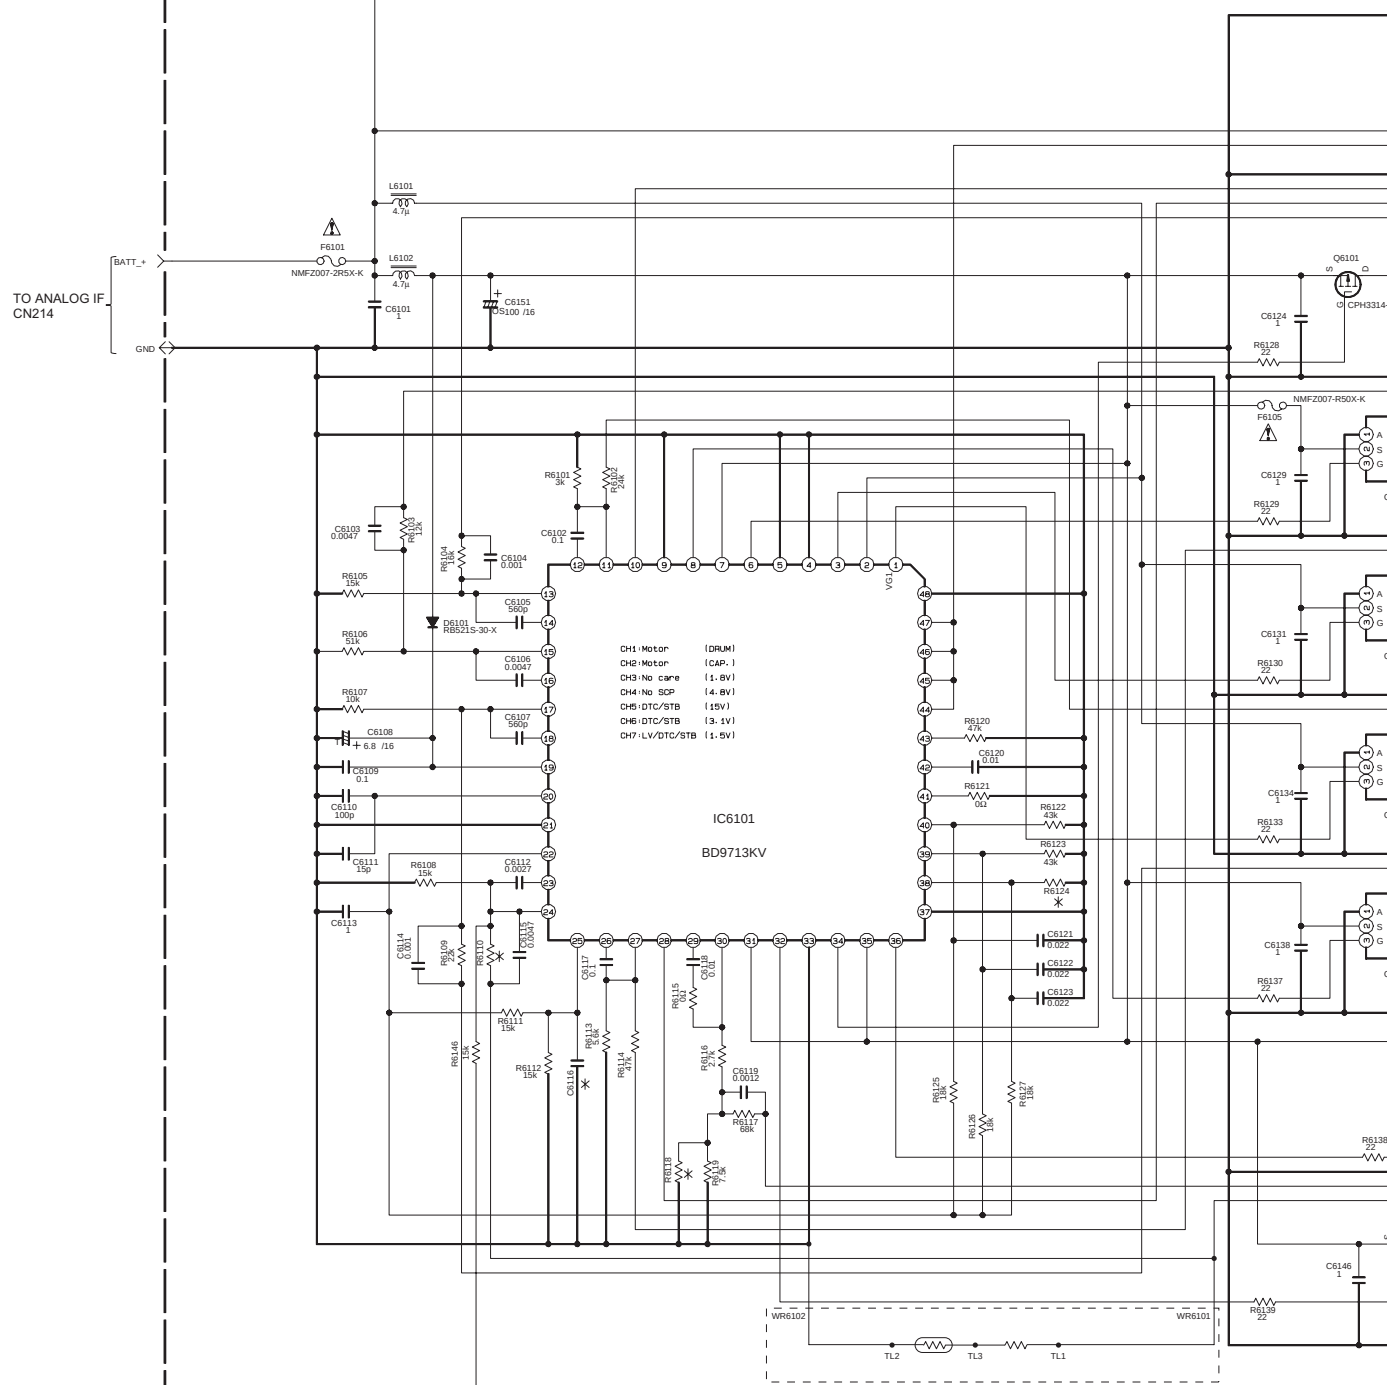


NOTE: The parts with marked (*) is not used.

ANALOG(SHIFT LENS DRIVER) SCHEMATIC DIAGRAM


02 ANALOG(SHIFT LENS DRIVER)

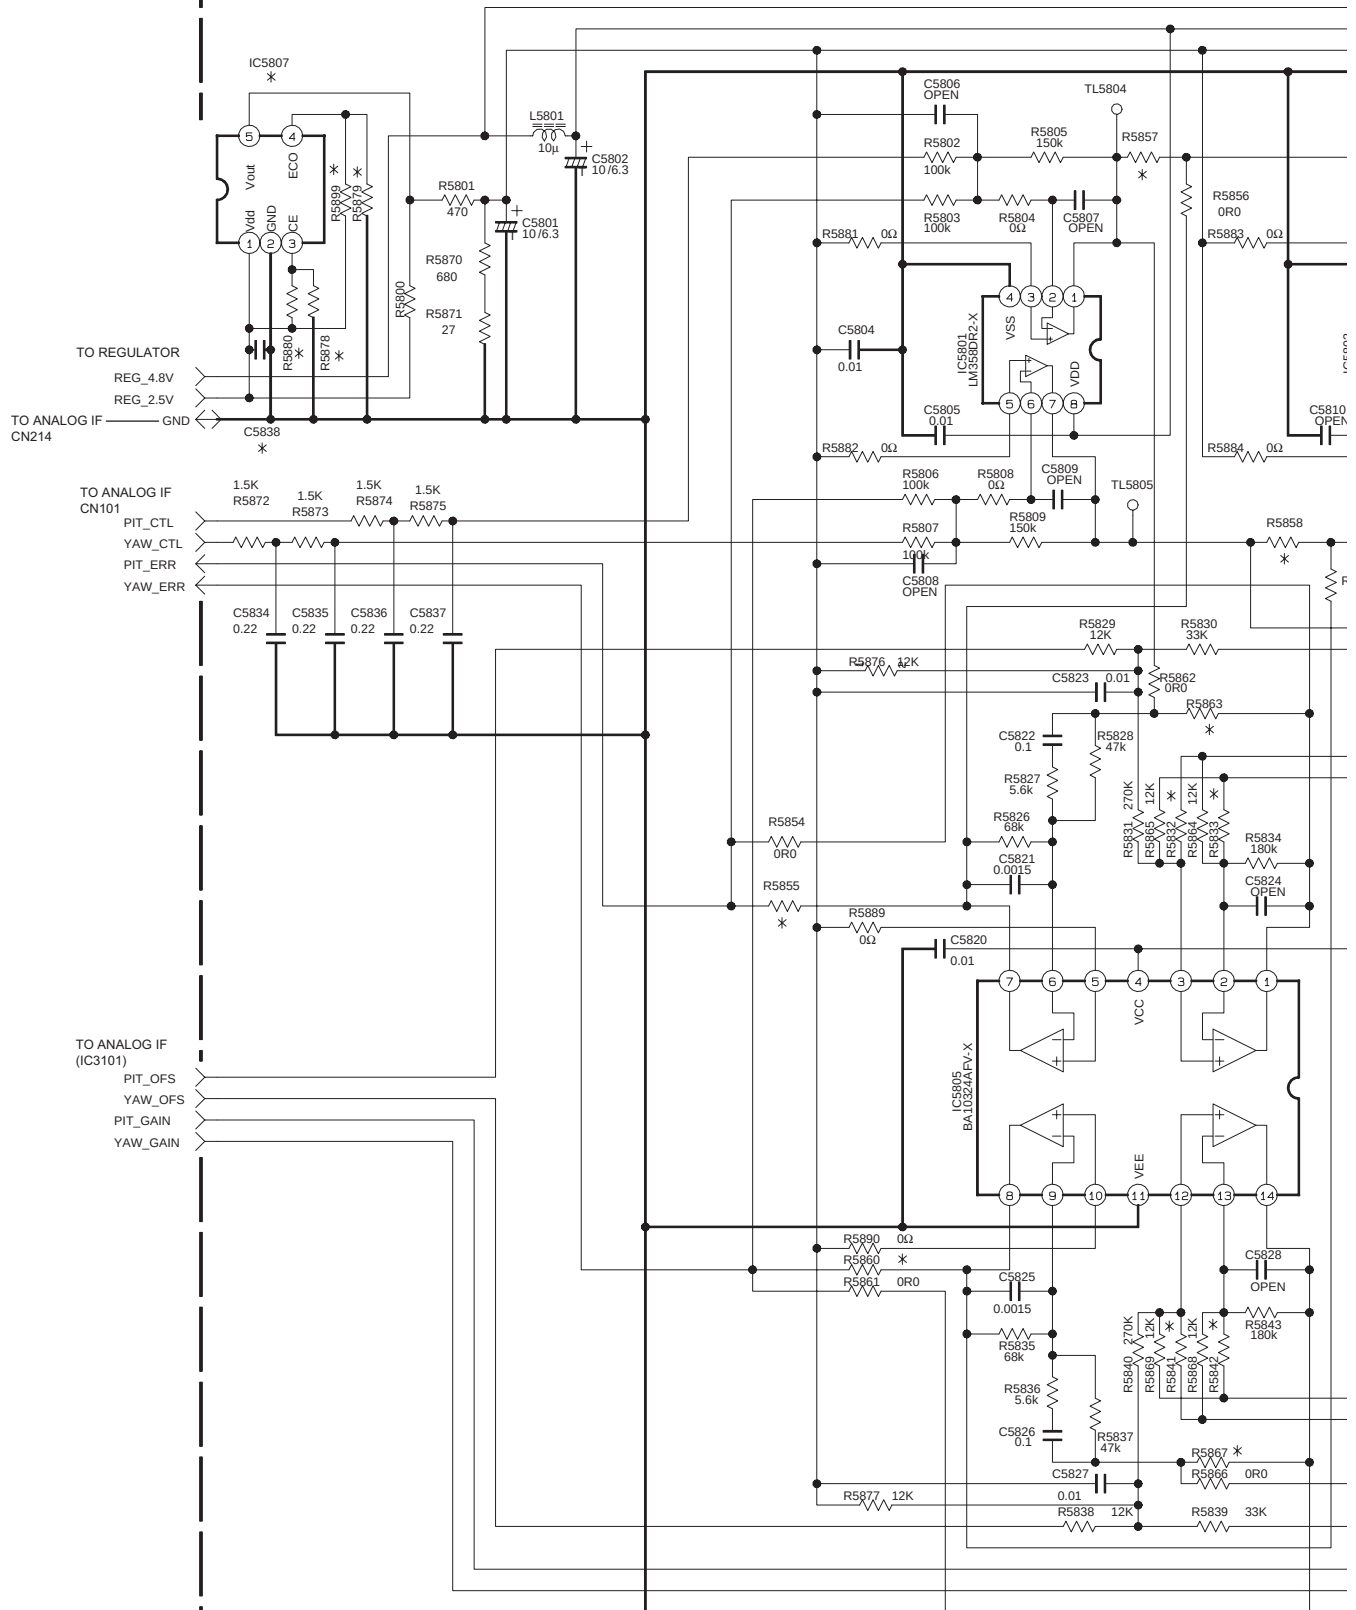

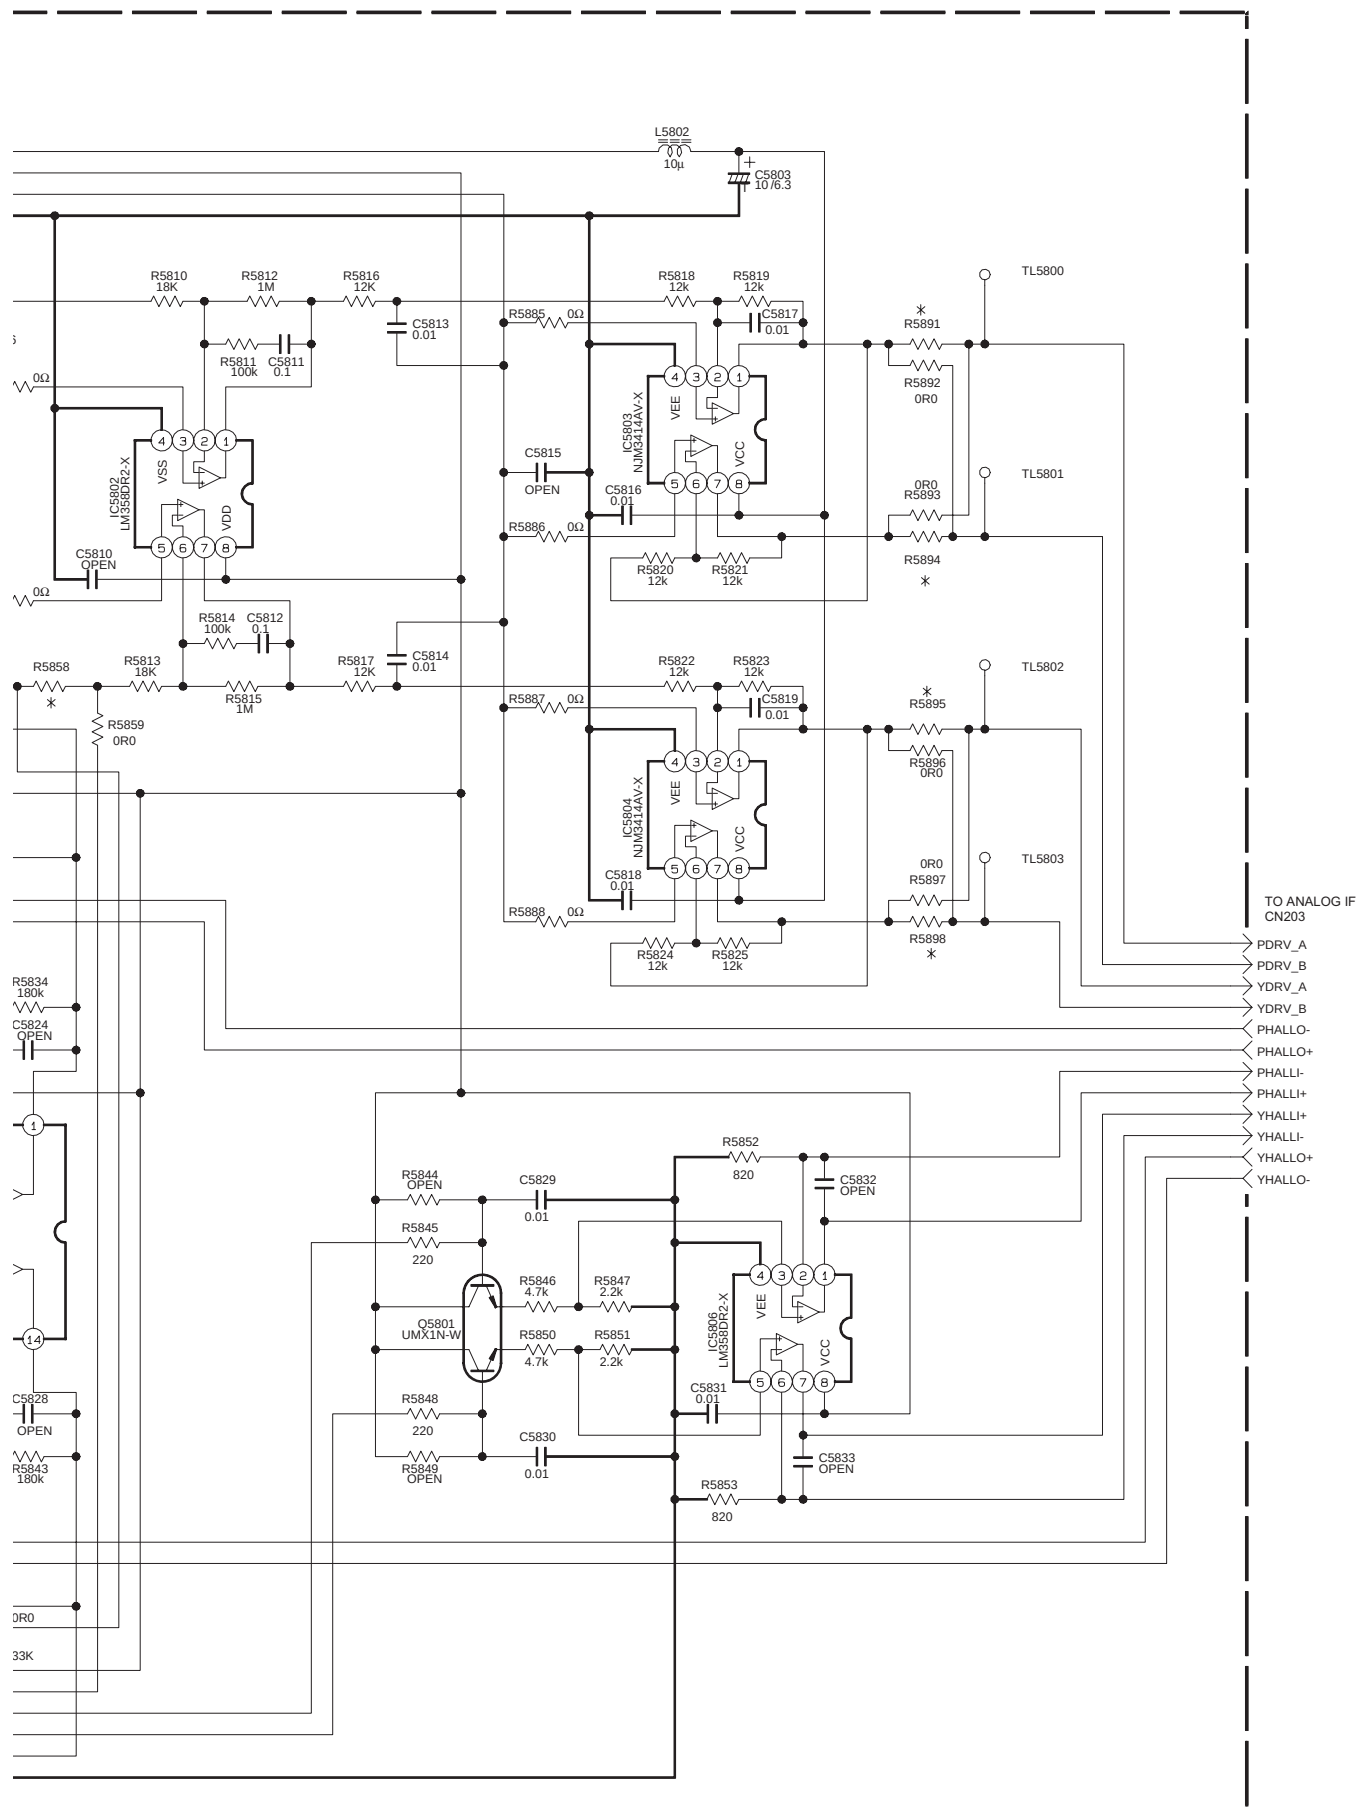


■ CCD SCHEMATIC DIAGRAM

NOTE: • IC5201 is incorporated in the CCD base assembly.
When IC5201 needs replacement, replace the CCD base assembly
in whole because it cannot be replaced alone.

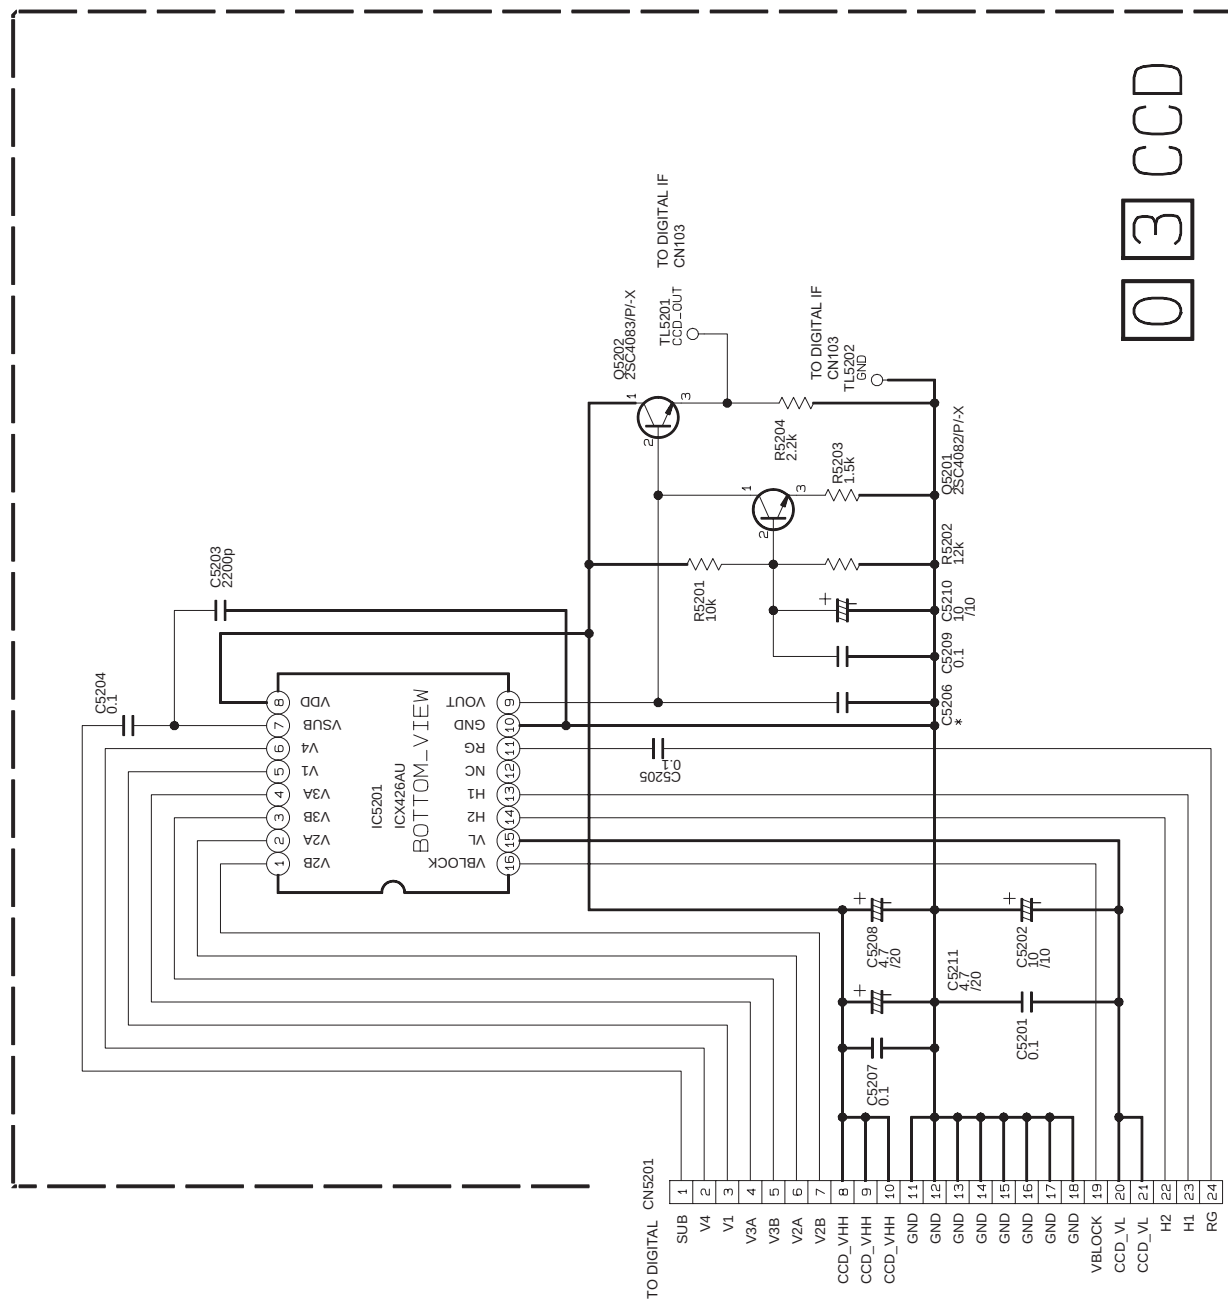


NOTE: The parts with marked (*) is not used.

■ PREMDA(PREMDA IF) SCHEMATIC DIAGRAM

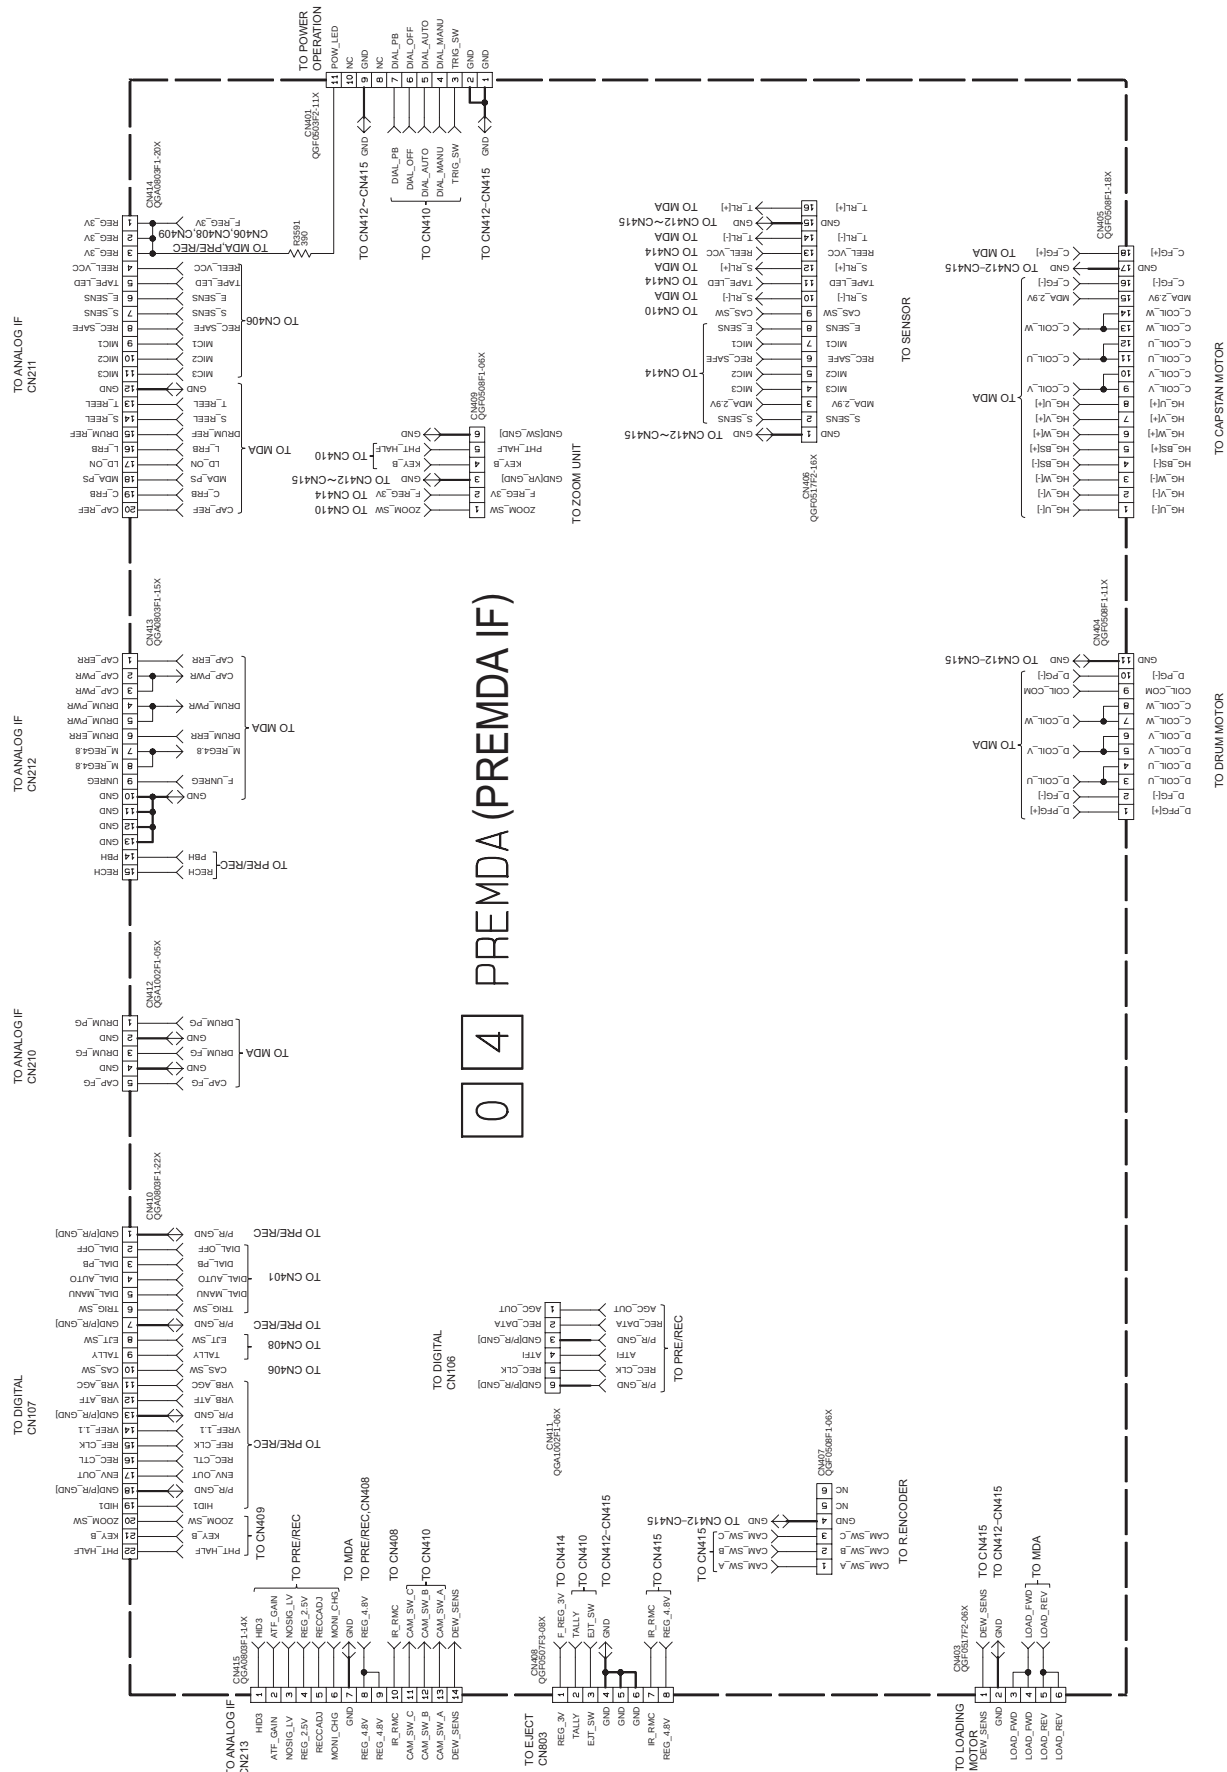


y20244001a rev0.1


PREMDA(MDA) SCHEMATIC DIAGRAM

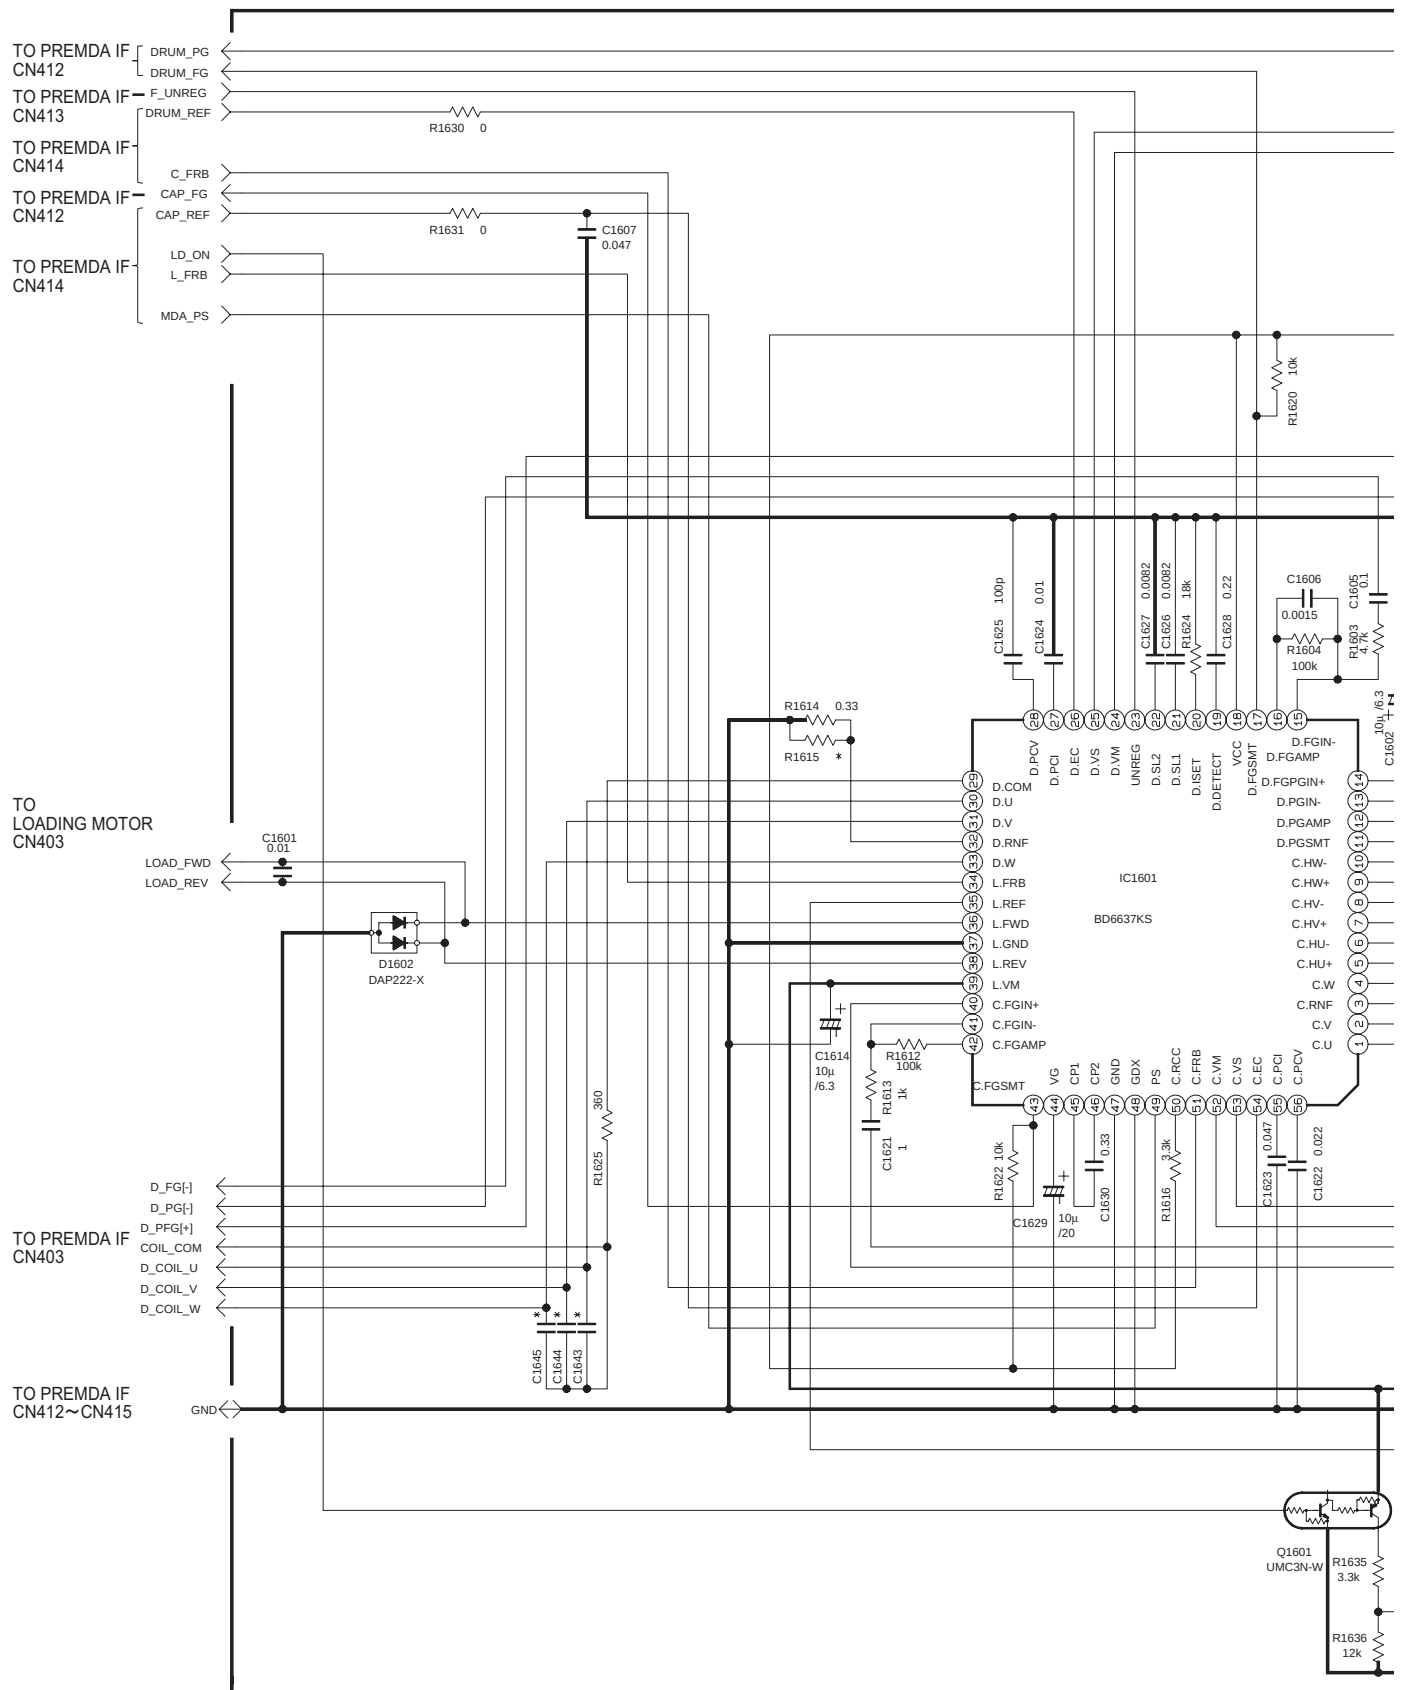


NOTE: The parts with marked (*) is not used.

■ PREMDA(PRE/REC) SCHEMATIC DIAGRAM

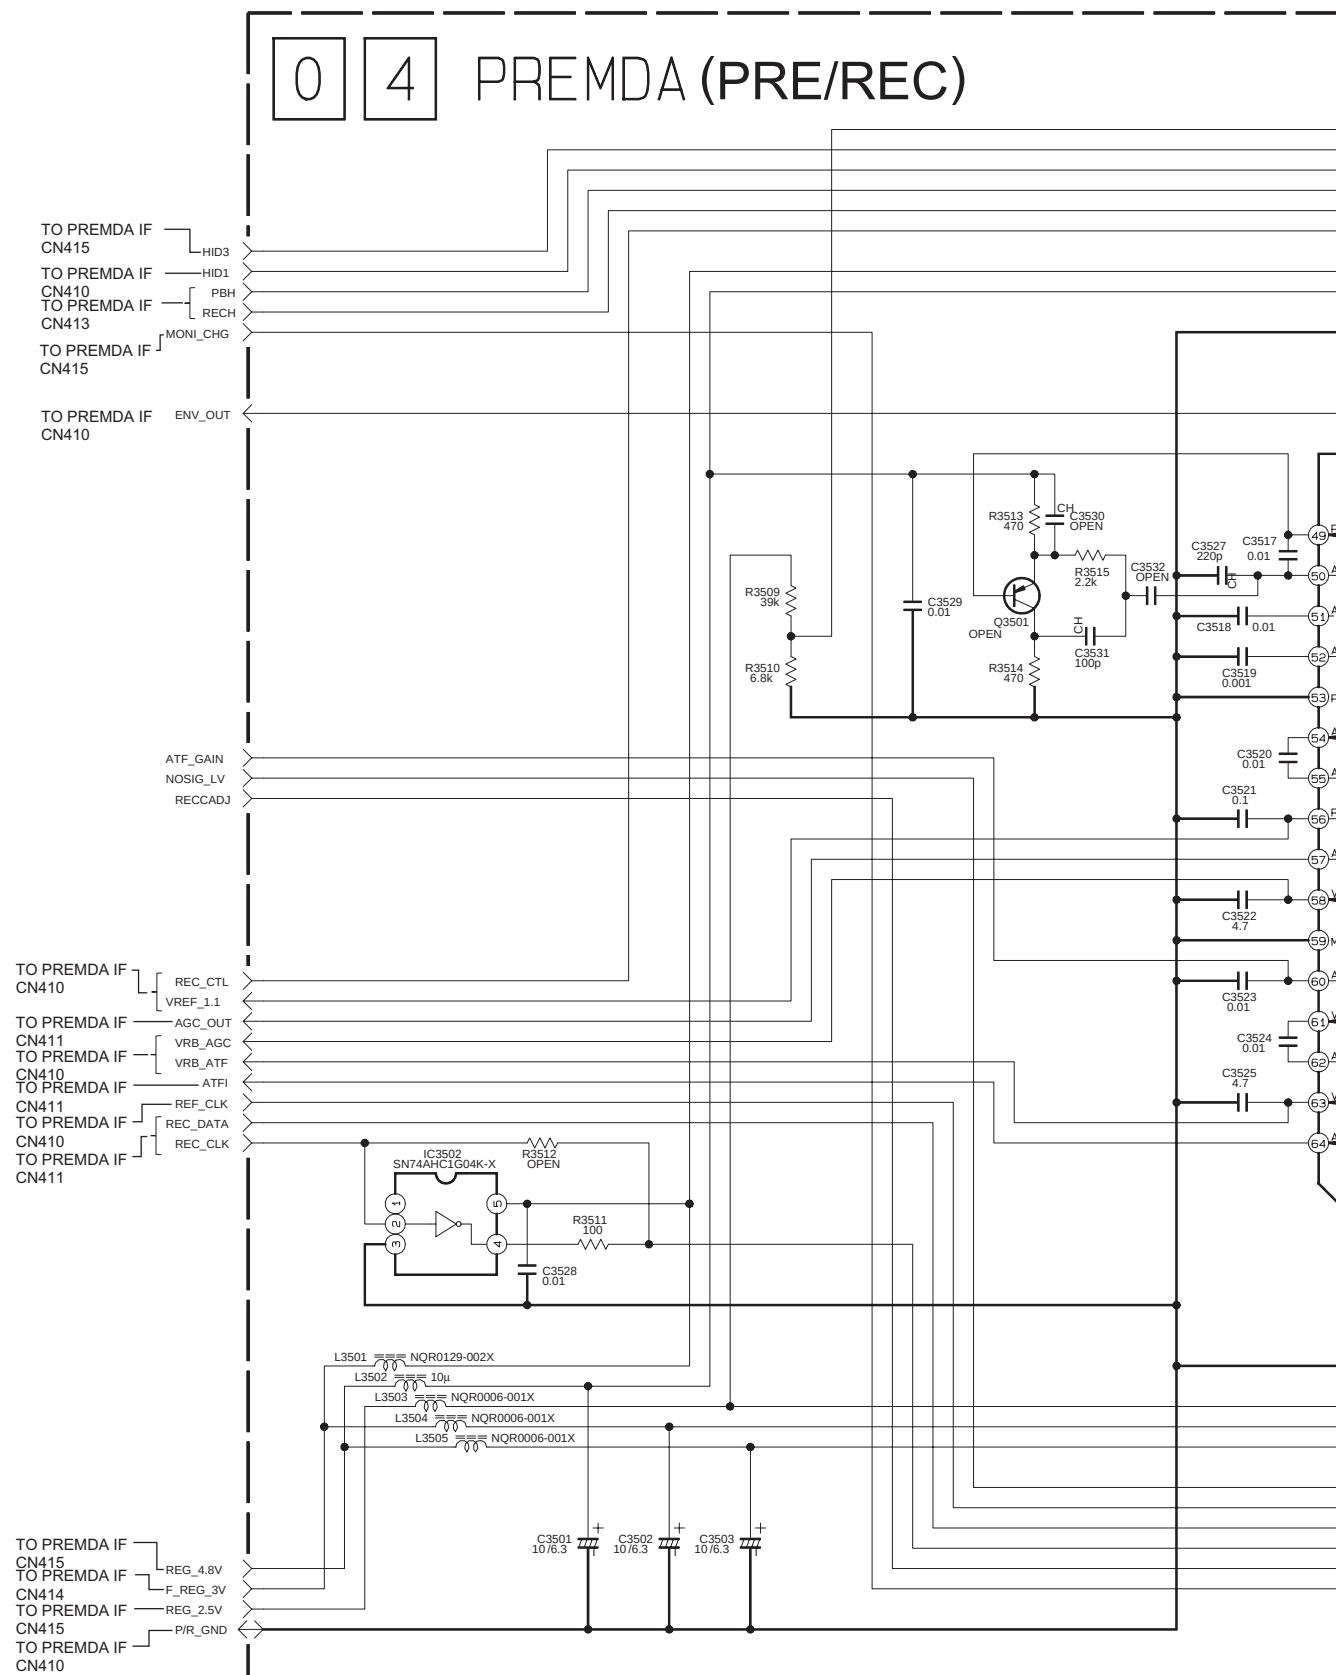


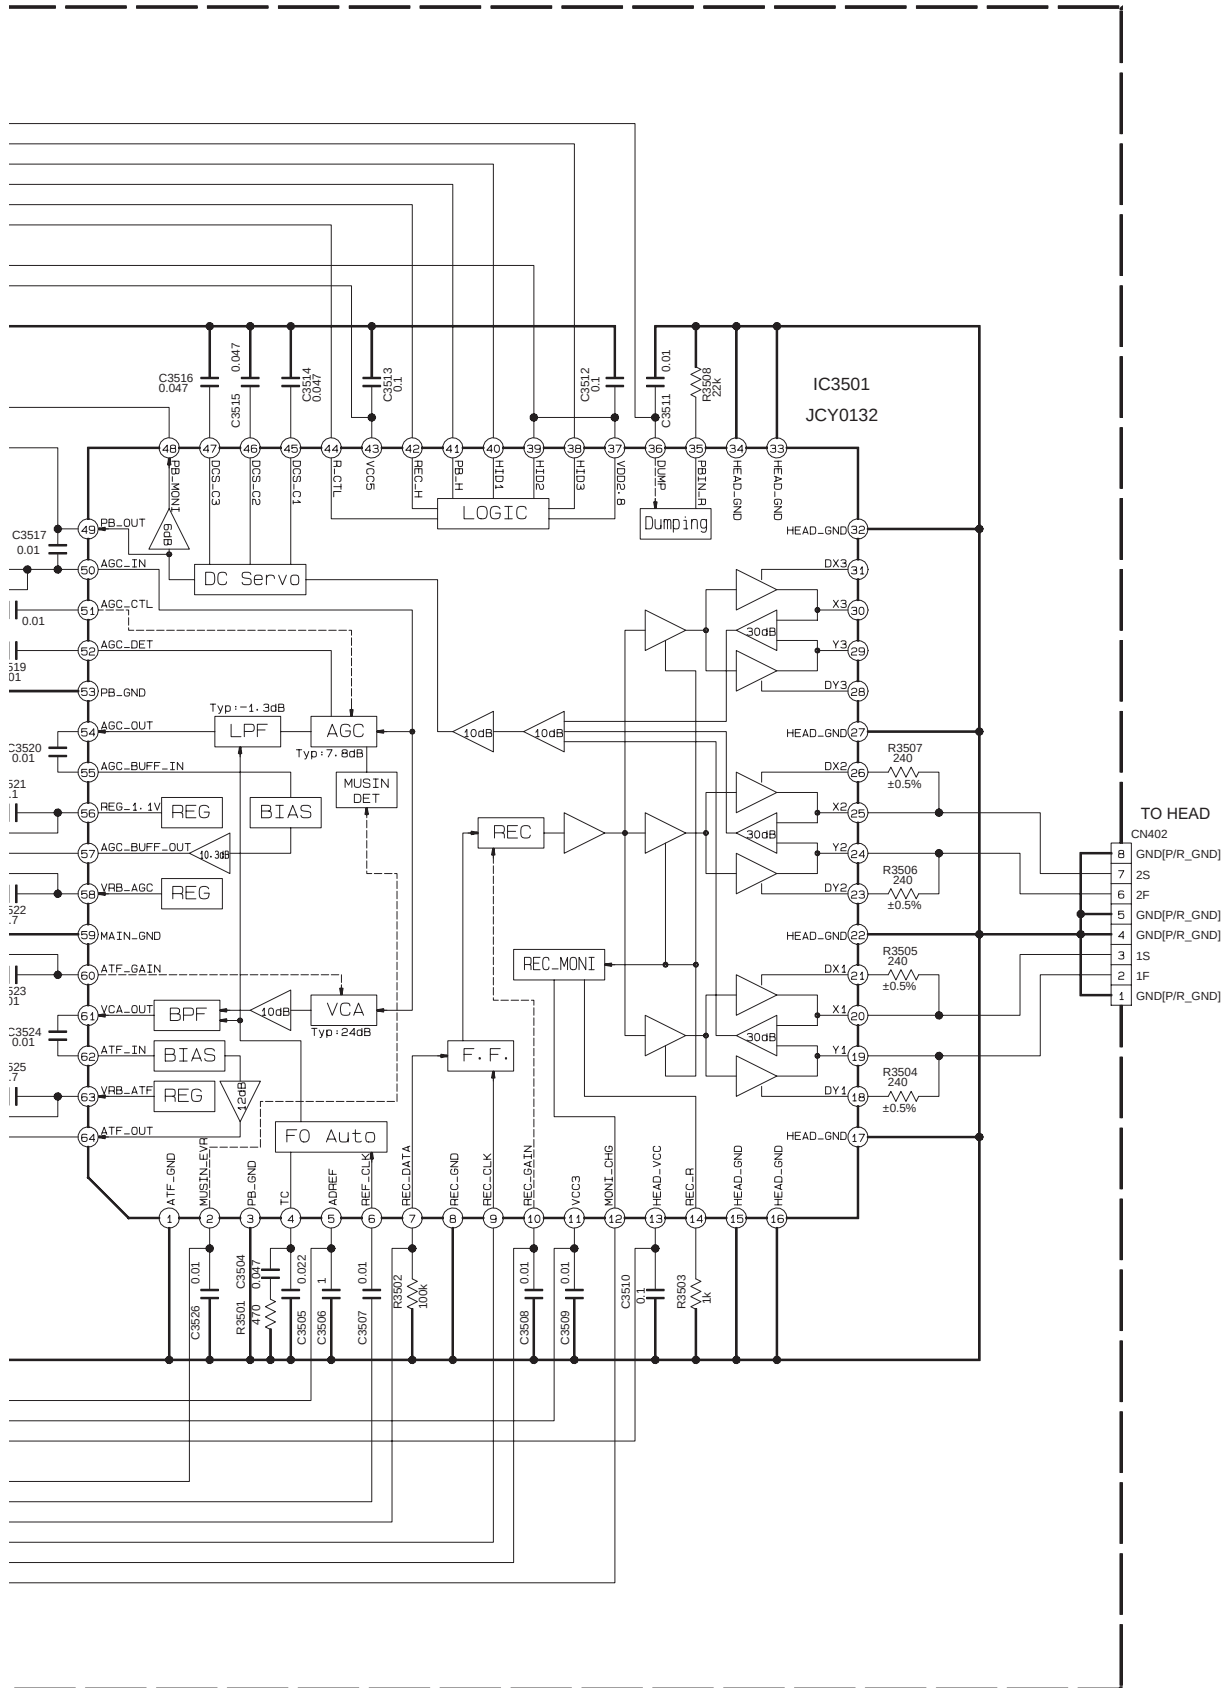


■ MON/OPE(DECK OPE) SCHEMATIC DIAGRAM

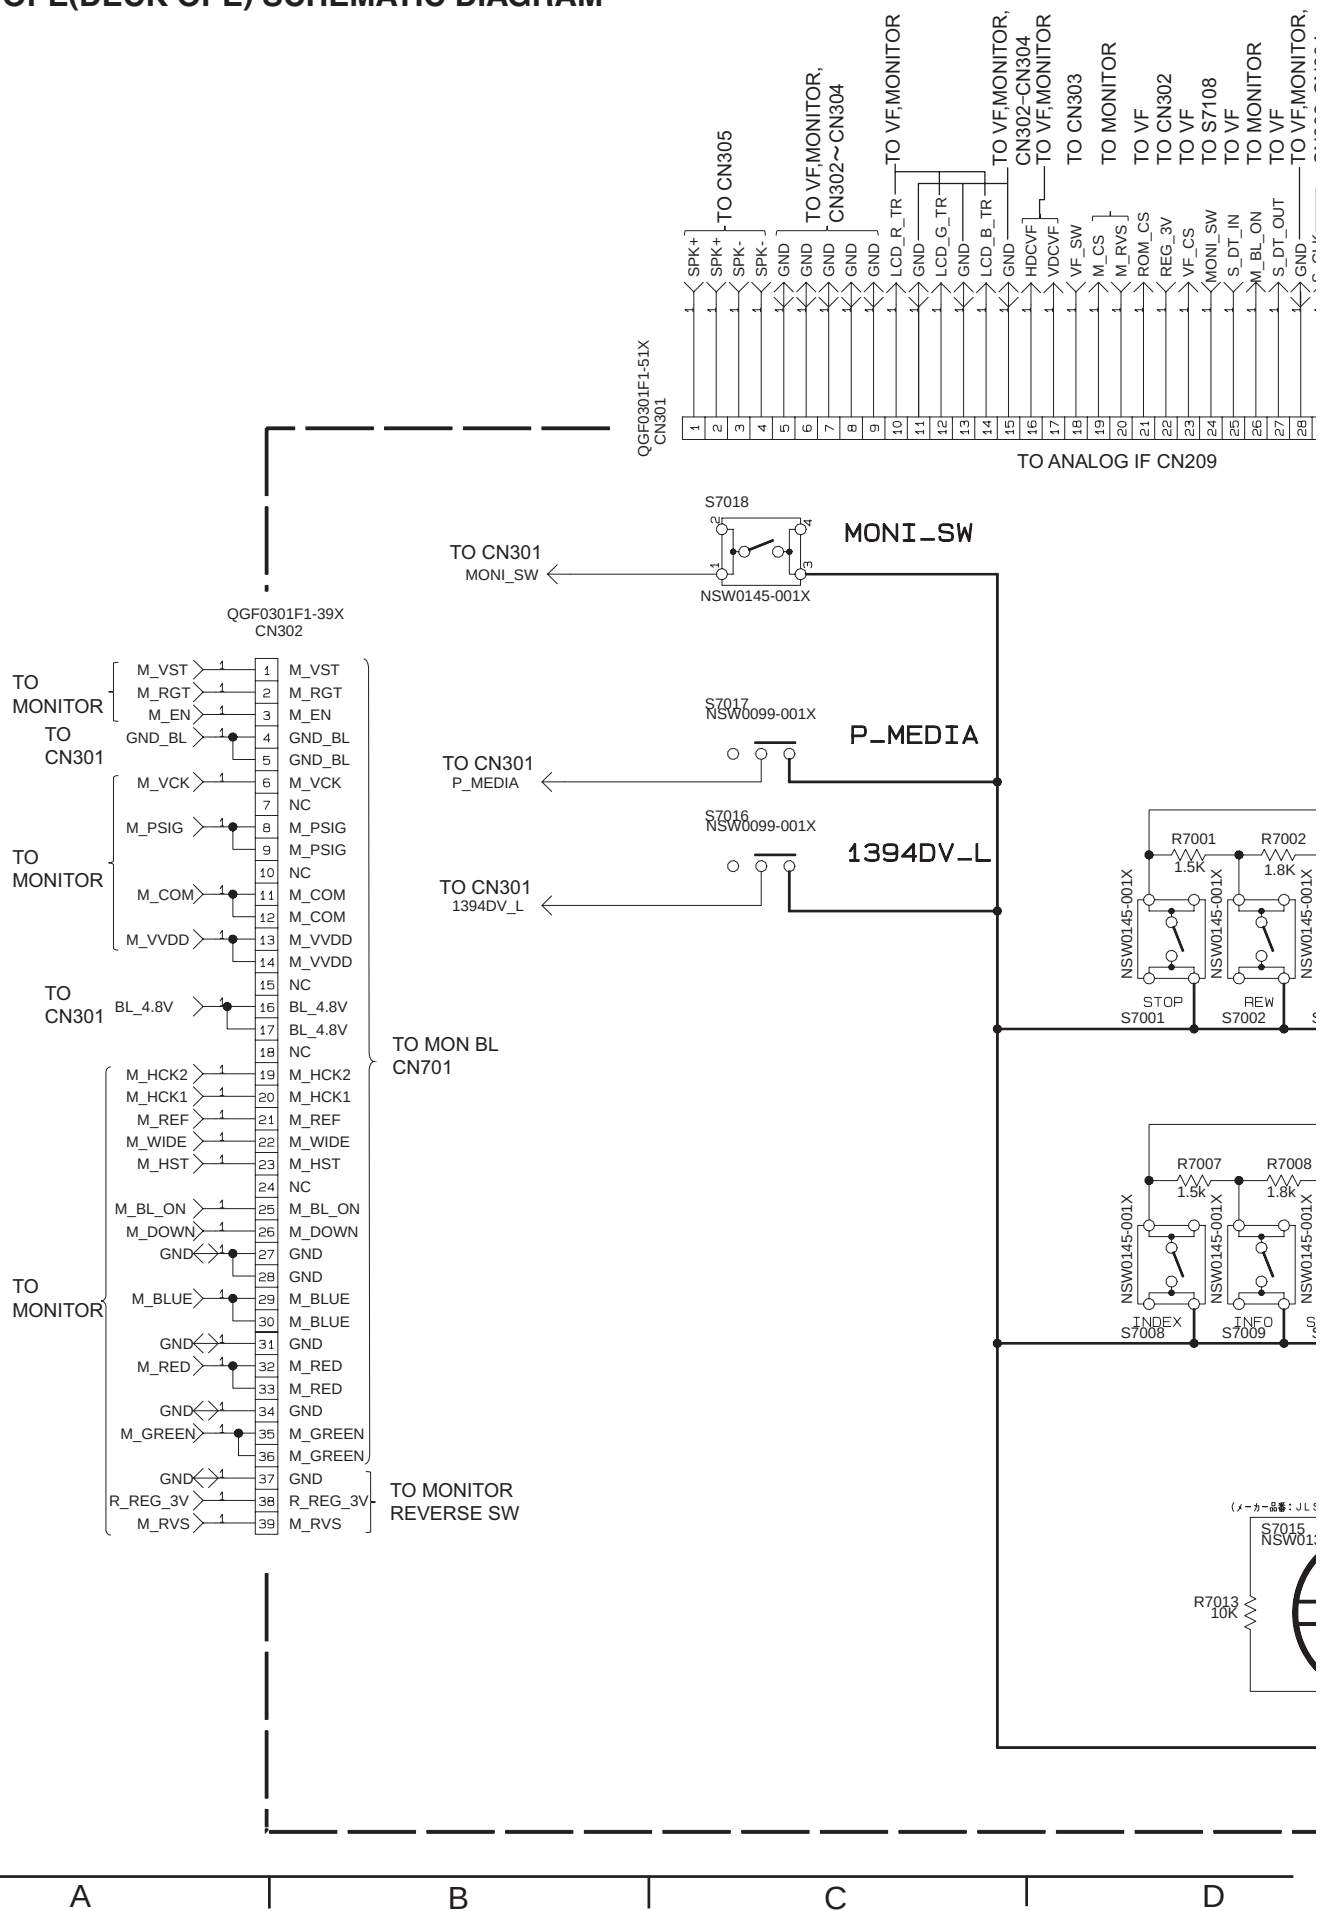


■ MON/OPE(VF) SCHEMATIC DIAGRAM

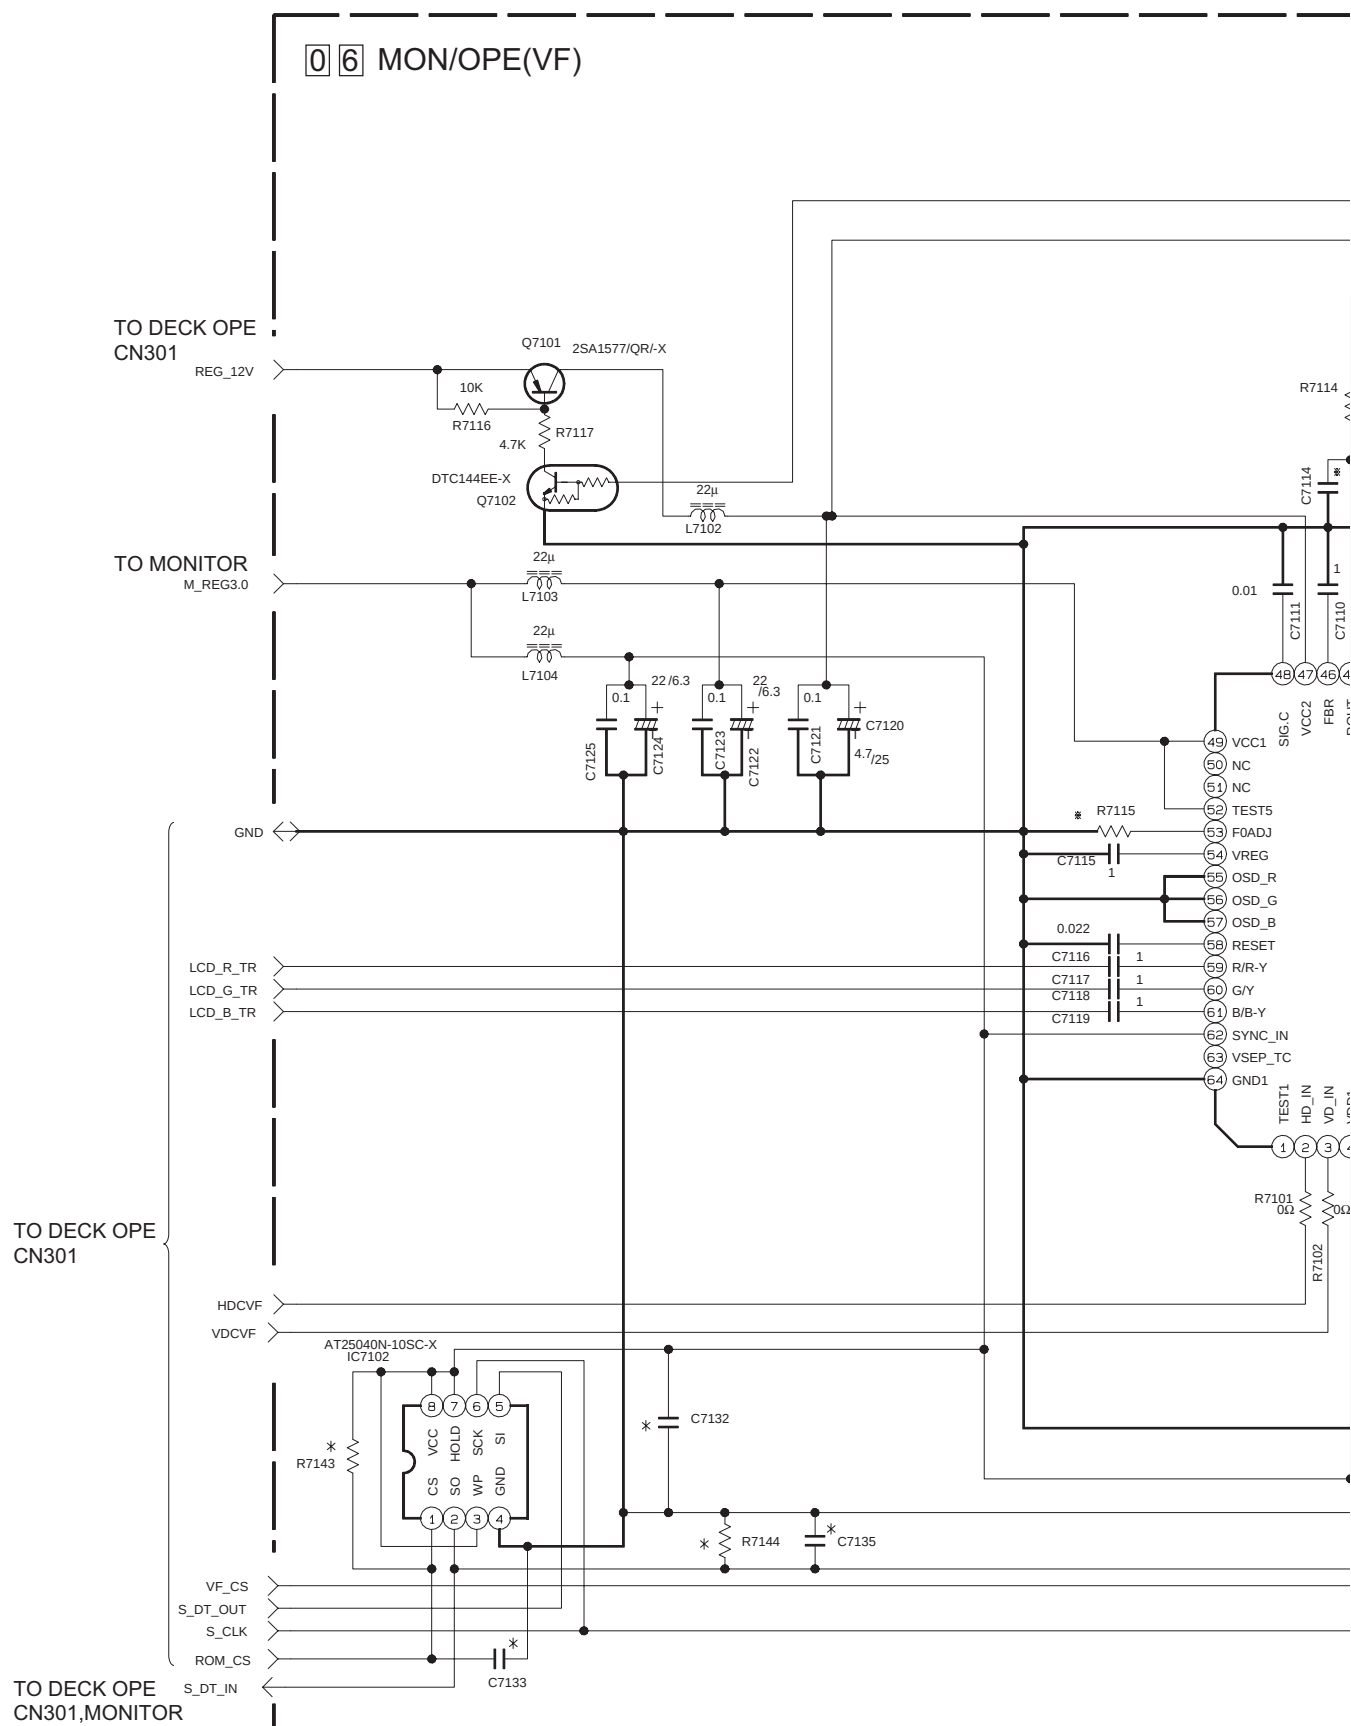

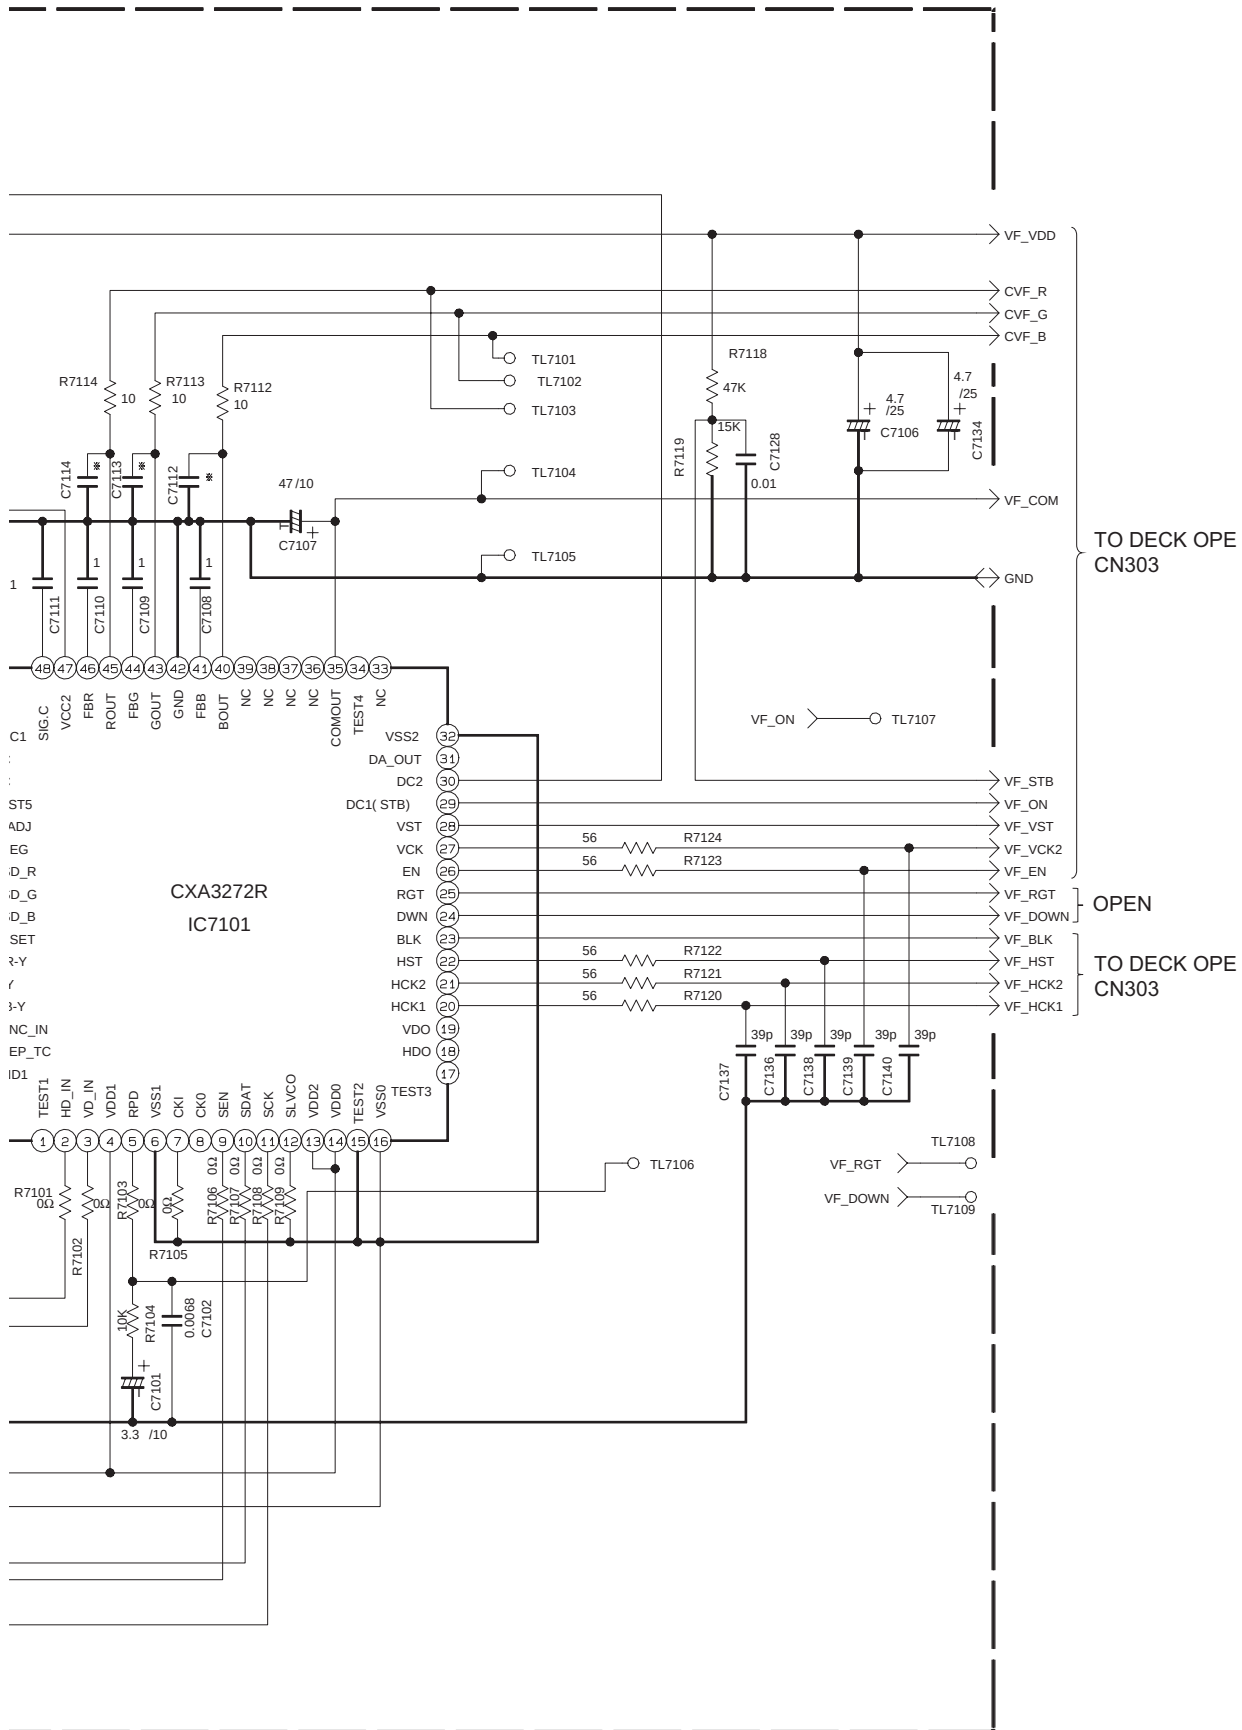


■ MON/OPE(MONITOR) SCHEMATIC DIAGRAM

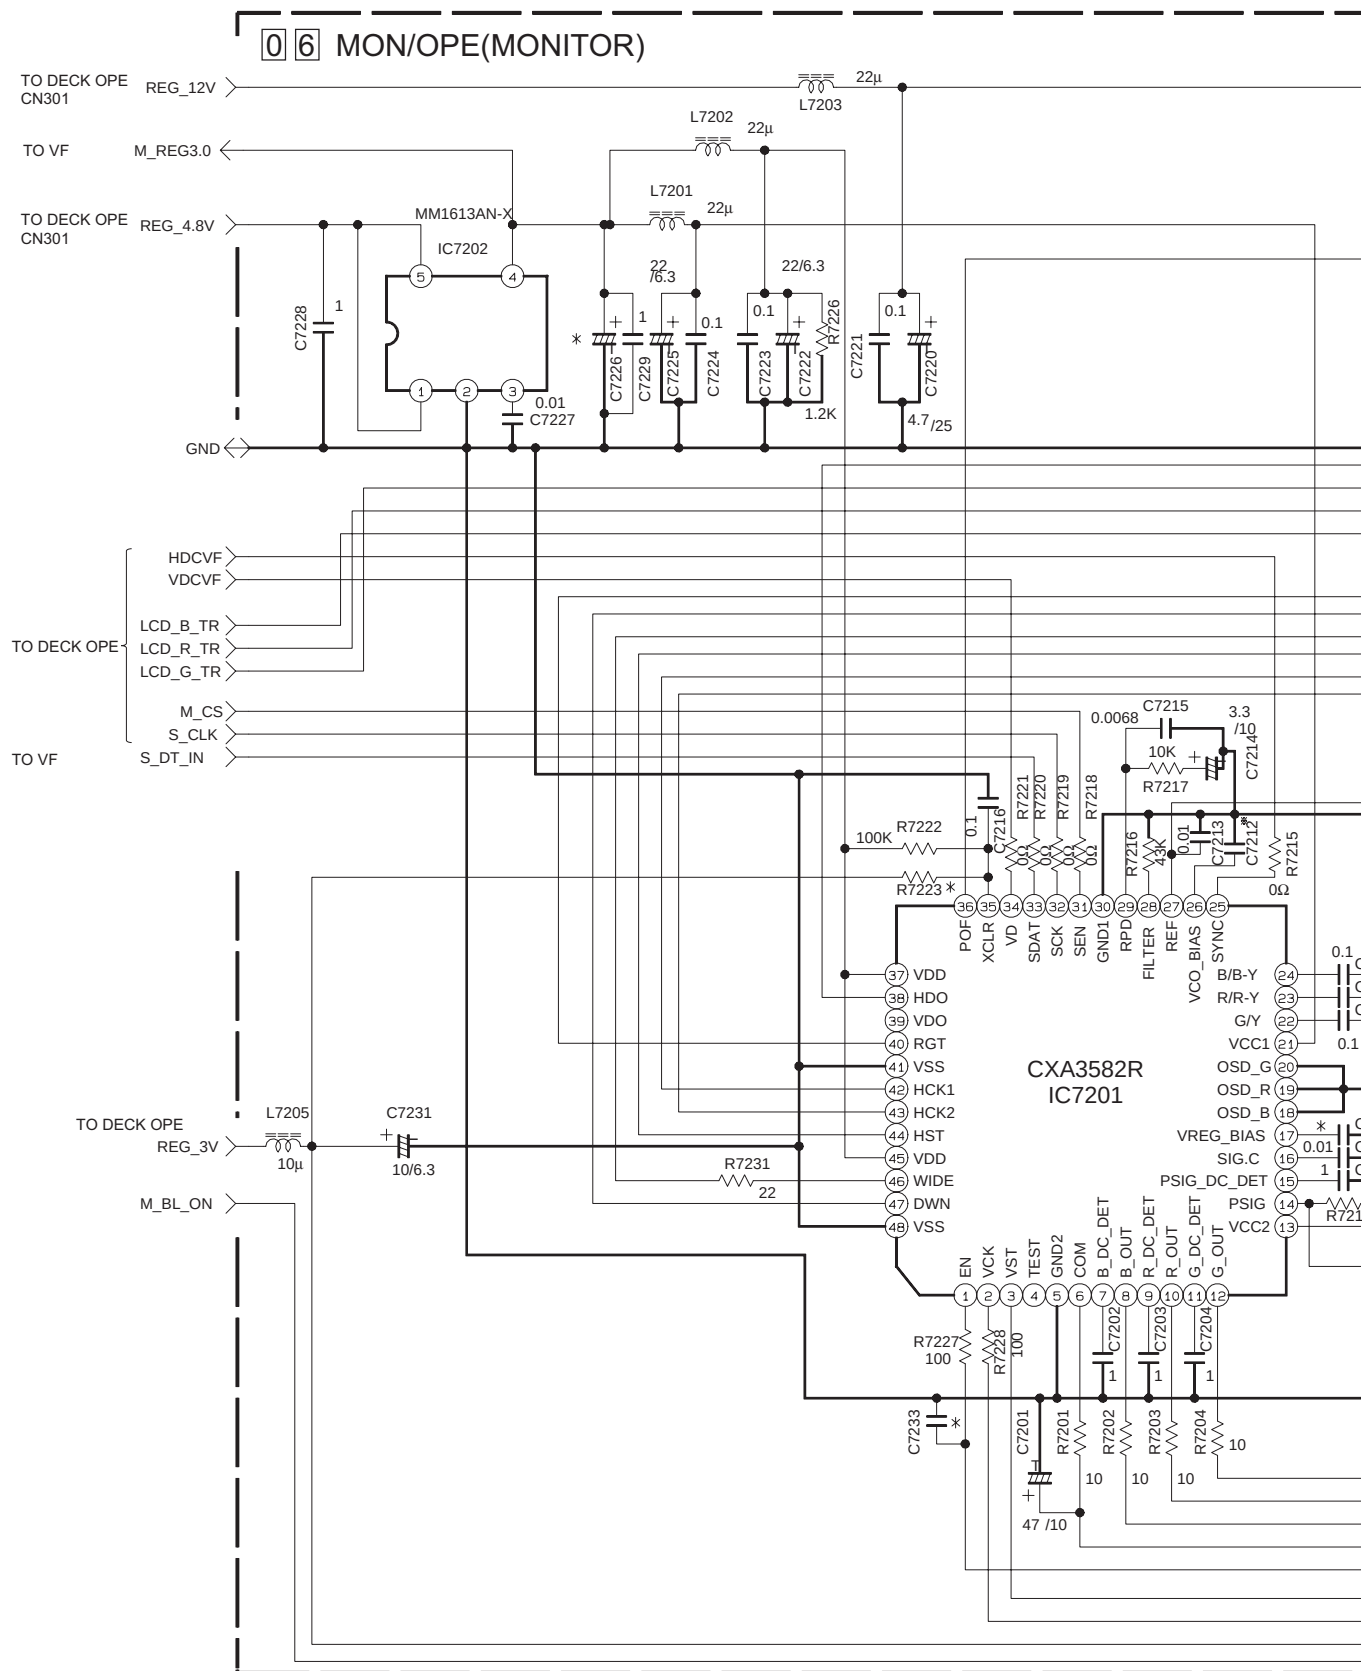

NOTE: The parts with marked (*) is not used.

■ MON BL SCHEMATIC DIAGRAM

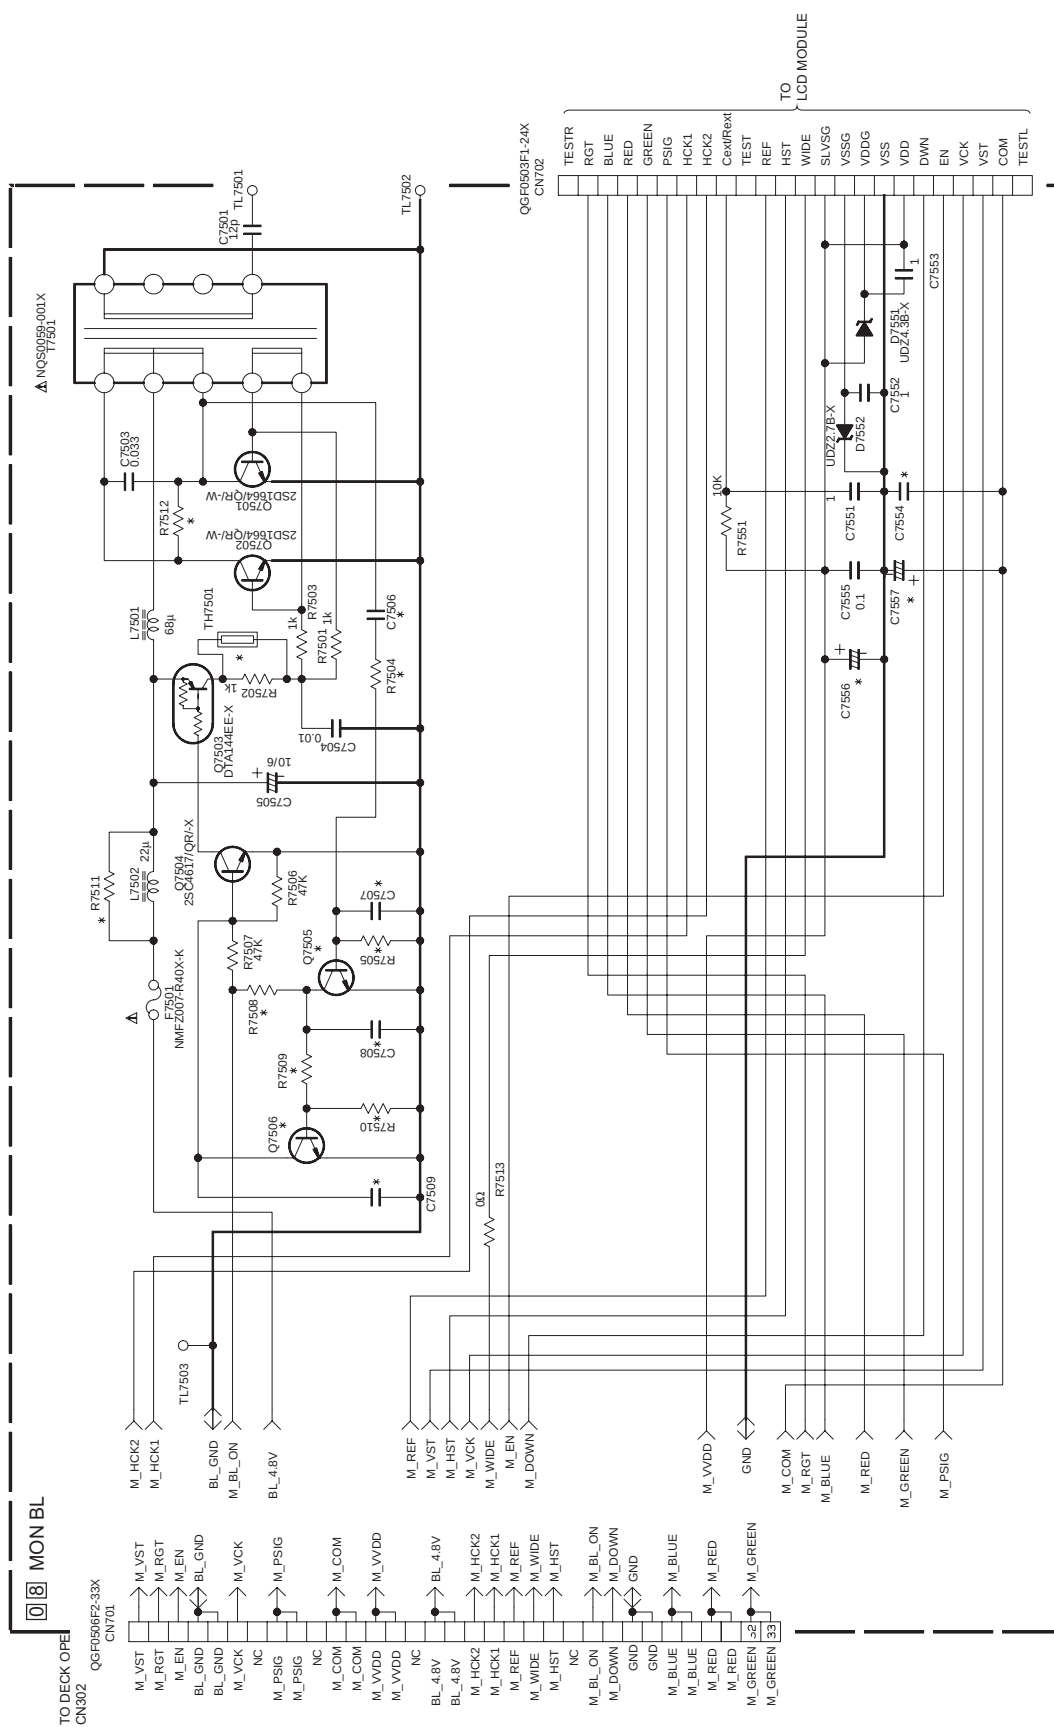

NOTE: The parts with marked (*) is not used.

VF BL SCHEMATIC DIAGRAM


5

4

3

2



1

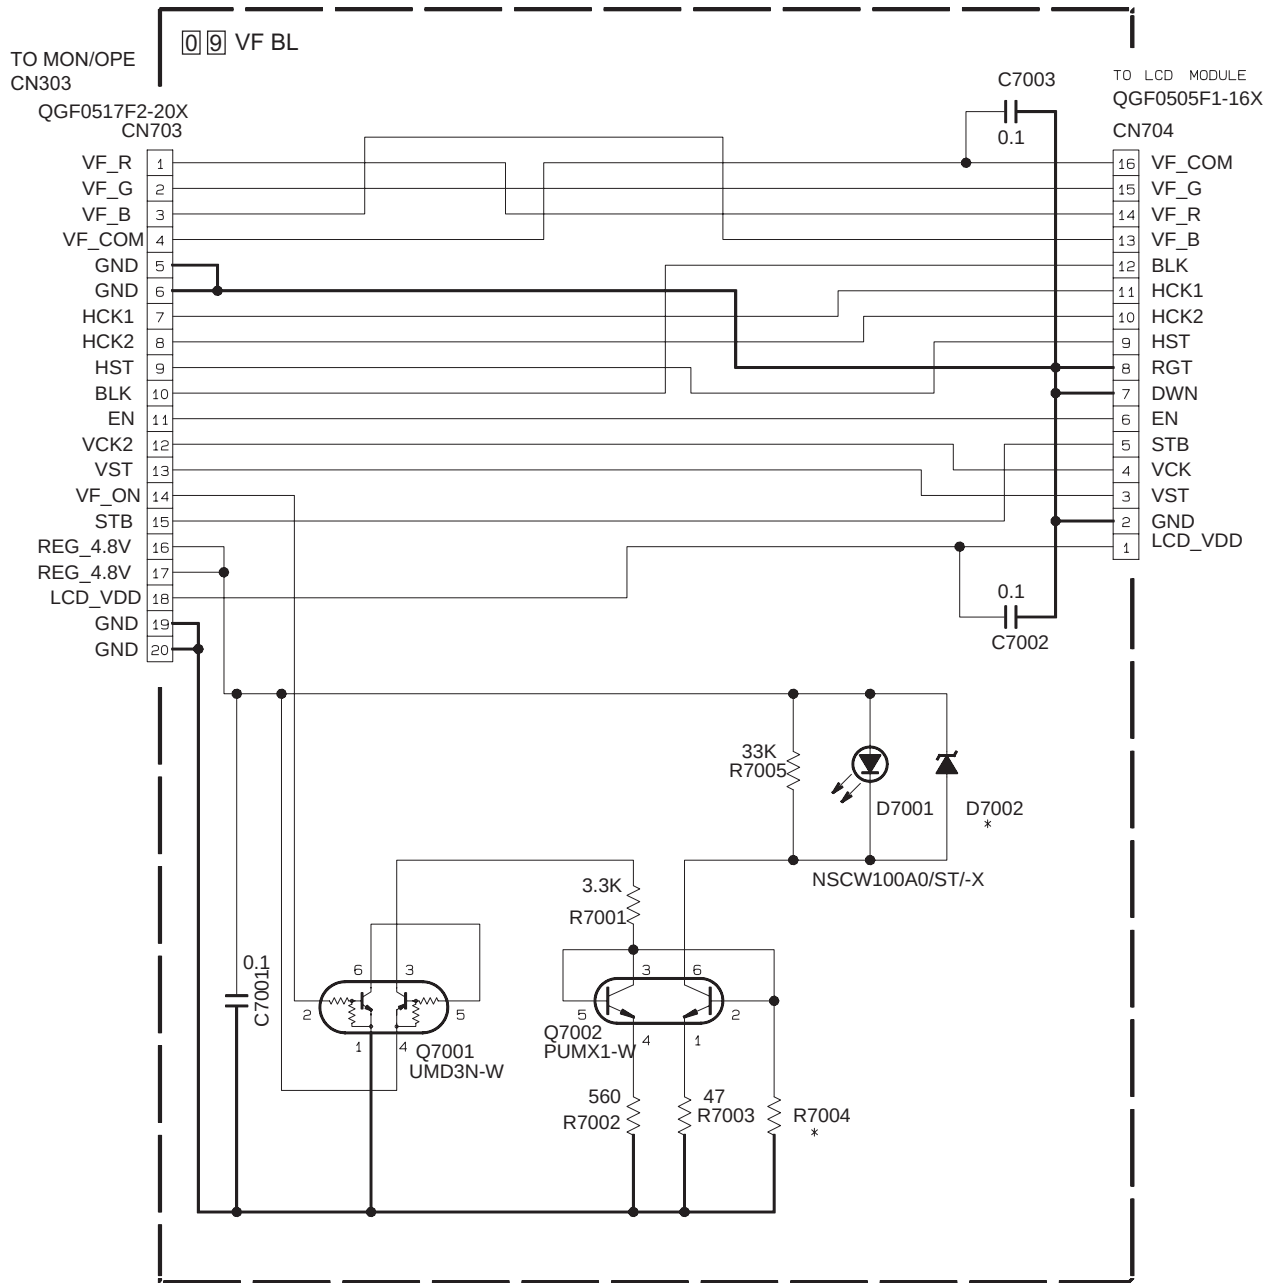




NOTE: The parts with marked (*) is not used.

2-55



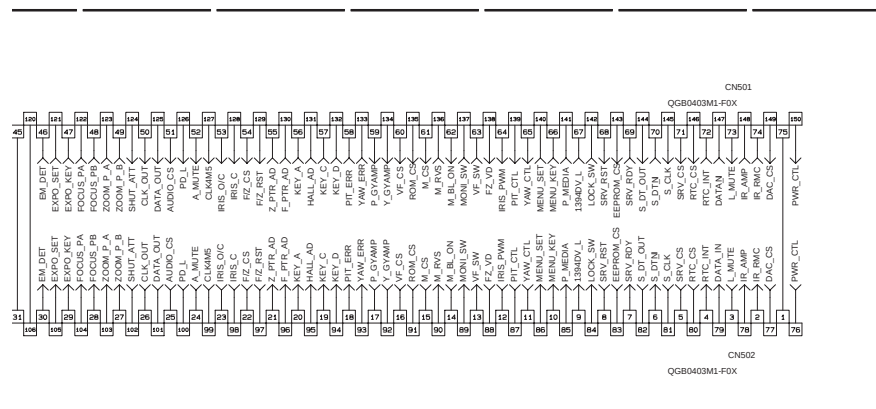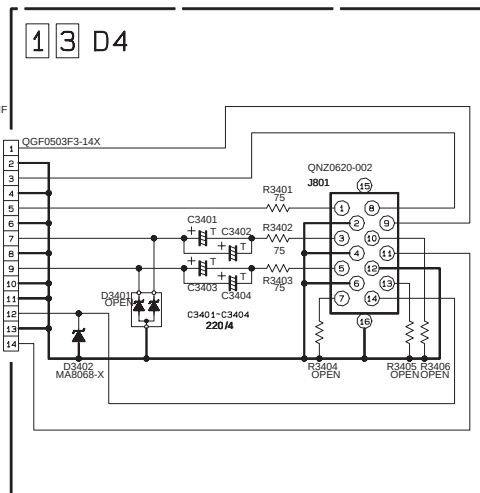

01	DIGITAL	PWB
02	ANALOG	PWB
03	CCD	PWB
04	PRE/MDA	PWB
05	CONNECT	PWB
06	MONI/OPE	PWB
07	SW	PWB
08	MONI-BL	PWB
09	VF-BL	PWB
10	EJECT	PWB
11	MIC/WB	PWB
12	BOTTOM	PWB
13	D4	PWB
14	GYRO	PWB
15	REAR	PWB

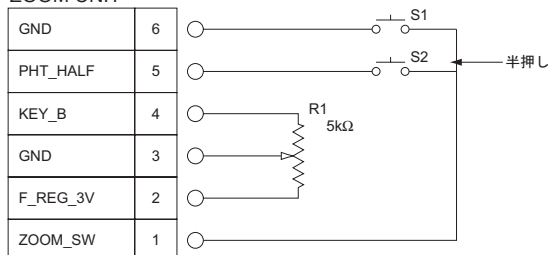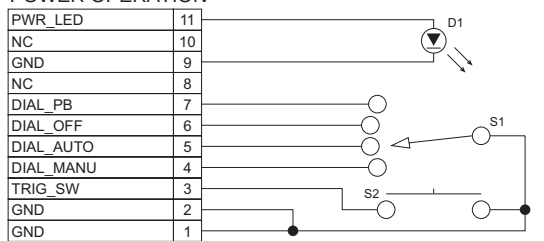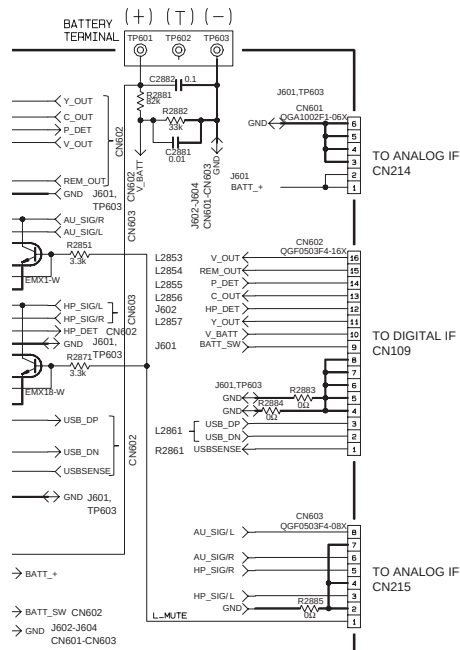


y10353001a rev0.1

■ DIGITAL CIRCUIT BOARD

<01> DIGITAL
YB 10407-01-02

FOIL SIDE(

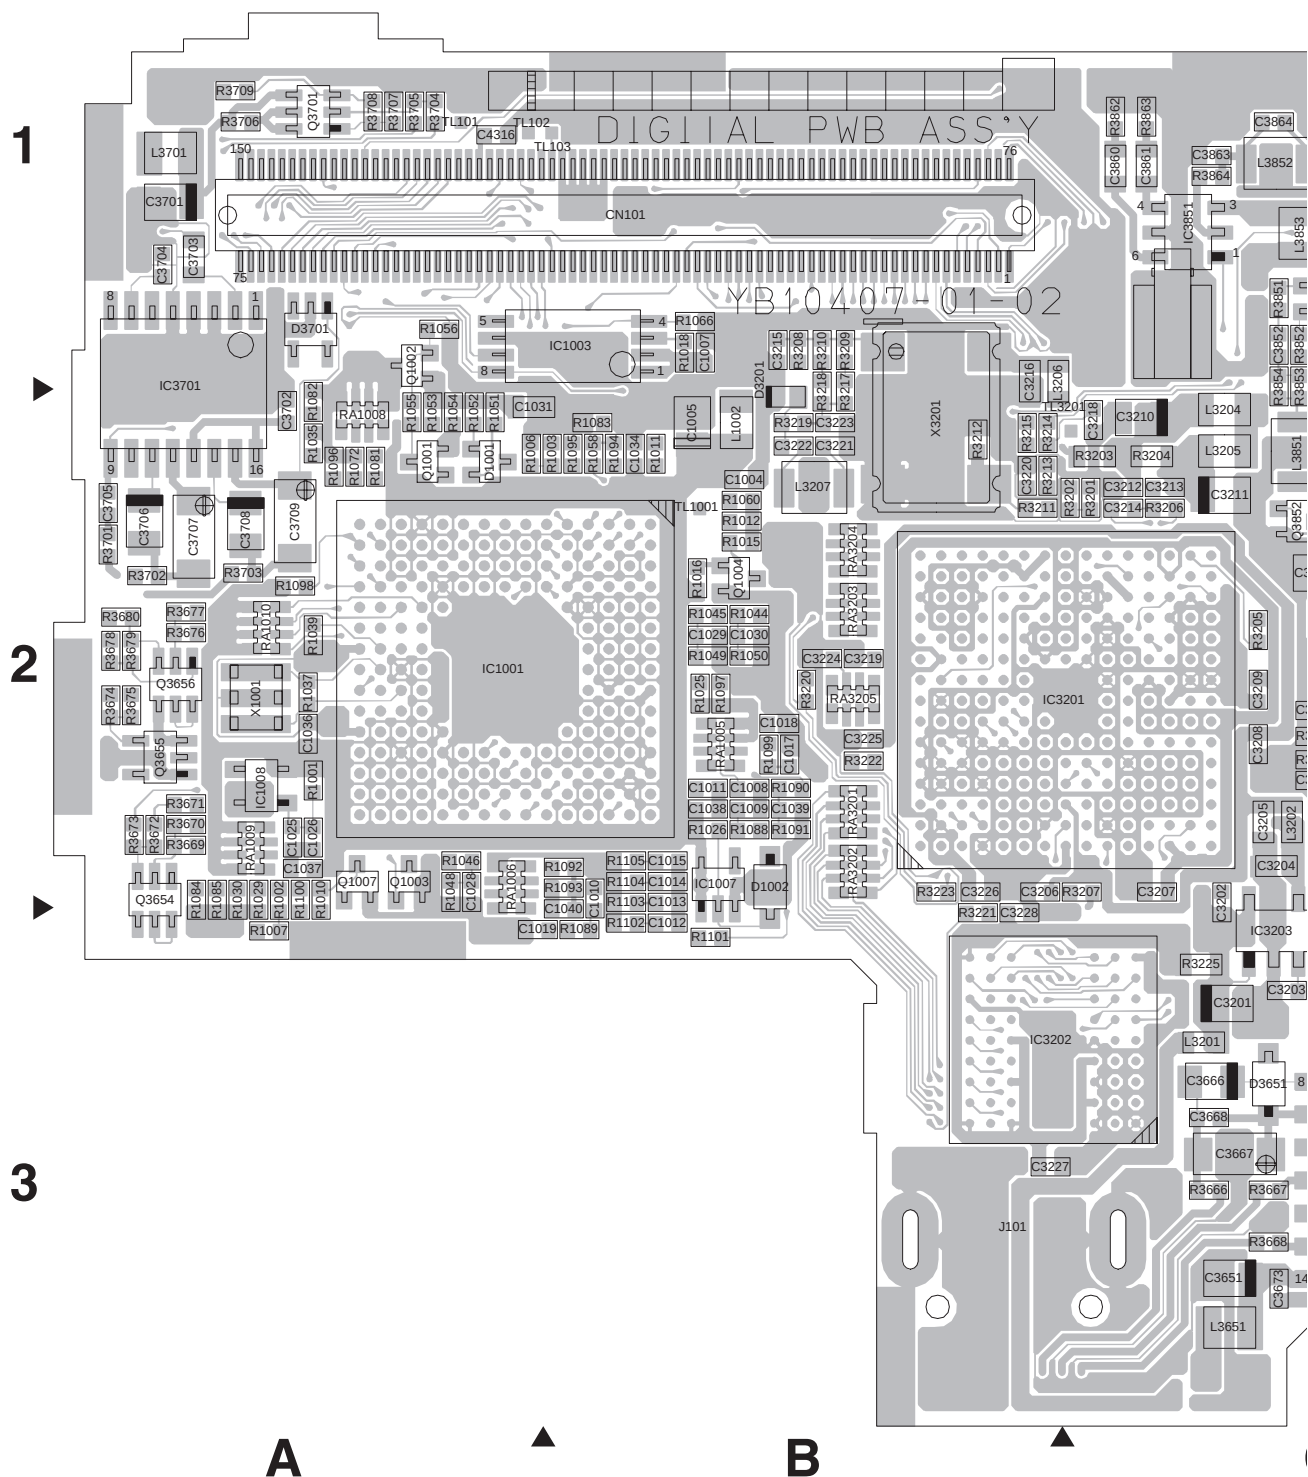


E



ONENT SIDE(A)

<01> DIGITAL
YB 10407-01-02

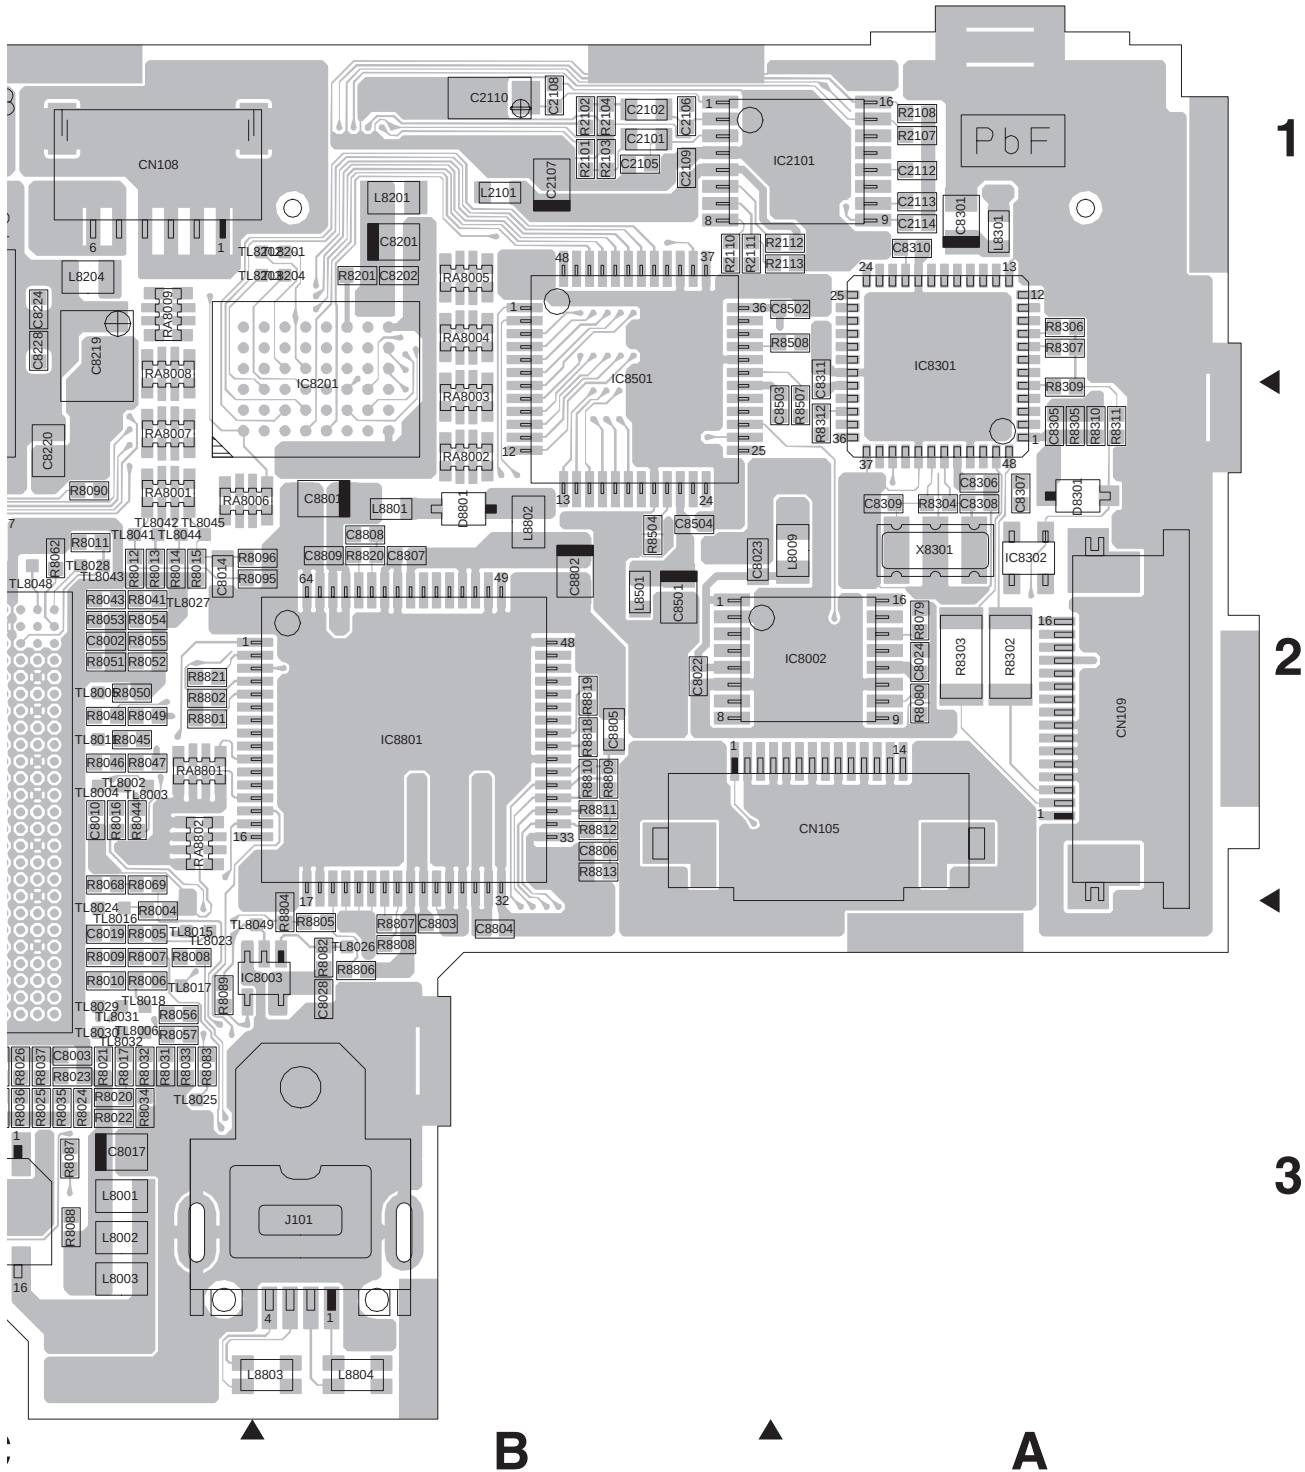

REF.NO.	LOCATION	REF.NO.	LOCATION	REF.NO.	LOCATION	REF.NO.	LOCATION	REF.NO.	LOCATION	REF.NO.	LOCATION	REF.NO.	LOCATION	REF.NO.	LOCATION	REF.NO.	LOCATION	REF.NO.	LOCATION
CAPACITOR																			
C1004	B C 2B	C3609	B C 3E	C4311	A C 2D	CN103	A C 1E	TRANSISTOR		R3027	B C 2D	R3858	B C 1C	R8069	A C 2C	TL3802	B C 2C		
C1005	B C 2B	C3610	B C 3E	C4312	A C 1D	CN104	A C 1E	T1001	B C 2A	R3028	B C 2D	R3859	B C 1C	R8070	A C 3C	TL4301	A C 1D		
C1007	B C 1B	C3611	B C 3E	C4313	A C 2D	CN105	A C 2A	Q1002	B C 1A	R3029	B C 2D	R3860	B C 1C	R8071	A C 3C	TL4302	A C 1D		
C1008	B C 2B	C3613	B C 3E	C4314	A C 1E	CN106	A C 3D	Q1003	B C 2A	R3030	B C 2C	R3861	B C 1C	R8072	A C 3C	TL4303	A C 1E		
C1009	B C 2B	C3614	B C 3D	C4315	A C 1E	CN107	A C 2E	Q1004	B C 2B	R3031	B C 2C	R3862	B C 1C	R8073	A C 3C	TL4304	A C 1D		
C1010	B C 2B	C3615	B C 3D	C4316	B C 1A	CN108	A C 1C	Q1007	B C 2A	R3051	B C 3C	R3863	B C 1C	R8074	A C 2D	TL4305	A C 1D		
C1011	B C 2B	C3616	B C 3D	C5001	B C 1D	CN109	A C 2A	Q3001	B C 3D	R3052	B C 3C	R3864	B C 1C	R8075	A C 2D	TL4306	A C 1D		
C1012	B C 3B	C3617	B C 3E	C5002	B C 1D	CN110	A C 3C	Q3002	B C 3C	R3053	B C 3C	R3865	B C 1C	R8076	A C 2D	TL4307	A C 1D		
C1013	B C 2B	C3618	B C 3E	C5003	B C 1D			Q3601	B C 3E	R3054	B C 3C	R3866	B C 1D	R8078	A C 3D	TL4308	A C 1D		
C1014	B C 2B	C3619	B C 3E	C5004	B C 1D	DIODE		Q3602	B C 3D	R3055	B C 3D	R3867	B C 1D	R8079	A C 2A	TL4309	A C 1D		
C1015	B C 2B	C3620	B C 3E	C5005	B C 1D	D1001	B C 2A	Q3651	B C 3D	R3056	B C 3D	R3868	B C 1D	R8080	A C 2A	TL4310	A C 1D		
C1017	B C 2B	C3621	B C 3E	C5006	B C 1E	D1002	B C 2B	Q3654	B C 2A	R3201	B C 2C	R4202	A C 1D	R8081	A C 3D	TL4311	A C 1D		
C1018	B C 2B	C3622	B C 2E	C5007	B C 1E	D3001	B C 2D	Q3655	B C 2A	R3202	B C 2C	R4203	A C 1D	R8082	A C 3B	TL4312	A C 1D		
C1019	B C 3A	C3623	B C 2E	C5008	B C 1E	D3002	B C 2D	Q3656	B C 2A	R3203	B C 2C	R4204	A C 1D	R8083	A C 3C	TL8001	A C 3C		
C1023	B C 1D	C3624	B C 2E	C5009	B C 1D	D3201	B C 2B	Q3701	B C 1A	R3204	B C 2C	R4205	A C 1D	R8084	A C 2C	TL8002	A C 2C		
C1025	B C 2A	C3625	B C 2E	C5010	B C 1D	D3651	B C 3C	Q3801	B C 1D	R3205	B C 2C	R4301	A C 2E	R8085	A C 2D	TL8003	A C 2C		
C1026	B C 2A	C3626	B C 2E	C5011	B C 1D	D3701	B C 2B	Q3802	B C 1D	R3206	B C 2C	R4303	A C 1E	R8086	A C 3D	TL8004	A C 2C		
C1028	B C 2A	C3627	B C 2E	C5012	B C 1D	D5001	B C 1E	Q3803	B C 1D	R3207	B C 2C	R4304	A C 2E	R8087	A C 3C	TL8005	A C 2C		
C1029	B C 2B	C3628	B C 2D	C5013	B C 2D	D8301	A C 2A	Q3851	B C 1C	R3208	B C 1B	R4305	A C 2E	R8088	A C 3C	TL8006	A C 3C		
C1030	B C 2B	C3629	B C 3D	C5014	B C 2E	D8801	A C 2B	Q3852	B C 2C	R3209	B C 1B	R4306	A C 2E	R8089	A C 3C	TL8007	A C 2C		
C1031	B C 2A	C3631	B C 3D	C5015	B C 1E			Q3853	B C 2C	R3210	B C 1B	R4307	A C 1D	R8090	A C 2C	TL8008	A C 2C		
C1034	B C 2B	C3652	B C 3D	C5016	B C 1D			Q3854	B C 1C	R3211	B C 2B	R4308	A C 1D	R8091	A C 2D	TL8009	A C 2C		
C1036	B C 2A	C3653	B C 3D	C5017	B C 1E	IC		Q3855	B C 1D	R3212	B C 2B	R4309	A C 1E						


COMPONENT PARTS LOCATION GUIDE <ANALOG> YB10408-01-01

REF.NO. LOCATION	REF.NO. LOCATION	REF.NO. LOCATION	REF.NO. LOCATION	REF.NO. LOCATION	REF.NO. LOCATION	REF.NO. LOCATION
CAPACITOR	C5807 A C 2C	CN212 B C 2E	Q7302 A C 1C	R2711 A C 3B	R5857 A C 2C	R7311 A C 1C
C201 B C 1B	C5808 A C 1C	CN213 A C 3A		R4804 A C 3D	R5858 A C 1C	RA1401 A C 2C
C1301 B C 1A	C5809 A C 1C	CN214 A C 2A	RESISTOR	R4805 A C 3D	R5859 A C 1D	RA1402 A C 2B
C1302 B C 1A	C5810 A C 1D	CN215 A C 3A	R201 A C 1A	R4806 A C 3D	R5860 A C 1D	RA1403 A C 2B
C1303 B C 1A	C5811 A C 1D		R202 A C 1A	R4807 A C 3D	R5861 A C 1D	RA1404 A C 2B
C1311 B C 1C	C5812 A C 1D		R203 A C 2A	R4808 A C 2D	R5862 A C 2D	RA1405 A C 2B
C1312 B C 1B	C5813 A C 2C	D2201 B C 2D	R204 B C 1A	R4809 A C 3D	R5863 A C 2D	
C1313 B C 1A	C5814 A C 1D	D2202 B C 2D	R1301 B C 1A	R4810 A C 2D	R5864 A C 1D	OTHER
C1314 B C 1A	C5815 A C 1C	D2203 B C 1C	R1302 B C 1A	R4811 A C 3D	R5865 A C 1D	BT6001 B C 2A
C1401 A C 2B	C5816 A C 2C	D2204 B C 1C	R1304 B C 1A	R4812 A C 3D	R5866 A C 1D	F6001 B C 2B
C1402 A C 2B	C5817 A C 2C	D2205 B C 1C	R1305 B C 1A	R4813 A C 3D	R5867 A C 1D	F6101 A C 2A
C1403 A C 2B	C5818 A C 2C	D2206 B C 1C	R1307 B C 1A	R4814 A C 3D	R5868 A C 1D	F6102 B C 2C
C1404 A C 2B	C5819 A C 2C	D2601 B C 1D	R1308 B C 1B	R4815 A C 3D	R5869 A C 1D	F6103 B C 2D
C1405 A C 2B	C5820 A C 1D	D2602 B C 1D	R1309 B C 1A	R4816 A C 3D	R5870 A C 1C	F6104 A C 2D
C1406 A C 2B	C5821 A C 1D	D2701 A C 3A	R1401 A C 2B	R4817 A C 3D	R5871 A C 1C	F6105 B C 3C
C1407 A C 2B	C5822 A C 2D	D2702 A C 3A	R1402 A C 3B	R4818 A C 3D	R5872 A C 2A	PC07 A C 1A
C1408 A C 2C	C5823 A C 1D	D2703 A C 3A	R1403 A C 2B	R4819 A C 3D	R5873 A C 2B	PC08 A C 7A
C1409 A C 2B	C5824 A C 1D	D2704 A C 3A	R1404 A C 2C	R4820 A C 3D	R5874 A C 1A	PC09 A C 6E
C1410 A C 2B	C5825 A C 1D	D3101 A C 3B	R1405 A C 2B	R4821 A C 3D	R5875 A C 1B	TL201 A C 2A
C1411 A C 2B	C5826 A C 1D	D6001 B C 3B	R1406 A C 2B	R4822 A C 3D	R5876 A C 2D	TL202 A C 1A
C1412 A C 3B	C5827 A C 1D	D6101 B C 3B	R1407 A C 2B	R4823 A C 3D	R5877 A C 1D	TL203 A C 1B
C1413 A C 3B	C5828 A C 1D	D6102 B C 2B	R1408 A C 2B	R4824 A C 3D	R5881 A C 2C	TL204 A C 2B
C1414 A C 3B	C5829 A C 2D	D6103 B C 2C	R1409 A C 2B	R4825 A C 2D	R5882 A C 1C	TL1401 A C 3B
C1415 A C 3B	C5830 A C 2D	D6104 B C 2C	R1410 A C 2B	R4826 A C 2D	R5883 A C 1C	TL1402 A C 3B
C1416 A C 3B	C5831 A C 2D	D6105 B C 3C	R1411 A C 3B	R4827 A C 3D	R5884 A C 1C	TL1403 A C 3B
C1417 A C 2B	C5832 A C 2D		R1412 A C 3B	R4828 A C 3D	R5885 A C 2C	TL1404 A C 2B
C1418 A C 2B	C5833 A C 2D	IC	R1413 A C 3B	R4829 A C 3D	R5886 A C 2C	TL1405 A C 2B
C2201 B C 1D	C5834 A C 2A	IC201 B C 1B	R1414 A C 3B	R4830 A C 3D	R5887 A C 2C	TL1406 A C 3B
C2202 B C 2D	C5835 A C 2B	IC1301 B C 1A	R1415 A C 2B	R4831 A C 3D	R5888 A C 2C	TL1407 A C 2B
C2203 B C 2D	C5836 A C 1B	IC1401 A C 2B	R1416 A C 2B	R4833 A C 3D	R5889 A C 1D	TL1412 A C 2B
C2204 B C 2D	C5837 A C 1B	IC2201 B C 1D	R1417 A C 2B	R4836 A C 3D	R5890 A C 1D	TL1413 A C 2B
C2205 B C 2D	C5901 B C 2D	IC3101 A C 3C	R1418 A C 2B	R4837 A C 3D	R5891 A C 1D	TL1414 A C 2B
C2206 B C 2D	C5902 B C 2D	IC4802 A C 3D	R1419 A C 2B	R4839 A C 2D	R5892 A C 1D	TL1415 A C 2B
C2207 B C 1D	C5903 B C 2D	IC4803 A C 3D	R1420 A C 2B	R4840 A C 2D	R5893 A C 1D	TL1416 A C 2B
C2208 B C 2D	C5904 B C 2D	IC4804 A C 3D	R1421 A C 2B	R4841 A C 3D	R5894 A C 1E	TL1417 A C 2B
C2209 B C 1D	C5905 B C 2D	IC4807 A C 2D	R1422 A C 2B	R4842 A C 2D	R5895 A C 1E	TL1418 A C 2B
C2210 B C 1D	C5906 B C 2D	IC4851 A C 3C	R1423 A C 3C	R4843 A C 3D	R5896 A C 1D	TL1419 A C 2B
C2211 B C 1D	C5907 B C 2D	IC5801 A C 1C	R1424 A C 2B	R4844 A C 3D	R5897 A C 1D	TL1421 A C 2B
C2212 B C 1D	C5908 B C 2D	IC5802 A C 1D	R1425 A C 2B	R4845 A C 3D	R5898 A C 1D	TL1424 A C 2B
C2213 B C 1D	C5909 B C 2D	IC5803 A C 2C	R1426 A C 2B	R4846 A C 3D	R5901 B C 2D	TL1425 A C 2B
C2214 B C 1D	C5910 B C 2D	IC5804 A C 2C	R1427 A C 2B	R4847 A C 3D	R5902 B C 2D	TL1426 A C 2B
C2215 B C 1D	C5911 B C 2D	IC5805 A C 1D	R1428 A C 2B	R4849 A C 2D	R5903 B C 2D	TL4801 A C 3D
C2216 B C 1D	C5912 B C 2D	IC5806 A C 2D	R1429 A C 2B	R4850 A C 3D	R5904 B C 2D	TL5800 A C 1E
C2217 B C 1D	C6001 B C 2B	IC5901 B C 2D	R1430 A C 2B	R4852 A C 3C	R5905 B C 2D	TL5801 A C 1E
C2218 B C 1D	C6002 B C 2B	IC6001 B C 2B	R1431 A C 2B	R4854 A C 3C	R5906 B C 2D	TL5802 A C 1E
C2219 B C 1D	C6003 B C 2B	IC6002 B C 3B	R1432 A C 2B	R4855 A C 3C	R5907 B C 2D	TL5803 A C 1E
C2220 B C 1D	C6005 B C 2B	IC6101 B C 3B	R1433 A C 2B	R4856 A C 3C	R5908 B C 2D	TL5804 A C 2C
C2221 B C 1D	C6006 B C 2B	IC6102 B C 2C	R1434 A C 2C	R4857 A C 3C	R5909 B C 2D	TL5805 A C 1C
C2222 B C 1D	C6007 B C 3B	IC6103 B C 2C	R1435 A C 2C	R4858 A C 3C	R5910 B C 2D	TM1 A C 1A
C2223 B C 2D	C6008 B C 3B		R1437 A C 1B	R4859 A C 3C	R5911 B C 2D	TM2 A C 7A
C2224 B C 2D	C6009 B C 3B	COIL	R1438 A C 1B	R4860 A C 3C	R5912 B C 2D	TM3 A C 6E
C2225 B C 2D	C6101 B C 1A	L1301 B C 1A	R2201 B C 1D	R4862 A C 3C	R6001 B C 2B	TM4 A C 2E
C2226 B C 2D	C6102 B C 3B	L1401 A C 2B	R2202 B C 2D	R4863 A C 3C	R6002 B C 2B	X201 B C 1B
C2227 B C 2D	C6103 B C 3B	L2401 B C 2D	R2203 B C 2D	R4864 A C 3C	R6003 B C 2B	X1401 A C 3B
C2401 B C 2D	C6104 B C 3B	L2402 B C 2C	R2204 B C 2D	R4865 A C 3C	R6004 B C 2B	
C2402 B C 2D	C6105 B C 3B	L2601 B C 2D	R2205 B C 2D	R4866 A C 3C	R6005 B C 2B	
C2403 B C 2C	C6106 B C 3B	L2602 B C 1D	R2206 B C 1D	R4867 A C 3C	R6006 B C 2B	
C2404 B C 1C	C6107 B C 3B	L2603 B C 1D	R2207 B C 1D	R4868 A C 3C	R6007 B C 2B	
C2405 B C 2D	C6108 B C 3B	L2604 B C 1D	R2208 B C 1C	R4870 A C 3C	R6008 B C 3B	
C2406 B C 1D	C6109 B C 3B	L3101 A C 3C	R2209 B C 1C	R4871 A C 3C	R6010 B C 3B	
C2601 B C 1D	C6110 B C 3B	L4802 A C 2C	R2210 B C 1C	R4872 A C 3C	R6011 B C 2B	
C2602 B C 1D	C6111 B C 3B	L4851 A C 2C	R2211 B C 1C	R4874 A C 2D	R6012 B C 2B	
C2603 B C 1D	C6112 B C 3B	L4852 A C 2C	R2212 B C 1D	R5801 A C 2C	R6013 B C 2B	
C2604 B C 1D	C6113 B C 3B	L4853 A C 2D	R2213 B C 1D	R5802 A C 1C	R6101 B C 3B	
C2605 B C 1D	C6114 B C 3B	L5801 A C 1C	R2214 B C 2D	R5803 A C 2C	R6102 B C 3B	
C2606 B C 1D	C6115 B C 3B	L5802 A C 2C	R2215 B C 2D	R5804 A C 2C	R6103 B C 3B	
C2607 B C 1D	C6116 B C 3B	L5901 B C 2D	R2216 B C 2D	R5805 A C 2C	R6104 B C 3B	
C2608 B C 1D	C6117 B C 3B	L6001 B C 2B	R2217 B C 1D	R5806 A C 1C	R6105 B C 3B	
C2609 B C 1D	C6118 B C 3B	L6101 B C 2B	R2219 A C 1A	R5807 A C 1C	R6106 B C 3B	
C2610 B C 1D	C6119 B C 3C	L6102 B C 2A	R2220 A C 2B	R5808 A C 1C	R6107 B C 3B	
C2611 B C 1D	C6120 B C 3C	L6103 B C 2C	R2221 A C 1B	R5809 A C 1C	R6108 B C 3B	
C2612 B C 1D	C6121 B C 3C	L6104 B C 3C	R2225 B C 1D	R5810 A C 1C	R6109 B C 3B	
C2613 B C 1D	C6122 B C 3C	L6105 B C 3D	R2226 B C 1D	R5811 A C 1D	R6110 B C 3B	
C2614 B C 1D	C6123 B C 3C	L6106 B C 3D	R2227 B C 1D	R5812 A C 1D	R6111 B C 3B	
C2615 B C 1D	C6124 B C 3C	L6107 B C 2D	R2228 B C 1D	R5813 A C 1C	R6112 B C 3B	
C2616 B C 1D	C6125 B C 2C	L6108 B C 2D	R2229 B C 2D	R5814 A C 1C	R6113 B C 3B	
C2617 B C 1E	C6126 B C 2C	L6109 B C 2C	R2230 B C 2D	R5815 A C 1D	R6114 B C 3B	
C2618 B C 1E	C6127 B C 2C	L6110 B C 3C	R2231 B C 1D	R5816 A C 2D	R6115 B C 3B	
C2619 B C 1E	C6128 B C 2C	L6111 B C 2B	R2232 B C 1D	R5817 A C 1D	R6116 B C 3B	
C2620 B C 1D	C6129 B C 3C	L7301 A C 1B	R2233 B C 1D	R5818 A C 2C	R6117 B C 3C	
C3101 A C 3C	C6130 B C 3C	L7302 A C 1C	R2234 B C 1D	R5819 A C 2C	R6118 B C 3B	
C3102 A C 3C	C6131 B C 3D	L7303 A C 1B	R2401 B C 2D	R5820 A C 2C	R6119 B C 3B	
C4803 A C 2C	C6132 B C 3D	L7304 A C 1C	R2402 B C 1C	R5821 A C 2C	R6120 B C 3B	
C4804 A C 2C	C6133 B C 3D		R2403 B C 1C	R5822 A C 2C	R6121 B C 3C	
C4806 A C 3D	C6134 B C 3D	TRANSISTOR	R2404 B C 2C	R5823 A C 2C	R6122 B C 3C	
C4807 A C 3D	C6135 B C 3D	Q1401 A C 2B	R2405 B C 2C	R5824 A C 2C	R6123 B C 3C	
C4808 A C 3D	C6136 B C 3D	Q1402 A C 2B	R2406 B C 2C	R5825 A C 2C	R6124 B C 3C	
C4809 A C 3D	C6137 B C 3D	Q1403 A C 2C	R2407 B C 1D	R5826 A C 1D	R6125 B C 3C	
C4810 A C 2D	C6138 B C 2D	Q2201 B C 2D	R2408 B C 2D	R5827 A C 1D	R6126 B C 3C	
C4811 A C 3D	C6139 B C 2D	Q2202 B C 1D	R2409 B C 2D	R5828 A C 2D	R6127 B C 3C	
C4812 A C 3D	C6140 B C 2D	Q2401 B C 2D	R2601 B C 1D	R5829 A C 2D	R6128 B C 3C	
C4813 A C 3D	C6141 B C 2C	Q2402 B C 2C	R2602 B C 1D	R5830 A C 2D	R6129 B C 3C	
C4814 A C 3D	C6142 B C 2B	Q2403 B C 1C	R2603 B C 1D	R5831 A C 1D	R6130 B C 3C	
C4815 A C 3D	C6143 B C 2C	Q2601 B C 1E	R2604 B C 1D	R5832 A C 1D	R6131 B C 3D	
C4819 A C 3D	C6144 B C 2B	Q2602 B C 1E	R2605 B C 1D	R5833 A C 1D	R6132 B C 3D	
C4820 A C 3D	C6145 B C 2C	Q2701 A C 3B	R2606 B C 1D	R5834 A C 1D	R6133 B C 3C	
C4822 A C 3D	C6146 B C 3C	Q2702 A C 3B	R2607 B C 1D	R5835 A C 1D	R6134 B C 3D	
C4823 A C 3D	C6147 B C 3C	Q4801 A C 3D	R2608 B C 1D	R5836 A C 1D	R6135 B C 3D	
C4851 A C 3C	C6148 B C 2C	Q4802 A C 2D	R2609 B C 1D	R5837 A C 1D	R6136 B C 3D	
C4852 A C 3C	C6149 B C 2B	Q4803 A C 3D	R2610 B C 1D	R5838 A C 1D	R6137 B C 2C	
C4853 A C 2C	C6150 B C 2B	Q4804 A C 3D	R2611 A C 1E	R5839 A C 1D	R6138 B C 2C	
C4854 A C 2C	C7301 A C 1B	Q4805 A C 3D	R2612 B C 1E	R5840 A C 1D	R6139 B C 3C	
C4855 A C 3C	C7302 A C 1B	Q4806 A C 3D	R2613 B C 1D	R5841 A C 1D	R6140 B C 2C	
C4858 A C 3C	C7303 A C 1C	Q4851 A C 3D	R2614 B C 1D	R5842 A C 1D	R6141 B C 2C	
C4859 A C 3C	C7304 A C 1B	Q5801 A C 2D	R2615 B C 1E	R5843 A C 1D	R6142 B C 2C	
C4860 A C 3C	C7305 A C 1C	Q6001 A C 2B	R2616 B C 1E	R5844 A C 2D	R6143 B C 2C	
C4861 A C 3C		Q6002 B C 2B	R2617 B C 1E	R5845 A C 2D	R6144 B C 2C	
C4862 A C 3C	CONNECTOR	Q6003 B C 2B	R2618 B C 1D	R5846 A C 2D	R6145 B C 2C	
C4863 A C 3C	CN201 A C 1B	Q6004 B C 2B	R2701 A C 3B	R5847 A C 2D	R6146 B C 3B	
C4864 A C 2D	CN202 A C 3D	Q6005 B C 3B	R2702 A C 3B	R5848 A C 2D	R6147 B C 2B	
C4865 A C 2D	CN203 A C 1E	Q6101 B C 3C	R2703 A C 3B	R5849 A C 2D	R7301 A C 1C	
C4866 A C 3C	CN205 A C 2D	Q6102 B C 3C	R2704 A C 3A	R5850 A C 2D	R7302 A C 1B	
C5801 A C 1C	CN206 A C 1E	Q6103 B C 3D	R2705 A C 3B	R5851 A C 2D	R7303 A C 1C	
C5802 A C 1C	CN207 A C 1D	Q6104 B C 3D	R2706 A C 3B	R5852 A C 2D	R7304 A C 1C	
C5803 A C 2C	CN208 A C 1C	Q6105 B C 2D	R2707 A C 3B	R5853 A C 2D	R7305 A C 1B	
C5804 A C 1C	CN209 A C 1B	Q6106 B C 2C	R2708 A C 3A	R5854 A C 2D	R7306 A C 1C	
C5805 A C 1C	CN210 A C 1E	Q6107 B C 3C	R2709 A C 3B	R5855 A C 1D	R7308 A C 1C	
C5806 A C 1C	CN211 A C 2E	Q7301 A C 1C	R2710 A C 3B	R5856 A C 2D	R7310 A C 1C	

■ ANALOG CIRCUIT BOARD

<02> ANALOG
YB 10408-01-01

FOIL SIDE

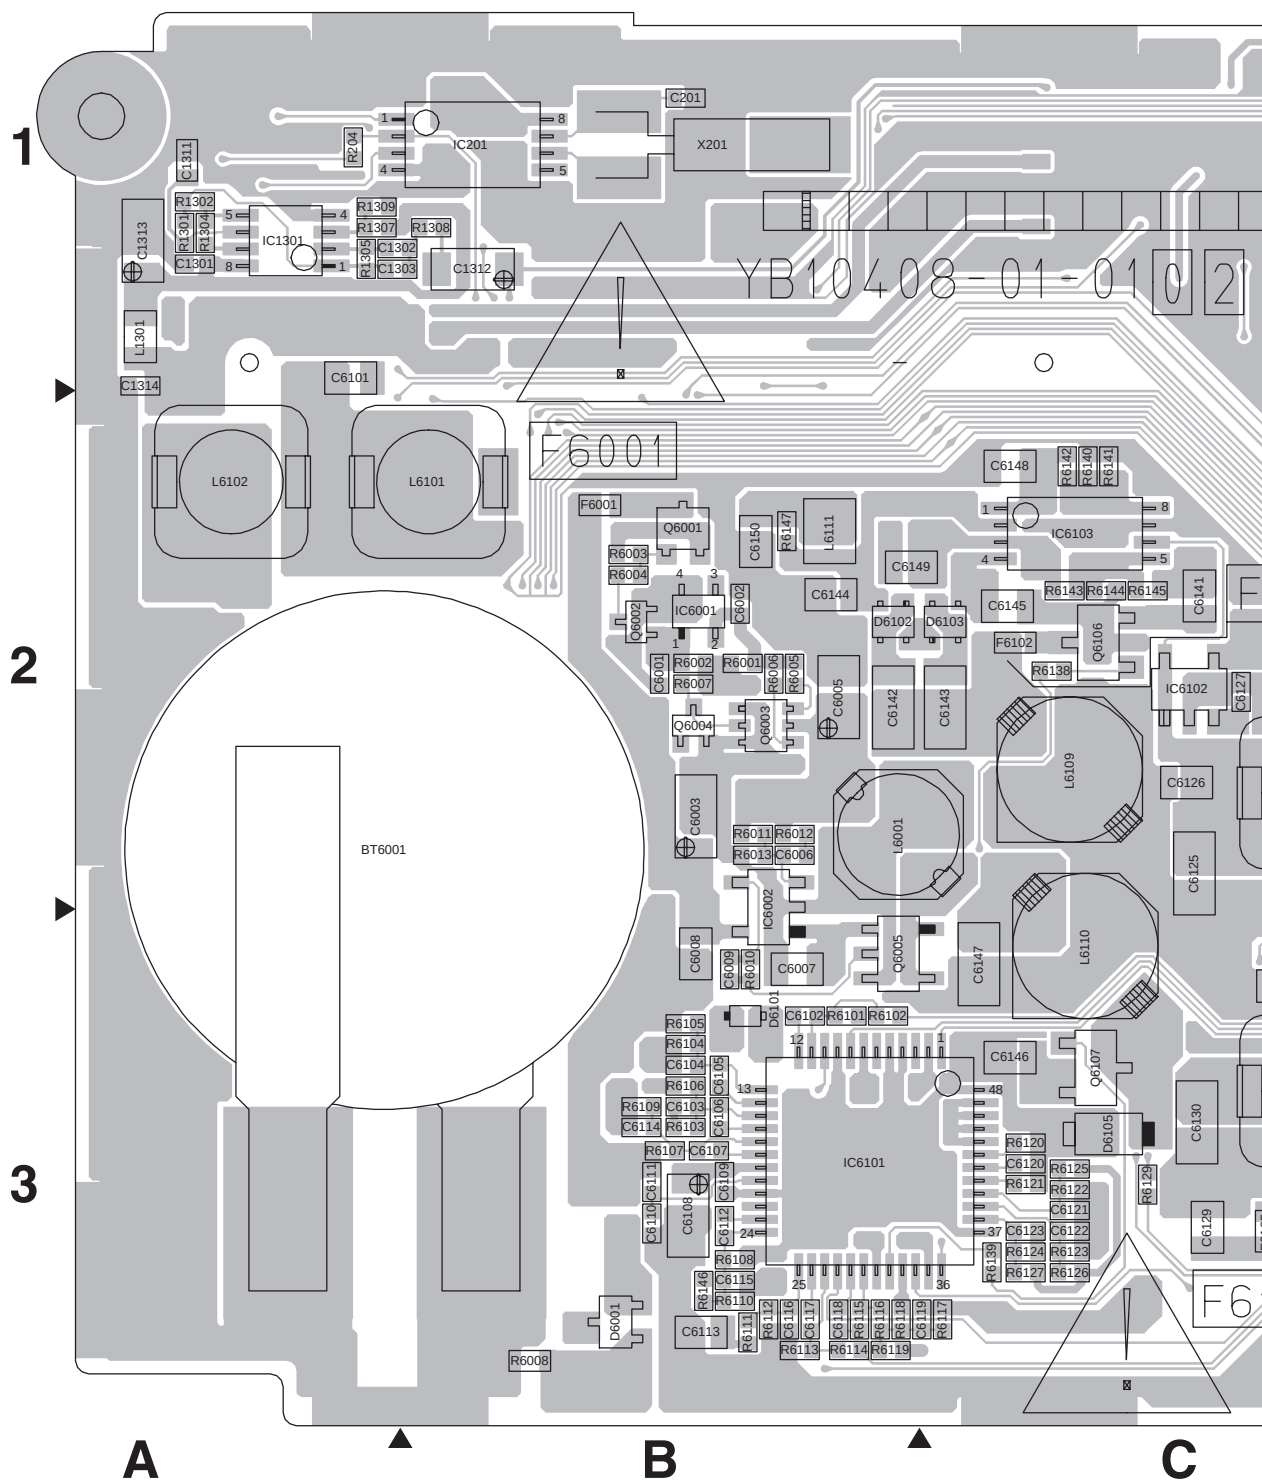




• ATTENTION:
POUR UNE PROTECTION PERMANENTE
CONTRE LES RISQUE D'INCENDIE,
REMPLACER LES FUSIBLES PAR UN AUTRE
DE MEME TYPE ET DE MEME TENSION.

■ ANALOG CIRCUIT BOARD

COMPONENT 3

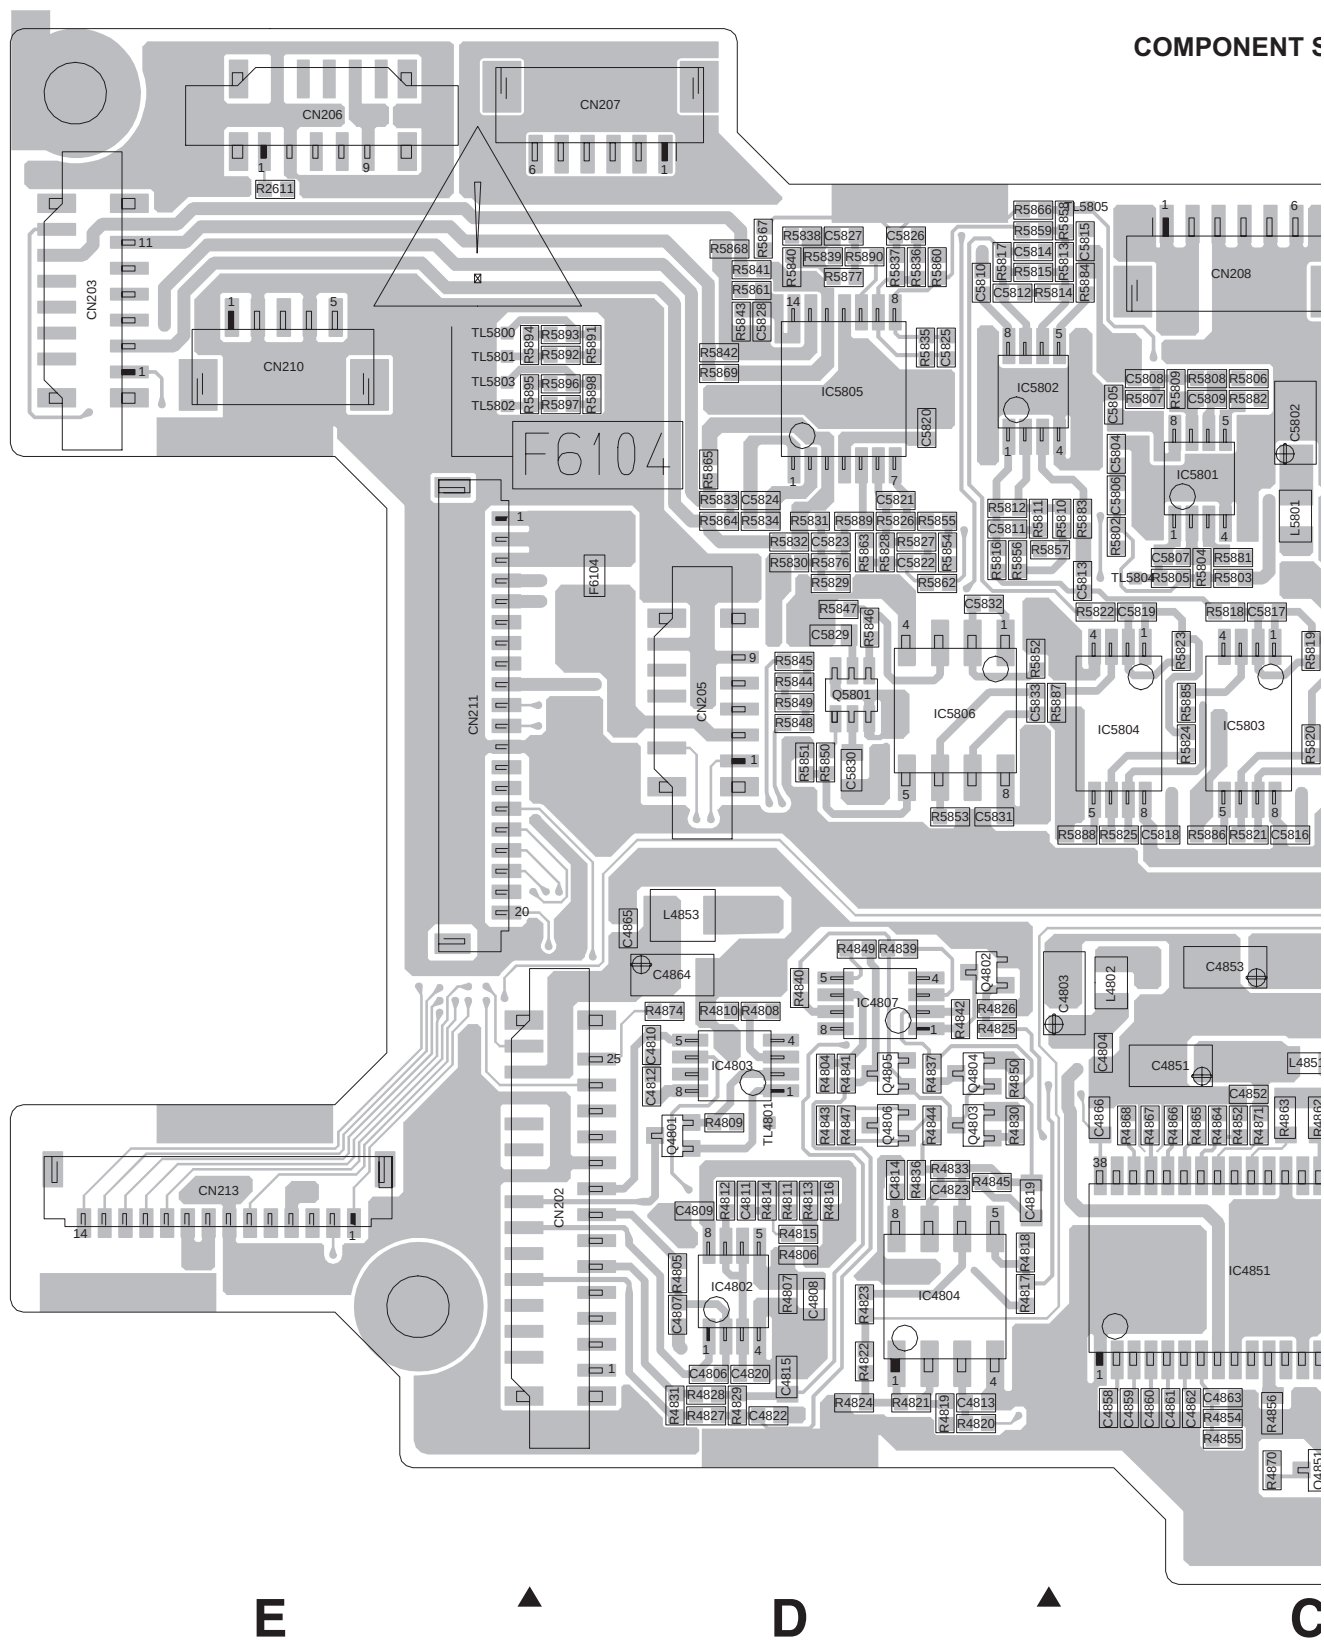




• CAUTION:
FOR CONTINUED PROTECTION AGAINST
FIRE HAZARD, REPLACE ONLY WITH SAME
TYPE AND RATED FUSE(S).


• ATTENTION:
POUR UNE PROTECTION PERMANENTE
CONTRE LES RISQUES D'INCENDIE,
REMPLACER LES FUSIBLES PAR UN AUTRE
DE MEME TYPE ET DE MEME TENSION.

ONENT SIDE(A)


<02> ANALOG
YB 10408-01-01

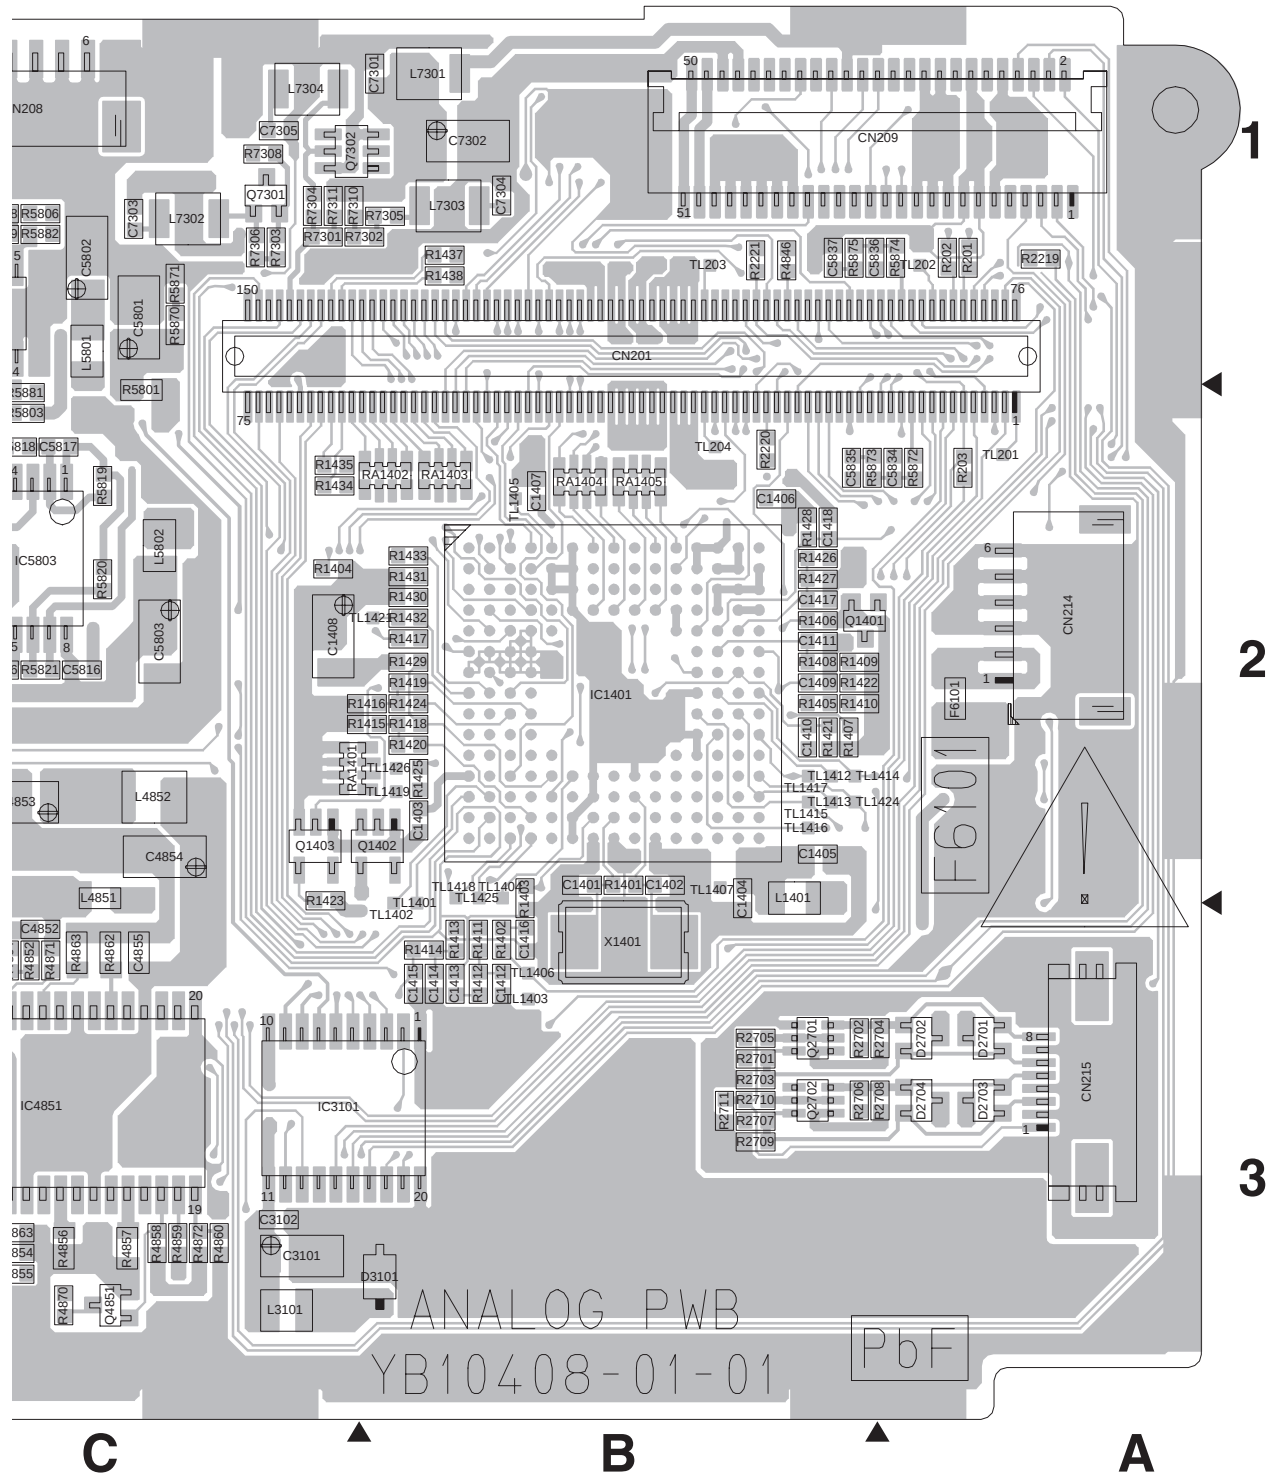


■ CCD CIRCUIT BOARD

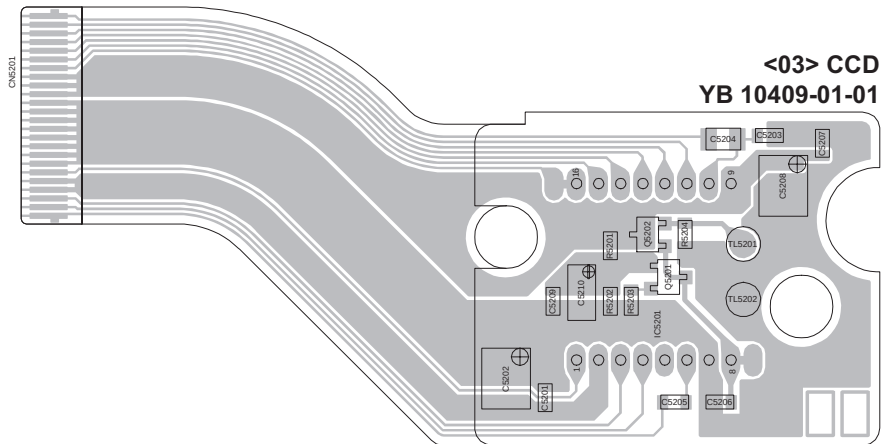

■ CONNECT CIRCUIT BOARD

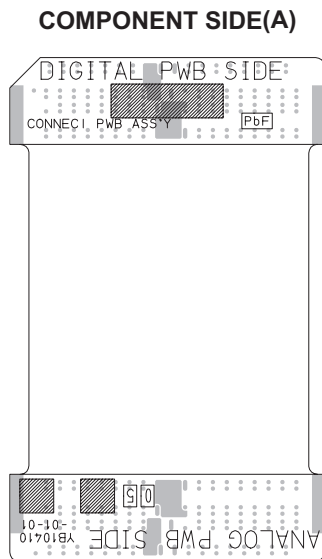

<05> CONNECT
YB 10410-01-01

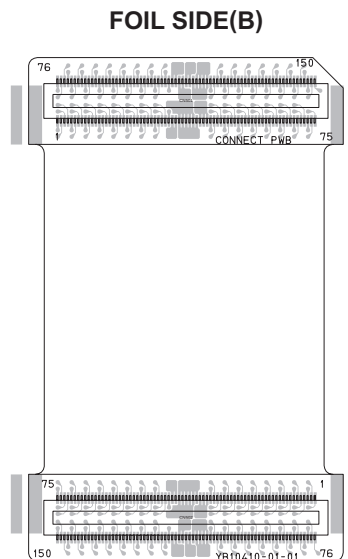


<05> CONNECT
YB 10410-01-01

COMPONENT PARTS LOCATION GUIDE <PREMDA> YB10411-01-01


REF.NO.	LOCATION	REF.NO.	LOCATION	REF.NO.	LOCATION	REF.NO.	LOCATION	REF.NO.	LOCATION	REF.NO.	LOCATION	REF.NO.	LOCATION	REF.NO.	LOCATION
CAPACITOR		C1626	A C 3B	C3507	A C 2B	C3526	A C 2B	CN411	A C 2A	C301		R1613	A C 4C	R1637	A C 4B
C1601	A C 1B	C1627	A C 3B	C3508	A C 2C	C3527	A C 3B	CN412	A C 2A	L501	A C 2B	R1614	A C 3C	R1643	A C 2C
C1602	A C 3B	C1628	A C 3B	C3509	A C 2B	C3528	A C 2B	CN413	A C 3A	L502	A C 2A	R1615	A C 3C	R1701	A C 3A
C1603	A C 3B	C1629	A C 4B	C3510	A C 2B	C3529	A C 3B	CN414	A C 3A	L503	A C 2A	R1616	A C 4B	R1702	A C 3A
C1605	A C 3B	C1630	A C 4B	C3511	A C 3C	C3530	A C 2B	CN415	A C 1A	L505	A C 2A	R1617	A C 4B	R1703	A C 3A
C1606	A C 3B	C1632	A C 3A	C3512	A C 3B	C3531	A C 3B			L504	A C 2A	R1618	A C 4B	R1704	A C 4A
C1607	A C 4B	C1633	A C 4B	C3513	A C 3B	C3532	A C 3B	DIODE				R1620	A C 3B	R1705	A C 4A
C1614	A C 3C	C1641	A C 3A	C3514	A C 3B			D1602	A C 1B	TRANSISTOR		R1621	A C 3B	R1706	A C 3A
C1615	A C 3B	C1643	A C 3C	C3515	A C 3B	CONNECTOR		D1603	A C 4B	Q1601	A C 4B	R1622	A C 4C	R1707	A C 3A
C1616	A C 3B	C1644	A C 3C	C3516	A C 3B	CN401	A C 4A	D1604	A C 4B	Q3501	A C 2B	R1624	A C 3C	R1708	A C 3A
C1617	A C 3B	C1645	A C 3A	C3517	A C 3B	CN402	A C 2C					R1625	A C 3C	R1709	A C 3A
C1618	A C 3B	C1701	A C 3A	C3518	A C 2B	CN403	A C 1B	IC				R1626	A C 4B	R1710	A C 3A
C1619	A C 3B	C1702	A C 3A	C3519	A C 2B	CN404	A C 3C	IC1601	A C 3B	R1601	A C 3B	R1630	A C 4B	R1711	A C 3A
C1620	A C 3B	C3501	A C 2B	C3520	A C 2B	CN405	A C 4C	IC1701	A C 3A	R1602	A C 3B	R1631	A C 4B	R1712	A C 3A
C1621	A C 4C	C3502	A C 2B	C3521	A C 2B	CN406	A C 4C	IC1702	A C 3A	R1603	A C 3B	R1632	A C 3B	R3501	A C 2B
C1622	A C 4B	C3503	A C 2B	C3522	A C 2B	CN407	A C 1B	IC3501	A C 2B	R1604	A C 3B	R1633	A C 3B	R3502	A C 2B
C1623	A C 4B	C3504	A C 2B	C3523	A C 2B	CN408	A C 1B	IC3502	A C 2B	R1610	A C 4C	R1634	A C 3B	R3503	A C 2C
C1624	A C 3B	C3505	A C 2B	C3524	A C 2B	CN409	A C 4A			R1611	A C 4C	R1635	A C 4B	R3504	A C 2C
C1625	A C 3B	C3506	A C 2B	C3525	A C 2B	CN410	A C 2A			R1612	A C 4C	R1636	A C 4B	R3505	A C 2C

■ PREMDA CIRCUIT BOARD

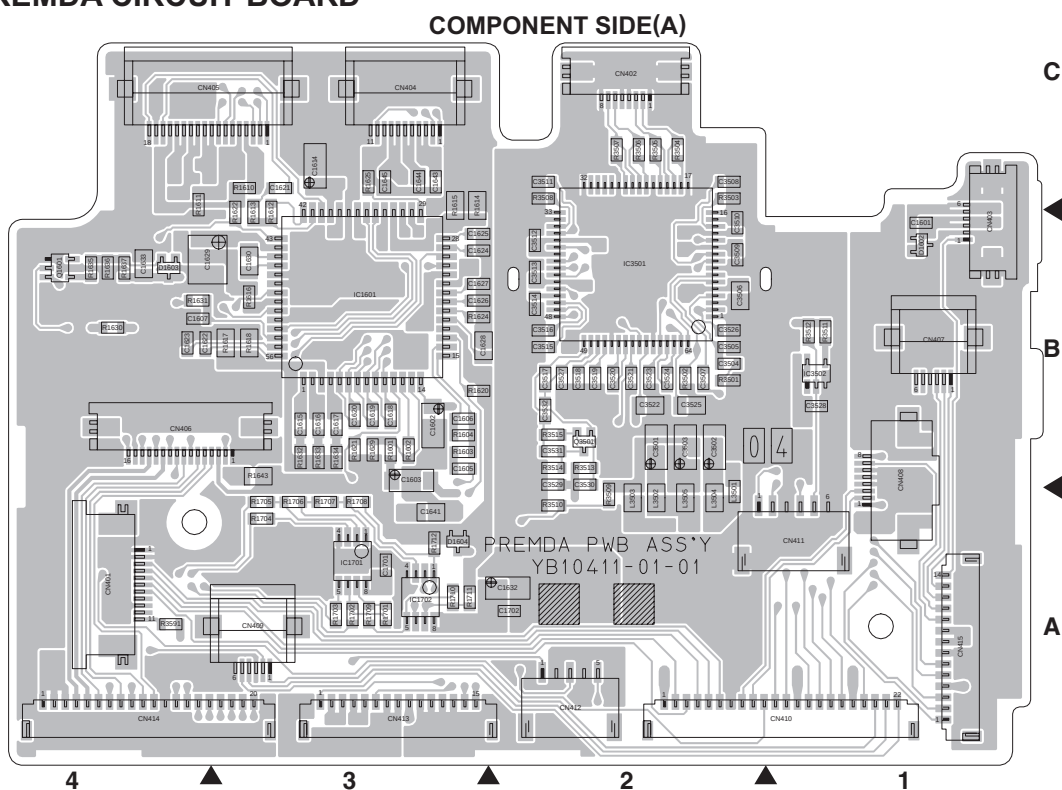



<04> PREMDA
YB 10411-01-01

■ PREMDA CIRCUIT BOARD

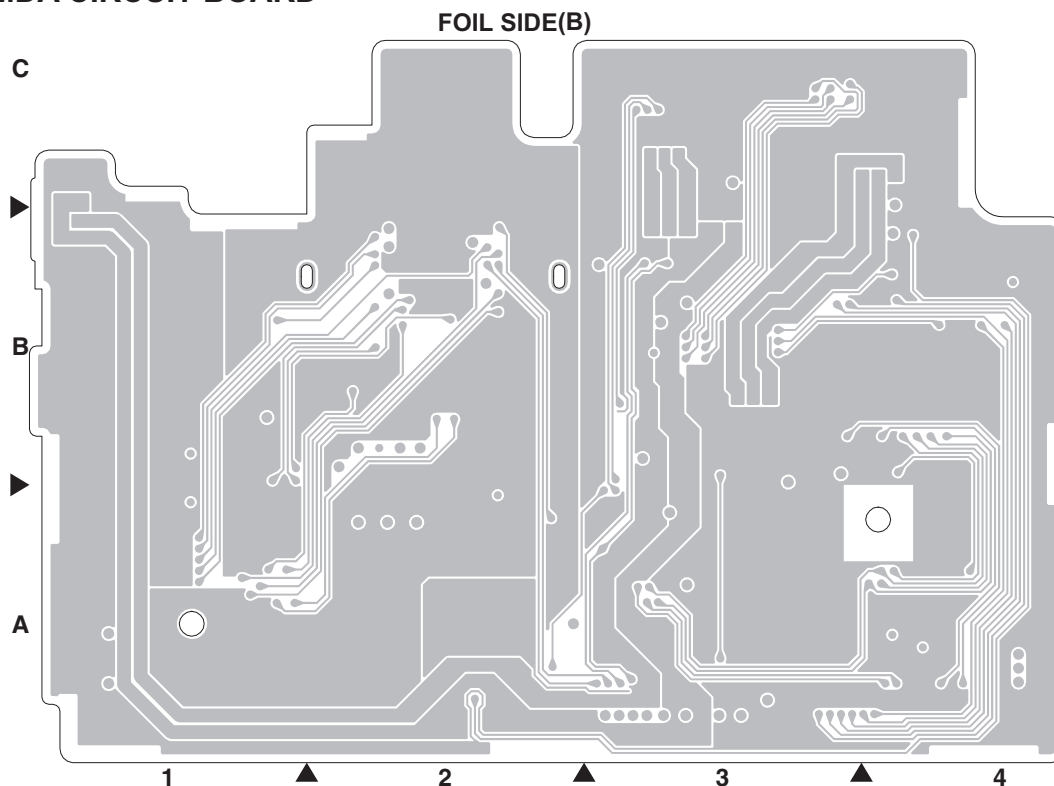

<04> PREMDA
YB 10411-01-01

■ MON/OPE CIRCUIT BOARD

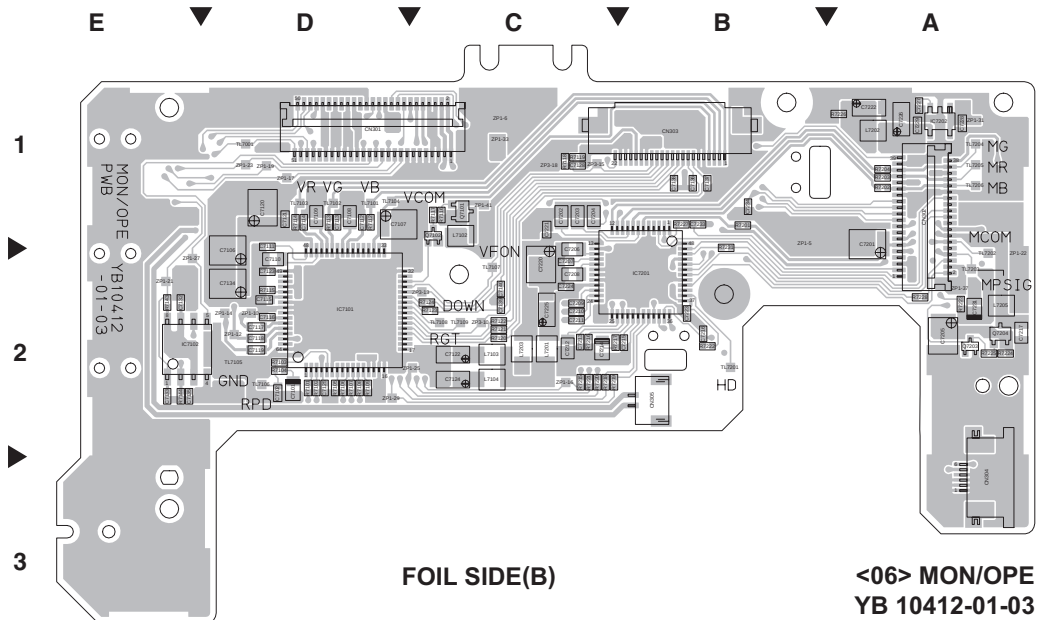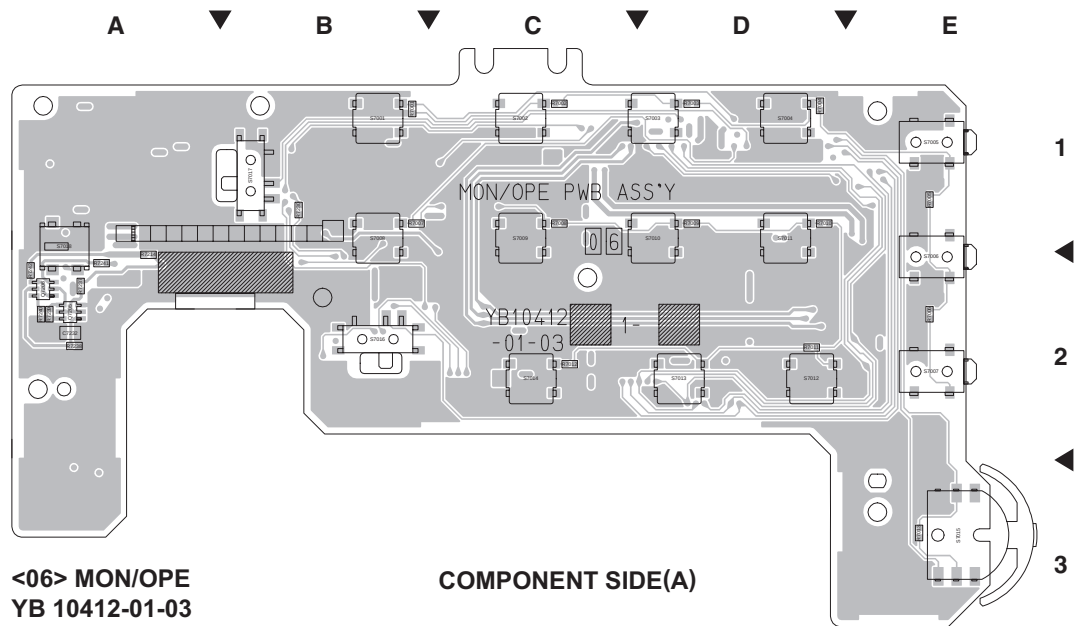

COMPONENT PARTS LOCATION GUIDE <MON/OPE> YB10412-01-03

REF.NO.	LOCATION	REF.NO.	LOCATION	REF.NO.	LOCATION	REF.NO.	LOCATION	REF.NO.	LOCATION	REF.NO.	LOCATION	REF.NO.	LOCATION	REF.NO.	LOCATION	REF.NO.	LOCATION	REF.NO.	LOCATION
CAPACITOR																			
C7101	A C 2D	C7128	A C 1C	C7214	A C 2C	CN304	A C 3A	Q7205	B C 2A	R7107	A C 2D	R7215	A C 2C	OTHER	TL7103	A C 1D	ZP1-21	A C 2E	
C7102	A C 2D	C7132	A C 2E	C7215	A C 2B	CN305	A C 2B	Q7206	B C 2A	R7108	A C 2D	R7216	A C 2C		TL7104	A C 1D	ZP1-22	A C 2A	
C7106	A C 2D	C7133	A C 2E	C7216	A C 2B					R7109	A C 2D	R7217	A C 2C		TL7105	A C 2D	ZP1-23	A C 1D	
C7107	A C 1D	C7134	A C 2E	C7217	A C 2A	IC	IC7101	A C 2D	RESISTOR	R7112	A C 1D	R7218	A C 2C		TL7106	A C 2D	ZP1-25	A C 2C	
C7108	A C 1D	C7136	A C 1B	C7220	A C 2C		IC7102	A C 2E		R7113	A C 1D	R7219	A C 2C		TL7107	A C 2C	ZP1-27	A C 2E	
C7109	A C 1D	C7137	A C 1B	C7221	A C 1C		IC7201	A C 2B		R7114	A C 1D	R7220	A C 2C		TL7108	A C 2C	ZP1-29	A C 2D	
C7110	A C 2D	C7138	A C 1B	C7222	A C 1A	COIL	IC7202	A C 1A		R7115	A C 2D	R7221	A C 2C		TL7109	A C 2C	ZP1-31	A C 1A	
C7111	A C 1D	C7139	A C 2C	C7223	A C 2B					R7116	A C 1C	R7222	A C 2B		TL7201	A C 2B	ZP1-33	A C 1C	
C7112	A C 1D	C7140	A C 2C	C7224	A C 2C		L7102	A C 1C		R7117	A C 1C	R7223	A C 2A		TL7202	A C 2A	ZP1-37	A C 2A	
C7113	A C 1D	C7201	A C 1A	C7225	A C 2C	TRANSISTOR	L7103	A C 2C		R7118	A C 1C	R7224	A C 2A		TL7203	A C 2A	ZP1-41	A C 1C	
C7114	A C 1D	C7202	A C 1C	C7226	A C 1A		L7104	A C 2C	CONNECTOR	R7119	A C 1C	R7225	A C 2A		TL7204	A C 1A	ZP3-10	A C 2C	
C7115	A C 2D	C7203	A C 1C	C7227	A C 1A		L7201	A C 2C		R7120	A C 2C	R7226	A C 1A	OTHER	TL7205	A C 1A	ZP3-13	A C 2C	
C7116	A C 2D	C7204	A C 1C	C7228	A C 1A	TRANSISTOR	L7202	A C 1A		R7121	A C 2C	R7227	A C 1B		TL7206	A C 1A	ZP3-15	A C 1C	
C7117	A C 2D	C7205	A C 2A	C7229	A C 1A		L7203	A C 2C		R7122	A C 2C	R7228	A C 2A		TM1	A C 4A	ZP3-18	A C 1C	
C7118	A C 2D	C7206	A C 2C	C7231	A C 2A	CONNECTOR	L7204	A C 2A		R7123	A C 2C	R7229	B C 1B		TM4	A C 4E			
C7119	A C 2D	C7207	A C 2C	C7232	B C 2A		L7205	A C 2C		R7124	A C 2C	R7231	A C 1B		TL7001	A C 1D	ZP1-16	A C 2C	
C7120	A C 1D	C7208	A C 2C	C7233	A C 1B	CONNECTOR	L7206	A C 2A		R7125	A C 2C	R7237	B C 2A		TL7101	A C 1D	ZP1-17	A C 1D	
C7121	A C 1D	C7209	A C 2C	C7234	A C 1B					R7126	A C 2D	R7238	B C 2A		TL7102	A C 1D	ZP1-19	A C 1D	
C7122	A C 2C	C7210	A C 2C							R7127	A C 2D	R7239	B C 2A						
C7123	A C 2D	C7211	A C 2C							R7128	A C 2D	R7240	B C 2A						
C7124	A C 2C	C7212	A C 2C							R7129	A C 2D	R7241	B C 2A						
C7125	A C 2D	C7213	A C 2C							R7130	A C 2D	R7242	B C 2A						

■ MON BL CIRCUIT BOARD




• CAUTION:
FOR CONTINUED PROTECTION AGAINST
FIRE HAZARD, REPLACE ONLY WITH SAME
TYPE AND RATED FUSE(S).

• ATTENTION:
POUR UNE PROTECTION PERMANENTE
CONTRE LES RISQUE D'INCENDE,
REMPLACER LES FUSIBLES PAR UN AUTRE
DE MEME TYPE ET DE MEME TENSION.


<08> MON BL
YB 10413-01-01

COMPONENT SIDE(A)

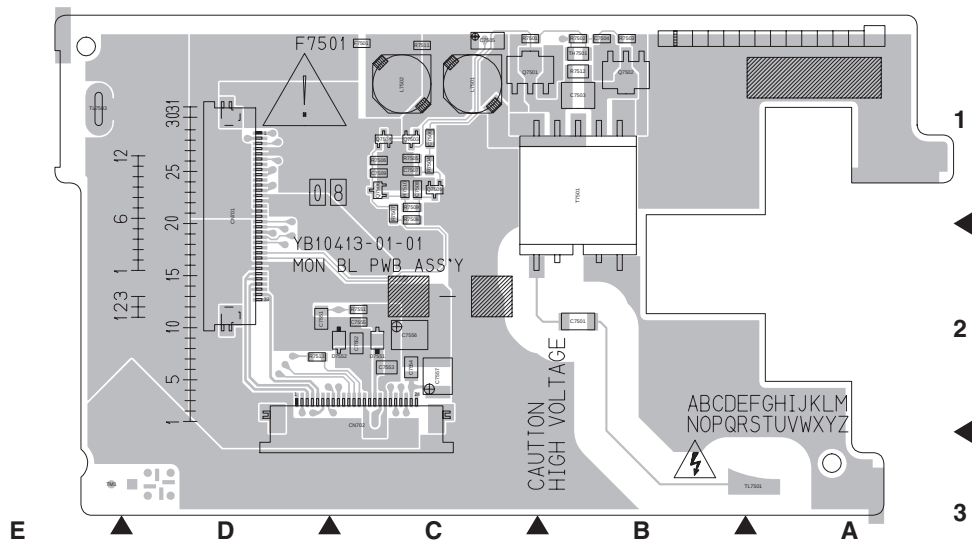

FOIL SIDE(B)

<08> MON BL
YB 10413-01-01

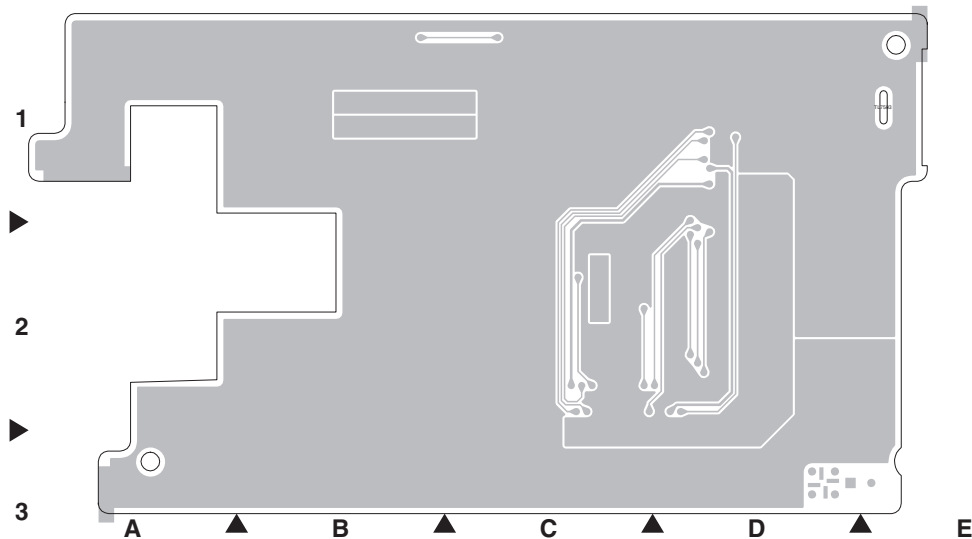


COMPONENT PARTS LOCATION GUIDE <MON BL> YB10413-01-01


REF.NO. LOCATION			REF.NO. LOCATION			REF.NO. LOCATION															
CAPACITOR																					
C7501	A	C 2B	D7552	A	C 2C	R7509	A	C 1C													
C7503	A	C 1B	COIL	L7501	A C 1C	R7510	A	C 1C													
C7504	A	C 1B				R7511	A	C 1C													
C7505	A	C 1C				R7512	A	C 1B													
C7506	A	C 1C				R7513	A	C 2D													
C7507	A	C 1C	TRANSISTOR	Q7501	A C 1C	F7501	A	C 1C													
C7508	A	C 1C							Q7502	A	C 1B										
C7509	A	C 1C							Q7503	A	C 1C										
C7551	A	C 2D							Q7504	A	C 1C										
C7552	A	C 2C							Q7505	A	C 1C										
C7553	A	C 2C							Q7506	A	C 1C										
C7554	A	C 2C	RESISTOR	R7501	A C 1C	R7502	A C 1B	R7503	A C 1B												
C7555	A	C 2C								CONNECTOR	CN701	A	C 2D								
C7556	A	C 2C												DIODE	D7551	A	C 2C				
C7557	A	C 2C																R7504	A C 1C		
																				R7505	A C 1C
			R7507	A C 1C																	
					R7508	A C 2C															
							R7509	A C 2C													
									R7510	A C 1C											
											R7511	A C 1C									
													R7512	A C 1B							
			R7513	A C 2D																	
					R7551	A C 2C															
							OTHER	P7501							A C 3D						
									T7501	A C 1B											
											TH7501	A C 1B									
													TL7501	A C 3A							
			TL7502	A C 2D																	
					TL7503	A D 1E															
							TM1	A C 3E													

■ SW CIRCUIT BOARD

COMPONENT SIDE(A)

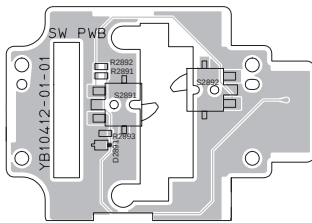


FOIL SIDE(B)

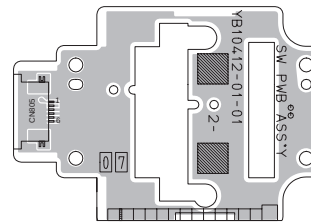


<07> SW
YB 10412-01-01

VF BL CIRCUIT BOARD

COMPONENT SIDE(A)

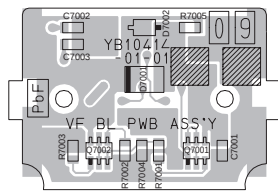


FOIL SIDE(B)

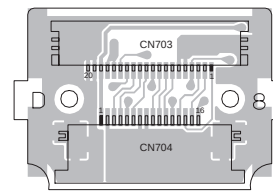


<09> VF BL
YB 10414-01-01

■ EJECT CIRCUIT BOARD

COMPONENT SIDE(A)

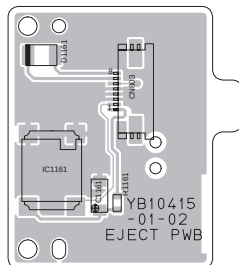


FOIL SIDE(B)

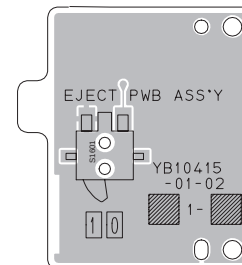


<10> EJECT
YB 10415-01-02

■ BOTTOM CIRCUIT BOARD

COMPONENT SIDE(A)

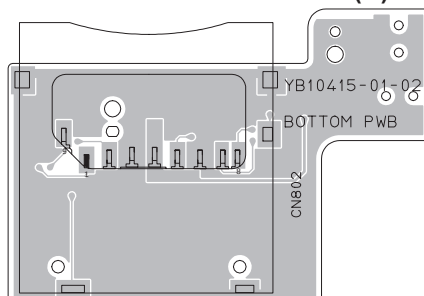


FOIL SIDE(B)

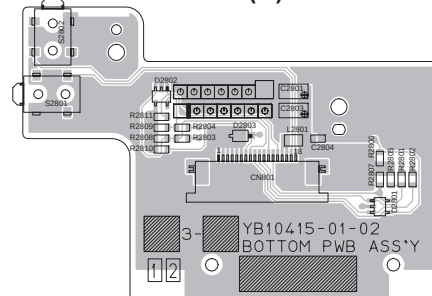


<12> BOTTOM
YB 10415-01-02


■ MIC/WB CIRCUIT BOARD

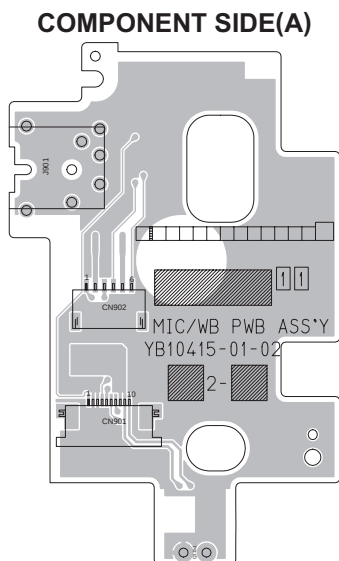


<11> MIC/WB
YB 10415-01-02

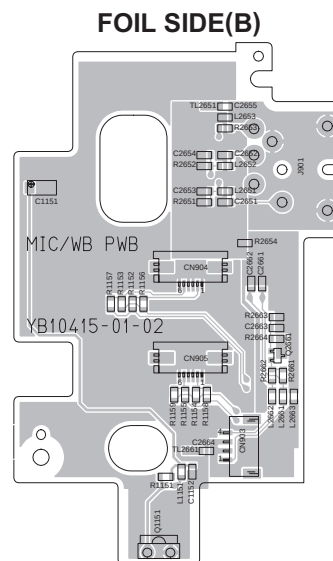


■ D4 CIRCUIT BOARD

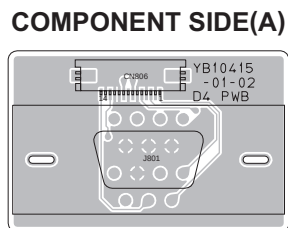


<13> D4
YB 10415-01-02

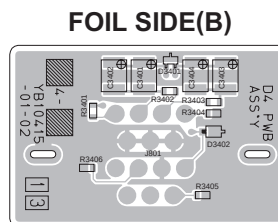


■ GYRO CIRCUIT BOARD

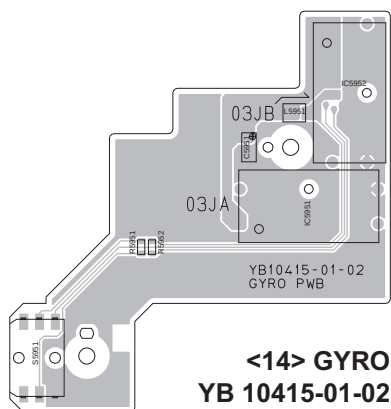


■ REAR CIRCUIT BOARD

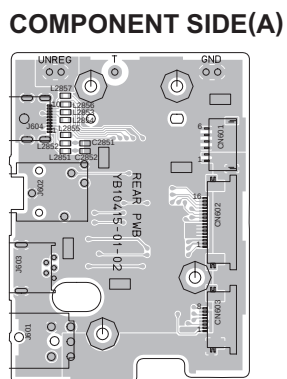


<15> REAR
YB 10415-01-02

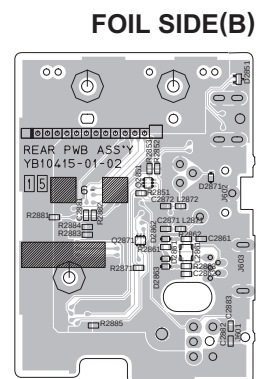



■ POWER SYSTEM BLOCK DIAGRAM

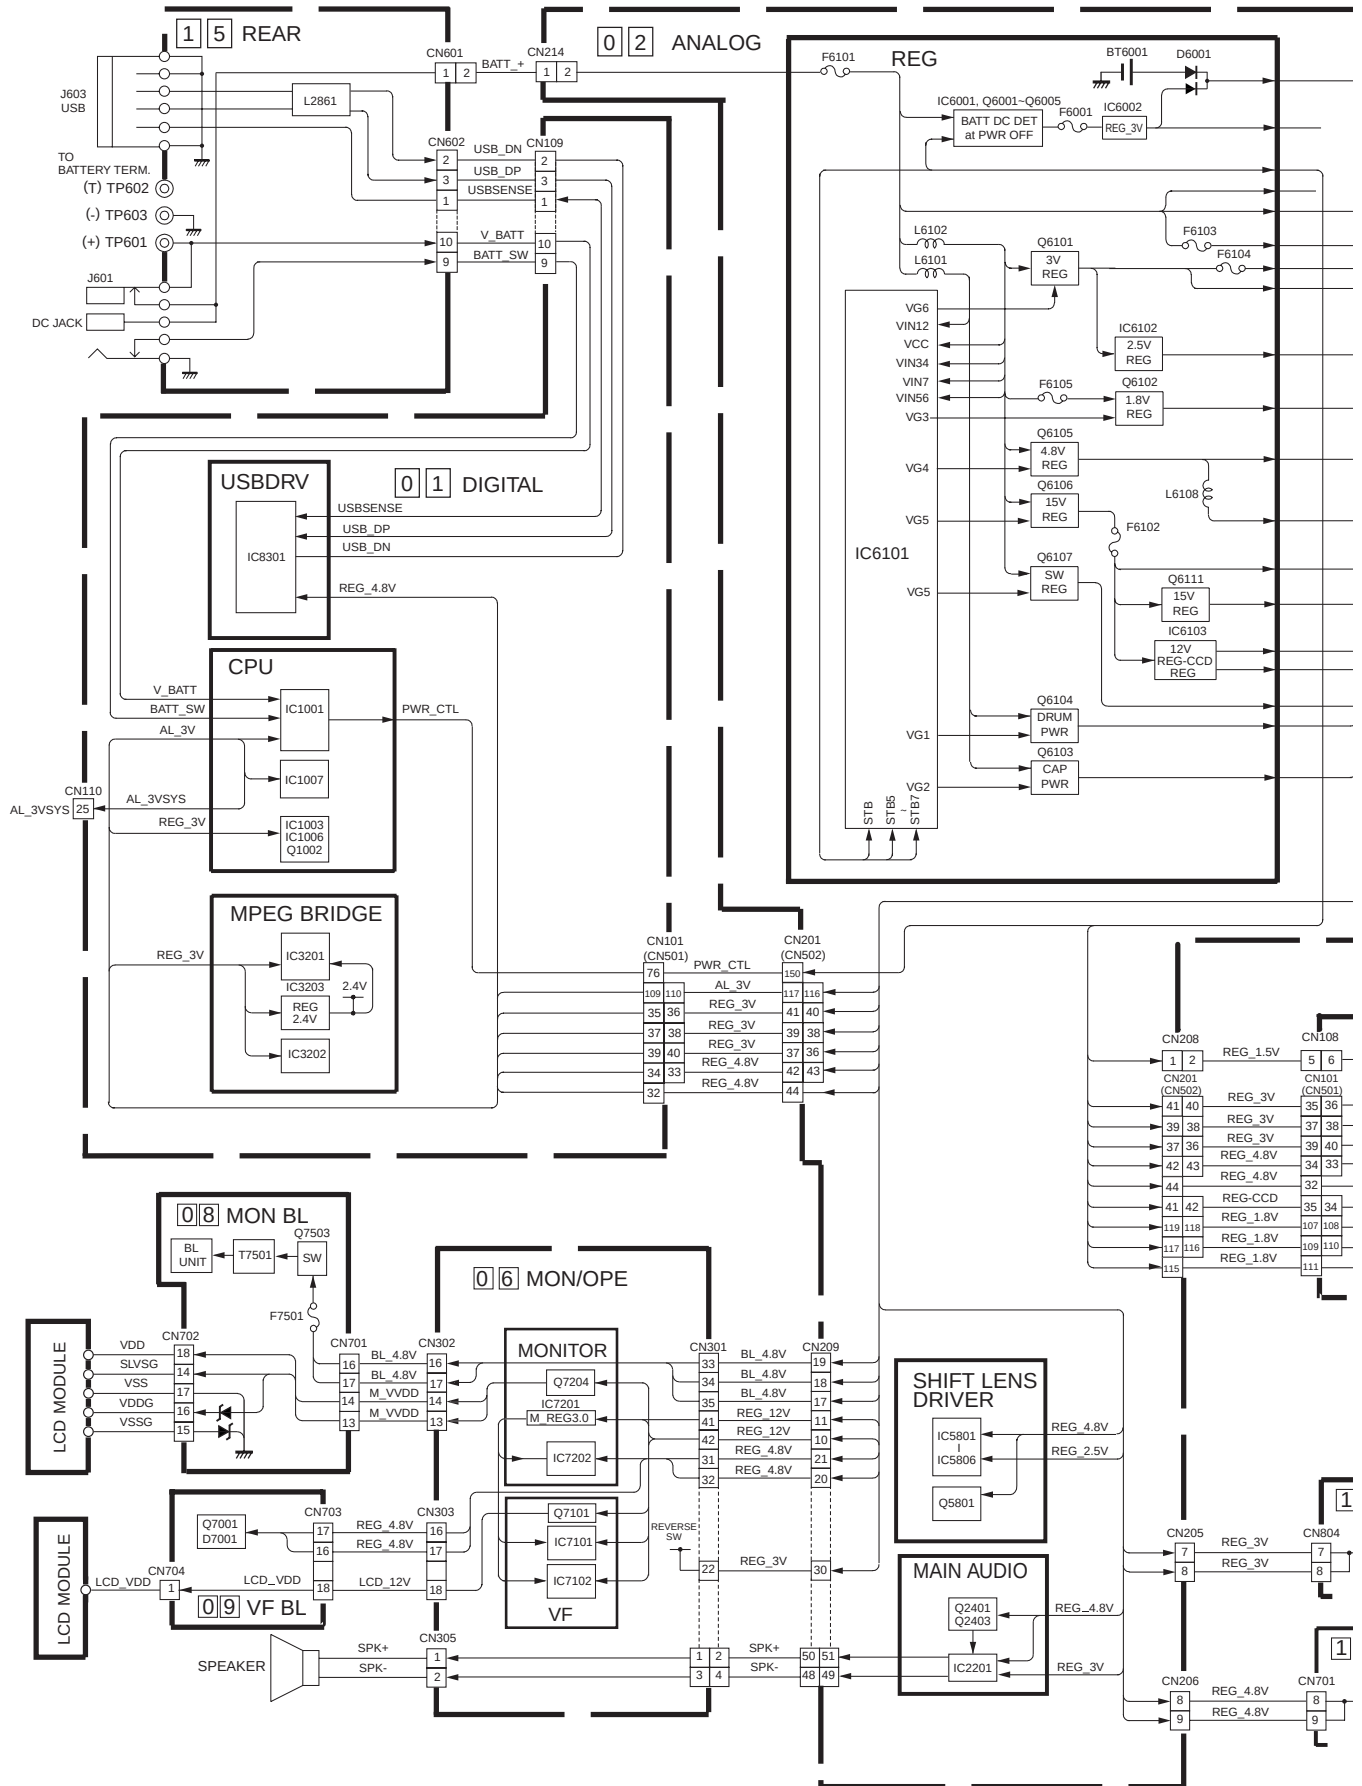

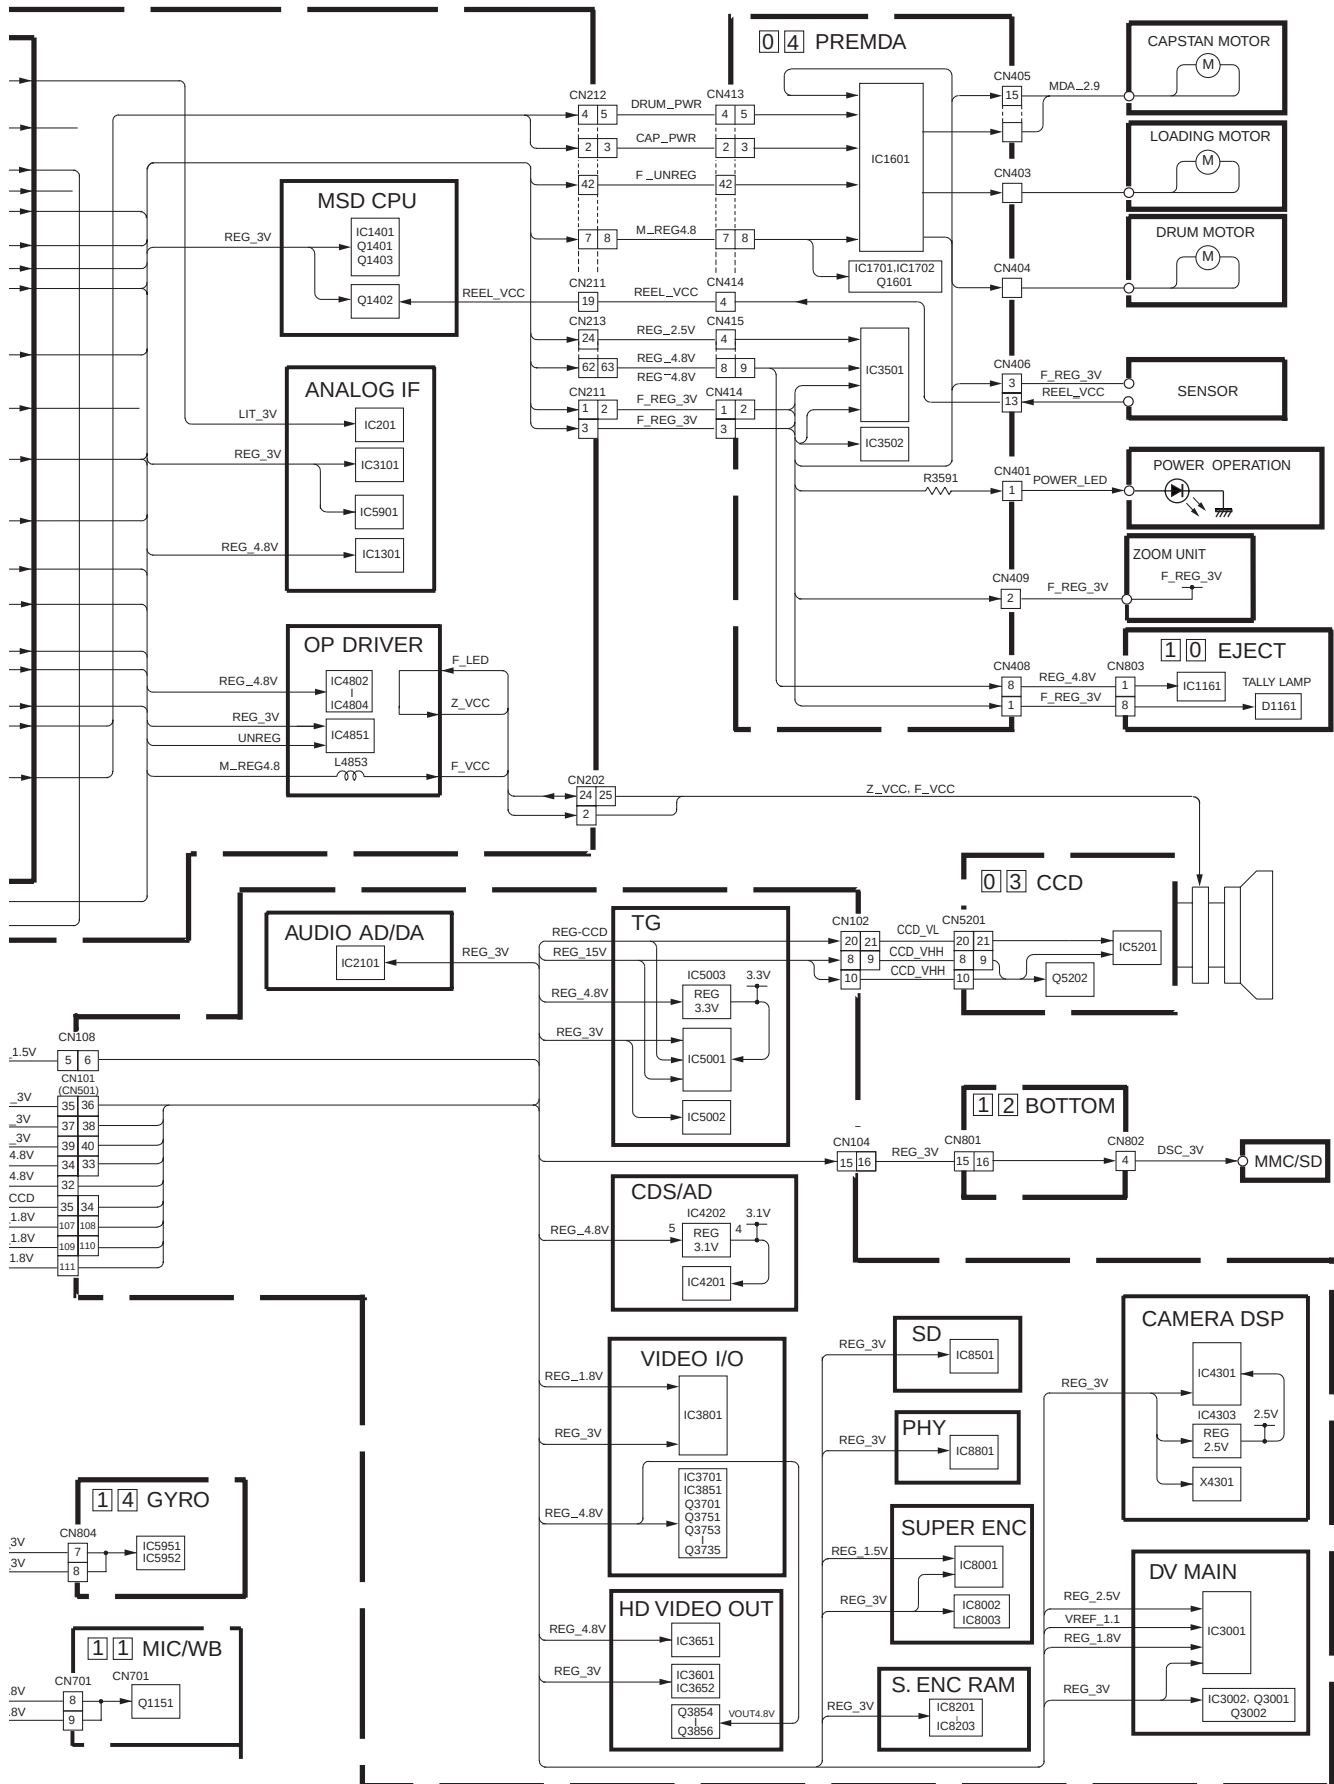



VIDEO BLOCK DIAGRAM

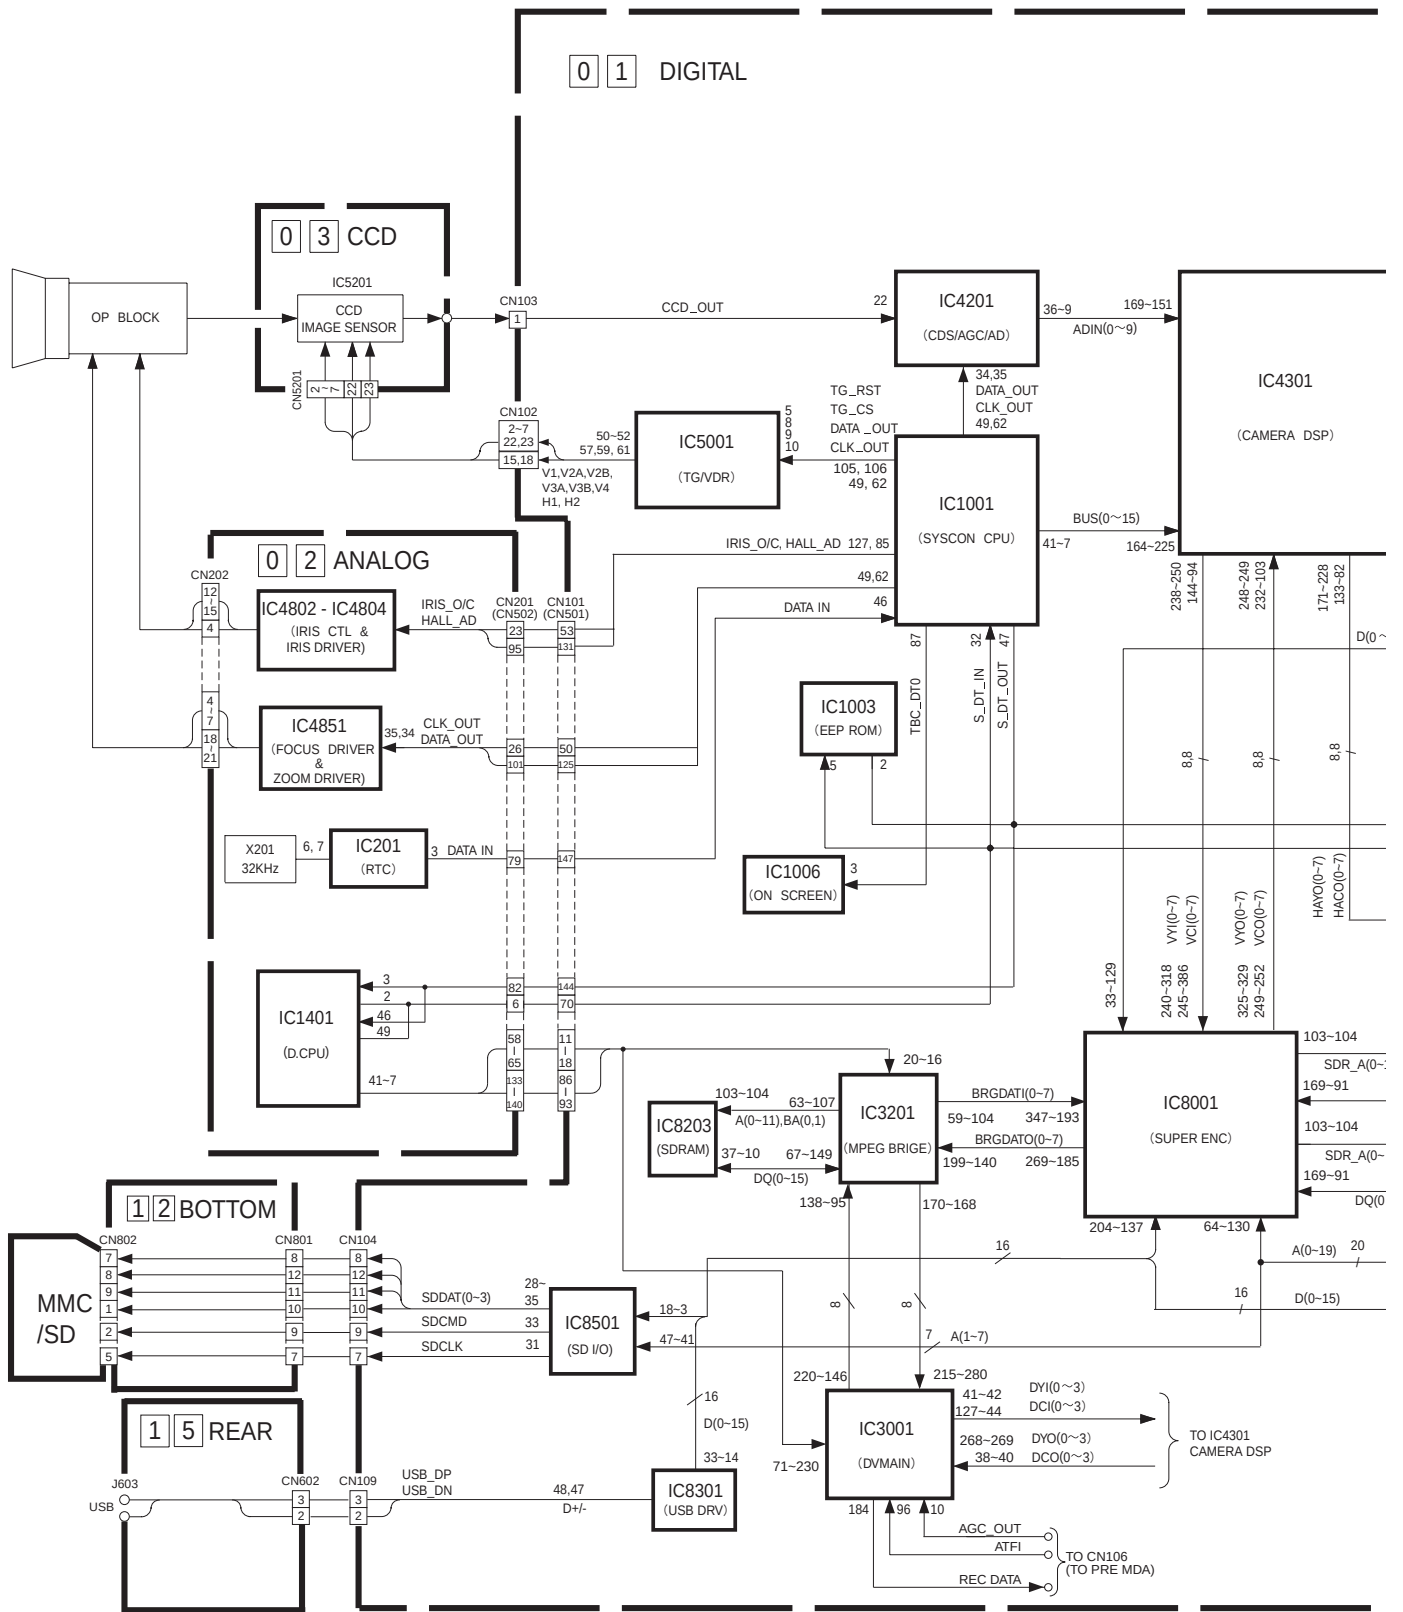

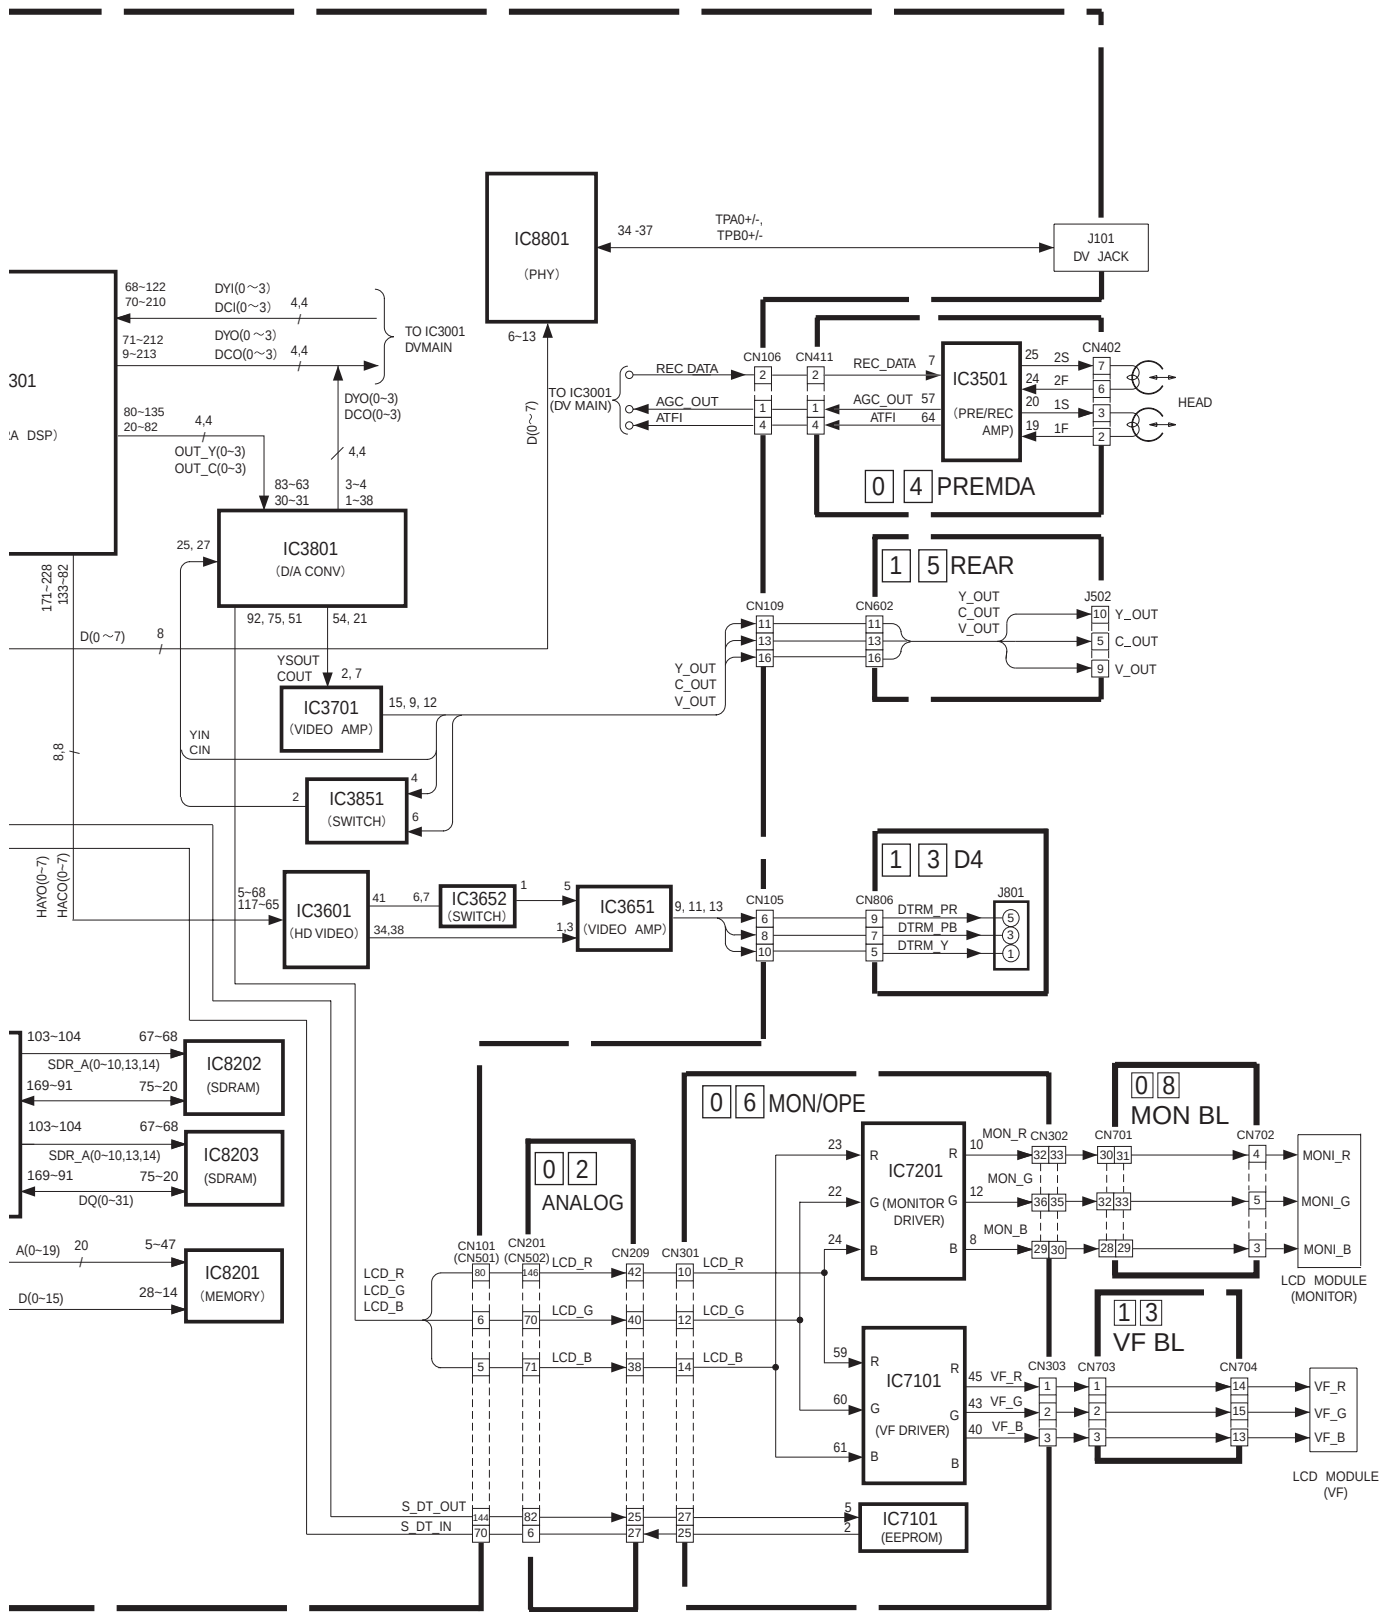

■ REG BLOCK DIAGRAM

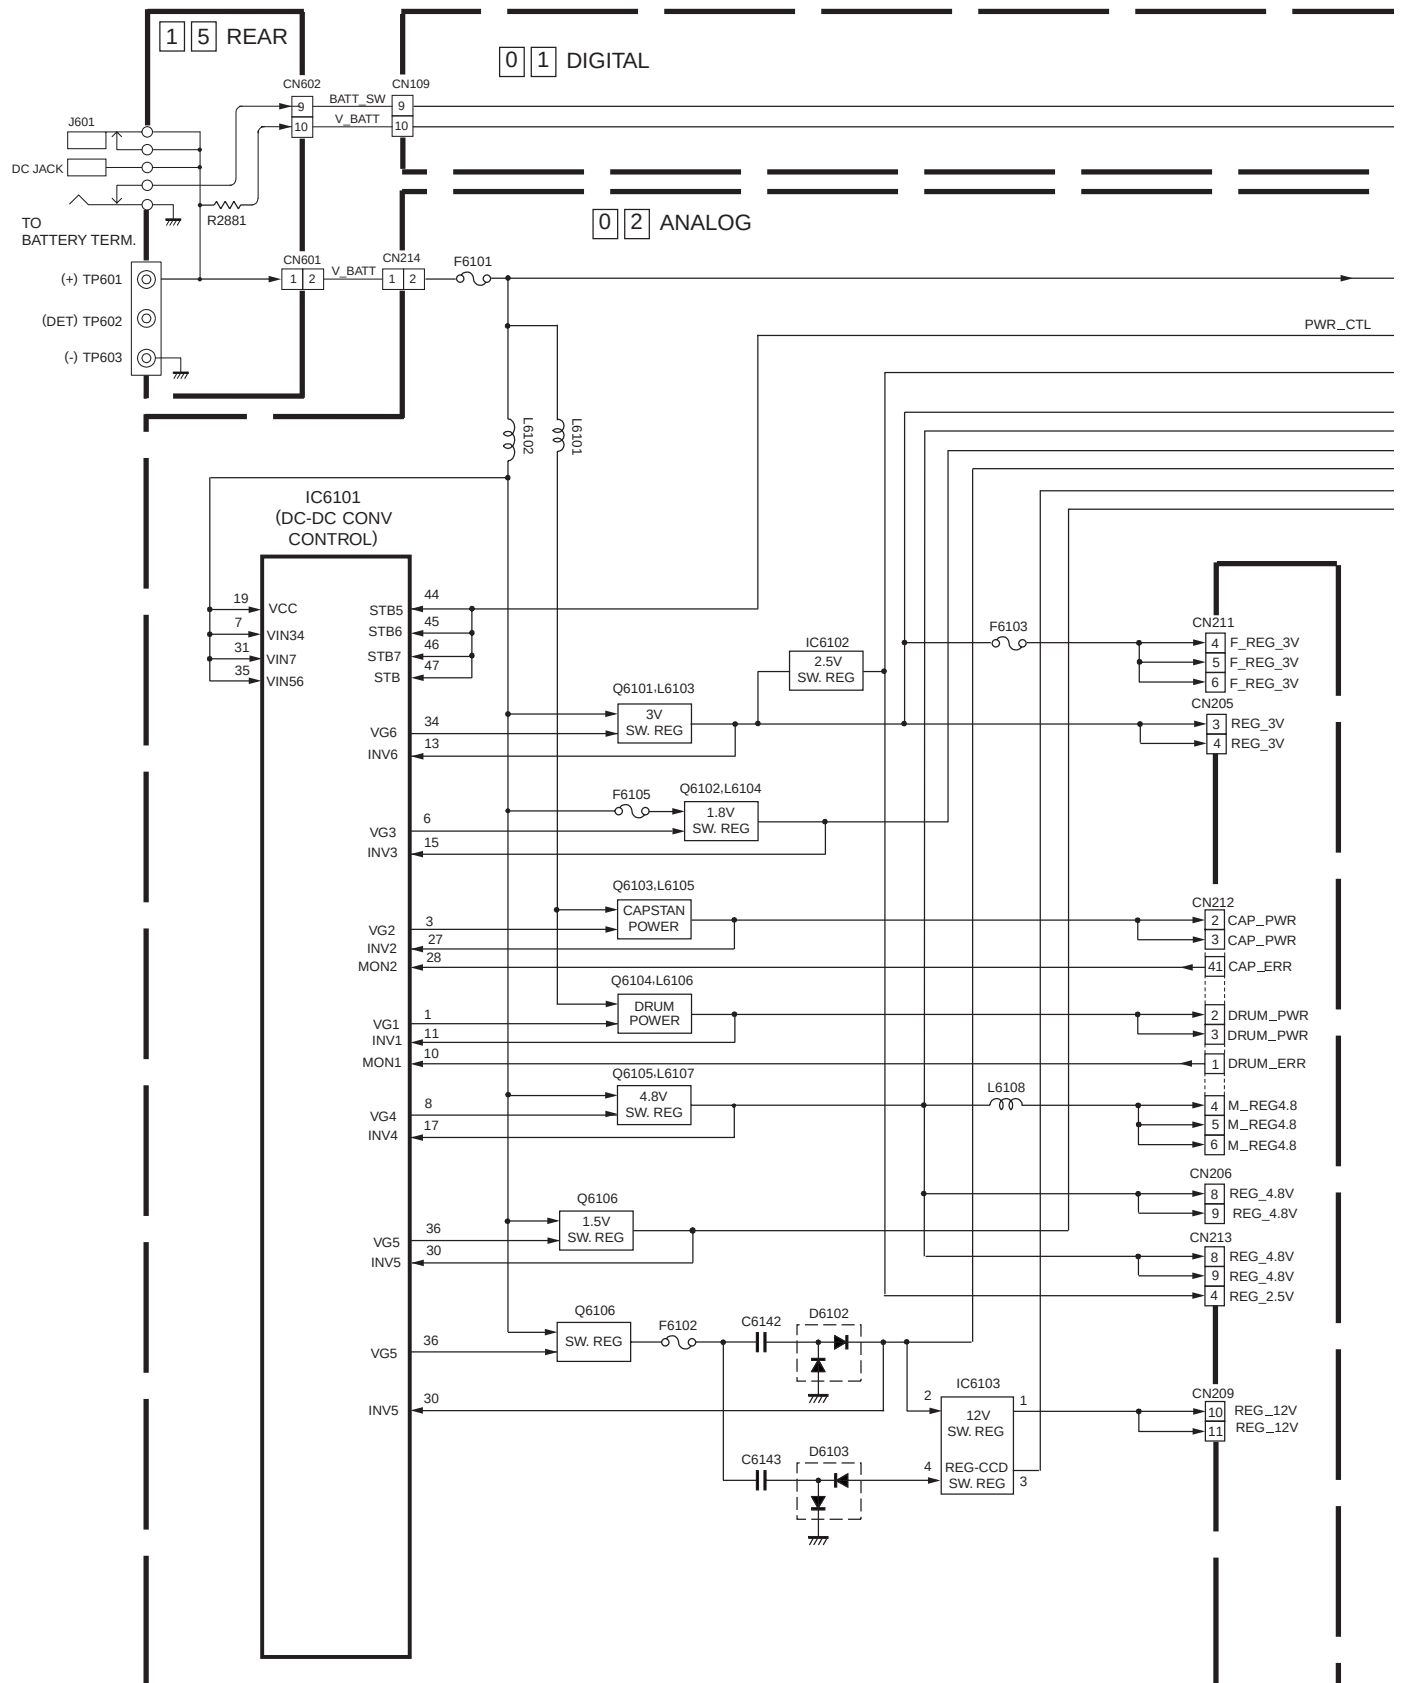

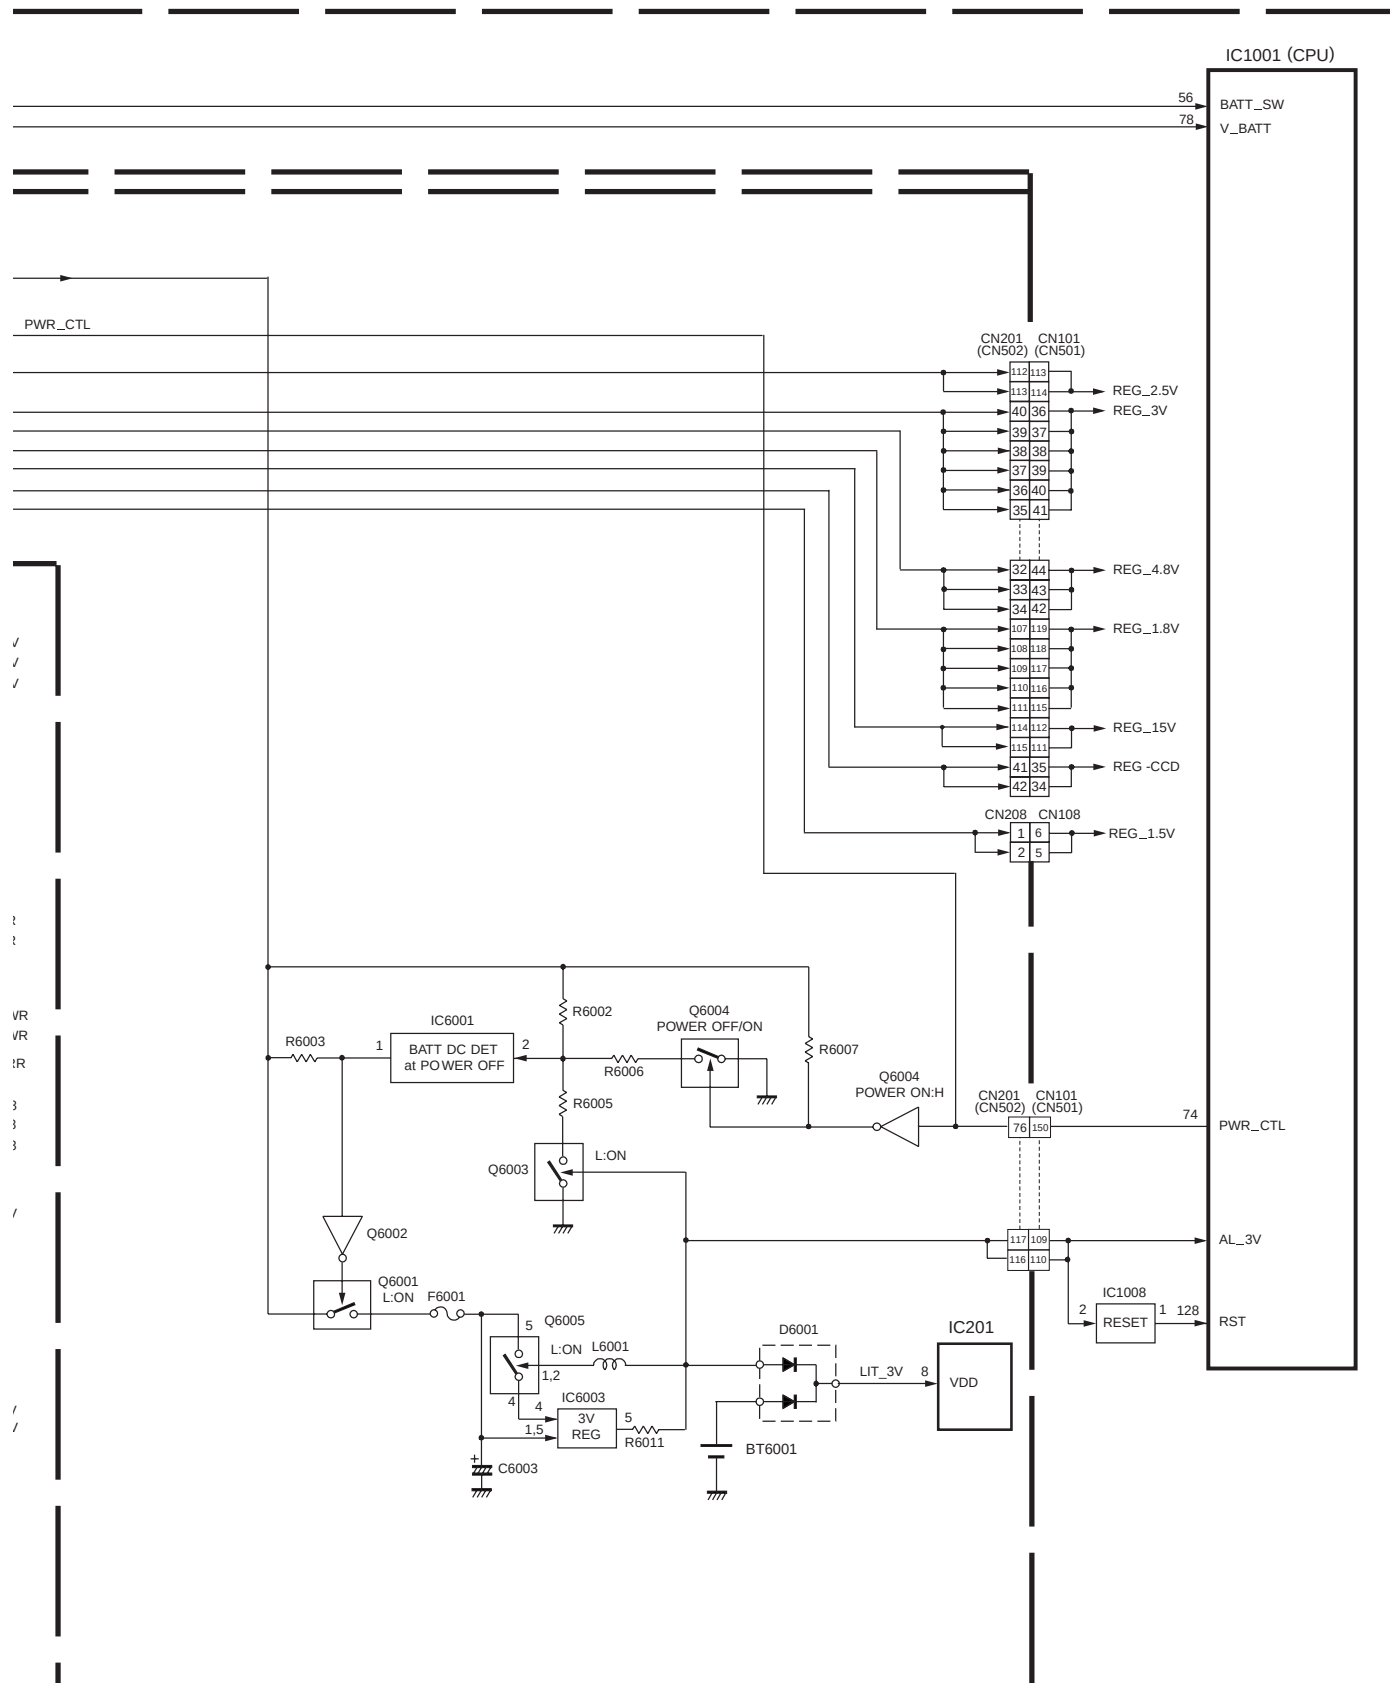

VOLTAGE CHARTS

<CPU>			<DV MAIN>			<VIDEO I/O>			<CDS>			<TG>			<SUPER ENC>			<PHY>			<ANALOG IF>			<MAIN AUDIO>		
MODE PIN NO.	REC	PLAY	MODE PIN NO.	REC	PLAY	MODE PIN NO.	REC	PLAY	MODE PIN NO.	REC	PLAY	MODE PIN NO.	REC	PLAY	MODE PIN NO.	REC	PLAY	MODE PIN NO.	REC	PLAY	MODE PIN NO.	REC	PLAY	MODE PIN NO.	REC	PLAY
IC1001	-	-	IC3001	-	-	IC3701	-	-	IC4201	-	-	IC5001	-	-	IC8001	-	-	IC8801	-	-	IC201	-	-	<MAIN AUDIO>		
IC1003	-	-	IC3002	-	-	IC3701	-	-	IC4201	-	-	IC5001	-	-	IC8002	-	-	IC8801	-	-	IC201	-	-	IC2201		
1	3.0	3.0	1	0.5	0.6	1	-	-	1	1.0	0	1	0	0	1	3.0	3.0	1	0	0	1	0	0	1	0	0
2	3.0	3.0	2	0.6	0.6	2	-	-	2	1.0	0	2	0	0	2	0	0	2	0.5	0.2	2	3.2	3.2	2	3.2	3.2
3	3.2	3.2	3	0	0	3	-	-	3	1.0	0	3	0	0	3	1.3	1.3	3	3.0	3.0	3	0.8	1.1	3	0.8	1.1
4	3.2	3.1	4	1.7	1.7	4	-	-	4	1.0	0	4	0	0	4	0	0	4	0	0	4	0	0	4	0	0
5	3.0	3.0	5	0.7	0.3	5	-	-	5	0.9	0	5	3.2	3.2	5	3.0	3.0	5	0	0	5	2.8	3.0	5	0	1.6
6	0	0	6	1.4	1.2	6	0	0	6	0	0	6	3.0	3.0	6	0	0	6	0	0	6	0.5	0.6	6	3.2	3.2
7	0.7	0.5	7	1.5	1.2	7	1.9	2.0	7	0	0	7	0	0	7	0	1.4	7	0	0	7	0.5	0.5	7	3.1	3.1
8	3.2	3.2	8	3.0	3.0	8	0	0	8	0	0	8	3.1	3.2	8	0	1.4	8	0	0	8	3.1	3.1	8	0	0
IC1006	-	-	Q3001	-	-	IC3801	-	-	IC4201	-	-	IC5001	-	-	IC8003	-	-	IC8801	-	-	IC1301	-	-	IC3101		
1	0	3.0	E	1.8	1.8	10	0	0	10	3.0	3.1	10	3.1	-	9	0.6	0.6	10	0	0	1	2.5	2.8	8	1.4	1.4
2	3.0	2.9	C	3.0	3.0	11	1.2	1.2	11	0	0	11	3.5	3.5	10	1.3	1.4	11	0	0	2	0	0	9	1.5	1.5
3	0.1	0.1	B	2.4	2.4	12	1.2	1.1	12	0	0	12	0.3	0	11	0	0	12	0	0	3	0	0	10	0.8	1.5
4	0	3.2	Q3002	-	-	13	4.8	5.4	13	3.1	3.1	13	0	0	12	3.0	3.0	13	0	0	4	0	0	11	3.0	3.1
5	3.0	3.0	E	1.2	1.2	14	1.0	1.0	14	0	0	14	0	0	13	1.3	1.3	14	0	0	5	2.5	2.7	12	0	3.2
6	3.0	3.0	C	3.0	3.0	15	0	1.0	15	0	0	15	1.3	0	14	0	0	15	0	3.0	6	0	2.7	13	1.3	1.3
7	0	0	B	1.7	1.7	16	4.8	5.4	16	0	0	16	0	0	15	1.0	1.0	16	0	0	7	1.6	2.1	14	1.4	-
8	1.5	1.5				17	0.3	0	17	0.3	0	17	0	0	16	3.0	3.0	17	0	0	8	5.0	5.5	15	3.0	3.5
9	0	0	<BRIDGE>			18	0	0	18	0	0	18	1.0	0	IC8003	-	-	18	0	0	IC1301	-	-	16	0	0
10	0	0	MODE PIN NO.	REC	PLAY	19	3.1	3.1	19	3.1	3.1	19	3.4	3.5	1	3.0	3.0	19	0	0	1	0	0	17	1.5	1.7
11	0	0	IC3201	-	-	20	2.0	1.8	20	2.0	1.8	20	0.3	0	2	3.2	3.2	20	0	0	2	0.4	0.4	18	0.1	0.6
12	0	0	IC3202	-	-	21	2.4	2.0	21	2.4	2.0	21	0.3	0	3	0	0	21	0	0	3	2.4	2.4	19	1.5	1.7
13	0	0	IC3203	-	-	22	1.9	0	22	3.0	3.0	22	3.0	3.0	4	3.0	3.0	22	0	0	4	1.6	1.6	20	0.1	0.3
14	0	0	1	3.0	3.0	23	0	0	23	3.0	1.9	23	0	0	5	3.0	3.0	23	0	0	5	1.6	1.5	21	1.5	1.7
15	0	0	2	0	0	24	1.2	1.2	24	1.2	1.2	24	1.0	0	IC8003	-	-	24	2.9	0.1	6	1.5	1.5	22	2.5	2.8
16	0	0	3	1.3	1.3	Q3701	-	-	25	3.1	3.1	25	0.6	0	MODE PIN NO.	REC	PLAY	25	3.0	3.0	7	1.7	1.7	23	1.5	1.7
17	0	0	4	2.4	2.4	Q3801	-	-	26	0	0	26	0	0	IC8201	-	-	26	3.0	3.0	8	1.7	1.7	24	2.5	2.8
18	0	0	5	3.0	3.0	1(E)	1.9	1.9	27	0	0	27	0	0	IC8202	-	-	27	0	0	9	1.4	1.4	25	0.1	1.7
19	2.9	2.9				2(B)	1.3	1.3	28	1.4	1.4	28	0	0	IC8203	-	-	28	0	0	10	3.1	3.1	26	0	0
20	2.7	2.8	<HD VIDEO OUT>			3(C)	0	0	29	2.0	1.9	29	0	0	IC8203	-	-	29	0	0	11	3.1	3.1	27	0	5.5
IC1007	-	-	MODE PIN NO.	REC	PLAY	4(E)	1.3	1.3	30	0.9	0.9	30	0	0	<SD I/O>			30	3.0	2.8	12	1.0	1.0	28	5.0	5.5
1	3.2	3.2	IC3601	-	-	5(B)	0	0.8	31	3.0	3.1	31	0	0	MODE PIN NO.	REC	PLAY	31	2.8	2.8	13	0.7	0.7	29	0	0
2	3.2	3.2	IC3651	-	-	6(C)	0	0	32	0	0	32	0	0	IC8501	-	-	32	0	0	14	1.1	1.1	30	2.5	2.8
3	0	0	1	1.3	1.4	Q3802	-	-	33	0	3.2	33	2.9	3.0	1	3.0	3.0	33	0	0	15	0	0	31	0	0
4	3.2	3.2	2	0	0	E	0.8	0.8	34	0	1.1	34	0	0	2	3.0	3.0	34	0	0	16	3.1	3.2	32	3.1	3.5
5	3.2	3.2	3	0.2	1.4	C	0	0	35	3.1	3.2	35	1.1	1.1	3	2.1	2.5	35	0	0	17	0.6	0	33	1.5	1.7
IC1008	-	-	4	0	0	B	0.2	0.2	36	1.0	0	36	0	0	4	2.1	2.5	36	2.2	1.9	18	0	1.5	34	0.3	1.7
1	3.2	3.2	5	0	0	Q3803	-	-	IC4202	-	-	37	0.8	0.8	5	0	2.5	37	2.2	2.2	19	1.3	1.3	35	0.2	1.7
2	3.2	3.2	6	0	0	1(E)	0.7	0.8	1	5.0	5.5	38	3.0	3.0	6	2.1	0	38	2.2	2.2	20	0	0	36	1.5	1.7
3	0	0	7	0	0	2(B)	0.1	0.3	2	0	0	39	0	0	7	2.1	2.5	39	0	0	43	1.2	2.8	37	0	1.7
4	0	0	8	0	0.5	3(C)	0	0	3	1.3	1.3	40	0	1.3	8	2.1	0	40	0	0	44	1.2	0.4	38	1.5	1.7
Q1001	-	-	9	0.4	0.5	4(E)	0.7	0.7	4	3.1	3.1	41	0	2.7	9	2.1	2.5	41	0	0	45	1.2	0.5	39	1.5	0.6
E	0	0	10	4.8	5.4	5(B)	0.1	0	5	5.0	5.5	42	0	2.7	10	0	0	42	2.8	2.9	3	0	0	40	0	0
C	0	0	11	0	0.9	6(C)	0	0	Q3851	-	-	43	0	2.7	11	0	0	43	1.2	2.8	4	0	0	41	0	0
B	0	0	12	4.8	5.4	E	2.7	0	C	4.8	5.4	44	0	2.9	12	0.3	0	44	1.2	0.4	5	1.3	1.3	42	4.3	5.2
Q1002	-	-	13	0.6	0.9	B	4.2	0	C	0	0	45	0	2.9	13	0.3	1.2	45	1.2	0.5	6	1.3	1.4	43	2.9	0
E	0	0	14	4.8	5.4				Q3852	-	-	46	1.5	1.5	14	0	1.2	46	1.2	0.4	7	1.4	1.4	44	4.2	5.1
C	3.0	3.0	IC3652	-	-	E	0	0	1	0.5	0.5	47	1.5	0	15	0	1.2	47	1.2	0.4	8	3.1	3.1	45	1.5	0
B	0	0.5	1	1.1	1.1	Q3852	-	-	2	0.6	2.7	48	1.5	0	16	0	1.2	48	0	0				46	1.5	0
Q1003	-	-	2	0	0	E	0	0	3	0	0	49	0	0	17	0	1.2	49	0	0				47	1.5	0.2
E	0	0	3	0	0	C	0	0	4																	

<OP DRIVER>			<LENS SHIFT DRIVER>			<REGULATOR>			<MDA>			<PRE/REC>			<CCD>			<VF>			<MONITOR>		
MODE PIN NO.	REC	PLAY	MODE PIN NO.	REC	PLAY	MODE PIN NO.	REC	PLAY	MODE PIN NO.	REC	PLAY	MODE PIN NO.	REC	PLAY	MODE PIN NO.	EE		MODE PIN NO.	EE		MODE PIN NO.	EE	
IC4802			IC5801			IC6001			IC1601			IC3501			IC5201			IC7101			IC7201		
1	0	2.7	1	1.5	1.5	1	6.3	6.5	1	0.4	0.5	1	0	0	1	0		1	0		1	0	
2	2.1	2.4	2	1.5	1.5	2	6.2	6.3	2	0.5	0.5	2	0.4	0.4	2	-7.4		2	0		2	1.5	
3	2.1	2.4	3	1.5	1.5	3	0	0	3	0	0	3	0	0	3	1.2		3	0		3	0	
4	0	0	4	0	0	4	0	0	4	0.5	0.4	4	0	1.5	4	0		4	0		4	3.0	
5	0	2.4	5	1.5	1.5	5	1.5	1.5	5	1.5	1.6	5	2.4	2.5	5	0		5	1.5		5	0	
6	2.1	2.4	6	1.5	1.5	6	3.2	3.2	6	1.5	1.5	6	2.3	2.5	6	13.5		6	0		6	5.7	
7	0	2.4	7	2.2	2.7	2	0	0	7	1.5	1.5	7	2.3	0	7	0		7	0		7	3.1	
8	4.8	5.5	8	4.8	5.5	3	1.0	1.0	8	1.5	1.5	8	0	0	8	12.1		8	3.0		8	0	
IC4803			IC5802			4	5.2	5.5	9	1.5	1.5	9	1.3	3.1	9	15.1		9	3.1		9	0	
1	0.9	0.9	1	1.3	1.9	5	6.4	6.5	10	1.5	1.5	10	1.5	0	10	10.1		10	0.6		10	6.1	
2	0.3	0.3	2	1.5	1.5	IC6101			11	2.8	2.8	11	1.4	0	11	-6.4		11	3.2		11	0	
3	0.3	0.3	3	1.5	1.5	1	0	3.7	12	1.2	1.2	12	0	0	12	-6.4		12	0		12	6.0	
4	0	0	4	0	0	2	6.4	6.5	13	1.5	1.5	13	4.7	5.5	13	-0.4		13	3.0		13	11.9	
5	2.1	2.4	5	1.5	1.5	3	5.1	5.2	14	1.5	1.5	14	5.0	0	14	0		14	3.0		14	6.0	
6	2.1	0	6	0.5	0.3	4	0	0	15	1.5	1.5	15	0	0	15	-0.5		15	0		15	3.1	
7	0	0	7	3.6	4.3	5	0	0	16	1.5	1.5	16	0	0	16	-0.5		16	0		16	5.9	
8	4.8	5.4	8	4.8	5.5	6	4.2	4.4	17	1.5	1.6	17	0	0	Q5201			17	0		17	0	
IC4804			IC5803			7	6.3	6.5	18	3.1	3.1	18	3.9	1.7	E	7.3		18	0.3		18	0	
1	1.3	0.3	1	1.6	1.3	8	6.3	6.5	19	0.7	0.7	19	3.7	1.7	C	12.1		19	0.1		19	0	
2	1.2	2.8	2	1.5	1.5	9	0	0	20	0.4	0.4	20	3.7	1.7	B	8.0		20	1.5		20	0	
3	0	0	3	1.5	1.5	10	0	0.3	21	1.3	1.3	21	3.9	1.7	Q5202			21	1.5		21	3.0	
4	0	0	4	0	0	11	0	0.3	22	1.2	1.3	22	0	0	E	11.4		22	0		22	2.0	
5	0	3.1	5	1.5	1.5	12	0.3	0	23	6.3	6.6	23	3.9	1.7	C	15.1		23	3.0		23	1.7	
6	1.5	3.1	6	1.5	1.5	13	0	1.5	24	2.7	2.7	24	3.7	1.7	B	12.1		24	0		24	0	
7	2	0	7	1.4	1.7	14	0.9	0.8	25	0.7	0.7	25	3.7	1.7				25	0		25	2.8	
8	4.8	5.5	8	4.8	5.4	15	1.5	1.5	26	1.3	1.3	26	3.9	1.7	MON BL			26	2.2		26	0	
IC4851			IC5804			16	0.8	0.8	27	0.7	0.7	27	0	0	MODE PIN NO.	EE		27	1.5		27	1.5	
1	0	0	1	0.7	0.7	17	1.5	1.7	28	1.0	1.0	28	2.5	1.3	Q7501			28	0		28	0	
2	0.4	0	2	1.7	1.9	18	0	0	29	1.2	1.2	29	3.7	1.8	E	0.2		29	3.0		29	1.7	
3	0.3	0.3	3	1.5	1.5	19	6.1	6.3	30	1.2	1.2	30	3.7	1.7	C	4.3		30	3.0		30	0	
4	0	0	4	0	0	20	1.2	1.3	31	1.2	1.2	31	2.5	1.3	B	0.5		31	0		31	3.2	
5	0.3	0.4	5	1.5	1.5	21	0	0	32	0	0	32	0	0	Q7502			32	0		32	3.2	
6	0	0	6	1.5	1.5	22	1.5	1.5	33	1.2	1.2	33	0	0	E	0.2		33	0		33	0	
7	0	0	7	2.3	2.3	23	0.7	0.7	34	1.5	1.5	34	0	0	C	4.3		34	0		34	3.0	
8	3.1	3.1	8	4.8	5.4	24	0.7	0.7	35	0	0	35	1.8	1.8	B	0.5		35	5.8		35	2.9	
9	6.4	6.4	IC5805			25	0	0	36	0	0	36	0.5	0.5	Q7503			36	0		36	3.0	
10	0.3	0	1	0	0	26	0.7	0.7	37	0	0	37	3.1	3.1	E	4.5		37	0		37	3.0	
11	0	0	2	0.7	0.8	27	0	0	38	0	0	38	0	3.1	C	4.4		38	0		38	2.7	
12	0.3	0	3	0.7	0.8	28	0	0	39	5.0	5.6	39	3.1	3.1	B	0.2		39	0		39	2.8	
13	6.4	6.5	4	4.8	5.5	29	0.9	0.9	40	1.5	1.5	40	1.5	2.2	Q7504			40	5.9		40	2.9	
14	0.3	0.4	5	0	1.5	30	1.5	1.5	41	1.5	1.5	41	0	0	E	0.2		41	3.4		41	0	
15	0	0	6	0	1.5	31	6.3	6.5	42	1.5	1.5	42	3.1	0	C	0.2		42	0		42	1.4	
16	0.3	0.4	7	0	1.5	32	4.5	4.8	43	1.5	1.5	43	4.9	5.5	B	0.8		43	5.9		43	1.5	
17	0	0	8	0.4	2.3	33	0	0	44	9.4	10.3	44	2.9	0				44	1.4		44	0	
18	0	0	9	1.5	1.7	34	2.8	0	45	2.4	2.8	45	0	-	VF BL			45	6.0		45	3.0	
19	0	0	10	1.5	1.5	35	6.3	6.5	46	7.9	8.4	46	0	2.4	MODE PIN NO.	EE		46	1.4		46	0.4	
20	0	0	11	0	0	36	2.5	2.7	47	0	0	47	-	0	Q7001			47	11.9		47	3.0	
21	0	0	12	0.8	0.8	37	0	0	48	0	3.1	48	4.6	3.9	1(E)	0		48	0		48	0	
22	0	0	13	0.8	0.8	38	1.5	1.5	49	3.1	3.1	49	4.6	3.6	2(B)	3.0		49	3.0		49	3.0	
23	6.4	6.5	14	0.7	0.7	39	1.0	1.0	50	3.0	3.0	50	4.3	1.5	3(C)	5.2		50	0		50	0	
24	0.4	0.4	IC5806			40	1.0	1.0	51	0	0	51	1.0	1.2	4(E)	5.3		51	0		51	0	
25	0	0	1	1.1	1.1	41	0	0	52	1.1	1.1	52	1.0	1.7	5(B)	0		52	3.0		52	3.0	
26	0.4	0.5	2	0.3	0.3	42	2.0	2.0	53	0.3	0.3	53	0	0	6(C)	0		53	0		53	0	
27	6.4	6.5	3	0.3	0.3	43	0.5	0.5	54	1.5	1.5	54	3.3	2.7	Q7002			54	1.9		54	1.9	
28	0.4	0.4	4	0	0	44	0	3.2	55	0.7	0.7	55	3.3	1.9	1(E)	0.6		55	0		55	0	
29	0.1	0	5	0	0.3	45	3.1	3.1	56	1.0	1.0	56	1.1	1.1	2(B)	1.3		56	0		56	0	
30	0.3	0.3	6	0.4	0.4	46	3.2	3.2	57	1.0	1.9	57	1.0	1.9	3(C)	1.3		57	0		57	0	
31	3.1	3.1	7	1.3	1.3	47	3.2	3.2	58	2.5	1.3	58	2.5	1.3	4(E)	0.6		58	2.9		58	2.9	
32	0.1	0.1	8	4.9	5.4	48	0	0	59	2.4	0	59	2.4	0	5(B)	1.2		59	1.3		59	1.3	
33	0	0	Q5801			IC6102			60	1.3	1.3	60	1.3	1.3	6(C)	2.2		60	1.5		60	1.5	
34	1.1	1.1	1	1.2	1.2	1	3.1	3.1	61	3.1	1.9	61	3.1	1.9				61	1.3		61	1.3	
35	3.2	3.1	2	1.7	1.7	2	0	0	62	2.5	1.9	62	2.5	1.9				62	3.0		62	3.0	
36	1.5	1.5	3	4.9	5.5	3	1.2	1.2	63	2.4	1.3	63	2.4	1.3				63	0		63	0	
37	1.5	1.5	4	1.0	1	4	2.4	2.5	64	2.5	1.9	64	2.5	1.9				64	0		64	0	
38	3.2	3.2	5	1.5	1.5	5	3.0	3.1	IC3502			1	0	0				IC7102			1	3.1	
Q4801			6	0	5.5	IC6103			2	1.4	1.4	2	1.3	0				2	0.7		2	0.7	
E	0.3	0.3				1	11.9	11.9	3	1.5	1.4	3	0	0				3	3.0		3	3.0	
C	1.9	2.2				2	15.1	15.1	4	0	0	4	0	0				4	0		4	0	
B	0.9	0.9				3	-7.1	-7.1	5	1.4	1.4	5	0	0				5	0		5	0	
Q4806						4	-15.3	-15.4	6	0	0	6	0	0				6	3.1		6	3.1	
E	1.2	0				5	-1.2	-1.2	7	0	0	7	-	-				7	3.0		7	3.0	
C	4.8	5.5				7	0	0	8	5.0</													

JVC SERVICE & ENGINEERING COMPANY OF AMERICA
DIVISION OF JVC AMERICAS CORP.

www.jvcservice.com(US Only)

JVC CANADA INC.

Head office : 21 Finchdene Square Scarborough, Ontario M1X 1A7

(416)293-1311

JVC®

PARTS LIST

SAFETY PRECAUTION

Parts identified by the $\triangle$ symbol are critical for safety. Replace only with specified part numbers.


BEWARE OF BOGUS PARTS

Parts that do not meet specifications may cause trouble in regard to safety and performance. We recommend that genuine JVC parts be used.


1. EXPLODED VIEW

1.1 PACKING AND ACCESSORY ASSEMBLY <M1>


The instruction manual to be provided with this product will differ according to the destination.

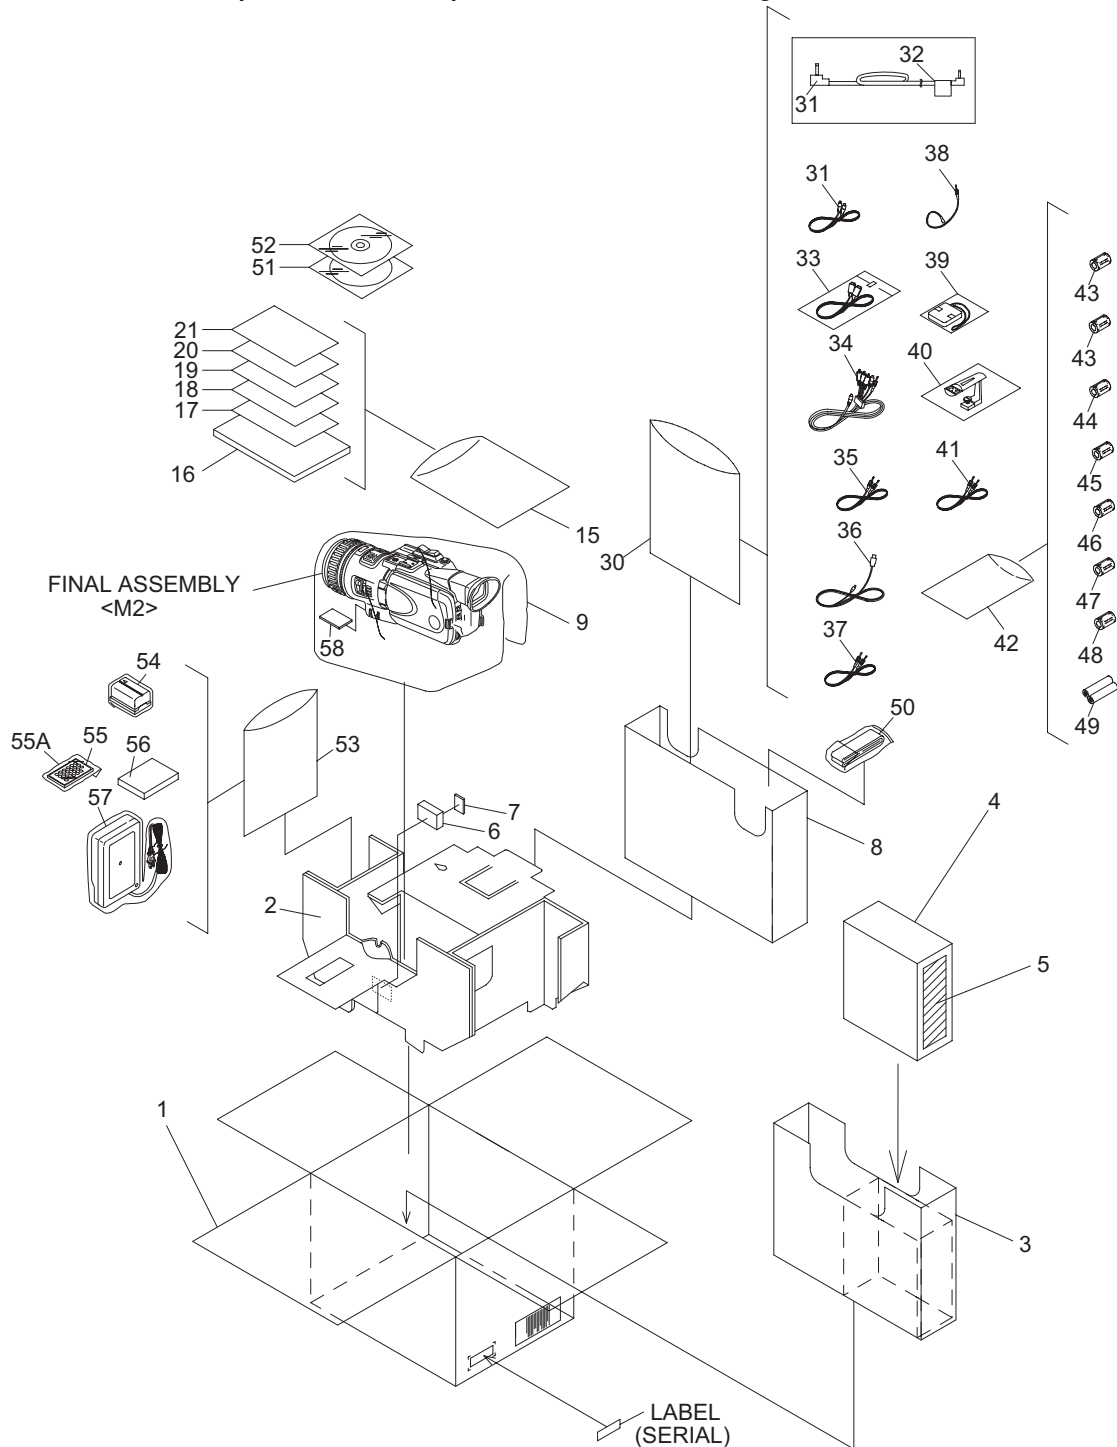



1.2 FINAL ASSEMBLY <M2>

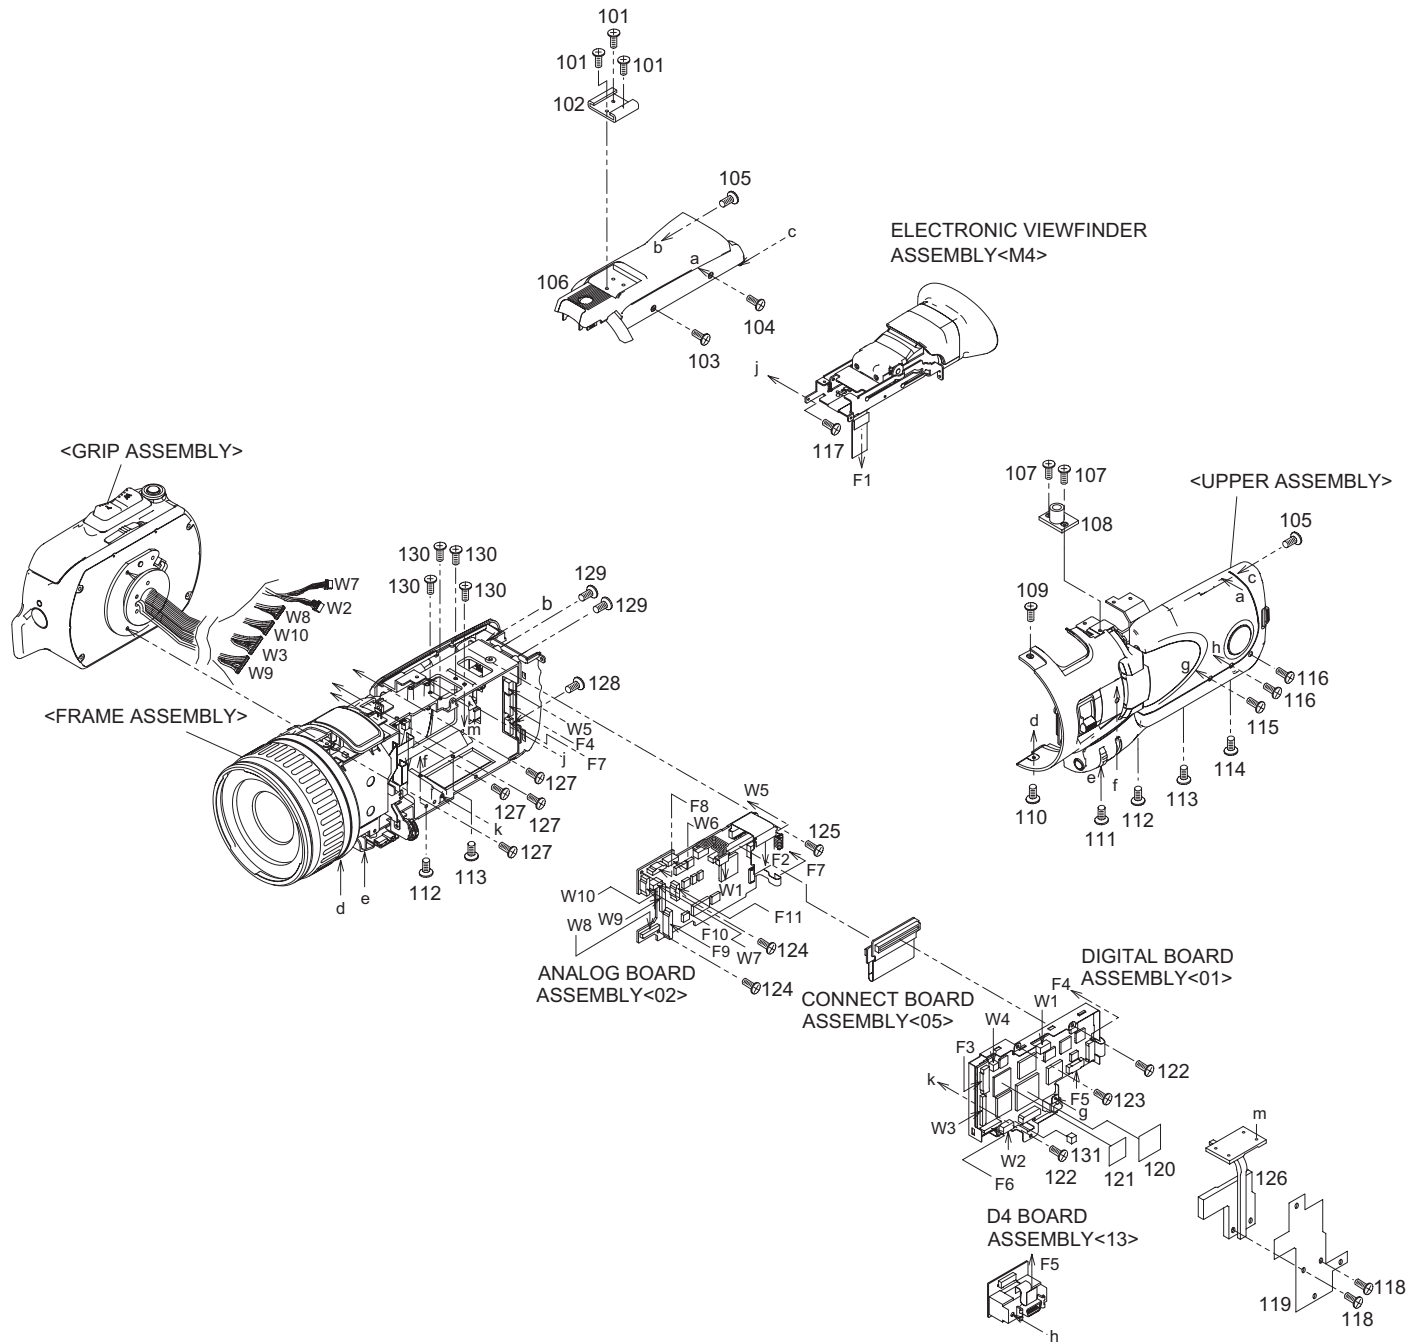


<FRAME ASSEMBLY>

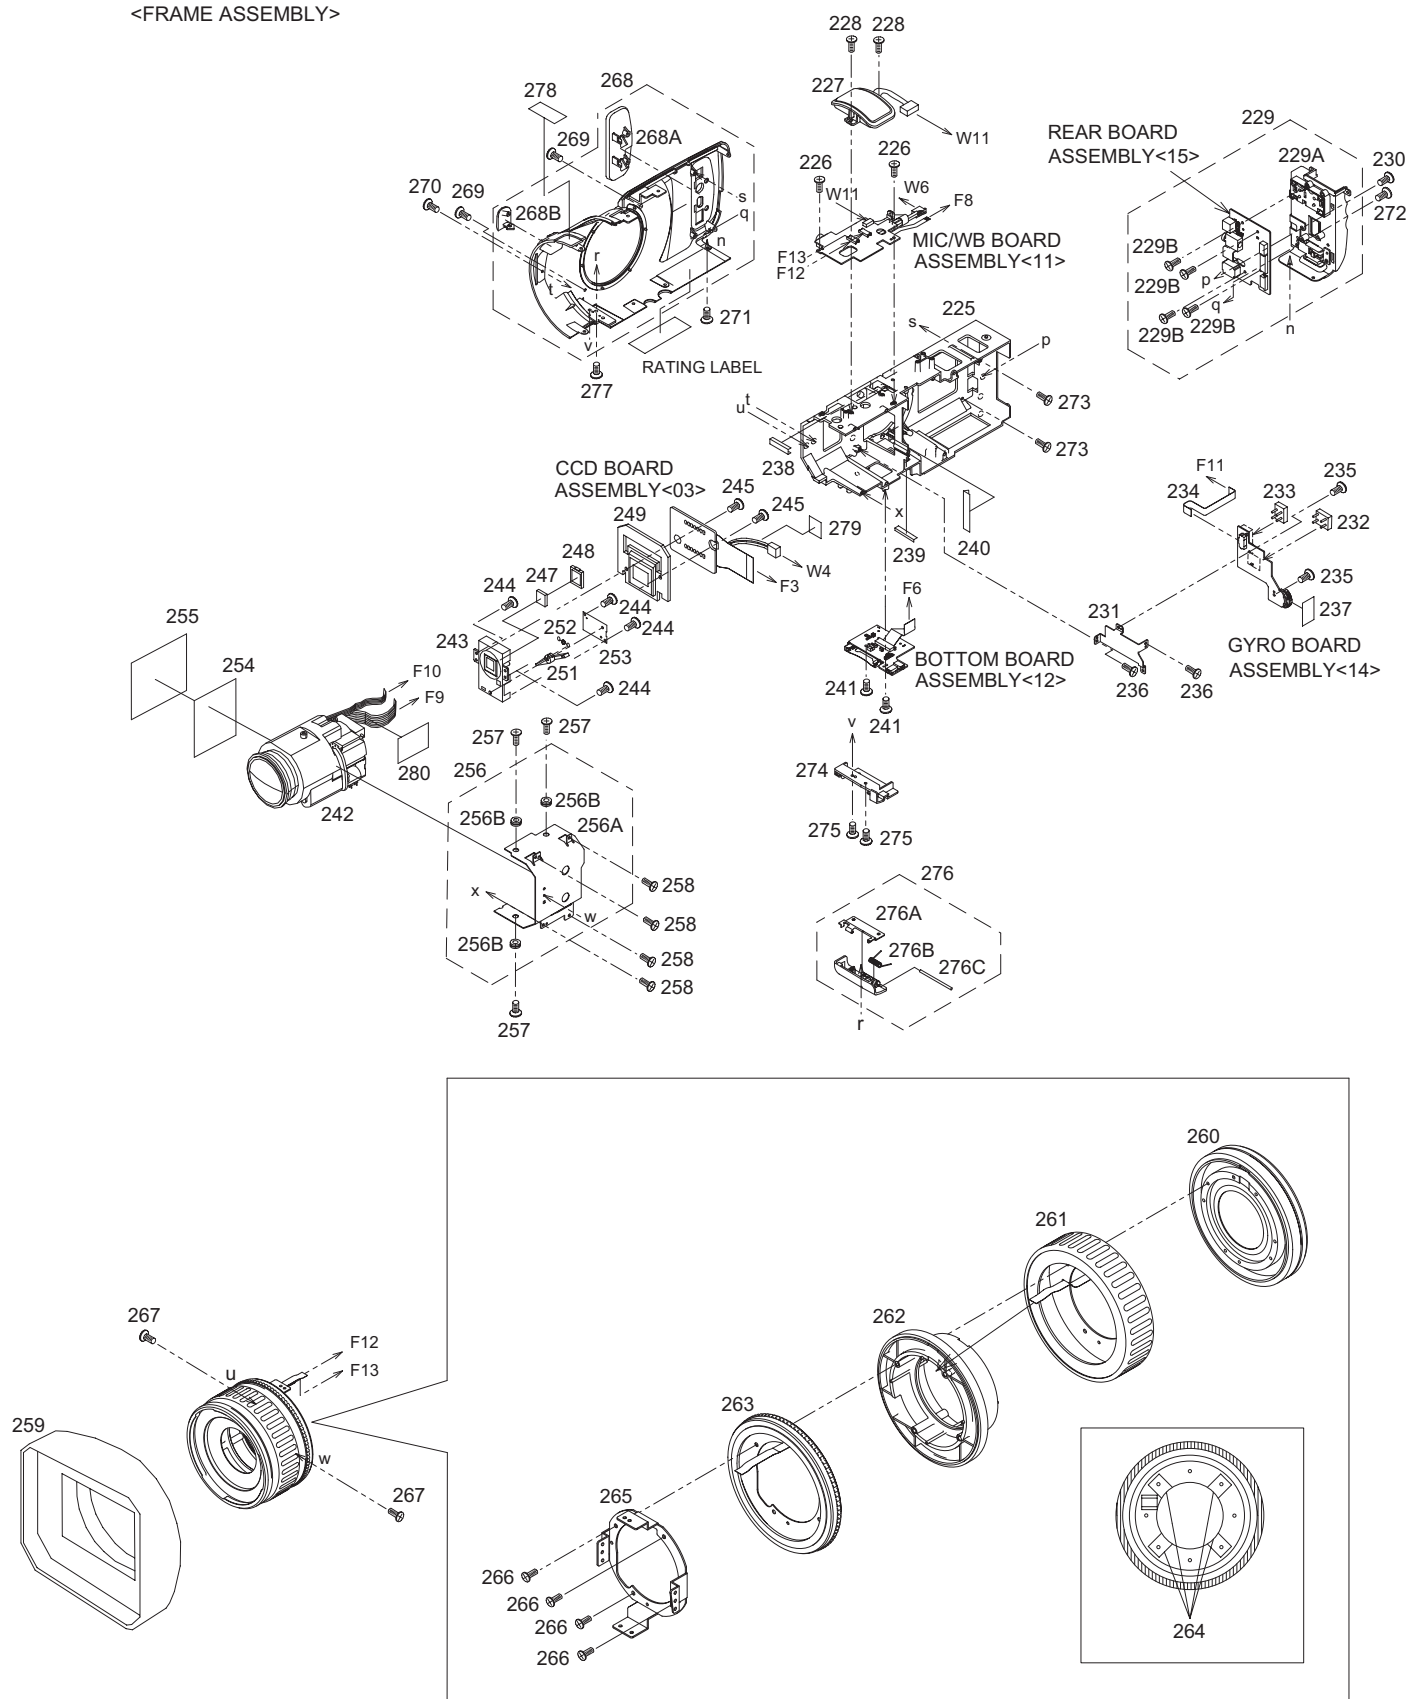

<GRIP ASSEMBLY>

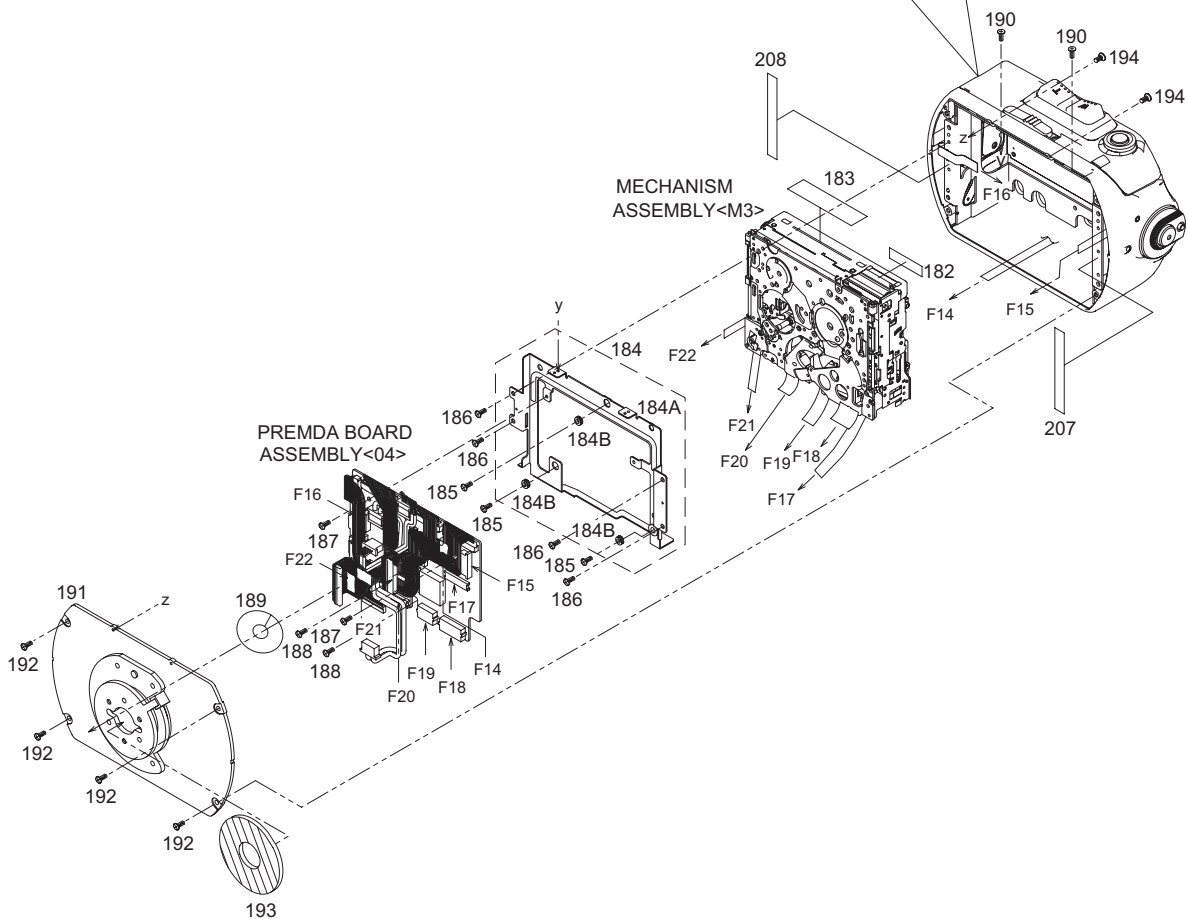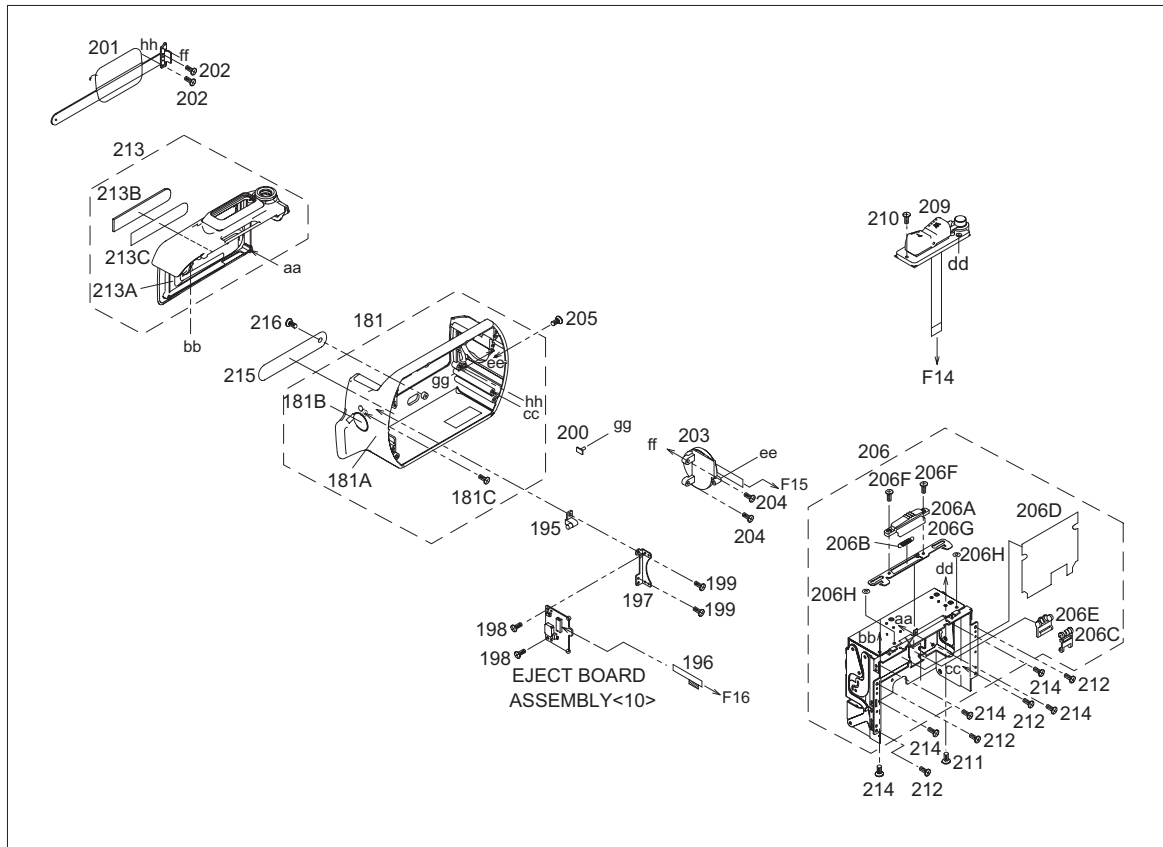


<UPPER ASSEMBLY>

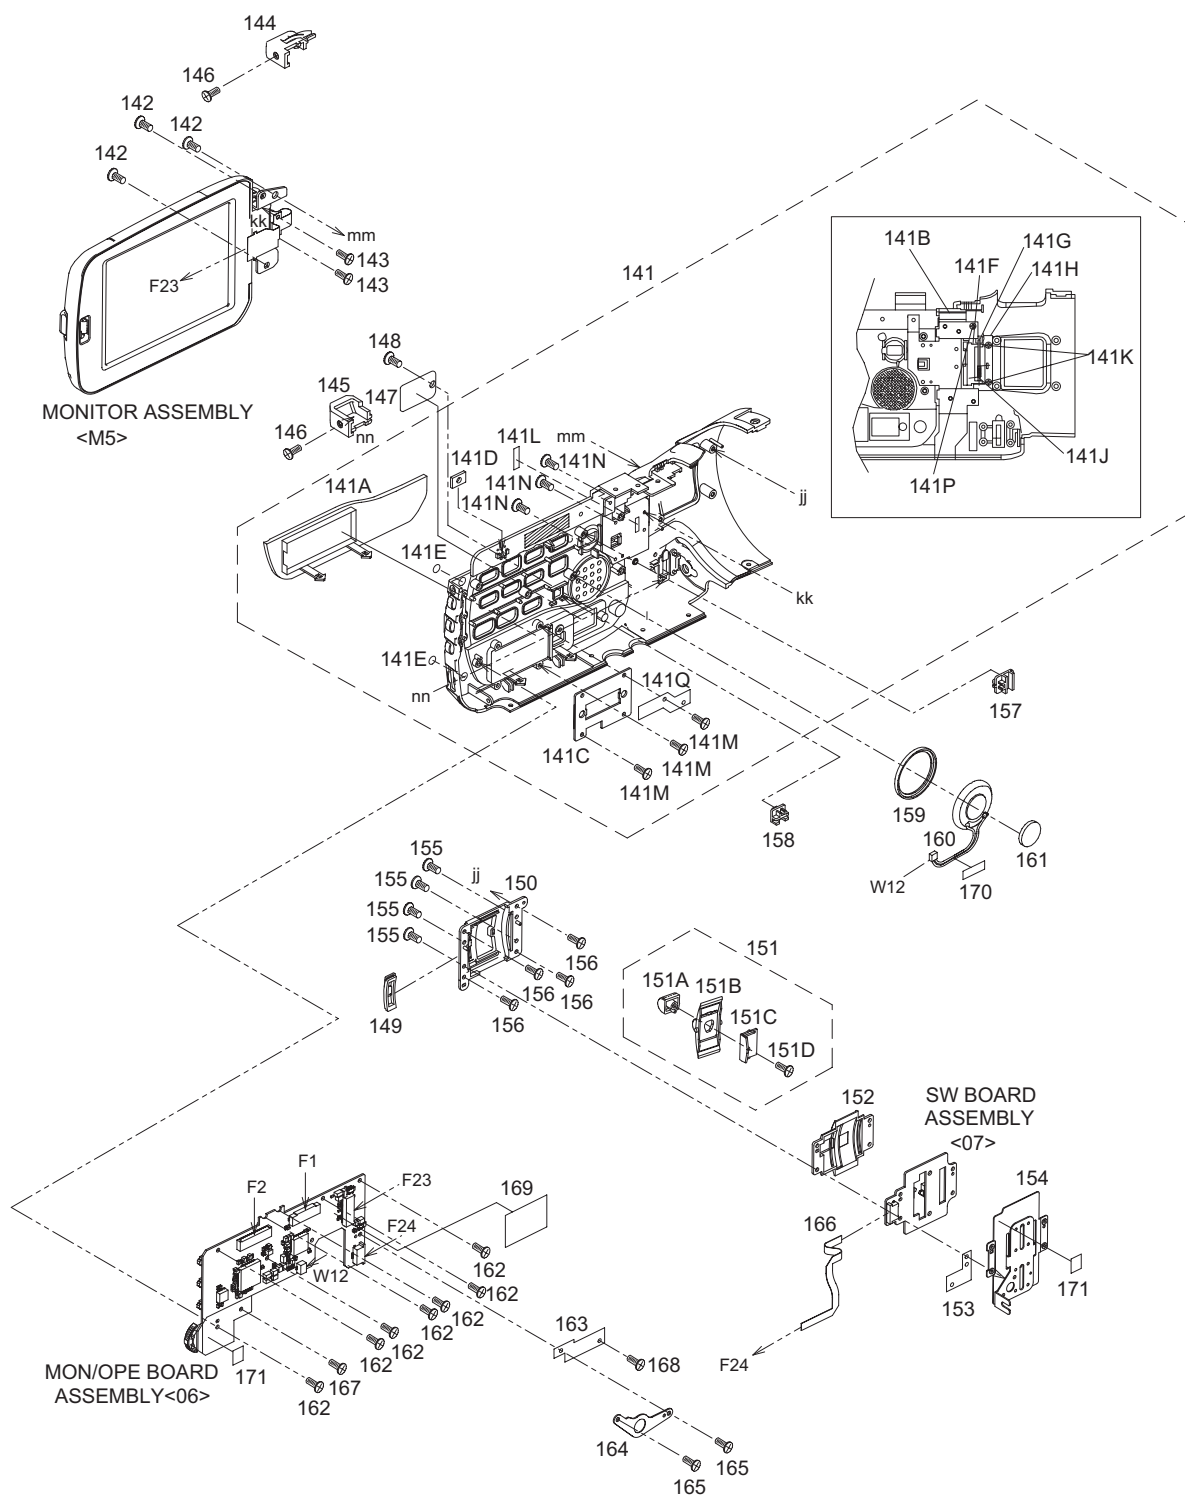

1.3 MECHANISM ASSEMBLY <M3>

400

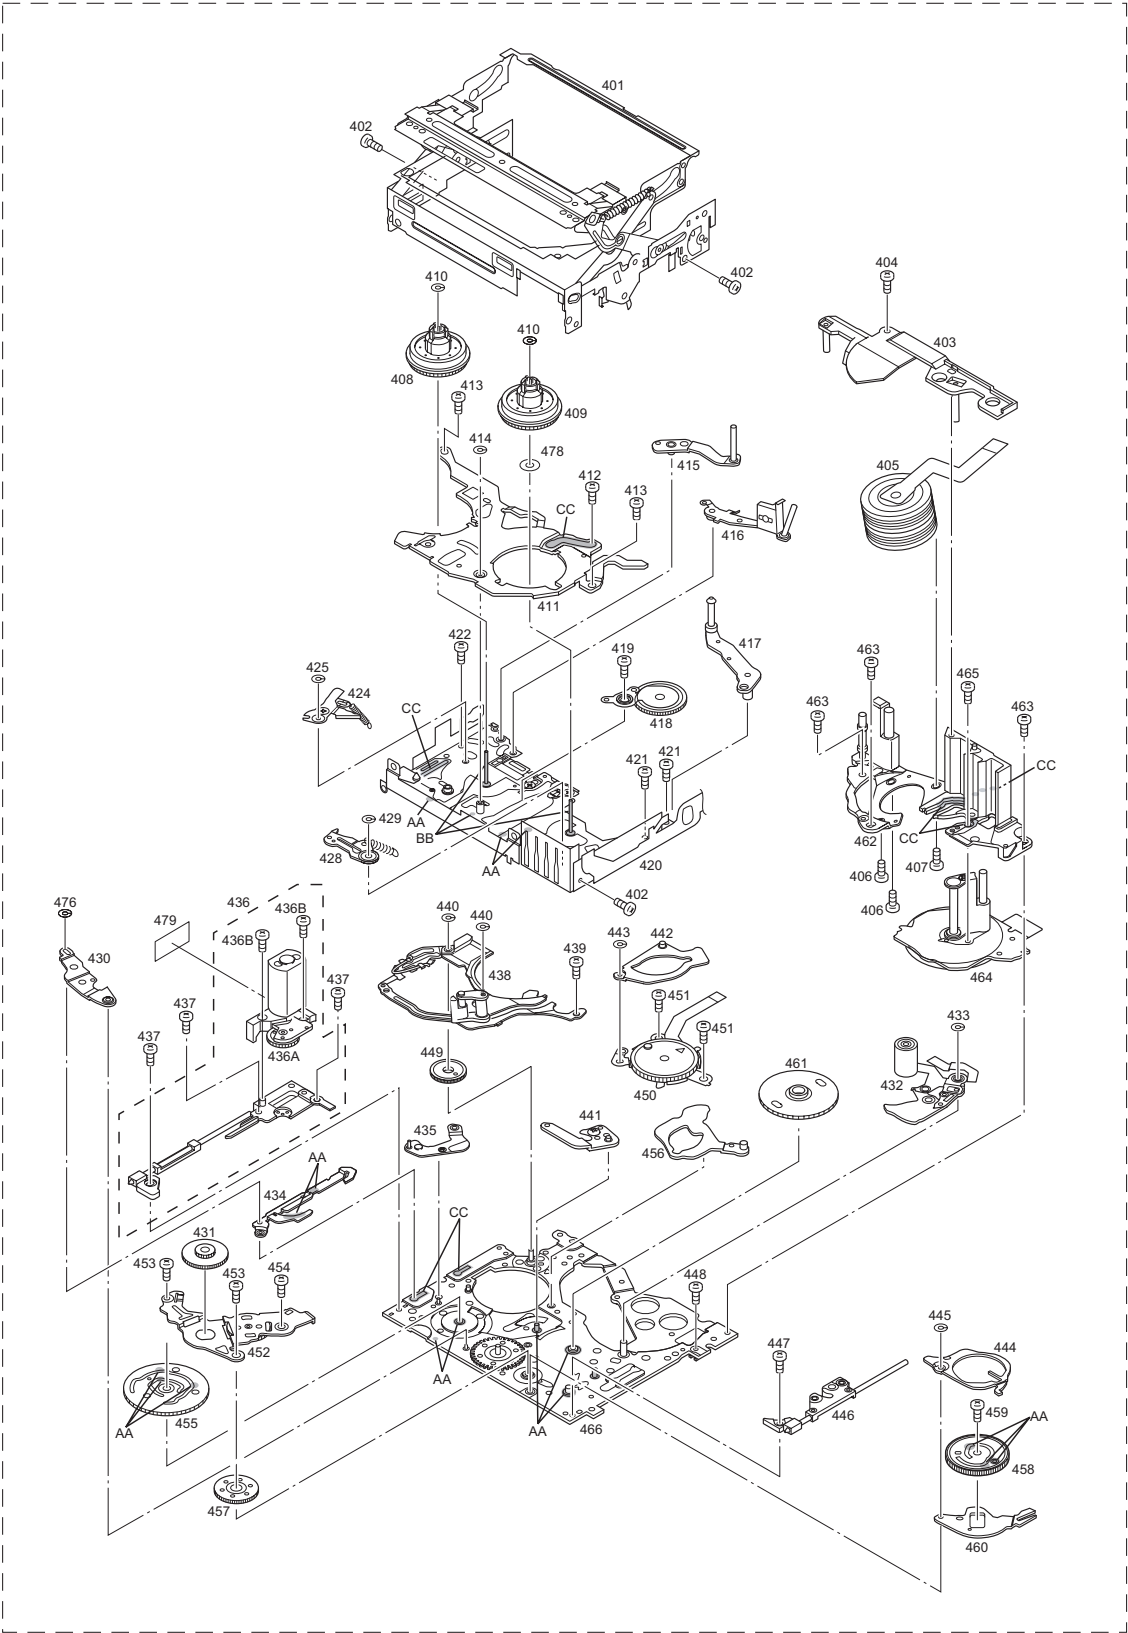


Classification	Part No.	Symbol in drawing
Grease	KYODO-SH-JB	AA
Oil	YTU94027	BB
Grease (HANARL)	RX-410R	CC

NOTE1: The section marked in **AA** and **BB**, **CC** indicate lubrication and greasing areas.


NOTE2: Mark ★ is not contained in 900A.

1.4 ELECTRONIC VIEWFINDER ASSEMBLY <M4>

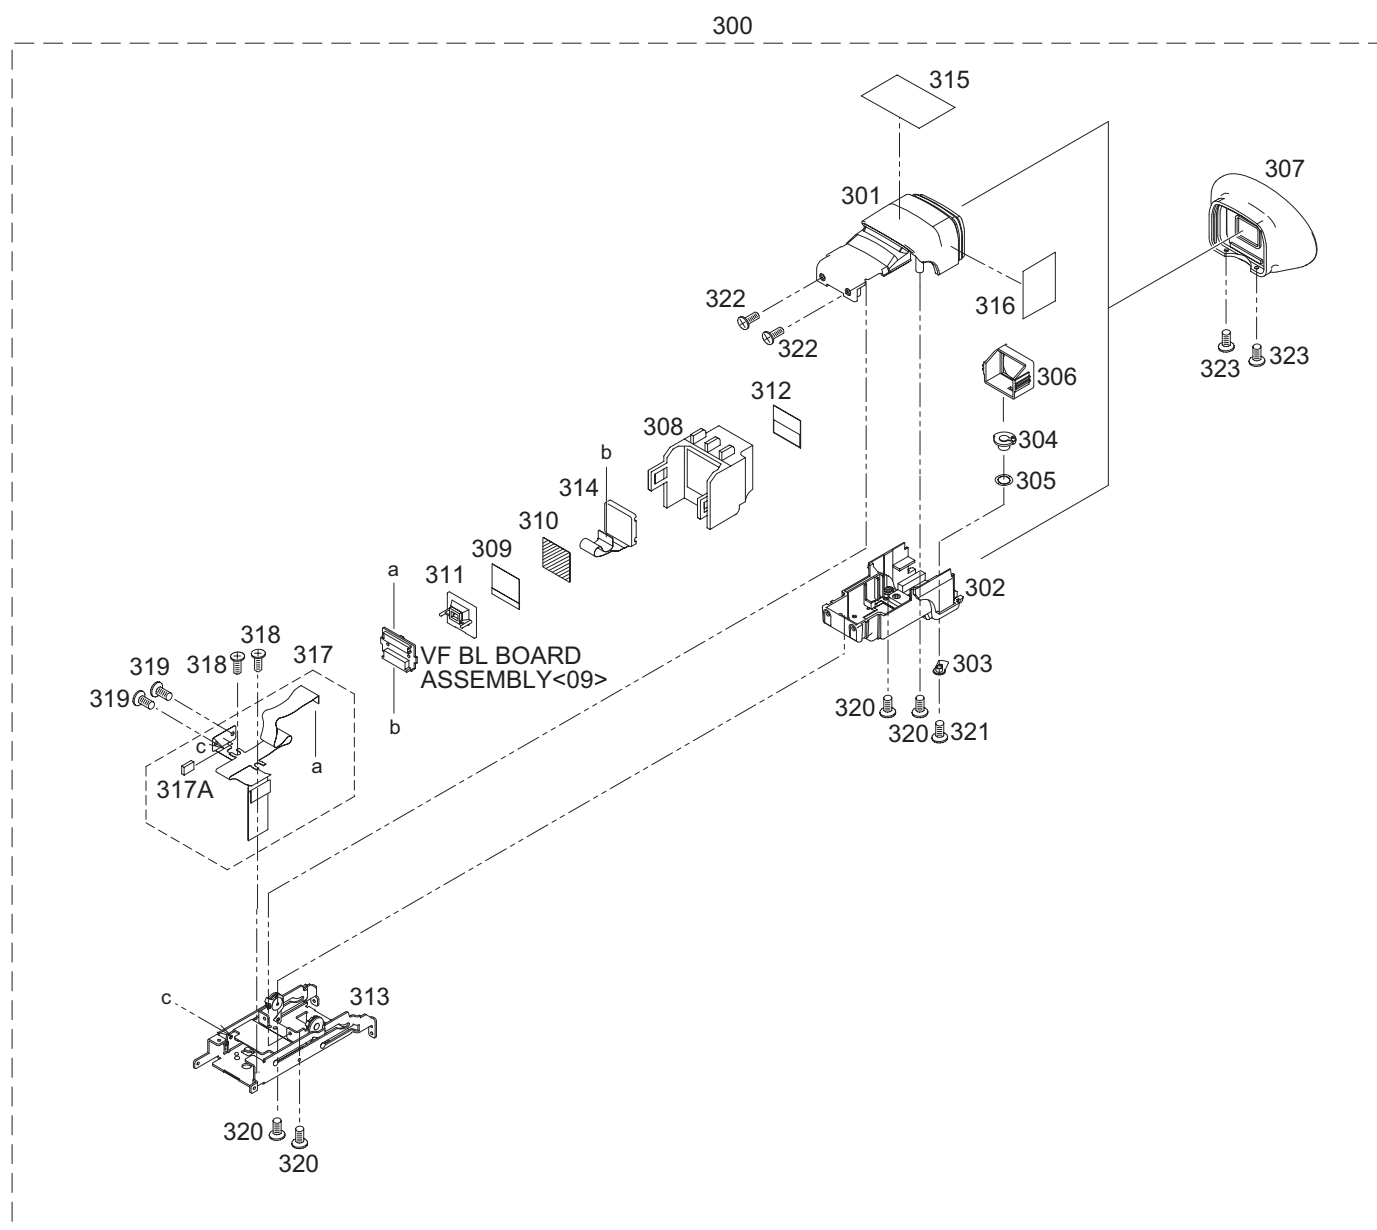

1.5 MONITOR ASSEMBLY <M5>

500

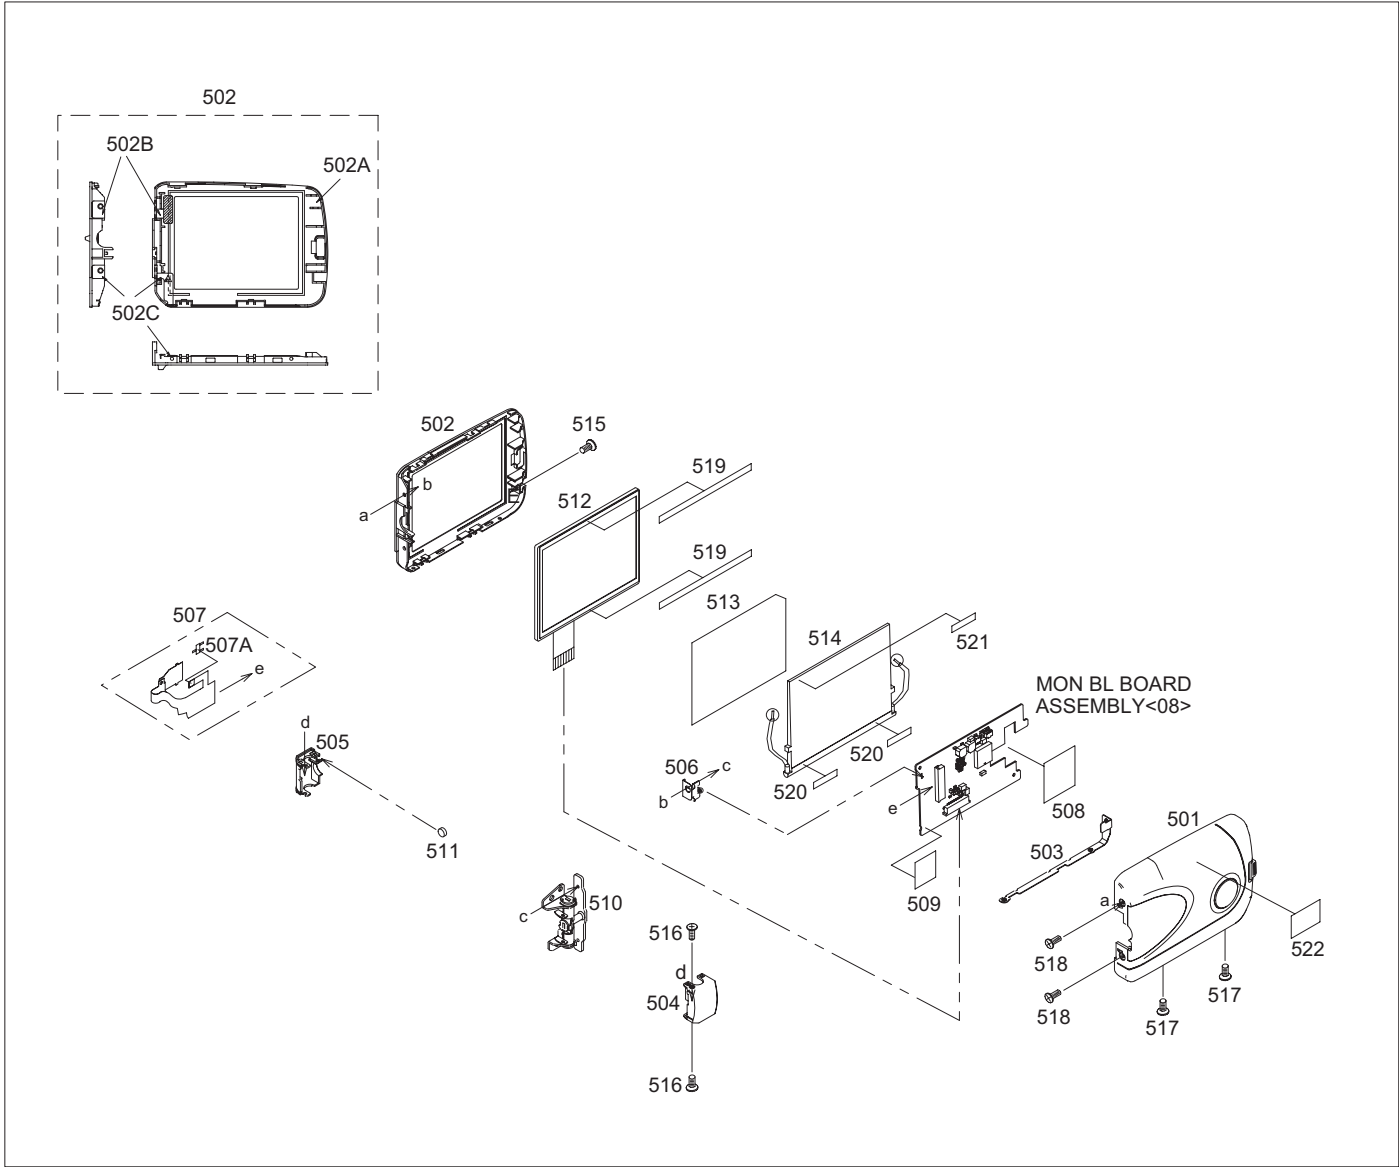

2. PARTS LIST

PACKING AND ACCESSORY ASSEMBLY <M1>

△ Symbol No.	Part No.	Part Name	Description	Local
1	LY33548-002A	PACKING CASE		
2	LY33165-001A	CUSHION		
3	LY33551-001A	CUSHION2		
4	LY33610-001A	CUSHION(SLEEVE)		
5	LY30030-0Q2A	SPACER(A)		
6	LY44314-001A	CUSHION(BLOCK)		
7	LY30030-0Q1A	SPACER(A)		
8	LY33622-001A	CUSHION3		
9	LY30023-031A	POLY BAG		
15	QPA02003506	POLY BAG	20cm x 35cm	
△ 16	LYT1154-001A	INST BOOK	(ENGLISH)	
△ 16	LYT1154-002A	INST BOOK	(FRENCH)	
△ 16	LYT1154-003A	INST BOOK	(SPANISH)	
17	LYT1155-001A	INST BOOK	(SOFT.ENGLISH)	
17	LYT1155-003A	INST BOOK	(SOFT.FRENCH)	
17	LYT1155-005A	INST BOOK	(SOFT.SPANISH)	
18	LYT1174-004A	SHEET(ATT.)		
19	BT-51005-6	WARRANTY INF.		
20	BT-51028-2	REGIST CARD		
21	BT-52006-2	WARRANTY CARD		
30	QPA01703005	POLY BAG	17cm x 30cm	
31	QAM0432-001	DC CABLE		
32	LY44207-002A	LABEL(CAUTION)		
33	QAM0465-001	D CABLE		
34	QAM0476-001	MULTI CABLE		
35	QAM0402-001	RM CABLE		
36	QAM0451-001	USB CABLE		
37	QAM0213-001	AUDIO CABLE	HP	
38	QAM0213-001	AUDIO CABLE	MIC	
39	LY33275-002A	LENS CAP ASSY		
40	LY33294-001B	HANDLE		
41	QAM0475-001	AUDIO CABLE		
42	LY30023-014A	POLY BAG		
43	QQR0491-002	FERRITE CORE	USB(x2)	
44	QQR0917-002	CORE FILTER	MIC	
45	QQR0917-002	CORE FILTER	HP	
46	QQR0919-002	CORE FILTER	DV	
47	QQR0491-002	FERRITE CORE	D	
48	QQR0917-002	CORE FILTER	DC	
49	-----	BATTERY	AAA(R03)(x2)	
50	LY21051-002A	SHOULDER STRAP		
51	LY32210-056A	CD ROM ASSY		
52	LY32210-043A	CD ROM ASSY		
53	QPA02503505P	POLY BAG	25cm x 35cm	
△ 54	LY32917-002A	BATT.PACK ASSY	BN-V428U	
55	LY20750-001A	REMOCON	RM-V717U	
55A	PTY20543-011	BATTERY COVER		
56	QAM0287-001	CLEANING TAPE	M-DV12CLAU	
△ 57	LY20591-001E	BATT.CHARG.ASSY	AA-V40U	
58	QAM0342-002	MEMORY CARD*		

*NOTE:

DATA FILE is not contained in MEMORY CARD of the service part.

FINAL ASSEMBLY <M2>

△ Symbol No.	Part No.	Part Name	Description	Local
101	LY30018-0K7A	SPECIAL SCREW	(x3)	
102	LY33142-001B	SHOE		
103	LY30018-0D5A	SPECIAL SCREW		
104	LY30018-080A	SPECIAL SCREW		
105	LY30018-0D5A	SPECIAL SCREW	(x2)	
106	LY33273-002A	TOP COVER ASSY		
107	LY30018-0J3A	SPECIAL SCREW	(x2)	
108	LY33143-001B	HOLDER(SHOE)		
109	LY30018-0D5A	SPECIAL SCREW		
110	LY30018-0D5A	SPECIAL SCREW		
111	LY30018-080A	SPECIAL SCREW		
112	LY30018-080A	SPECIAL SCREW	(x2)	
113	LY30018-080A	SPECIAL SCREW	(x2)	
114	LY30018-080A	SPECIAL SCREW		

△ Symbol No.	Part No.	Part Name	Description	Local
115	LY30018-064A	SPECIAL SCREW		
116	LY33456-001A	SPECIAL SCREW	(x2)	
117	LY30018-0D5A	SPECIAL SCREW		
118	LY30018-049A	SPECIAL SCREW	(x2)	
119	LY33595-001A	SHIELD(D.PWB)		
120	LY44233-001A	HEAT SHEET(1)		
121	LY44234-001A	HEAT SHEET(2)		
122	LY30018-049A	SPECIAL SCREW	(x2)	
123	LY30018-049A	SPECIAL SCREW		
124	LY30018-0K8A	SPECIAL SCREW	(x2)	
125	LY30018-0K8A	SPECIAL SCREW		
126	LY33547-001A	HEAT SINK		
127	LY30018-0H8A	SPECIAL SCREW	(x4)	
128	LY30018-0D5A	SPECIAL SCREW		
129	LY30018-0J4A	SPECIAL SCREW	(x2)	
130	LY30018-0E4A	SPECIAL SCREW	(x4)	
131	LY30030-0R3A	SPACER(A)		
△ 141	LY21011-002A	UPPER CASE ASSY		
141A	LY33137-001A	JACK COVER		
141B	LY33139-001A	HINGE BKT		
141C	LY33371-001B	PLATE(CONNECTOR)		
141D	LY40162-001A	BKT		
141E	LY44143-001A	SPACER(MONITOR)	(x2)	
141F	LY33138-001A	HINGE COVER		
141G	LY44049-001A	SHAFT		
141H	LY33281-001A	HOLD PLATE		
141J	LY43293-001A	SPRING		
141K	LY30018-020A	SPECIAL SCREW	(x2)	
141L	LY44242-001A	SHEET(UPPER)		
141M	LY30018-020A	SPECIAL SCREW	(x3)	
141N	LY30018-053A	SPECIAL SCREW	(x3)	
141P	LY30018-037A	SPECIAL SCREW		
141Q	LY33582-001A	SHIELD(DV)		
142	LY30018-0E5A	SPECIAL SCREW	(x3)	
143	LY30018-070A	SPECIAL SCREW	(x2)	
144	LY33129-001A	HINGE CASE(U)		
145	LY33130-001A	HINGE CASE(L)		
146	LY30018-0A2A	SPECIAL SCREW	(x2)	
147	LY41393-007A	COVER(JIG CONN)		
148	LY30018-063A	SPECIAL SCREW		
149	LY33393-001A	PAD(MONI)		
150	LY33155-001A	COVER(SLIDE)		
151	LY33266-001A	KNOB(SLIDE)ASSY		
151A	LY33152-001A	KNOB(SLIDE)		
151B	LY33156-001A	SLIDE BASE		
151C	LY33158-001A	PLATE(CLICK)		
151D	LY30018-063A	SPECIAL SCREW		
152	LY33154-001A	HOLDER(KNOB)		
153	LY33591-001A	SHIELD(CCD)		
154	LY33153-001A	BKT(SLIDE)ASSY		
155	LY30018-0C3A	SPECIAL SCREW	(x4)	
156	LY30018-020A	SPECIAL SCREW	(x4)	
157	LY33132-001B	KNOB(SLIDE)1		
158	LY33133-001B	KNOB(SLIDE)2		
159	LY42918-001B	SPACER(SPK)		
160	QAS0129-001	SPEAKER		
161	LY40301-001A	SPACER(SPK)		
162	LY30018-020A	SPECIAL SCREW	(x7)	
163	LY33590-001A	SHIELD(SPEAKER)		
164	LY33140-001A	SPEAKER BKT		
165	LY30018-020A	SPECIAL SCREW	(x2)	
166	WJT0097-001A	E-CARD WIRE		
167	LY30018-020A	SPECIAL SCREW		
168	LY30018-060A	SPECIAL SCREW		
169	LY44293-001A	SHEET(OPE PWB)		
170	LY30030-0D7B	SPACER(A)		
171	LY44299-001A	SPACER(GND)	(x2)	
181	LY33283-002B	GRIP CASE ASSY		
181A	LY10424-002B	GRIP CASE		
181B	LY33116-001A	WINDOW(IR)		
181C	LY30018-0H5A	SPECIAL SCREW		
182	LY40699-002A	LABEL(PUSH)		
183	LY32001-002A	LABEL(HOUSING)		
184	LY33272-001A	BKT(MECHA) ASSY		
184A	LY20969-001A	BKT(MECHA)		
184B	LY42796-001A	BUSH	(x3)	
185	LY30019-028A	SPECIAL SCREW	(x3)	

△ Symbol No.	Part No.	Part Name	Description	Local
186	LY30018-049A	SPECIAL SCREW	(x4)	
187	LY30018-049A	SPECIAL SCREW	(x2)	
188	QYSPSPT1414M	SCREW	1.4mm x 1.4mm(x2)	
189	LY44224-001B	SPACER(GR.WIRE)		
190	QYSPSPT1425M	SCREW	M1.4 x 2.5mm(x2)	
191	LY33270-001B	ROTARY GRIP ASSY		
192	LY30018-0H6A	SPECIAL SCREW	(x4)	
193	LY44305-001A	SHEET(RTY)		
194	QYSPSPT1425M	SCREW	M1.4 x 2.5mm(x2)	
195	LY33117-001A	WINDOW(TALLY)		
196	QAL0492-001	FPC		
197	LY33119-001A	BKT(PWB)		
198	LY30018-031A	SPECIAL SCREW	(x2)	
199	LY30018-0H6A	SPECIAL SCREW	(x2)	
200	LY44020-001A	WINDOW(LED)		
201	LY21069-002B	GRIP BELT ASSY		
202	LY30018-0H4A	SPECIAL SCREW	(x2)	
203	LY20970-002A	POWER OPE		
204	LY30018-0D5A	SPECIAL SCREW	(x2)	
205	LY30018-037A	SPECIAL SCREW		
206	LY21019-001B	ARM ASSY		
206A	LY33121-001A	LOCK(KNOB)		
206B	LY30001-029A	TENSION SPRING		
206C	LY33125-001A	FPC COVER(1)		
206D	LY33406-001A	SHEET(ARM)		
206E	LY33126-001A	FPC COVER(2)		
206F	LY30018-053A	SPECIAL SCREW	(x2)	
206G	LY33122-001A	PLATE(LOCK)		
206H	LY30017-032A	SPACER-B	(x2)	
207	LY33599-001A	SHIELD(P.OPE)		
208	LY33600-001A	SHIELD(E.PWB)		
209	LY20971-001A	ZOOM UNIT		
210	LY30018-0C3A	SPECIAL SCREW		
211	LY30018-0J5A	SPECIAL SCREW		
212	LY30018-0H6A	SPECIAL SCREW	(x4)	
213	LY33284-002B	C.COVER ASSY		
213A	LY10455-001B	C.COVER(LOW)		
213B	LY33115-001A	WINDOW(C.C)		
213C	LY44167-001A	SHEET(WINDOW-C.C)		
214	LY30018-0H5A	SPECIAL SCREW	(x5)	
215	LY33120-001B	PLATE(ADJ)		
216	LY30018-0H5A	SPECIAL SCREW		
225	LY10422-001A	FRAME		
226	LY30018-0E3A	SPECIAL SCREW	(x2)	
227	LYH20588-001B	MIC ASSY		
228	LY30018-0C3A	SPECIAL SCREW	(x2)	
△ 229	LYH20587-002A	REAR ASSY		
△ 229A	LY20976-002A	REAR UNIT		
229B	LY30018-060A	SPECIAL SCREW	(x4)	
230	LY30018-0C3A	SPECIAL SCREW		
231	LY33101-001A	HOLDER(PWB)		
232	QAL0455-001	GYRO SENSOR		
233	QAL0456-001	GYRO SENSOR		
234	QUQ105-10X6AA	FFC WIRE		
235	LY30018-0E3A	SPECIAL SCREW	(x2)	
236	LY30018-0E3A	SPECIAL SCREW	(x2)	
237	LY33607-001A	SPACER(EXP)		
238	LY30030-0D8B	SPACER(A)		
239	LY30030-0C7A	SPACER(A)		
240	LY30030-0C8A	SPACER(A)		
241	LY30018-0E3A	SPECIAL SCREW	(x2)	
242	LY44146-001A	OP BLOCK ASSY		
243	LY10401-001A	MAIN FRAME		
244	LY30727-002A	TAP SCREW	(x4)	
245	LY30018-0E7A	SPECIAL SCREW	(x2)	
247	LY44147-002A	OLPF		
248	LY44150-001A	SHEET		
249	LYH30375-010A	CCD BASE ASSY		
251	LY32976-001A	LEVER		
252	LY44148-001A	T.SPRING		
253	LY43924-001A	COVER		
254	LY30030-0C9A	SPACER(A)		
255	LY30030-0D1A	SPACER(A)		
256	LY33271-001A	OP BKT ASSY		
256A	LY33100-001A	OP BKT		
256B	LY42796-001A	BUSH	(x3)	
257	LY30019-029B	SPECIAL SCREW	(x3)	
258	LY30018-049A	SPECIAL SCREW	(x4)	

△ Symbol No.	Part No.	Part Name	Description	Local
259	LY33274-001A	HOOD ASSY		
260	LY20978-001A	FRONT COVER		
261	LY20982-001A	FOCUS RING		
262	LY20980-001B	FRONT HOLDER		
263	LY20983-001A	ZOOM RING		
264	LY33596-001A	SHIELD(FRONT)	(x4)	
265	LY20981-001A	BKT(FRONT)		
266	LY30018-0J2B	SPECIAL SCREW	(x4)	
267	LY30018-043B	SPECIAL SCREW	(x2)	
268	LY33467-002C	LOWER CASE ASSY		
268A	LY33106-001A	COVER(JACK)		
268B	LY33107-001A	COVER(MIC)		
269	LY30018-0E3A	SPECIAL SCREW	(x2)	
270	LY30018-0C3A	SPECIAL SCREW		
271	LY30018-0C3A	SPECIAL SCREW		
272	LY30018-0D5A	SPECIAL SCREW		
273	LY30018-0C3A	SPECIAL SCREW	(x2)	
274	LY33109-001A	HOLDER(SD)		
275	LY30018-0C3A	SPECIAL SCREW	(x2)	
276	LY33269-001D	SD COVER ASSY		
276A	LY33111-001A	BKT SD(1)		
276B	LY33113-001C	TORSION SPRING		
276C	LY33114-001A	SHAFT(SD.COVER)		
277	LY30018-0C3A	SPECIAL SCREW		
278	LY33293-001B	ORNAMENT		
279	LY30030-0R4A	SPACER(A)		
280	LY30030-0T9A	SPACER(A)		

MECHANISM ASSEMBLY <M3>

△ Symbol No.	Part No.	Part Name	Description	Local
400	YMA0029L	MECHA(A)ASSY		
401	LY31543-002H	C.HOUSING ASSY		
402	YQ43893-8	MINI SCREW	(x3)	
403	LY31542-001J	U.BASE ASSY		
404	QYSPSPU1425M	SCREW	1.4mm x 2.5mm	
405	YDV2096D	DRUM ASSY		
406	LY42820-001A	DAMP.SCREW ASSY	(x2)	
407	LY42820-002A	DAMP.SCREW ASSY		
408	LY31538-001F	R.DISK ASSY		
409	LY31538-002G	R.DISK ASSY		
410	YQ44246	SLIT WASHER	(x2)	
411	LY10217-001F	REEL COVER ASSY		
412	LY42120-002A	MINI SCREW		
413	LY41945-003A	MINI SCREW	(x2)	
414	YQ44246	SLIT WASHER		
415	LY42025-001C	TEN.ARM ASSY		
416	LY31535-001F	S.POLE ARM ASSY		
417	LY42031-001K	TU ARM ASSY		
418	LY31531-001D	SWING ARM ASSY		
419	YQ43893	MINI SCREW		
420	LY20530-003E	S.DECK F.ASSY		
421	YQ43893	MINI SCREW	(x2)	
422	LY43023-001A	MINI SCREW		
424	LY31533-001E	PAD ARM ASSY		
425	YQ44246	SLIT WASHER		
428	LY42016-001B	TU BRAKE ASSY		
429	YQ44246	SLIT WASHER		
430	LY41959-001B	T.C.LEVER ASSY		
431	LY31525-001B	CENTER GEAR		
432	LY31516-001F	P.R.ARM F.ASSY		
433	YQ44246	SLIT WASHER		
434	LY41956-001C	T.C.PLATE ASSY		
435	LY41962-001C	B.C.LEVER ASSY		
436	LY20525-002C	M.BRACKET ASSY		
436A	QAR0138-001	LOADING MOTOR		
436B	LY41940-001A	TAPPING SCREW	(x2)	
437	YQ43893	MINI SCREW	(x3)	
438	LY20528-001U	GUIDE RAIL ASSY		
439	YQ43893	MINI SCREW		
440	YQ44246	SLIT WASHER	(x2)	
441	LY31498-001D	SLIDE LEVER2 AS		
442	LY41965-001A	LOAD.PLATE ASSY		
443	YQ44246	SLIT WASHER		
444	LY31522-001B	EJECT LEVER		

△ Symbol No.	Part No.	Part Name	Description	Local
445	YQ44246	SLIT WASHER		
446	LY41929-001F	BASE R ASSY		
447	YQ43893	MINI SCREW		
448	LY41945-001B	MINI SCREW		
449	LY41930-001A	MODE GEAR		
450	QSW0876-003	ROTARY ENCODER		
451	YQ43893	MINI SCREW	(x2)	
452	LY31524-001A	G.COVER ASSY		
453	YQ43893	MINI SCREW	(x2)	
454	YQ43893-4	MINI SCREW		
455	LY41948-001C	MAIN CAM ASSY		
456	LY41941-001B	SLIDE ARM ASSY		
457	LY41951-001B	CONNECT GEAR 2		
458	LY41954-001C	SUB CAM ASSY		
459	LY42120-001A	MINI SCREW		
460	LY41952-001A	CTL.ARM ASSY		
461	LY31523-001B	REEL GEAR 1		
462	LY33372-001A	DRUM BASE ASSY		
463	QYSPSPU1425M	SCREW	1.4mm x 2.5mm(x3)	
464	QAR0142-001	CAPSTAN MOTOR		
465	YQ43893	MINI SCREW		
466	LY10210-001G	MAIN DECK ASSY		
476	YQ44246	SLIT WASHER		
479	LY43987-001B	SPACER		

ELECTRONIC VIEWFINDER ASSEMBLY <M4>

△ Symbol No.	Part No.	Part Name	Description	Local
300	LYH20592-002A	VF ASSY		
301	LY10431-001B	TOP COVER		
302	LY33279-001A	B.COVER ASSY		
303	LY43324-001A	LEVER(LENS)		
304	LY33167-001B	LINK(LENS)		
305	LY30017-036A	SPACER-B		
306	LY43325-001A	HOLD(LENS)ASSY		
307	LY20986-001B	EYE CUP		
308	LY33166-001B	LCD HOLDER		
309	LY43327-001A	SHEET(DIFFUSE)		
310	LY43328-001A	SHEET(PRISM)		
311	LY43343-001A	HOLDER(PWB)		
312	LY44152-001A	SHEET(VF)		
313	LY33280-001B	HOLDER(VF)ASSY		
314	QLD0117-002	LCD MODULE		
315	LY41701-004A	SHEET(CAUTION)1		
316	LY43041-001A	LABEL(VF)		
317	LY33290-001A	FPC ASSY(VF)		
317A	NSW0137-001	PUSH SWITCH		
318	LY30018-031A	SPECIAL SCREW	(x2)	
319	LY30018-031A	SPECIAL SCREW	(x2)	
320	LY30018-084A	SPECIAL SCREW	(x4)	
321	LY30018-037A	SPECIAL SCREW		
322	LY30018-067B	SPECIAL SCREW	(x2)	
323	LY30019-041A	SPECIAL SCREW	(x2)	

MONITOR ASSEMBLY <M5>

△ Symbol No.	Part No.	Part Name	Description	Local
△ 500	LYH20591-003A	MONITOR ASSY		
△ 501	LY33278-002A	M.COVER ASSY		
502	LY33404-001B	M.CASE ASSY		
502A	LY10430-001A	MONITOR CASE		
502B	LY44153-001A	SHEET(EARTH.1)		
502C	LY44154-001B	SHEET(EARTH.2)		

△ Symbol No.	Part No.	Part Name	Description	Local
503	LY33148-001A	BKT(MONITOR)		
504	LY33144-001A	HINGE COVER(U)		
505	LY33145-001A	HINGE COVER(L)		
506	LY33151-001A	SHIELD PLATE		
507	LY33289-001A	FPC ASSY(MONI)		
507A	DN8797MS-X	IC		
508	LY30030-0D9B	SPACER(A)		
509	LY44291-001A	SPACER		
510	LY32017-001C	HINGE ASSY		
511	LY42355-001A	MAGNET		
512	QLD0115-003	LCD MODULE		
513	LY44198-002A	D BEF SHEET		
514	QLL0148-001	BACK LIGHT		
515	LY30018-070A	SPECIAL SCREW		
516	LY30018-0A2A	SPECIAL SCREW	(x2)	
517	LY30018-064A	SPECIAL SCREW	(x2)	
518	LY30018-042A	SPECIAL SCREW	(x2)	
519	LY44268-001A	MONITOR SPACER	(x2)	
520	LY30030-0N6A	SPACER(A)	(x2)	
521	LY30030-0R8A	SPACER(A)		
522	LY44392-001A	STICKER		

DIGITAL BOARD ASSEMBLY <01>

△ Symbol No.	Part No.	Part Name	Description	Local
PW1	YB10407B-03	DIGITAL BOARD ASSY		
IC1001	UPD703038F1-A28	IC(MICRO C ROM)		
IC1001	or UPD70F3038FA28A	IC(MICRO C ROM)		
IC1001	or UPD70F3038F1A28	IC(MICRO C ROM)		
IC1003	25LC640X-I/ST-X	IC		
IC1006	MB90097PFV151-X	IC(MICRO C ROM)		
IC1007	SN74AHC1G08K-X	IC		
IC1008	IC-PST3423U-X	IC		
IC2101	AK4550VT-X	IC		
IC3001	JCY0172	IC	BGA 304pin	
IC3002	JCY0136-X	IC		
IC3201	JCY0173	IC		
IC3202	K4S641633F-RN75	IC		
IC3203	MM1612EN-X	IC		
IC3601	JCP8039	IC		
IC3651	NJM2580M-X	IC		
IC3652	SN74AHC2G53T-X	IC		
IC3701	BA7665FS-X	IC		
IC3701	or BA7665AFS-X	IC		
IC3801	JCP8045	IC		
IC3851	MM1504XN-X	IC		
IC4201	HD49340HNP-X	IC		
IC4202	MM1613BN-X	IC		
IC4301	YQ44920A	CSP IC ASSY		
IC5001	JCY0178	IC		
IC5002	W194-70G-X	IC		
IC5003	MM1613FN-X	IC		
IC8001	NLC0459APB	IC		
IC8002	BU2288FV-X	IC		
IC8003	SN74AHC1G08K-X	IC		
IC8201	MBV160BE90PBA01	IC(MICRO C ROM)		
IC8201	or MBV160BE70PBA01	IC(MICRO C ROM)		
IC8202	EDS1232AABB-60T	IC		
IC8203	EDS1232AABB-60T	IC		
IC8301	ISP1181ABS	IC		
IC8302	S-80842CNNB-W	IC		
IC8501	MN5774	IC		
IC8801	PDI1394P25BD	IC		

Q1001	DTC124EE-X	DIGI TRANSISTOR
Q1002	2SC4617/RS/-X	TRANSISTOR
Q1003	DTC143EE-X	DIGI TRANSISTOR
Q1004	DTC143XE-X	DIGI TRANSISTOR
Q1007	DTC143XE-X	DIGI TRANSISTOR
Q3001	2SC4617/RS/-X	TRANSISTOR
Q3002	2SC4617/RS/-X	TRANSISTOR
Q3601	2SA1774/RS/-X	TRANSISTOR
Q3602	UMT1N-W	PAIR TRANSISTOR

△ Symbol No.	Part No.	Part Name	Description	Local	△ Symbol No.	Part No.	Part Name	Description	Local
Q3602	or PUMT1-W	PAIR TRANSISTOR			C3013	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
Q3651	UMT1N-W	PAIR TRANSISTOR			C3014	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
Q3651	or PUMT1-W	PAIR TRANSISTOR			C3015	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K	
Q3654	UMZ1N-W	PAIR TRANSISTOR			C3016	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
Q3654	or XP4601-W	TRANSISTOR			C3017	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
Q3655	UMC3N-W	DIGI TRANSISTOR			C3018	NDCA1EJ-271W	C CAPACITOR	270pF 25V J	
Q3656	UMZ1N-W	PAIR TRANSISTOR			C3019	NCBA1EK-472W	C CAPACITOR	4700pF 25V K	
Q3656	or XP4601-W	TRANSISTOR			C3020	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K	
Q3701	UMZ1N-W	PAIR TRANSISTOR			C3021	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K	
Q3701	or XP4601-W	TRANSISTOR			C3022	NCB31CK-473X	C CAPACITOR	0.047uF 16V K	
Q3801	UMT1N-W	PAIR TRANSISTOR			C3023	NCBA1HK-222W	C CAPACITOR	2200pF 50V K	
Q3801	or PUMT1-W	PAIR TRANSISTOR			C3024	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
Q3802	2SA1774/RS/-X	TRANSISTOR			C3025	NCBA1HK-102W	C CAPACITOR	1000pF 50V K	
Q3803	UMT1N-W	PAIR TRANSISTOR			C3026	NCBA1HK-102W	C CAPACITOR	1000pF 50V K	
Q3803	or PUMT1-W	PAIR TRANSISTOR			C3027	NDCA1HJ-120W	C CAPACITOR	12pF 50V J	
Q3851	2SC4617/RS/-X	TRANSISTOR			C3028	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
Q3852	DTC144EE-X	DIGI TRANSISTOR			C3029	NDCA1HJ-8R0W	C CAPACITOR	8pF 50V J	
Q3853	UMZ1N-W	PAIR TRANSISTOR			C3030	NDCA1HJ-8R0W	C CAPACITOR	8pF 50V J	
Q3853	or XP4601-W	TRANSISTOR			C3032	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
Q3854	2SC4617/RS/-X	TRANSISTOR			C3033	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
Q3855	UMZ1N-W	PAIR TRANSISTOR			C3034	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
Q3855	or XP4601-W	TRANSISTOR			C3035	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K	
D1001	DA221-X	DIODE ARRAY			C3036	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
D1002	1SS376-X	SI DIODE			C3037	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K	
D3001	EC2C01C-X	VARI CAP DIODE			C3038	NBE90GM-226X	TA E CAPACITOR	22uF 4V M	
D3002	EC2C01C-X	VARI CAP DIODE			C3039	NBG40GM-226X	TA E CAPACITOR	22uF 4V M	
D3201	EC2C01C-X	VARI CAP DIODE			C3051	NCBA1HK-102W	C CAPACITOR	1000pF 50V K	
D5001	1SS355-X	SI DIODE			C3053	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
D8301	1SS355-X	SI DIODE			C3054	NCBA1AK-473W	C CAPACITOR	0.047uF 10V K	
D8301	or MA111-X	SI DIODE			C3055	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K	
D8801	MA2Z720-X	SB DIODE			C3201	NBE90GM-226X	TA E CAPACITOR	22uF 4V M	
C1004	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K		C3202	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
C1005	NBZ0015-106X	TA E CAPACITOR	10uF 6.3V M		C3203	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K	
C1007	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K		C3204	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
C1008	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K		C3205	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
C1009	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K		C3206	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K	
C1010	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K		C3207	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K	
C1011	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K		C3208	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
C1012	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K		C3209	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
C1013	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K		C3210	NBZ0015-106X	TA E CAPACITOR	10uF 6.3V M	
C1014	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K		C3212	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
C1015	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K		C3213	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
C1017	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K		C3214	NDCA1HJ-101W	C CAPACITOR	100pF 50V J	
C1018	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K		C3215	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
C1019	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K		C3216	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
C1023	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K		C3219	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K	
C1025	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K		C3220	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K	
C1026	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K		C3221	NDCA1HJ-8R0W	C CAPACITOR	8pF 50V J	
C1028	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K		C3222	NCBA1HK-102W	C CAPACITOR	1000pF 50V K	
C1029	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K		C3223	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
C1030	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K		C3224	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
C1031	NCB30JK-105X	C CAPACITOR	1uF 6.3V K		C3225	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
C1034	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K		C3226	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
C1036	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K		C3227	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
C1037	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K		C3228	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K	
C1038	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K		C3601	NCB21CK-105X	C CAPACITOR	1uF 16V K	
C2101	NCB30JK-105X	C CAPACITOR	1uF 6.3V K		C3602	NBZ0015-106X	TA E CAPACITOR	10uF 6.3V M	
C2102	NCB30JK-105X	C CAPACITOR	1uF 6.3V K		C3603	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K	
C2105	NDCA1HJ-151W	C CAPACITOR	150pF 50V J		C3604	NBE20GM-476X	TA E CAPACITOR	47uF 4V M	
C2106	NDCA1HJ-151W	C CAPACITOR	150pF 50V J		C3605	NDCA1HJ-820W	C CAPACITOR	82pF 50V J	
C2107	NBZ0015-106X	TA E CAPACITOR	10uF 6.3V M		C3606	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K	
C2108	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K		C3607	NDCA1HJ-820W	C CAPACITOR	82pF 50V J	
C2109	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K		C3608	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K	
C2110	NBE20JM-475X	TA E CAPACITOR	4.7uF 6.3V M		C3609	NDCA1HJ-820W	C CAPACITOR	82pF 50V J	
C3001	NCB30JK-105X	C CAPACITOR	1uF 6.3V K		C3610	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
C3002	NBZ0015-106X	TA E CAPACITOR	10uF 6.3V M		C3613	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K	
C3003	NCB10JK-106X	C CAPACITOR	10uF 6.3V K		C3614	NDCA1HJ-121W	C CAPACITOR	120pF 50V J	
C3004	NBZ0015-106X	TA E CAPACITOR	10uF 6.3V M		C3615	NDCA1HJ-560W	C CAPACITOR	56pF 50V J	
C3005	NCB30JK-105X	C CAPACITOR	1uF 6.3V K		C3616	NDCA1HJ-121W	C CAPACITOR	120pF 50V J	
C3006	NCB30JK-105X	C CAPACITOR	1uF 6.3V K		C3617	NDCA1HJ-560W	C CAPACITOR	56pF 50V J	
C3007	NBZ0015-106X	TA E CAPACITOR	10uF 6.3V M		C3618	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
C3008	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K		C3619	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K	
C3009	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K		C3620	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K	
C3010	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K		C3621	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K	
C3011	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K		C3622	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
C3012	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K		C3623	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
					C3624	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
					C3625	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	

△ Symbol No.	Part No.	Part Name	Description	Local	△ Symbol No.	Part No.	Part Name	Description	Local
C3626	NCB30JK-105X	C CAPACITOR	1uF 6.3V K		C4210	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
C3627	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K		C4211	NCB21CK-105X	C CAPACITOR	1uF 16V K	
C3628	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K		C4212	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
C3629	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K		C4213	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
C3651	NBZ0015-106X	TA E CAPACITOR	10uF 6.3V M		C4214	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
C3652	NDCA1HJ-100W	C CAPACITOR	10pF 50V J		C4215	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
C3653	NDCA1HJ-220W	C CAPACITOR	22pF 50V J		C4216	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
C3654	NDCA1HJ-470W	C CAPACITOR	47pF 50V J		C4217	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
C3655	NDCA1HJ-220W	C CAPACITOR	22pF 50V J		C4218	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
C3656	NDCA1HJ-5R0W	C CAPACITOR	5pF 50V J		C4301	NBZ0015-106X	TA E CAPACITOR	10uF 6.3V M	
C3657	NDCA1HJ-8R0W	C CAPACITOR	8pF 50V J		C4302	NBZ0015-106X	TA E CAPACITOR	10uF 6.3V M	
C3658	NDCA1HJ-180W	C CAPACITOR	18pF 50V J		C4303	NBZ0015-106X	TA E CAPACITOR	10uF 6.3V M	
C3659	NDCA1HJ-5R0W	C CAPACITOR	5pF 50V J		C4304	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
C3660	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K		C4305	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
C3661	NCB10JK-106X	C CAPACITOR	10uF 6.3V K		C4306	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
C3662	NCB10JK-106X	C CAPACITOR	10uF 6.3V K		C4307	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
C3663	NCB10JK-106X	C CAPACITOR	10uF 6.3V K		C4308	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
C3665	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K		C4309	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K	
C3666	NBE90GM-226X	TA E CAPACITOR	22uF 4V M		C4310	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K	
C3667	NBE20GM-107X	TA E CAPACITOR	100uF 4V M		C4311	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
C3673	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K		C4312	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K	
C3701	NBZ0015-106X	TA E CAPACITOR	10uF 6.3V M		C4313	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
C3702	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K		C4314	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K	
C3703	NCB30JK-105X	C CAPACITOR	1uF 6.3V K		C4315	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K	
C3704	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K		C5001	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
C3705	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K		C5002	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K	
C3706	NBE90GM-226X	TA E CAPACITOR	22uF 4V M		C5003	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
C3707	NBE20GM-107X	TA E CAPACITOR	100uF 4V M		C5004	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
C3708	NBE90GM-226X	TA E CAPACITOR	22uF 4V M		C5005	NBZ0015-106X	TA E CAPACITOR	10uF 6.3V M	
C3709	NBE20GM-107X	TA E CAPACITOR	100uF 4V M		C5006	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
C3801	NCB30JK-105X	C CAPACITOR	1uF 6.3V K		C5007	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
C3802	NCB30JK-105X	C CAPACITOR	1uF 6.3V K		C5008	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
C3803	NBZ0015-106X	TA E CAPACITOR	10uF 6.3V M		C5009	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
C3804	NBE20GM-476X	TA E CAPACITOR	47uF 4V M		C5010	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
C3805	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K		C5011	NBZ0015-106X	TA E CAPACITOR	10uF 6.3V M	
C3806	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K		C5012	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
C3807	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K		C5013	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
C3808	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K		C5014	NBZ0015-106X	TA E CAPACITOR	10uF 6.3V M	
C3809	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K		C5016	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
C3810	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K		C5017	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
C3811	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K		C5019	NBZ0018-106X	TA E CAPACITOR	10uF 20V M	
C3812	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K		C5021	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
C3813	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K		C5023	NBE41AM-106X	TA E CAPACITOR	10uF 10V M	
C3814	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K		C5025	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
C3815	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K		C5026	NBP21VM-105X	TA E CAPACITOR	1uF 35V M	
C3816	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K		C5027	NDCA1HJ-470W	C CAPACITOR	47pF 50V J	
C3817	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K		C8001	NBE20GM-476X	TA E CAPACITOR	47uF 4V M	
C3818	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K		C8002	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K	
C3819	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K		C8003	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K	
C3821	NDCA1HJ-121W	C CAPACITOR	120pF 50V J		C8004	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K	
C3822	NDCA1HJ-560W	C CAPACITOR	56pF 50V J		C8005	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K	
C3823	NDCA1HJ-151W	C CAPACITOR	150pF 50V J		C8006	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
C3824	NDCA1HJ-560W	C CAPACITOR	56pF 50V J		C8007	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K	
C3825	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K		C8008	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K	
C3851	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K		C8009	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K	
C3852	NCBA1HK-102W	C CAPACITOR	1000pF 50V K		C8010	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K	
C3853	NDCA1HJ-3R0W	C CAPACITOR	3pF 50V J		C8011	NBZ0015-106X	TA E CAPACITOR	10uF 6.3V M	
C3854	NDCA1HJ-5R0W	C CAPACITOR	5pF 50V J		C8012	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C3855	NDCA1HJ-330W	C CAPACITOR	33pF 50V J		C8013	NCBA1HK-102W	C CAPACITOR	1000pF 50V K	
C3856	NCBA1HK-102W	C CAPACITOR	1000pF 50V K		C8017	NBZ0015-106X	TA E CAPACITOR	10uF 6.3V M	
C3858	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K		C8018	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K	
C3860	NCB30JK-105X	C CAPACITOR	1uF 6.3V K		C8019	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K	
C3861	NCB30JK-105X	C CAPACITOR	1uF 6.3V K		C8020	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K	
C3862	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K		C8021	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K	
C3863	NDCA1HJ-3R0W	C CAPACITOR	3pF 50V J		C8022	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K	
C3864	NDCA1HJ-5R0W	C CAPACITOR	5pF 50V J		C8023	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
C3865	NDCA1HJ-330W	C CAPACITOR	33pF 50V J		C8024	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K	
C3866	NCB20JM-475X	C CAPACITOR	4.7uF 6.3V M		C8025	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K	
C3868	NBZ0015-106X	TA E CAPACITOR	10uF 6.3V M		C8201	NBZ0015-106X	TA E CAPACITOR	10uF 6.3V M	
C4201	NCB30JK-105X	C CAPACITOR	1uF 6.3V K		C8202	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K	
C4202	NCB30JK-105X	C CAPACITOR	1uF 6.3V K		C8203	NCB21CK-105X	C CAPACITOR	1uF 16V K	
C4203	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K		C8204	NBG40GM-226X	TA E CAPACITOR	22uF 4V M	
C4204	NBE20GM-476X	TA E CAPACITOR	47uF 4V M		C8205	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
C4205	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K		C8207	NCBA1HK-102W	C CAPACITOR	1000pF 50V K	
C4206	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K		C8211	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K	
C4207	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K		C8219	NBG40GM-226X	TA E CAPACITOR	22uF 4V M	
C4208	NCBA1CK-123W	C CAPACITOR	0.012uF 16V K		C8220	NCB21CK-105X	C CAPACITOR	1uF 16V K	
C4209	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K		C8224	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K	

△ Symbol No.	Part No.	Part Name	Description	Local	△ Symbol No.	Part No.	Part Name	Description	Local
C8226	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K		R2103	NRSA6AJ-333W	MG RESISTOR	33kΩ 1/16W J	
C8227	NCBA1HK-102W	C CAPACITOR	1000pF 50V K		R2104	NRSA6AJ-333W	MG RESISTOR	33kΩ 1/16W J	
C8301	NBZ0015-106X	TA E CAPACITOR	10uF 6.3V M		R2110	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
C8305	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K		R2111	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
C8306	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K		R2112	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
C8307	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K		R3001	NRSA6AJ-102W	MG RESISTOR	1kΩ 1/16W J	
C8310	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K		R3003	NRSA6AJ-103W	MG RESISTOR	10kΩ 1/16W J	
C8311	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K		R3004	NRSA6AJ-103W	MG RESISTOR	10kΩ 1/16W J	
C8501	NBZ0015-106X	TA E CAPACITOR	10uF 6.3V M		R3005	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
C8502	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K		R3006	NRSA6AJ-101W	MG RESISTOR	100Ω 1/16W J	
C8503	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K		R3007	NRSA6AJ-562W	MG RESISTOR	5.6kΩ 1/16W J	
C8504	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K		R3008	NRSA6AJ-222W	MG RESISTOR	2.2kΩ 1/16W J	
C8801	NBZ0015-106X	TA E CAPACITOR	10uF 6.3V M		R3009	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
C8802	NBZ0015-106X	TA E CAPACITOR	10uF 6.3V M		R3010	NRSA6AJ-100W	MG RESISTOR	10Ω 1/16W J	
C8803	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K		R3011	NRSA6AJ-102W	MG RESISTOR	1kΩ 1/16W J	
C8804	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K		R3012	NRSA6AJ-560W	MG RESISTOR	56Ω 1/16W J	
C8805	NCB30JK-105X	C CAPACITOR	1uF 6.3V K		R3013	NRSA6AJ-560W	MG RESISTOR	56Ω 1/16W J	
C8806	NDCA1EJ-271W	C CAPACITOR	270pF 25V J		R3014	NRSA6AJ-560W	MG RESISTOR	56Ω 1/16W J	
C8807	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K		R3015	NRSA6AJ-560W	MG RESISTOR	56Ω 1/16W J	
C8808	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K		R3016	NRSA6AJ-512W	MG RESISTOR	5.1kΩ 1/16W J	
C8809	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K		R3017	NRSA6AJ-242W	MG RESISTOR	2.4kΩ 1/16W J	
R1001	NRSA6AJ-104W	MG RESISTOR	100kΩ 1/16W J		R3018	NRSA6AJ-392W	MG RESISTOR	3.9kΩ 1/16W J	
R1002	NRSA6AJ-224W	MG RESISTOR	220kΩ 1/16W J		R3019	NRSA6AJ-392W	MG RESISTOR	3.9kΩ 1/16W J	
R1003	NRSA6AJ-472W	MG RESISTOR	4.7kΩ 1/16W J		R3020	NRSA6AJ-103W	MG RESISTOR	10kΩ 1/16W J	
R1006	NRSA6AJ-103W	MG RESISTOR	10kΩ 1/16W J		R3021	NRSA6AJ-681W	MG RESISTOR	680Ω 1/16W J	
R1007	NRSA6AJ-334W	MG RESISTOR	330kΩ 1/16W J		R3022	NRSA6AJ-103W	MG RESISTOR	10kΩ 1/16W J	
R1010	NRSA6AJ-471W	MG RESISTOR	470Ω 1/16W J		R3023	NRSA6AJ-822W	MG RESISTOR	8.2kΩ 1/16W J	
R1015	NRSA6AJ-474W	MG RESISTOR	470kΩ 1/16W J		R3024	NRSA6AJ-224W	MG RESISTOR	220kΩ 1/16W J	
R1018	NRSA6AJ-103W	MG RESISTOR	10kΩ 1/16W J		R3025	NRSA6AJ-224W	MG RESISTOR	220kΩ 1/16W J	
R1025	NRSA6AJ-104W	MG RESISTOR	100kΩ 1/16W J		R3026	NRSA6AJ-105W	MG RESISTOR	1MΩ 1/16W J	
R1026	NRSA6AJ-472W	MG RESISTOR	4.7kΩ 1/16W J		R3027	NRSA6AJ-471W	MG RESISTOR	470Ω 1/16W J	
R1029	NRSA6AJ-473W	MG RESISTOR	47kΩ 1/16W J		R3028	NRSA6AJ-222W	MG RESISTOR	2.2kΩ 1/16W J	
R1030	NRSA6AJ-104W	MG RESISTOR	100kΩ 1/16W J		R3029	NRSA6AJ-100W	MG RESISTOR	10Ω 1/16W J	
R1035	NRSA6AJ-473W	MG RESISTOR	47kΩ 1/16W J		R3030	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R1037	NRSA6AJ-103W	MG RESISTOR	10kΩ 1/16W J		R3031	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R1039	NRSA6AJ-103W	MG RESISTOR	10kΩ 1/16W J		R3051	NRSA6AJ-103W	MG RESISTOR	10kΩ 1/16W J	
R1044	NRSA6AJ-123W	MG RESISTOR	12kΩ 1/16W J		R3052	NRSA6AJ-821W	MG RESISTOR	820Ω 1/16W J	
R1045	NRSA6AJ-822W	MG RESISTOR	8.2kΩ 1/16W J		R3053	NRSA6AJ-821W	MG RESISTOR	820Ω 1/16W J	
R1046	NRSA6AJ-103W	MG RESISTOR	10kΩ 1/16W J		R3054	NRSA6AJ-181W	MG RESISTOR	180Ω 1/16W J	
R1048	NRSA6AJ-104W	MG RESISTOR	100kΩ 1/16W J		R3055	NRSA6AJ-332W	MG RESISTOR	3.3kΩ 1/16W J	
R1049	NRSA6AJ-393W	MG RESISTOR	39kΩ 1/16W J		R3056	NRSA6AJ-102W	MG RESISTOR	1kΩ 1/16W J	
R1050	NRSA6AJ-223W	MG RESISTOR	22kΩ 1/16W J		R3201	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R1051	NRSA6AJ-272W	MG RESISTOR	2.7kΩ 1/16W J		R3204	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R1052	NRSA6AJ-183W	MG RESISTOR	18kΩ 1/16W J		R3205	NRSA6AJ-470W	MG RESISTOR	47Ω 1/16W J	
R1053	NRSA6AJ-154W	MG RESISTOR	150kΩ 1/16W J		R3206	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R1054	NRSA6AJ-473W	MG RESISTOR	47kΩ 1/16W J		R3207	NRSA6AJ-470W	MG RESISTOR	47Ω 1/16W J	
R1055	NRSA6AJ-103W	MG RESISTOR	10kΩ 1/16W J		R3208	NRSA6AJ-103W	MG RESISTOR	10kΩ 1/16W J	
R1056	NRSA6AJ-472W	MG RESISTOR	4.7kΩ 1/16W J		R3211	NRSA6AJ-101W	MG RESISTOR	100Ω 1/16W J	
R1058	NRSA6AJ-222W	MG RESISTOR	2.2kΩ 1/16W J		R3213	NRSA6AJ-470W	MG RESISTOR	47Ω 1/16W J	
R1060	NRSA6AJ-473W	MG RESISTOR	47kΩ 1/16W J		R3214	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R1066	NRSA6AJ-473W	MG RESISTOR	47kΩ 1/16W J		R3215	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R1072	NRSA6AJ-104W	MG RESISTOR	100kΩ 1/16W J		R3217	NRSA6AJ-103W	MG RESISTOR	10kΩ 1/16W J	
R1081	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J		R3218	NRSA6AJ-103W	MG RESISTOR	10kΩ 1/16W J	
R1082	NRSA6AJ-473W	MG RESISTOR	47kΩ 1/16W J		R3219	NRSA6AJ-224W	MG RESISTOR	220kΩ 1/16W J	
R1083	NRSA6AJ-473W	MG RESISTOR	47kΩ 1/16W J		R3220	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R1084	NRSA6AJ-473W	MG RESISTOR	47kΩ 1/16W J		R3221	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R1085	NRSA6AJ-473W	MG RESISTOR	47kΩ 1/16W J		R3222	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R1088	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J		R3223	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R1089	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J		R3225	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R1090	NRSA6AJ-223W	MG RESISTOR	22kΩ 1/16W J		R3601	NRSA6AD-333W	MG RESISTOR	33kΩ 1/16W D	
R1091	NRSA6AJ-333W	MG RESISTOR	33kΩ 1/16W J		R3602	NRSA6AD-153W	MG RESISTOR	15kΩ 1/16W D	
R1092	NRSA6AJ-223W	MG RESISTOR	22kΩ 1/16W J		R3603	NRSA6AD-821W	MG RESISTOR	820Ω 1/16W D	
R1093	NRSA6AJ-333W	MG RESISTOR	33kΩ 1/16W J		R3604	NRSA6AD-821W	MG RESISTOR	820Ω 1/16W D	
R1094	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J		R3605	NRSA6AD-821W	MG RESISTOR	820Ω 1/16W D	
R1095	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J		R3606	NRSA6AD-181W	MG RESISTOR	180Ω 1/16W D	
R1096	NRSA6AJ-104W	MG RESISTOR	100kΩ 1/16W J		R3607	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R1097	NRSA6AJ-104W	MG RESISTOR	100kΩ 1/16W J		R3608	NRSA6AJ-561W	MG RESISTOR	560Ω 1/16W J	
R1098	NRSA6AJ-104W	MG RESISTOR	100kΩ 1/16W J		R3609	NRSA6AD-101W	MG RESISTOR	100Ω 1/16W D	
R1099	NRSA6AJ-102W	MG RESISTOR	1kΩ 1/16W J		R3610	NRSA6AJ-101W	MG RESISTOR	100Ω 1/16W J	
R1100	NRSA6AJ-102W	MG RESISTOR	1kΩ 1/16W J		R3611	NRSA6AJ-102W	MG RESISTOR	1kΩ 1/16W J	
R1101	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J		R3612	NRSA6AJ-102W	MG RESISTOR	1kΩ 1/16W J	
R1102	NRSA6AD-103W	MG RESISTOR	10kΩ 1/16W D		R3613	NRSA6AJ-101W	MG RESISTOR	100Ω 1/16W J	
R1103	NRSA6AJ-103W	MG RESISTOR	10kΩ 1/16W J		R3614	NRSA6AD-101W	MG RESISTOR	100Ω 1/16W D	
R1104	NRSA6AJ-103W	MG RESISTOR	10kΩ 1/16W J		R3615	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R1105	NRSA6AJ-103W	MG RESISTOR	10kΩ 1/16W J		R3616	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R2101	NRSA6AJ-393W	MG RESISTOR	39kΩ 1/16W J		R3617	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R2102	NRSA6AJ-393W	MG RESISTOR	39kΩ 1/16W J		R3618	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
					R3619	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	

△ Symbol No.	Part No.	Part Name	Description	Local	△ Symbol No.	Part No.	Part Name	Description	Local
R3620	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J		R4301	NRSA6AJ-100W	MG RESISTOR	10Ω 1/16W J	
R3651	NRSA6AD-271W	MG RESISTOR	270Ω 1/16W D		R4303	NRSA6AJ-301W	MG RESISTOR	300Ω 1/16W J	
R3652	NRSA6AJ-152W	MG RESISTOR	1.5kΩ 1/16W J		R4304	NRSA6AJ-100W	MG RESISTOR	10Ω 1/16W J	
R3653	NRSA6AJ-152W	MG RESISTOR	1.5kΩ 1/16W J		R4305	NRSA6AJ-100W	MG RESISTOR	10Ω 1/16W J	
R3654	NRSA6AD-102W	MG RESISTOR	1kΩ 1/16W D		R4306	NRSA6AJ-100W	MG RESISTOR	10Ω 1/16W J	
R3655	NRSA6AD-271W	MG RESISTOR	270Ω 1/16W D		R4308	NRSA6AJ-301W	MG RESISTOR	300Ω 1/16W J	
R3656	NRSA6AJ-152W	MG RESISTOR	1.5kΩ 1/16W J		R4310	NRSA6AJ-101W	MG RESISTOR	100Ω 1/16W J	
R3657	NRSA6AJ-222W	MG RESISTOR	2.2kΩ 1/16W J		R4311	NRSA6AJ-101W	MG RESISTOR	100Ω 1/16W J	
R3658	NRSA6AD-102W	MG RESISTOR	1kΩ 1/16W D		R4312	NRSA6AJ-101W	MG RESISTOR	100Ω 1/16W J	
R3659	NRSA6AJ-222W	MG RESISTOR	2.2kΩ 1/16W J		R4313	NRSA6AJ-101W	MG RESISTOR	100Ω 1/16W J	
R3660	NRSA6AJ-222W	MG RESISTOR	2.2kΩ 1/16W J		R4314	NRSA6AJ-101W	MG RESISTOR	100Ω 1/16W J	
R3665	NRSA6AJ-105W	MG RESISTOR	1MΩ 1/16W J		R4315	NRSA6AJ-100W	MG RESISTOR	10Ω 1/16W J	
R3666	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J		R4316	NRSA6AJ-102W	MG RESISTOR	1kΩ 1/16W J	
R3667	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J		R4317	NRSA6AJ-102W	MG RESISTOR	1kΩ 1/16W J	
R3668	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J		R4318	NRSA6AJ-101W	MG RESISTOR	100Ω 1/16W J	
R3669	NRSA6AJ-103W	MG RESISTOR	10kΩ 1/16W J		R4319	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R3670	NRSA6AJ-103W	MG RESISTOR	10kΩ 1/16W J		R5001	NRSA6AJ-100W	MG RESISTOR	10Ω 1/16W J	
R3671	NRSA6AJ-222W	MG RESISTOR	2.2kΩ 1/16W J		R5002	NRSA6AJ-100W	MG RESISTOR	10Ω 1/16W J	
R3672	NRSA6AJ-122W	MG RESISTOR	1.2kΩ 1/16W J		R5003	NRSA6AJ-100W	MG RESISTOR	10Ω 1/16W J	
R3673	NRSA6AJ-822W	MG RESISTOR	8.2kΩ 1/16W J		R5004	NRSA6AJ-100W	MG RESISTOR	10Ω 1/16W J	
R3674	NRSA6AJ-332W	MG RESISTOR	3.3kΩ 1/16W J		R5005	NRSA6AJ-100W	MG RESISTOR	10Ω 1/16W J	
R3675	NRSA6AJ-822W	MG RESISTOR	8.2kΩ 1/16W J		R5006	NRSA6AJ-100W	MG RESISTOR	10Ω 1/16W J	
R3676	NRSA6AJ-103W	MG RESISTOR	10kΩ 1/16W J		R5007	NRSA6AJ-104W	MG RESISTOR	100kΩ 1/16W J	
R3677	NRSA6AJ-103W	MG RESISTOR	10kΩ 1/16W J		R5010	NRSA6AJ-100W	MG RESISTOR	10Ω 1/16W J	
R3678	NRSA6AJ-222W	MG RESISTOR	2.2kΩ 1/16W J		R5012	NRSA6AJ-100W	MG RESISTOR	10Ω 1/16W J	
R3679	NRSA6AJ-122W	MG RESISTOR	1.2kΩ 1/16W J		R5013	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R3680	NRSA6AJ-822W	MG RESISTOR	8.2kΩ 1/16W J		R5014	NRSA6AJ-100W	MG RESISTOR	10Ω 1/16W J	
R3701	NRSA6AJ-680W	MG RESISTOR	68Ω 1/16W J		R5017	NRSA6AJ-100W	MG RESISTOR	10Ω 1/16W J	
R3702	NRSA6AJ-680W	MG RESISTOR	68Ω 1/16W J		R8001	NRSA6AJ-5R6W	MG RESISTOR	5.6Ω 1/16W J	
R3703	NRSA6AJ-680W	MG RESISTOR	68Ω 1/16W J		R8002	NRSA6AJ-5R6W	MG RESISTOR	5.6Ω 1/16W J	
R3704	NRSA6AJ-103W	MG RESISTOR	10kΩ 1/16W J		R8004	NRSA6AJ-103W	MG RESISTOR	10kΩ 1/16W J	
R3705	NRSA6AJ-103W	MG RESISTOR	10kΩ 1/16W J		R8005	NRSA6AJ-103W	MG RESISTOR	10kΩ 1/16W J	
R3707	NRSA6AJ-104W	MG RESISTOR	100kΩ 1/16W J		R8006	NRSA6AJ-103W	MG RESISTOR	10kΩ 1/16W J	
R3708	NRSA6AJ-473W	MG RESISTOR	47kΩ 1/16W J		R8007	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R3709	NRSA6AJ-103W	MG RESISTOR	10kΩ 1/16W J		R8008	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R3802	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J		R8009	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R3803	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J		R8010	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R3804	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J		R8013	NRSA6AJ-102W	MG RESISTOR	1kΩ 1/16W J	
R3805	NRSA6AJ-101W	MG RESISTOR	100Ω 1/16W J		R8014	NRSA6AJ-102W	MG RESISTOR	1kΩ 1/16W J	
R3806	NRSA6AD-391W	MG RESISTOR	390Ω 1/16W D		R8016	NRSA6AJ-101W	MG RESISTOR	100Ω 1/16W J	
R3807	NRSA6AD-303W	MG RESISTOR	30kΩ 1/16W D		R8017	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R3808	NRSA6AD-153W	MG RESISTOR	15kΩ 1/16W D		R8018	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R3809	NRSA6AD-391W	MG RESISTOR	390Ω 1/16W D		R8019	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R3811	NRSA6AJ-131W	MG RESISTOR	130Ω 1/16W J		R8020	NRSA6AJ-104W	MG RESISTOR	100kΩ 1/16W J	
R3812	NRSA6AJ-131W	MG RESISTOR	130Ω 1/16W J		R8021	NRSA6AJ-104W	MG RESISTOR	100kΩ 1/16W J	
R3813	NRSA6AJ-102W	MG RESISTOR	1kΩ 1/16W J		R8022	NRSA6AJ-104W	MG RESISTOR	100kΩ 1/16W J	
R3814	NRSA6AJ-151W	MG RESISTOR	150Ω 1/16W J		R8023	NRSA6AJ-104W	MG RESISTOR	100kΩ 1/16W J	
R3815	NRSA6AJ-151W	MG RESISTOR	150Ω 1/16W J		R8024	NRSA6AJ-101W	MG RESISTOR	100Ω 1/16W J	
R3816	NRSA6AJ-102W	MG RESISTOR	1kΩ 1/16W J		R8025	NRSA6AJ-104W	MG RESISTOR	100kΩ 1/16W J	
R3817	NRSA6AD-750W	MG RESISTOR	75Ω 1/16W D		R8026	NRSA6AJ-104W	MG RESISTOR	100kΩ 1/16W J	
R3818	NRSA6AJ-152W	MG RESISTOR	1.5kΩ 1/16W J		R8027	NRSA6AJ-104W	MG RESISTOR	100kΩ 1/16W J	
R3819	NRSA6AD-750W	MG RESISTOR	75Ω 1/16W D		R8028	NRSA6AJ-104W	MG RESISTOR	100kΩ 1/16W J	
R3820	NRSA6AJ-152W	MG RESISTOR	1.5kΩ 1/16W J		R8029	NRSA6AJ-104W	MG RESISTOR	100kΩ 1/16W J	
R3821	NRSA6AJ-152W	MG RESISTOR	1.5kΩ 1/16W J		R8030	NRSA6AJ-104W	MG RESISTOR	100kΩ 1/16W J	
R3822	NRSA6AD-750W	MG RESISTOR	75Ω 1/16W D		R8031	NRSA6AJ-104W	MG RESISTOR	100kΩ 1/16W J	
R3825	NRSA6AJ-472W	MG RESISTOR	4.7kΩ 1/16W J		R8034	NRSA6AJ-104W	MG RESISTOR	100kΩ 1/16W J	
R3851	NRSA6AJ-101W	MG RESISTOR	100Ω 1/16W J		R8041	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R3852	NRSA6AJ-472W	MG RESISTOR	4.7kΩ 1/16W J		R8042	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R3853	NRSA6AJ-561W	MG RESISTOR	560Ω 1/16W J		R8043	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R3854	NRSA6AJ-822W	MG RESISTOR	8.2kΩ 1/16W J		R8044	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R3855	NRSA6AJ-182W	MG RESISTOR	1.8kΩ 1/16W J		R8045	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R3856	NRSA6AJ-183W	MG RESISTOR	18kΩ 1/16W J		R8046	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R3857	NRSA6AJ-183W	MG RESISTOR	18kΩ 1/16W J		R8047	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R3858	NRSA6AJ-681W	MG RESISTOR	680Ω 1/16W J		R8048	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R3859	NRSA6AJ-821W	MG RESISTOR	820Ω 1/16W J		R8049	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R3860	NRSA6AJ-821W	MG RESISTOR	820Ω 1/16W J		R8050	NRSA6AJ-104W	MG RESISTOR	100kΩ 1/16W J	
R3861	NRSA6AJ-102W	MG RESISTOR	1kΩ 1/16W J		R8051	NRSA6AJ-104W	MG RESISTOR	100kΩ 1/16W J	
R3862	NRSA6AJ-104W	MG RESISTOR	100kΩ 1/16W J		R8052	NRSA6AJ-104W	MG RESISTOR	100kΩ 1/16W J	
R3863	NRSA6AJ-104W	MG RESISTOR	100kΩ 1/16W J		R8053	NRSA6AJ-104W	MG RESISTOR	100kΩ 1/16W J	
R3864	NRSA6AJ-561W	MG RESISTOR	560Ω 1/16W J		R8054	NRSA6AJ-104W	MG RESISTOR	100kΩ 1/16W J	
R3865	NRSA6AJ-152W	MG RESISTOR	1.5kΩ 1/16W J		R8055	NRSA6AJ-104W	MG RESISTOR	100kΩ 1/16W J	
R3866	NRSA6AJ-222W	MG RESISTOR	2.2kΩ 1/16W J		R8056	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R3867	NRSA6AJ-102W	MG RESISTOR	1kΩ 1/16W J		R8057	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R3868	NRSA6AJ-474W	MG RESISTOR	470kΩ 1/16W J		R8058	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R4202	NRSA6AJ-510W	MG RESISTOR	51Ω 1/16W J		R8059	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R4203	NRSA6AJ-333W	MG RESISTOR	33kΩ 1/16W J		R8060	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R4204	NRSA6AJ-100W	MG RESISTOR	10Ω 1/16W J		R8063	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R4205	NRSA6AJ-100W	MG RESISTOR	10Ω 1/16W J		R8064	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	

△ Symbol No.	Part No.	Part Name	Description	Local	△ Symbol No.	Part No.	Part Name	Description	Local
R8065	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J		RA4202	NRZ0034-100W	NET RESISTOR	10Ω 1/32W J	
R8066	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J		RA4301	NRZ0034-100W	NET RESISTOR	10Ω 1/32W J	
R8067	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J		RA4302	NRZ0034-100W	NET RESISTOR	10Ω 1/32W J	
R8068	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J		RA8002	NRZ0052-0R0W	NET RESISTOR	0Ω 1/32W J	
R8070	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J		RA8003	NRZ0052-0R0W	NET RESISTOR	0Ω 1/32W J	
R8072	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J		RA8004	NRZ0052-0R0W	NET RESISTOR	0Ω 1/32W J	
R8078	NRSA6AJ-101W	MG RESISTOR	100Ω 1/16W J		RA8005	NRZ0052-0R0W	NET RESISTOR	0Ω 1/32W J	
R8079	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J		RA8006	NRZ0052-0R0W	NET RESISTOR	0Ω 1/32W J	
R8080	NRSA6AJ-101W	MG RESISTOR	100Ω 1/16W J		RA8007	NRZ0052-0R0W	NET RESISTOR	0Ω 1/32W J	
R8081	NRSA6AJ-471W	MG RESISTOR	470Ω 1/16W J		RA8008	NRZ0052-0R0W	NET RESISTOR	0Ω 1/32W J	
R8082	NRSA6AJ-102W	MG RESISTOR	1kΩ 1/16W J		RA8009	NRZ0052-0R0W	NET RESISTOR	0Ω 1/32W J	
R8083	NRSA6AJ-103W	MG RESISTOR	10kΩ 1/16W J		RA8010	NRZ0052-0R0W	NET RESISTOR	0Ω 1/32W J	
R8084	NRSA6AJ-101W	MG RESISTOR	100Ω 1/16W J		RA8011	NRZ0052-0R0W	NET RESISTOR	0Ω 1/32W J	
R8085	NRSA6AJ-101W	MG RESISTOR	100Ω 1/16W J		RA8012	NRZ0052-0R0W	NET RESISTOR	0Ω 1/32W J	
R8086	NRSA6AJ-470W	MG RESISTOR	47Ω 1/16W J		RA8801	NRZ0034-104W	NET RESISTOR	100kΩ 1/32W J	
R8088	NRSA6AJ-472W	MG RESISTOR	4.7kΩ 1/16W J		RA8802	NRZ0034-104W	NET RESISTOR	100kΩ 1/32W J	
R8090	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J		L1002	NQR0006-001X	FERRITE BEADS		
R8091	NRSA6AJ-101W	MG RESISTOR	100Ω 1/16W J		L2101	NQR0129-002X	FERRITE BEADS		
R8092	NRSA6AJ-101W	MG RESISTOR	100Ω 1/16W J		L3001	NQR0129-002X	FERRITE BEADS		
R8093	NRSA6AJ-101W	MG RESISTOR	100Ω 1/16W J		L3002	NQR0006-001X	FERRITE BEADS		
R8094	NRSA6AJ-470W	MG RESISTOR	47Ω 1/16W J		L3003	NQL38DK-100X	P COIL	10uH K	
R8095	NRSA6AJ-102W	MG RESISTOR	1kΩ 1/16W J		L3004	NQR0006-001X	FERRITE BEADS		
R8096	NRSA6AJ-102W	MG RESISTOR	1kΩ 1/16W J		L3005	NQR0129-002X	FERRITE BEADS		
R8201	NRSA6AJ-473W	MG RESISTOR	47kΩ 1/16W J		L3006	NQL085J-120X	COIL	12uH J	
R8202	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J		L3201	NQR0129-002X	FERRITE BEADS		
R8203	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J		L3202	NQR0129-002X	FERRITE BEADS		
R8302	NRS181J-220X	MG RESISTOR	22Ω 1/8W J		L3204	NQR0006-001X	FERRITE BEADS		
R8303	NRS181J-220X	MG RESISTOR	22Ω 1/8W J		L3206	NQR0129-002X	FERRITE BEADS		
R8305	NRSA6AJ-105W	MG RESISTOR	1MΩ 1/16W J		L3207	NQL085J-2R2X	COIL	2.2uH J	
R8306	NRSA6AJ-103W	MG RESISTOR	10kΩ 1/16W J		L3601	NQR0129-002X	FERRITE BEADS		
R8307	NRSA6AJ-103W	MG RESISTOR	10kΩ 1/16W J		L3602	NQR0006-001X	FERRITE BEADS		
R8309	NRSA6AJ-103W	MG RESISTOR	10kΩ 1/16W J		L3603	NQL38DK-100X	P COIL	10uH K	
R8310	NRSA6AJ-153W	MG RESISTOR	15kΩ 1/16W J		L3651	NQL38DK-100X	P COIL	10uH K	
R8311	NRSA6AJ-105W	MG RESISTOR	1MΩ 1/16W J		L3652	NQL085J-2R2X	COIL	2.2uH J	
R8312	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J		L3653	NQL085J-4R7X	COIL	4.7uH J	
R8504	NRSA6AJ-220W	MG RESISTOR	22Ω 1/16W J		L3654	NQL085J-1R0X	COIL	1uH J	
R8507	NRSA6AJ-220W	MG RESISTOR	22Ω 1/16W J		L3655	NQL085J-2R2X	COIL	2.2uH J	
R8508	NRSA6AJ-220W	MG RESISTOR	22Ω 1/16W J		L3701	NQL38DK-100X	P COIL	10uH K	
R8801	NRSA6AJ-104W	MG RESISTOR	100kΩ 1/16W J		L3802	NQR0129-002X	FERRITE BEADS		
R8802	NRSA6AJ-104W	MG RESISTOR	100kΩ 1/16W J		L3803	NQR0006-001X	FERRITE BEADS		
R8804	NRSA6AJ-104W	MG RESISTOR	100kΩ 1/16W J		L3804	NQL38DK-100X	P COIL	10uH K	
R8806	NRSA6AJ-103W	MG RESISTOR	10kΩ 1/16W J		L3851	NQL085J-6R8X	COIL	6.8uH J	
R8807	NRSA6AJ-103W	MG RESISTOR	10kΩ 1/16W J		L3852	NQL085J-6R8X	COIL	6.8uH J	
R8808	NRSA6AJ-394W	MG RESISTOR	390kΩ 1/16W J		L3853	NQL38DK-100X	P COIL	10uH K	
R8809	NRSA6AD-560W	MG RESISTOR	56Ω 1/16W D		L4201	NQL402M-100X	COIL	10uH M	
R8810	NRSA6AD-560W	MG RESISTOR	56Ω 1/16W D		L4301	NQR0006-001X	FERRITE BEADS		
R8811	NRSA6AD-560W	MG RESISTOR	56Ω 1/16W D		L4302	NQR0129-002X	FERRITE BEADS		
R8812	NRSA6AD-560W	MG RESISTOR	56Ω 1/16W D		L4303	NQR0129-002X	FERRITE BEADS		
R8813	NRSA6AD-512W	MG RESISTOR	5.1kΩ 1/16W D		L4304	NQR0129-002X	FERRITE BEADS		
R8818	NRSA6AD-751W	MG RESISTOR	750Ω 1/16W D		L5001	NQL045K-100X	COIL	10uH K	
R8819	NRSA6AD-562W	MG RESISTOR	5.6kΩ 1/16W D		L5004	NQL045K-100X	COIL	10uH K	
R8820	NRSA6AJ-105W	MG RESISTOR	1MΩ 1/16W J		L5005	NQR0129-002X	FERRITE BEADS		
R8821	NRSA6AJ-101W	MG RESISTOR	100Ω 1/16W J		L5006	NQL045K-100X	COIL	10uH K	
R9902	NRSA6AJ-152W	MG RESISTOR	1.5kΩ 1/16W J		L5007	NQR0129-002X	FERRITE BEADS		
R9903	NRSA6AJ-182W	MG RESISTOR	1.8kΩ 1/16W J		L8001	NQR0006-001X	FERRITE BEADS		
R9904	NRSA6AJ-272W	MG RESISTOR	2.7kΩ 1/16W J		L8004	NQR0339-002X	FERRITE BEADS		
R9905	NRSA6AJ-392W	MG RESISTOR	3.9kΩ 1/16W J		L8005	NQR0339-002X	FERRITE BEADS		
RA1005	NRZ0034-103W	NET RESISTOR	10kΩ 1/32W J		L8006	NQR0006-001X	FERRITE BEADS		
RA1006	NRZ0034-103W	NET RESISTOR	10kΩ 1/32W J		L8007	NQL085J-2R2X	COIL	2.2uH J	
RA1008	NRZ0034-104W	NET RESISTOR	100kΩ 1/32W J		L8008	NQL085J-2R2X	COIL	2.2uH J	
RA1009	NRZ0034-104W	NET RESISTOR	100kΩ 1/32W J		L8009	NQR0006-001X	FERRITE BEADS		
RA1010	NRZ0034-104W	NET RESISTOR	100kΩ 1/32W J		L8201	NQR0006-001X	FERRITE BEADS		
RA3001	NRZ0034-101W	NET RESISTOR	100Ω 1/32W J		L8203	NQR0339-002X	FERRITE BEADS		
RA3002	NRZ0034-100W	NET RESISTOR	10Ω 1/32W J		L8204	NQR0339-002X	FERRITE BEADS		
RA3003	NRZ0034-100W	NET RESISTOR	10Ω 1/32W J		L8301	NQR0129-002X	FERRITE BEADS		
RA3004	NRZ0034-0R0W	NET RESISTOR	0Ω 1/32W J		L8501	NQR0129-002X	FERRITE BEADS		
RA3005	NRZ0034-0R0W	NET RESISTOR	0Ω 1/32W J		L8801	NQR0129-002X	FERRITE BEADS		
RA3006	NRZ0034-103W	NET RESISTOR	10kΩ 1/32W J		L8802	NQR0006-001X	FERRITE BEADS		
RA3201	NRZ0034-0R0W	NET RESISTOR	0Ω 1/32W J		L8803	NQR0383-003X	CHOKE COIL		
RA3202	NRZ0034-0R0W	NET RESISTOR	0Ω 1/32W J		L8804	NQR0383-003X	CHOKE COIL		
RA3203	NRZ0034-0R0W	NET RESISTOR	0Ω 1/32W J		CN101	QGB0403L2-F0X	CONNECTOR	B-B (1-150)	
RA3204	NRZ0034-0R0W	NET RESISTOR	0Ω 1/32W J		CN102	QGF0507F3-24X	CONNECTOR	FFC/FPC (1-24)	
RA3205	NRZ0034-0R0W	NET RESISTOR	0Ω 1/32W J		CN103	QGA1002F1-02X	CONNECTOR	W-B (1-2)	
RA3601	NRZ0034-104W	NET RESISTOR	100kΩ 1/32W J		CN104	QGF0503C1-18X	CONNECTOR	FFC/FPC (1-18)	
RA3602	NRZ0034-104W	NET RESISTOR	100kΩ 1/32W J		CN105	QGF0507F3-14X	CONNECTOR	FFC/FPC (1-14)	
RA3603	NRZ0034-104W	NET RESISTOR	100kΩ 1/32W J		CN106	QGA1002F1-06X	CONNECTOR	W-B (1-6)	
RA3604	NRZ0034-104W	NET RESISTOR	100kΩ 1/32W J						
RA4201	NRZ0034-100W	NET RESISTOR	10Ω 1/32W J						

△ Symbol No.	Part No.	Part Name	Description	Local	△ Symbol No.	Part No.	Part Name	Description	Local
CN107	QGA0803F1-22W	CONNECTOR	W-B (1-22)		Q6102	QS6U24-W	MOS FET		
CN108	QGA1002F1-06X	CONNECTOR	W-B (1-6)		Q6103	QS6U24-W	MOS FET		
CN109	QGF0503F3-16X	CONNECTOR	FFC/FPC (1-16)		Q6104	QS6U24-W	MOS FET		
CN110	QGB0801M1-30X	CONNECTOR	B-B (1-30)		Q6105	QS6U24-W	MOS FET		
J101	NNZ0041-001X	D CONNECTOR	IEEE1394(4pin)		Q6106	CPH3314-X	MOS FET		
J5001	YU40017-035-4	THIN WIRE IC4202-C5014			Q6107	CPH3314-X	MOS FET		
J5002	YU40017-015-3	THIN WIRE L5002-L5003							
TP101	NNZ0094-001X	EARTH TERMINAL			△ D6001	RB715F-X	SB DIODE		
TP102	NNZ0094-001X	EARTH TERMINAL			D6101	RB521S-30-X	SB DIODE		
X1001	NAX0620-001X	C RESONATOR			D6102	RB480Y-W	SB DIODE		
X3001	NAX0480-001X	CRYSTAL	24.576MHz		D6103	RB480Y-W	SB DIODE		
X3201	NAX0485-001X	VCXO			D6104	CRS06-X	SB DIODE		
X4301	NAX0587-001X	CXO			D6105	CRS06-X	SB DIODE		
X8301	NAX0522-001X	C RESONATOR	6.000MHz						
OT1	LY30030-0C5A	SPACER(A)	DV		C201	NDCA1HJ-120W	C CAPACITOR	12pF 50V J	
OT2	LY30030-0C6A	SPACER(A)	JCY0180		C1301	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
OT3	LY30029-0V6A	SPACER(A)	JCY0178		C1302	NCBA1CK-223W	C CAPACITOR	0.022uF 16V K	
SD1	LY33105-001A	SHIELD CASE(L)			C1303	NCBA1CK-223W	C CAPACITOR	0.022uF 16V K	
WR1	WJT0098-001A	E-CARD WIRE CN109-REAR CN602			C1311	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
WR2	YU40017-015-1	THIN WIRE L3205-L3801			C1312	NBE20JM-106X	TA E CAPACITOR	10uF 6.3V M	
					C1313	NBE20JM-106X	TA E CAPACITOR	10uF 6.3V M	

ANALOG BOARD ASSEMBLY <02>

△ Symbol No.	Part No.	Part Name	Description	Local	△ Symbol No.	Part No.	Part Name	Description	Local
PW1	YB10408A-03	ANALOG BOARD ASSY			C1314	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K	
IC201	RS5C314-X	IC			C1401	NDCA1HJ-100W	C CAPACITOR	10pF 50V J	
IC1301	NJM2143R-X	IC			C1402	NDCA1HJ-270W	C CAPACITOR	27pF 50V J	
IC1401	UPD703040YF-M22	IC(MICRO C ROM)			C1403	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
IC1401 or	UPD70F3040YFM22	IC			C1404	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
IC2201	AK4564VQ	IC			C1405	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
IC3101	BU2501FV-X	IC			C1406	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
IC4802	NJM2143R-X	IC			C1407	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
IC4803	NJM2143R-X	IC			C1409	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K	
IC4804	LM358DR2-X	IC			C1410	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K	
IC4804 or	BA10358F-XE	IC			C1411	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K	
IC4851	UPD16879GS-X	IC			C1412	NCBA1CK-223W	C CAPACITOR	0.022uF 16V K	
IC5801	NJM2143R-X	IC			C1413	NCBA1CK-223W	C CAPACITOR	0.022uF 16V K	
IC5802	NJM2143R-X	IC			C1414	NCBA1CK-223W	C CAPACITOR	0.022uF 16V K	
IC5803	NJM3414AV-X	IC			C1415	NCBA1CK-223W	C CAPACITOR	0.022uF 16V K	
IC5804	NJM3414AV-X	IC			C1416	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
IC5805	BA10324AFV-XE	QFP IC			C1417	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K	
IC5806	LM358DR2-X	IC			C1418	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K	
IC5806 or	BA10358F-XE	IC			C2201	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
IC5901	NJU7016R-X	IC			C2202	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
IC6001	S-80842CNNB-W	IC			C2203	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
IC6001 or	IC-PST3442U-W	IC			C2204	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
IC6002	R1224N102G-X	IC			C2205	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
IC6101	BD9713KV	IC			C2206	NBE20GM-476X	TA E CAPACITOR	47uF 4V M	
IC6102	MM1612FN-X	IC			C2207	NBE20GM-476X	TA E CAPACITOR	47uF 4V M	
IC6103	BD3987FV-X	IC			C2209	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
					C2210	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
Q1401	DTA114EE-X	DIGI TRANSISTOR			C2211	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
Q1401 or	PDTA114EE-X	DIGI TRANSISTOR			C2212	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
Q1401 or	UN9111J-X	DIGI TRANSISTOR			C2213	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
Q1402	UMC3N-W	DIGI TRANSISTOR			C2214	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
Q1403	UMC3N-W	DIGI TRANSISTOR			C2215	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
Q2202	DTC144EE-X	DIGI TRANSISTOR			C2216	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
Q2202 or	UN9213J-X	DIGI TRANSISTOR			C2217	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
Q2202 or	PDTC144EE-X	DIGI TRANSISTOR			C2218	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
Q2401	2SC4617/QR/-X	TRANSISTOR			C2223	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
Q2403	2SC4617/QR/-X	TRANSISTOR			C2224	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
Q4801	2SC4655/BC/-X	TRANSISTOR			C2401	NBE20JM-106X	TA E CAPACITOR	10uF 6.3V M	
Q4806	2SC4617/RS/-X	TRANSISTOR			C2402	NBE20JM-106X	TA E CAPACITOR	10uF 6.3V M	
Q4851	2SC4617/RS/-X	TRANSISTOR			C2403	NBE20JM-106X	TA E CAPACITOR	10uF 6.3V M	
Q5801	UMX1N-W	PAIR TRANSISTOR			C2404	NBE20JM-106X	TA E CAPACITOR	10uF 6.3V M	
Q6001	MCH3308-X	MOS FET			C2405	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
Q6002	2SK3019-X	MOS FET			C2406	NBE20JM-106X	TA E CAPACITOR	10uF 6.3V M	
Q6003	MCH6613-W	MOS FET			C2603	NCBA1CK-223W	C CAPACITOR	0.022uF 16V K	
Q6004	DTC144EE-X	DIGI TRANSISTOR			C2604	NCBA1CK-223W	C CAPACITOR	0.022uF 16V K	
Q6004 or	PDTC144EE-X	DIGI TRANSISTOR			C2605	NCBA1EK-472W	C CAPACITOR	4700pF 25V K	
Q6004 or	UN9213J-X	DIGI TRANSISTOR			C2606	NCBA1EK-472W	C CAPACITOR	4700pF 25V K	
Q6005	FML9-W	TRANSISTOR			C2607	NCBA1AK-473W	C CAPACITOR	0.047uF 10V K	
Q6101	CPH3314-X	MOS FET			C2608	NCBA1AK-473W	C CAPACITOR	0.047uF 10V K	
					C2609	NCBA1HK-332W	C CAPACITOR	3300pF 50V K	
					C2610	NCBA1HK-332W	C CAPACITOR	3300pF 50V K	
					C2611	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
					C2612	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
					C2613	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
					C2614	NDCA1HJ-101W	C CAPACITOR	100pF 50V J	
					C2615	NDCA1HJ-101W	C CAPACITOR	100pF 50V J	
					C3101	NBE20GM-226X	TA E CAPACITOR	22uF 4V M	

△ Symbol No.	Part No.	Part Name	Description	Local	△ Symbol No.	Part No.	Part Name	Description	Local
C3102	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K		C6106	NCBA1EK-472W	C CAPACITOR	4700pF 25V K	
C4803	NBE20JM-106X	TA E CAPACITOR	10uF 6.3V M		C6107	NCBA1HK-561W	C CAPACITOR	560pF 50V K	
C4804	NCFA1AZ-104W	C CAPACITOR	0.1uF 10V Z		C6108	NBP21CM-685X	TA E CAPACITOR	6.8uF 16V M	
C4806	NCFA1AZ-104W	C CAPACITOR	0.1uF 10V Z		C6109	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
C4807	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K		C6110	NDCA1HJ-101W	C CAPACITOR	100pF 50V J	
C4808	NCB30JK-105X	C CAPACITOR	1uF 6.3V K		C6111	NDCA1HJ-150W	C CAPACITOR	15pF 50V J	
C4809	NCFA1AZ-104W	C CAPACITOR	0.1uF 10V Z		C6112	NCBA1HK-272W	C CAPACITOR	2700pF 50V K	
C4810	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K		C6113	NCB21CK-105X	C CAPACITOR	1uF 16V K	
C4811	NCBA1HK-152W	C CAPACITOR	1500pF 50V K		C6114	NCBA1HK-102W	C CAPACITOR	1000pF 50V K	
C4812	NCFA1AZ-104W	C CAPACITOR	0.1uF 10V Z		C6115	NCBA1EK-472W	C CAPACITOR	4700pF 25V K	
C4813	NCFA1AZ-104W	C CAPACITOR	0.1uF 10V Z		C6117	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
C4814	NCFA1AZ-104W	C CAPACITOR	0.1uF 10V Z		C6118	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K	
C4815	NCB31HK-152X	C CAPACITOR	1500pF 50V K		C6119	NCBA1HK-122W	C CAPACITOR	1200pF 50V K	
C4819	NCF31CZ-104X	C CAPACITOR	0.1uF 16V Z		C6120	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K	
C4820	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K		C6121	NCBA1CK-223W	C CAPACITOR	0.022uF 16V K	
C4822	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K		C6122	NCBA1CK-223W	C CAPACITOR	0.022uF 16V K	
C4851	NBE20JM-106X	TA E CAPACITOR	10uF 6.3V M		C6123	NCBA1CK-223W	C CAPACITOR	0.022uF 16V K	
C4852	NCFA1AZ-104W	C CAPACITOR	0.1uF 10V Z		C6124	NCB21CK-105X	C CAPACITOR	1uF 16V K	
C4853	NBE21AM-335X	TA E CAPACITOR	3.3uF 10V M		C6125	NCB10JK-106X	C CAPACITOR	10uF 6.3V K	
C4854	NBE21AM-106X	TA E CAPACITOR	10uF 10V M		C6126	NCB21CK-105X	C CAPACITOR	1uF 16V K	
C4855	NCB31CK-104X	C CAPACITOR	0.1uF 16V K		C6127	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K	
C4858	NDCA1HJ-680W	C CAPACITOR	68pF 50V J		C6128	NCB21CK-105X	C CAPACITOR	1uF 16V K	
C4859	NCBA1CK-223W	C CAPACITOR	0.022uF 16V K		C6129	NCB21CK-105X	C CAPACITOR	1uF 16V K	
C4860	NCBA1CK-223W	C CAPACITOR	0.022uF 16V K		C6130	NCB10JK-106X	C CAPACITOR	10uF 6.3V K	
C4861	NCBA1HK-102W	C CAPACITOR	1000pF 50V K		C6131	NCB21CK-105X	C CAPACITOR	1uF 16V K	
C4862	NCBA1HK-102W	C CAPACITOR	1000pF 50V K		C6132	NCB21CK-105X	C CAPACITOR	1uF 16V K	
C4864	NBE20JM-106X	TA E CAPACITOR	10uF 6.3V M		C6133	NCB21CK-105X	C CAPACITOR	1uF 16V K	
C4865	NCFA1AZ-104W	C CAPACITOR	0.1uF 10V Z		C6134	NCB21CK-105X	C CAPACITOR	1uF 16V K	
C5801	NBE20JM-106X	TA E CAPACITOR	10uF 6.3V M		C6135	NCB21CK-105X	C CAPACITOR	1uF 16V K	
C5802	NBE20JM-106X	TA E CAPACITOR	10uF 6.3V M		C6137	NCB31CK-683X	C CAPACITOR	0.068uF 16V K	
C5803	NBE20JM-106X	TA E CAPACITOR	10uF 6.3V M		C6138	NCB21CK-105X	C CAPACITOR	1uF 16V K	
C5804	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K		C6139	NCB10JK-106X	C CAPACITOR	10uF 6.3V K	
C5805	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K		C6140	NCB21CK-105X	C CAPACITOR	1uF 16V K	
C5811	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K		C6141	NCB21CK-105X	C CAPACITOR	1uF 16V K	
C5812	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K		C6142	NCB11EK-105X	C CAPACITOR	1uF 25V K	
C5813	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K		C6143	NCB11EK-105X	C CAPACITOR	1uF 25V K	
C5814	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K		C6144	NCB21CK-105X	C CAPACITOR	1uF 16V K	
C5816	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K		C6145	NCB21CK-105X	C CAPACITOR	1uF 16V K	
C5817	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K		C6146	NCB21CK-105X	C CAPACITOR	1uF 16V K	
C5818	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K		C6147	NCB10JK-106X	C CAPACITOR	10uF 6.3V K	
C5819	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K		C6148	NCB21CK-105X	C CAPACITOR	1uF 16V K	
C5820	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K		C6149	NCB21CK-105X	C CAPACITOR	1uF 16V K	
C5821	NCBA1HK-152W	C CAPACITOR	1500pF 50V K		C6150	NCB21CK-105X	C CAPACITOR	1uF 16V K	
C5822	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K		C6151	QEXA1CM-107	E CAPACITOR	100uF 16V M	
C5823	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K						
C5825	NCBA1HK-152W	C CAPACITOR	1500pF 50V K		R201	NRSA6AJ-331W	MG RESISTOR	330Ω 1/16W J	
C5826	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K		R202	NRSA6AJ-331W	MG RESISTOR	330Ω 1/16W J	
C5827	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K		R203	NRSA6AJ-331W	MG RESISTOR	330Ω 1/16W J	
C5829	NCB31EK-103X	C CAPACITOR	0.01uF 25V K		R204	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
C5830	NCB31EK-103X	C CAPACITOR	0.01uF 25V K		R1301	NRSA6AJ-333W	MG RESISTOR	33kΩ 1/16W J	
C5831	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K		R1302	NRSA6AJ-472W	MG RESISTOR	4.7kΩ 1/16W J	
C5834	NCBA0JK-224W	C CAPACITOR	0.22uF 6.3V K		R1304	NRSA6AJ-105W	MG RESISTOR	1MΩ 1/16W J	
C5835	NCBA0JK-224W	C CAPACITOR	0.22uF 6.3V K		R1305	NRSA6AJ-105W	MG RESISTOR	1MΩ 1/16W J	
C5836	NCBA0JK-224W	C CAPACITOR	0.22uF 6.3V K		R1307	NRSA6AJ-103W	MG RESISTOR	10kΩ 1/16W J	
C5837	NCBA0JK-224W	C CAPACITOR	0.22uF 6.3V K		R1308	NRSA6AJ-472W	MG RESISTOR	4.7kΩ 1/16W J	
C5901	NBE20JM-106X	TA E CAPACITOR	10uF 6.3V M		R1309	NRSA6AJ-103W	MG RESISTOR	10kΩ 1/16W J	
C5902	NCB30JK-225X	C CAPACITOR	2.2uF 6.3V K		R1401	NRSA6AJ-105W	MG RESISTOR	1MΩ 1/16W J	
C5903	NCBA1HK-331W	C CAPACITOR	330pF 50V K		R1402	NRSA6AJ-102W	MG RESISTOR	1kΩ 1/16W J	
C5904	NBE20JM-475X	TA E CAPACITOR	4.7uF 6.3V M		R1403	NRSA6AJ-103W	MG RESISTOR	10kΩ 1/16W J	
C5905	NDCA1HJ-151W	C CAPACITOR	150pF 50V J		R1404	NRSA6AJ-472W	MG RESISTOR	4.7kΩ 1/16W J	
C5906	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K		R1405	NRSA6AJ-332W	MG RESISTOR	3.3kΩ 1/16W J	
C5907	NCB30JK-225X	C CAPACITOR	2.2uF 6.3V K		R1406	NRSA6AJ-332W	MG RESISTOR	3.3kΩ 1/16W J	
C5908	NCBA1HK-331W	C CAPACITOR	330pF 50V K		R1407	NRSA6AJ-332W	MG RESISTOR	3.3kΩ 1/16W J	
C5909	NBE20JM-475X	TA E CAPACITOR	4.7uF 6.3V M		R1408	NRSA6AD-753W	MG RESISTOR	75kΩ 1/16W D	
C5910	NDCA1HJ-151W	C CAPACITOR	150pF 50V J		R1409	NRSA6AJ-334W	MG RESISTOR	330kΩ 1/16W J	
C5911	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K		R1411	NRSA6AJ-332W	MG RESISTOR	3.3kΩ 1/16W J	
C5912	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K		R1412	NRSA6AJ-332W	MG RESISTOR	3.3kΩ 1/16W J	
C6001	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K		R1413	NRSA6AJ-332W	MG RESISTOR	3.3kΩ 1/16W J	
C6002	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K		R1414	NRSA6AJ-332W	MG RESISTOR	3.3kΩ 1/16W J	
C6003	NBP21CM-685X	TA E CAPACITOR	6.8uF 16V M		R1415	NRSA6AJ-103W	MG RESISTOR	10kΩ 1/16W J	
C6005	NBE20JM-226X	TA E CAPACITOR	22uF 6.3V M		R1416	NRSA6AJ-103W	MG RESISTOR	10kΩ 1/16W J	
C6007	NCB21CK-105X	C CAPACITOR	1uF 16V K		R1417	NRSA6AJ-101W	MG RESISTOR	100Ω 1/16W J	
C6009	NDCA1HJ-151W	C CAPACITOR	150pF 50V J		R1418	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
C6101	NCB21CK-105X	C CAPACITOR	1uF 16V K		R1419	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
C6102	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K		R1420	NRSA6AJ-103W	MG RESISTOR	10kΩ 1/16W J	
C6103	NCBA1EK-472W	C CAPACITOR	4700pF 25V K		R1423	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
C6104	NCBA1HK-102W	C CAPACITOR	1000pF 50V K		R1424	NRSA6AJ-103W	MG RESISTOR	10kΩ 1/16W J	
C6105	NCBA1HK-561W	C CAPACITOR	560pF 50V K		R1425	NRSA6AJ-473W	MG RESISTOR	47kΩ 1/16W J	

△ Symbol No.	Part No.	Part Name	Description	Local	△ Symbol No.	Part No.	Part Name	Description	Local
R1426	NRSA6AJ-103W	MG RESISTOR	10kΩ 1/16W J		R4827	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R1427	NRSA6AJ-153W	MG RESISTOR	15kΩ 1/16W J		R4828	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R1428	NRSA6AJ-473W	MG RESISTOR	47kΩ 1/16W J		R4833	NRSA6AJ-104W	MG RESISTOR	100kΩ 1/16W J	
R1430	NRSA6AJ-472W	MG RESISTOR	4.7kΩ 1/16W J		R4836	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R1431	NRSA6AJ-472W	MG RESISTOR	4.7kΩ 1/16W J		R4837	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R1432	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J		R4841	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R1433	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J		R4842	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R1434	NRSA6AJ-331W	MG RESISTOR	330Ω 1/16W J		R4843	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R1435	NRSA6AJ-331W	MG RESISTOR	330Ω 1/16W J		R4844	NRSA6AJ-151W	MG RESISTOR	150Ω 1/16W J	
R1437	NRSA6AJ-331W	MG RESISTOR	330Ω 1/16W J		R4846	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R1438	NRSA6AJ-331W	MG RESISTOR	330Ω 1/16W J		R4854	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R2201	NRSA6AJ-224W	MG RESISTOR	220kΩ 1/16W J		R4856	NRSA63J-6R8X	MG RESISTOR	6.8Ω 1/16W J	
R2202	NRSA6AJ-564W	MG RESISTOR	560kΩ 1/16W J		R4857	NRSA63J-6R8X	MG RESISTOR	6.8Ω 1/16W J	
R2203	NRSA6AJ-393W	MG RESISTOR	39kΩ 1/16W J		R4858	NRSA6AJ-333W	MG RESISTOR	33kΩ 1/16W J	
R2204	NRSA6AJ-334W	MG RESISTOR	330kΩ 1/16W J		R4859	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R2206	NRSA6AJ-333W	MG RESISTOR	33kΩ 1/16W J		R4860	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R2207	NRSA6AJ-333W	MG RESISTOR	33kΩ 1/16W J		R4862	NRSA63J-6R8X	MG RESISTOR	6.8Ω 1/16W J	
R2208	NRSA6AJ-223W	MG RESISTOR	22kΩ 1/16W J		R4863	NRSA63J-6R8X	MG RESISTOR	6.8Ω 1/16W J	
R2209	NRSA6AJ-223W	MG RESISTOR	22kΩ 1/16W J		R4864	NRSA6AJ-102W	MG RESISTOR	1kΩ 1/16W J	
R2210	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J		R4865	NRSA6AJ-102W	MG RESISTOR	1kΩ 1/16W J	
R2211	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J		R4866	NRSA6AJ-102W	MG RESISTOR	1kΩ 1/16W J	
R2212	NRSA6AJ-2R7W	MG RESISTOR	2.7Ω 1/16W J		R4867	NRSA6AJ-102W	MG RESISTOR	1kΩ 1/16W J	
R2213	NRSA6AJ-2R7W	MG RESISTOR	2.7Ω 1/16W J		R4868	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R2217	NRSA6AJ-100W	MG RESISTOR	10Ω 1/16W J		R4870	NRSA6AJ-271W	MG RESISTOR	270Ω 1/16W J	
R2219	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J		R4871	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R2220	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J		R4874	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R2221	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J		R5801	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J	
R2225	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J		R5802	NRSA6AJ-104W	MG RESISTOR	100kΩ 1/16W J	
R2226	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J		R5803	NRSA6AJ-104W	MG RESISTOR	100kΩ 1/16W J	
R2227	NRSA6AJ-223W	MG RESISTOR	22kΩ 1/16W J		R5804	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R2228	NRSA6AJ-223W	MG RESISTOR	22kΩ 1/16W J		R5805	NRSA6AJ-154W	MG RESISTOR	150kΩ 1/16W J	
R2231	NRSA6AJ-102W	MG RESISTOR	1kΩ 1/16W J		R5806	NRSA6AJ-104W	MG RESISTOR	100kΩ 1/16W J	
R2233	NRSA6AJ-822W	MG RESISTOR	8.2kΩ 1/16W J		R5807	NRSA6AJ-104W	MG RESISTOR	100kΩ 1/16W J	
R2234	NRSA6AJ-822W	MG RESISTOR	8.2kΩ 1/16W J		R5808	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R2401	NRSA6AJ-472W	MG RESISTOR	4.7kΩ 1/16W J		R5809	NRSA6AJ-154W	MG RESISTOR	150kΩ 1/16W J	
R2402	NRSA6AJ-472W	MG RESISTOR	4.7kΩ 1/16W J		R5810	NRSA6AJ-183W	MG RESISTOR	18kΩ 1/16W J	
R2403	NRSA6AJ-183W	MG RESISTOR	18kΩ 1/16W J		R5811	NRSA6AJ-104W	MG RESISTOR	100kΩ 1/16W J	
R2406	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J		R5812	NRSA6AJ-105W	MG RESISTOR	1MΩ 1/16W J	
R2407	NRSA6AJ-100W	MG RESISTOR	10Ω 1/16W J		R5813	NRSA6AJ-183W	MG RESISTOR	18kΩ 1/16W J	
R2601	NRSA6AJ-222W	MG RESISTOR	2.2kΩ 1/16W J		R5814	NRSA6AJ-104W	MG RESISTOR	100kΩ 1/16W J	
R2602	NRSA6AJ-222W	MG RESISTOR	2.2kΩ 1/16W J		R5815	NRSA6AJ-105W	MG RESISTOR	1MΩ 1/16W J	
R2603	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J		R5816	NRSA6AJ-123W	MG RESISTOR	12kΩ 1/16W J	
R2604	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J		R5817	NRSA6AJ-123W	MG RESISTOR	12kΩ 1/16W J	
R2607	NRSA6AJ-222W	MG RESISTOR	2.2kΩ 1/16W J		R5818	NRSA6AJ-123W	MG RESISTOR	12kΩ 1/16W J	
R2608	NRSA6AJ-222W	MG RESISTOR	2.2kΩ 1/16W J		R5819	NRSA6AJ-123W	MG RESISTOR	12kΩ 1/16W J	
R2609	NRSA6AJ-223W	MG RESISTOR	22kΩ 1/16W J		R5820	NRSA6AJ-123W	MG RESISTOR	12kΩ 1/16W J	
R2610	NRSA6AJ-223W	MG RESISTOR	22kΩ 1/16W J		R5821	NRSA6AJ-123W	MG RESISTOR	12kΩ 1/16W J	
R2611	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J		R5822	NRSA6AJ-123W	MG RESISTOR	12kΩ 1/16W J	
R2612	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J		R5823	NRSA6AJ-123W	MG RESISTOR	12kΩ 1/16W J	
R2701	NRSA6AJ-821W	MG RESISTOR	820Ω 1/16W J		R5824	NRSA6AJ-123W	MG RESISTOR	12kΩ 1/16W J	
R2702	NRSA6AJ-821W	MG RESISTOR	820Ω 1/16W J		R5825	NRSA6AJ-123W	MG RESISTOR	12kΩ 1/16W J	
R2703	NRSA6AJ-564W	MG RESISTOR	560kΩ 1/16W J		R5826	NRSA6AJ-683W	MG RESISTOR	68kΩ 1/16W J	
R2704	NRSA6AJ-564W	MG RESISTOR	560kΩ 1/16W J		R5827	NRSA6AJ-562W	MG RESISTOR	5.6kΩ 1/16W J	
R2706	NRSA6AJ-391W	MG RESISTOR	390Ω 1/16W J		R5828	NRSA6AJ-473W	MG RESISTOR	47kΩ 1/16W J	
R2707	NRSA6AJ-391W	MG RESISTOR	390Ω 1/16W J		R5829	NRSA6AJ-123W	MG RESISTOR	12kΩ 1/16W J	
R2708	NRSA6AJ-103W	MG RESISTOR	10kΩ 1/16W J		R5831	NRSA6AJ-274W	MG RESISTOR	270kΩ 1/16W J	
R2709	NRSA6AJ-103W	MG RESISTOR	10kΩ 1/16W J		R5834	NRSA6AJ-184W	MG RESISTOR	180kΩ 1/16W J	
R2711	NRSA6AJ-104W	MG RESISTOR	100kΩ 1/16W J		R5835	NRSA6AJ-683W	MG RESISTOR	68kΩ 1/16W J	
R4804	NRSA6AJ-681W	MG RESISTOR	680Ω 1/16W J		R5836	NRSA6AJ-562W	MG RESISTOR	5.6kΩ 1/16W J	
R4805	NRSA6AJ-103W	MG RESISTOR	10kΩ 1/16W J		R5837	NRSA6AJ-473W	MG RESISTOR	47kΩ 1/16W J	
R4806	NRSA6AJ-683W	MG RESISTOR	68kΩ 1/16W J		R5838	NRSA6AJ-123W	MG RESISTOR	12kΩ 1/16W J	
R4807	NRSA6AJ-563W	MG RESISTOR	56kΩ 1/16W J		R5840	NRSA6AJ-274W	MG RESISTOR	270kΩ 1/16W J	
R4808	NRSA6AJ-243W	MG RESISTOR	24kΩ 1/16W J		R5843	NRSA6AJ-184W	MG RESISTOR	180kΩ 1/16W J	
R4809	NRSA6AJ-122W	MG RESISTOR	1.2kΩ 1/16W J		R5845	NRSA6AJ-221W	MG RESISTOR	220Ω 1/16W J	
R4810	NRSA6AJ-103W	MG RESISTOR	10kΩ 1/16W J		R5846	NRSA6AJ-472W	MG RESISTOR	4.7kΩ 1/16W J	
R4811	NRSA6AJ-684W	MG RESISTOR	680kΩ 1/16W J		R5847	NRSA6AJ-222W	MG RESISTOR	2.2kΩ 1/16W J	
R4812	NRSA6AJ-153W	MG RESISTOR	15kΩ 1/16W J		R5848	NRSA6AJ-221W	MG RESISTOR	220Ω 1/16W J	
R4814	NRSA6AJ-105W	MG RESISTOR	1MΩ 1/16W J		R5850	NRSA6AJ-472W	MG RESISTOR	4.7kΩ 1/16W J	
R4815	NRSA6AJ-472W	MG RESISTOR	4.7kΩ 1/16W J		R5851	NRSA6AJ-222W	MG RESISTOR	2.2kΩ 1/16W J	
R4816	NRSA6AJ-105W	MG RESISTOR	1MΩ 1/16W J		R5852	NRSA6AJ-821W	MG RESISTOR	820Ω 1/16W J	
R4817	NRSA6AJ-334W	MG RESISTOR	330kΩ 1/16W J		R5853	NRSA6AJ-821W	MG RESISTOR	820Ω 1/16W J	
R4818	NRSA6AJ-154W	MG RESISTOR	150kΩ 1/16W J		R5854	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R4819	NRSA6AJ-103W	MG RESISTOR	10kΩ 1/16W J		R5856	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R4820	NRSA6AJ-104W	MG RESISTOR	100kΩ 1/16W J		R5859	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R4821	NRSA6AJ-104W	MG RESISTOR	100kΩ 1/16W J		R5861	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R4822	NRSA6AJ-333W	MG RESISTOR	33kΩ 1/16W J		R5862	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R4823	NRSA6AJ-102W	MG RESISTOR	1kΩ 1/16W J		R5864	NRSA6AJ-123W	MG RESISTOR	12kΩ 1/16W J	
R4824	NRSA6AJ-472W	MG RESISTOR	4.7kΩ 1/16W J		R5865	NRSA6AJ-123W	MG RESISTOR	12kΩ 1/16W J	

△ Symbol No.	Part No.	Part Name	Description	Local	△ Symbol No.	Part No.	Part Name	Description	Local
R5866	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J		R6134	NRSA6AD-104W	MG RESISTOR	100kΩ 1/16W D	
R5868	NRSA6AJ-123W	MG RESISTOR	12kΩ 1/16W J		R6135	NRSA6AD-123W	MG RESISTOR	12kΩ 1/16W D	
R5869	NRSA6AJ-123W	MG RESISTOR	12kΩ 1/16W J		R6136	NRSA6AD-103W	MG RESISTOR	10kΩ 1/16W D	
R5870	NRSA6AJ-681W	MG RESISTOR	680Ω 1/16W J		R6137	NRSA6AJ-220W	MG RESISTOR	22Ω 1/16W J	
R5871	NRSA6AJ-270W	MG RESISTOR	27Ω 1/16W J		R6138	NRSA6AJ-220W	MG RESISTOR	22Ω 1/16W J	
R5872	NRSA6AJ-152W	MG RESISTOR	1.5kΩ 1/16W J		R6139	NRSA6AJ-220W	MG RESISTOR	22Ω 1/16W J	
R5873	NRSA6AJ-152W	MG RESISTOR	1.5kΩ 1/16W J		R6141	NRSA6AD-822W	MG RESISTOR	8.2kΩ 1/16W D	
R5874	NRSA6AJ-152W	MG RESISTOR	1.5kΩ 1/16W J		R6142	NRSA6AD-623W	MG RESISTOR	62kΩ 1/16W D	
R5875	NRSA6AJ-152W	MG RESISTOR	1.5kΩ 1/16W J		R6143	NRSA6AD-393W	MG RESISTOR	39kΩ 1/16W D	
R5876	NRSA6AJ-683W	MG RESISTOR	68kΩ 1/16W J		R6144	NRSA6AD-822W	MG RESISTOR	8.2kΩ 1/16W D	
R5877	NRSA6AJ-683W	MG RESISTOR	68kΩ 1/16W J		R6146	NRSA6AD-153W	MG RESISTOR	15kΩ 1/16W D	
R5881	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J		R7301	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R5882	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J		R7302	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R5883	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J		R7303	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R5884	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J		RA1401	NRZ0034-473W	NET RESISTOR	47kΩ 1/32W J	
R5885	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J		RA1402	NRZ0034-331W	NET RESISTOR	330Ω 1/32W J	
R5886	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J		RA1403	NRZ0034-331W	NET RESISTOR	330Ω 1/32W J	
R5887	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J		RA1404	NRZ0034-331W	NET RESISTOR	330Ω 1/32W J	
R5888	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J		RA1405	NRZ0034-331W	NET RESISTOR	330Ω 1/32W J	
R5889	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J		L1301	NQL402M-100X	COIL	10uH M	
R5890	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J		L1401	NQR0006-001X	FERRITE BEADS		
R5892	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J		L2401	NQL402M-100X	COIL	10uH M	
R5893	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J		L2402	NQL402M-100X	COIL	10uH M	
R5896	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J		L2601	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R5897	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J		L2602	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R5901	NRSA6AJ-473W	MG RESISTOR	47kΩ 1/16W J		L2603	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R5902	NRSA6AJ-474W	MG RESISTOR	470kΩ 1/16W J		L2604	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R5903	NRSA6AJ-183W	MG RESISTOR	18kΩ 1/16W J		L3101	NQL38DK-100X	P COIL	10uH K	
R5904	NRSA6AJ-105W	MG RESISTOR	1MΩ 1/16W J		L4802	NQL302N-100X	COIL	10uH N	
R5905	NRSA6AJ-473W	MG RESISTOR	47kΩ 1/16W J		L4851	NQR0129-002X	FERRITE BEADS		
R5906	NRSA6AJ-474W	MG RESISTOR	470kΩ 1/16W J		L4852	NQL315K-100X	COIL	10uH K	
R5907	NRSA6AJ-183W	MG RESISTOR	18kΩ 1/16W J		L4853	NQL315K-100X	COIL	10uH K	
R5908	NRSA6AJ-105W	MG RESISTOR	1MΩ 1/16W J		L5801	NQL302N-100X	COIL	10uH N	
R5909	NRSA6AJ-123W	MG RESISTOR	12kΩ 1/16W J		L5802	NQL302N-100X	COIL	10uH N	
R5910	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J		L5901	NQL38DK-100X	P COIL	10uH K	
R5911	NRSA6AJ-123W	MG RESISTOR	12kΩ 1/16W J		L6001	NQL62EM-470X	COIL	47uH M	
R5912	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J		L6101	NQL64EM-4R7X	COIL	4.7uH M	
R6001	NRSA6AJ-183W	MG RESISTOR	18kΩ 1/16W J		L6102	NQL64EM-4R7X	COIL	4.7uH M	
R6002	NRSA6AJ-104W	MG RESISTOR	100kΩ 1/16W J		L6103	NQL64EM-330X	COIL	33uH M	
R6003	NRSA6AJ-104W	MG RESISTOR	100kΩ 1/16W J		L6104	NQL64EM-330X	COIL	33uH M	
R6004	NRSA6AJ-102W	MG RESISTOR	1kΩ 1/16W J		L6105	NQL64EM-470X	COIL	47uH M	
R6005	NRSA6AJ-104W	MG RESISTOR	100kΩ 1/16W J		L6106	NQL64EM-470X	COIL	47uH M	
R6006	NRSA6AJ-224W	MG RESISTOR	220kΩ 1/16W J		L6107	NQL64EM-330X	COIL	33uH M	
R6007	NRSA6AJ-104W	MG RESISTOR	100kΩ 1/16W J		L6108	NQL144K-220X	P COIL	22uH K	
△ R6008	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J		L6109	NQLZ011-221X	COIL	220uH M	
R6010	NRSA6AJ-681W	MG RESISTOR	680Ω 1/16W J		L6110	NQLZ010-220X	COIL	22uH	
R6011	NRSA6AD-333W	MG RESISTOR	33kΩ 1/16W D		L6111	NQL315K-100X	COIL	10uH K	
R6013	NRSA6AD-153W	MG RESISTOR	15kΩ 1/16W D		△ BT6001	QAB0025-001	LITHIUM BATTERY	CR2032/1F4 3V 220mAh	
R6101	NRSA6AD-302W	MG RESISTOR	3kΩ 1/16W D		CN201	QGB0403L2-F0X	CONNECTOR	B-B (1-150)	
R6102	NRSA6AD-243W	MG RESISTOR	24kΩ 1/16W D		CN202	QGF0503C1-26V	CONNECTOR	FFC/FPC (1-26)	
R6103	NRSA6AD-123W	MG RESISTOR	12kΩ 1/16W D		CN203	QGF0503C1-12V	CONNECTOR	FFC/FPC (1-12)	
R6104	NRSA6AD-163W	MG RESISTOR	16kΩ 1/16W D		CN205	QGF0503C1-10V	CONNECTOR	FFC/FPC (1-10)	
R6105	NRSA6AD-153W	MG RESISTOR	15kΩ 1/16W D		CN206	QGF0503C1-10V	CONNECTOR	FFC/FPC (1-10)	
R6106	NRSA6AD-513W	MG RESISTOR	51kΩ 1/16W D		CN207	QGA1002C1-06X	CONNECTOR	W-B (1-6)	
R6107	NRSA6AD-103W	MG RESISTOR	10kΩ 1/16W D		CN208	QGA1002C1-06X	CONNECTOR	W-B (1-6)	
R6108	NRSA6AD-153W	MG RESISTOR	15kΩ 1/16W D		CN209	QGF0301F1-51X	CONNECTOR	FFC/FPC (1-51)	
R6109	NRSA6AD-223W	MG RESISTOR	22kΩ 1/16W D		CN210	QGA1002C1-05X	CONNECTOR	W-B (1-5)	
R6111	NRSA6AD-153W	MG RESISTOR	15kΩ 1/16W D		CN211	QGA0803F1-20W	CONNECTOR	W-B (1-20)	
R6112	NRSA6AD-153W	MG RESISTOR	15kΩ 1/16W D		CN212	QGA0803F1-15W	CONNECTOR	W-B (1-15)	
R6113	NRSA6AD-562W	MG RESISTOR	5.6kΩ 1/16W D		CN213	QGA0803F1-14W	CONNECTOR	W-B (1-14)	
R6114	NRSA6AD-473W	MG RESISTOR	47kΩ 1/16W D		CN214	QGA1002F1-06X	CONNECTOR	W-B (1-6)	
R6115	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J		CN215	QGF0517F1-08X	CONNECTOR	FFC/FPC (1-8)	
R6116	NRSA6AJ-272W	MG RESISTOR	2.7kΩ 1/16W J		△ F6001	NMFZ007-R50X-K	FUSE	0.5A 50V	
R6117	NRVA6AD-683W	CMF RESISTOR	68kΩ 1/16W D		△ F6101	NMFZ007-2R5X-K	FUSE	2.5A 24V	
R6119	NRVA6AD-752W	CMF RESISTOR	7.5kΩ 1/16W D		△ F6102	NMFZ007-1R0X-K	FUSE	1A 32V	
R6120	NRVA6AD-473W	CMF RESISTOR	47kΩ 1/16W D		△ F6103	NMFZ007-R20X-K	FUSE	0.2A 50V	
R6121	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J		△ F6104	NMFZ007-R50X-K	FUSE	0.5A 50V	
R6122	NRSA6AD-433W	MG RESISTOR	43kΩ 1/16W D		△ F6105	NMFZ007-R50X-K	FUSE	0.5A 50V	
R6123	NRSA6AD-433W	MG RESISTOR	43kΩ 1/16W D		X201	NAX0564-001X	CRYSTAL		
R6125	NRSA6AD-183W	MG RESISTOR	18kΩ 1/16W D		X1401	NAX0175-001X	CRYSTAL	16.000MHz	
R6126	NRSA6AD-183W	MG RESISTOR	18kΩ 1/16W D		OT1	LY30030-0C4A	SPACER(A)	LITHIUM	
R6127	NRSA6AJ-183W	MG RESISTOR	18kΩ 1/16W J		OT2	LY30030-0P4A	SPACER(A)	C6151	
R6128	NRSA6AJ-220W	MG RESISTOR	22Ω 1/16W J		WR1	LY44304-001A	FPC ASSY(OPE P)	CN209-MON/OP CN301	
R6129	NRSA6AJ-220W	MG RESISTOR	22Ω 1/16W J		WR1A	QAL0471-001	FPC		
R6130	NRSA6AJ-220W	MG RESISTOR	22Ω 1/16W J		WR1B	QQR1402-001	FERRITE CORE		
R6131	NRSA6AD-273W	MG RESISTOR	27kΩ 1/16W D		WR2	WJJ0370-001A	E-SI C WIRE C-C	CN208-DIGITAL CN108	
R6132	NRSA6AD-473W	MG RESISTOR	47kΩ 1/16W D						
R6133	NRSA6AJ-220W	MG RESISTOR	22Ω 1/16W J						

△ Symbol No.	Part No.	Part Name	Description	Local
WR3	WJJ0370-001A	E-SI C WIRE C-C CN214-REAR CN601		
WR4	QUQ505-0803AA	FFC WIRE CN215-REAR CN603		
WR5	YU40017-030-8	THIN WIRE C6151-L6102		
WR6	YU40017-020-4	THIN WIRE C6151-C6101		
PW2	YB20961A-SS	RTH SUB BOARD ASSY		
R6148	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	
TH6101	NAD0025-474X	N THERMISTOR	470kΩ	
OT6101	LP40488-005A	500 SPACER		
WR6101	YU40017-015-3	THIN WIRE TL1-C6110		
WR6102	YU40017-020-4	THIN WIRE TL2-C6008		

CCD BOARD ASSEMBLY <03>

△ Symbol No.	Part No.	Part Name	Description	Local
PW1	YB10409A-02	CCD BOARD ASSY		
Q5201	2SC4082/P/-X	TRANSISTOR		
Q5202	2SC4083/P/-X	TRANSISTOR		
C5201	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C5202	NBE41AM-106X	TA E CAPACITOR	10uF 10V M	
C5203	NCB31HK-222X	C CAPACITOR	2200pF 50V K	
C5204	NCB21EK-104X	C CAPACITOR	0.1uF 25V K	
C5205	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C5207	NCF31EZ-104X	C CAPACITOR	0.1uF 25V Z	
C5208	NBZ0018-106X	TA E CAPACITOR	10uF	
C5209	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C5210	NBE21AM-106X	TA E CAPACITOR	10uF 10V M	
R5201	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R5202	NRSA63J-123X	MG RESISTOR	12kΩ 1/16W J	
R5203	NRSA63J-152X	MG RESISTOR	1.5kΩ 1/16W J	
R5204	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
WR1	WJR0029-001A	E-SH C WIRE C-F R5204/GND-DIGITAL CN103		

PREMDA BOARD ASSEMBLY <04>

△ Symbol No.	Part No.	Part Name	Description	Local
PW1	YB10411A-04	PREMDA BOARD ASSY		
IC1601	BD6637KS	IC		
IC1701	NJM2143R-X	IC		
IC1702	NJM2407R-W	IC		
IC3501	JCY0132	IC		
IC3502	SN74AHC1G04K-X	IC		
Q1601	UMC3N-W	DIGI TRANSISTOR		
D1602	DAP222-X	DIODE ARRAY		
D1602	or MA132WA-X	SI DIODE		
D1603	DAP222-X	DIODE ARRAY		
D1603	or MA132WA-X	SI DIODE		
D1604	DAP222-X	DIODE ARRAY		
D1604	or MA132WA-X	SI DIODE		
C1601	NCB31EK-103X	C CAPACITOR	0.01uF 25V K	
C1602	NBE20JM-106X	TA E CAPACITOR	10uF 6.3V M	
C1603	NBE20JM-106X	TA E CAPACITOR	10uF 6.3V M	
C1605	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C1606	NCB31HK-152X	C CAPACITOR	1500pF 50V K	
C1607	NCB31CK-473X	C CAPACITOR	0.047uF 16V K	
C1614	NBE20JM-106X	TA E CAPACITOR	10uF 6.3V M	
C1618	NCB31HK-222X	C CAPACITOR	2200pF 50V K	
C1619	NCB31HK-222X	C CAPACITOR	2200pF 50V K	

△ Symbol No.	Part No.	Part Name	Description	Local
C1620	NCB31HK-222X	C CAPACITOR	2200pF 50V K	
C1621	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
C1622	NCB31CK-223X	C CAPACITOR	0.022uF 16V K	
C1623	NCB31CK-473X	C CAPACITOR	0.047uF 16V K	
C1624	NCB31EK-103X	C CAPACITOR	0.01uF 25V K	
C1625	NCS31HJ-101X	C CAPACITOR	100pF 50V J	
C1626	NCB31HK-822X	C CAPACITOR	8200pF 50V K	
C1627	NCB31HK-822X	C CAPACITOR	8200pF 50V K	
C1628	NCB21CK-224X	C CAPACITOR	0.22uF 16V K	
C1629	NBP41DM-106X	TA E CAPACITOR	10uF 20V M	
C1630	NCB21CK-334X	C CAPACITOR	0.33uF 16V K	
C1632	NBE20JM-106X	TA E CAPACITOR	10uF 6.3V M	
C1633	NCB21CK-474X	C CAPACITOR	0.47uF 16V K	
C1641	NCB21CK-474X	C CAPACITOR	0.47uF 16V K	
C1701	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C1702	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C3501	NBE20JM-106X	TA E CAPACITOR	10uF 6.3V M	
C3502	NBE20JM-106X	TA E CAPACITOR	10uF 6.3V M	
C3503	NBE20JM-106X	TA E CAPACITOR	10uF 6.3V M	
C3504	NCB31CK-473X	C CAPACITOR	0.047uF 16V K	
C3505	NCB31CK-223X	C CAPACITOR	0.022uF 16V K	
C3506	NCB21CK-105X	C CAPACITOR	1uF 16V K	
C3507	NCB31EK-103X	C CAPACITOR	0.01uF 25V K	
C3508	NCB31EK-103X	C CAPACITOR	0.01uF 25V K	
C3509	NCB31EK-103X	C CAPACITOR	0.01uF 25V K	
C3510	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C3511	NCB31EK-103X	C CAPACITOR	0.01uF 25V K	
C3512	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C3513	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C3514	NCB31CK-473X	C CAPACITOR	0.047uF 16V K	
C3515	NCB31CK-473X	C CAPACITOR	0.047uF 16V K	
C3516	NCB31CK-473X	C CAPACITOR	0.047uF 16V K	
C3517	NCB31EK-103X	C CAPACITOR	0.01uF 25V K	
C3518	NCB31EK-103X	C CAPACITOR	0.01uF 25V K	
C3519	NCB31HK-102X	C CAPACITOR	1000pF 50V K	
C3520	NCB31EK-103X	C CAPACITOR	0.01uF 25V K	
C3521	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C3522	NCB20JM-475X	C CAPACITOR	4.7uF 6.3V M	
C3523	NCB31EK-103X	C CAPACITOR	0.01uF 25V K	
C3524	NCB31EK-103X	C CAPACITOR	0.01uF 25V K	
C3525	NCB20JM-475X	C CAPACITOR	4.7uF 6.3V M	
C3526	NCB31EK-103X	C CAPACITOR	0.01uF 25V K	
C3527	NDC31HJ-221X	C CAPACITOR	220pF 50V J	
C3528	NCB31EK-103X	C CAPACITOR	0.01uF 25V K	
C3529	NCB31EK-103X	C CAPACITOR	0.01uF 25V K	
C3531	NDC31HJ-101X	C CAPACITOR	100pF 50V J	
R1601	NRSA63J-681X	MG RESISTOR	680Ω 1/16W J	
R1602	NRSA63J-124X	MG RESISTOR	120kΩ 1/16W J	
R1603	NRSA63J-472X	MG RESISTOR	4.7kΩ 1/16W J	
R1604	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	
R1610	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J	
R1611	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J	
R1612	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	
R1613	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R1614	NRZ0072-R330X	MG RESISTOR	0.33Ω 1/4W F	
R1616	NRSA63D-332X	MG RESISTOR	3.3kΩ 1/16W D	
R1617	NRZ0072-R330X	MG RESISTOR	0.33Ω 1/4W F	
R1620	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R1621	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R1622	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R1624	NRSA63D-183X	MG RESISTOR	18kΩ 1/16W D	
R1625	NRSA63D-361X	MG RESISTOR	360Ω 1/16W D	
R1629	NRSA63J-564X	MG RESISTOR	560kΩ 1/16W J	
R1630	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R1631	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R1635	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J	
R1636	NRSA63J-123X	MG RESISTOR	12kΩ 1/16W J	
R1637	NRSA63J-154X	MG RESISTOR	150kΩ 1/16W J	
R1643	NRSA02J-0R0X	MG RESISTOR	0Ω 1/10W J	
R1701	NRSA63J-823X	MG RESISTOR	82kΩ 1/16W J	
R1702	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
R1703	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
R1704	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
R1705	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
R1706	NRSA63J-823X	MG RESISTOR	82kΩ 1/16W J	
R1707	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R1708	NRSA63J-124X	MG RESISTOR	120kΩ 1/16W J	

△ Symbol No.	Part No.	Part Name	Description	Local
R1709	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
R1710	NRSA63J-124X	MG RESISTOR	120kΩ 1/16W J	
R1711	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R1712	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R3501	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J	
R3502	NRSA63J-104X	MG RESISTOR	100kΩ 1/16W J	
R3503	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R3504	NRSA63D-241X	MG RESISTOR	240Ω 1/16W D	
R3505	NRSA63D-241X	MG RESISTOR	240Ω 1/16W D	
R3506	NRSA63D-241X	MG RESISTOR	240Ω 1/16W D	
R3507	NRSA63D-241X	MG RESISTOR	240Ω 1/16W D	
R3508	NRSA63J-223X	MG RESISTOR	22kΩ 1/16W J	
R3509	NRSA63J-393X	MG RESISTOR	39kΩ 1/16W J	
R3510	NRSA63J-682X	MG RESISTOR	6.8kΩ 1/16W J	
R3511	NRSA63J-101X	MG RESISTOR	100Ω 1/16W J	
R3513	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J	
R3514	NRSA63J-471X	MG RESISTOR	470Ω 1/16W J	
R3515	NRSA63J-222X	MG RESISTOR	2.2kΩ 1/16W J	
R3591	NRSA63J-391X	MG RESISTOR	390Ω 1/16W J	

L3501	NQR0129-002X	FERRITE BEADS		
L3502	NQL402M-100X	COIL	10uH M	
L3503	NQR0006-001X	FERRITE BEADS		
L3504	NQR0006-001X	FERRITE BEADS		
L3505	NQR0006-001X	FERRITE BEADS		

CN401	QGF0503F4-11X	CONNECTOR	FFC/FPC (1-11)	
CN402	QGF0517F1-08X	CONNECTOR	FFC/FPC (1-8)	
CN403	QGF0517F2-06X	CONNECTOR	FFC/FPC (1-6)	
CN404	QGF0508F1-11X	CONNECTOR	FFC/FPC (1-11)	
CN405	QGF0508F1-18X	CONNECTOR	FFC/FPC (1-18)	
CN406	QGF0517F2-16X	CONNECTOR	FFC/FPC (1-16)	
CN407	QGF0508F1-06X	CONNECTOR	FFC/FPC (1-6)	
CN408	QGF0507F3-08X	CONNECTOR	FFC/FPC (1-8)	
CN409	QGF0508F1-06X	CONNECTOR	FFC/FPC (1-6)	
CN410	QGA0803F1-22W	CONNECTOR	W-B (1-22)	
CN411	QGA1002F1-06X	CONNECTOR	W-B (1-6)	
CN412	QGA1002F1-05X	CONNECTOR	W-B (1-5)	
CN413	QGA0803F1-15W	CONNECTOR	W-B (1-15)	
CN414	QGA0803F1-20W	CONNECTOR	W-B (1-20)	
CN415	QGA0803F1-14W	CONNECTOR	W-B (1-14)	
OT1	LY30030-0D2A	SPACER(A)	14PIN (B)	
OT2	LY30030-0D3A	SPACER(A)	14PIN (T)	
OT3	LY30030-0D4A	SPACER(A)	SHIELD WIRE	
OT4	LY44223-001A	SPACER(SH.WIRE)	SHIELD WIRE	
OT5	LY30030-0D5A	SPACER(A)	GRIP WIRE (x2)	
OT6	LY30030-0S6A	SPACER(A)	GRIP WIRE	
SD1	LY33021-001A	S.COVER(P/R)		
WR1	WJA0034-001A	E-S ID WIRE CN401-DIGITAL CN107		
WR2	WJN0097-001A	E-SH C WIRE C-C CN411-DIGITAL CN106		
WR3	WJN0098-001A	E-SH C WIRE C-C CN412-ANALOG CN210		
WR4	WJA0036-001A	E-S ID WIRE CN413-ANALOG CN212		
WR5	WJA0035-001A	E-S ID WIRE CN414-ANALOG CN211		
WR6	WJA0037-001A	E-S ID WIRE CN415-ANALOG CN213		
WR7	WJV0075-001A	E-PRIMARY WIRE SD1-BKT(MECHA)ASSY		

CONNECT BOARD ASSEMBLY <05>

△ Symbol No.	Part No.	Part Name	Description	Local
PW1	YB10410A-01	CONNECT BOARD ASSY		
CN501	QGB0403M1-F0X	CONNECTOR	B-B (1-150)	
CN502	QGB0403M1-F0X	CONNECTOR	B-B (1-150)	

MON/OPE BOARD ASSEMBLY <06>

△ Symbol No.	Part No.	Part Name	Description	Local
PW1	YB10412A1-03	MON/OPE BOARD ASSY		
IC7101	CXA3272R	IC		
IC7102	AT25040N-10SC-X	IC		

△ Symbol No.	Part No.	Part Name	Description	Local
IC7102	or 25LC040-I/SN-X	IC		
IC7201	CXA3582R	IC		
IC7202	MM1613AN-X	IC		
Q7101	2SA1577/QR/-X	TRANSISTOR		
Q7102	DTC144EE-X	DIGI TRANSISTOR		
Q7102	or PDC144EE-X	DIGI TRANSISTOR		
Q7102	or UN9213J-X	DIGI TRANSISTOR		
Q7102	or RN1104-X	DIGI TRANSISTOR		
Q7203	DTC144EE-X	DIGI TRANSISTOR		
Q7203	or PDC144EE-X	DIGI TRANSISTOR		
Q7203	or UN9213J-X	DIGI TRANSISTOR		
Q7203	or RN1104-X	DIGI TRANSISTOR		
Q7204	2SA1577/QR/-X	TRANSISTOR		

C7101	NBE91AM-335X	TA E CAPACITOR	3.3uF 10V M	
C7102	NCB31EK-682X	C CAPACITOR	6800pF 25V K	
C7106	NBP41EM-475X	TA E CAPACITOR	4.7uF 25V M	
C7107	NBE41AM-476X	TA E CAPACITOR	47uF 10V M	
C7108	NCB21AK-105X	C CAPACITOR	1uF 10V K	
C7109	NCB21AK-105X	C CAPACITOR	1uF 10V K	
C7110	NCB21AK-105X	C CAPACITOR	1uF 10V K	
C7111	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K	
C7115	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
C7116	NCBA1HK-222W	C CAPACITOR	2200pF 50V K	
C7117	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
C7118	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
C7119	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
C7120	NBP41EM-475X	TA E CAPACITOR	4.7uF 25V M	
C7121	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C7122	NBE20JM-226X	TA E CAPACITOR	22uF 6.3V M	
C7123	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
C7124	NBE20JM-226X	TA E CAPACITOR	22uF 6.3V M	
C7125	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
C7128	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K	
C7134	NBP41EM-475X	TA E CAPACITOR	4.7uF 25V M	
C7136	NDCA1HJ-390W	C CAPACITOR	39pF 50V J	
C7137	NDCA1HJ-390W	C CAPACITOR	39pF 50V J	
C7138	NDCA1HJ-390W	C CAPACITOR	39pF 50V J	
C7139	NDCA1HJ-390W	C CAPACITOR	39pF 50V J	
C7140	NDCA1HJ-390W	C CAPACITOR	39pF 50V J	
C7201	NBE41AM-476X	TA E CAPACITOR	47uF 10V M	
C7202	NCB21CK-105X	C CAPACITOR	1uF 16V K	
C7203	NCB21CK-105X	C CAPACITOR	1uF 16V K	
C7204	NCB21CK-105X	C CAPACITOR	1uF 16V K	
C7205	NBP41EM-475X	TA E CAPACITOR	4.7uF 25V M	
C7206	NCB21CK-105X	C CAPACITOR	1uF 16V K	
C7207	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K	
C7209	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
C7210	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
C7211	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
C7213	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K	
C7214	NBE91AM-335X	TA E CAPACITOR	3.3uF 10V M	
C7215	NCBA1EK-682W	C CAPACITOR	6800pF 25V K	
C7216	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
C7217	NCB21CK-105X	C CAPACITOR	1uF 16V K	
C7220	NBP41EM-475X	TA E CAPACITOR	4.7uF 25V M	
C7221	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C7222	NBE20JM-226X	TA E CAPACITOR	22uF 6.3V M	
C7223	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
C7224	NCBA1AK-104W	C CAPACITOR	0.1uF 10V K	
C7225	NBE20JM-226X	TA E CAPACITOR	22uF 6.3V M	
C7227	NCBA1CK-103W	C CAPACITOR	0.01uF 16V K	
C7228	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
C7229	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
C7231	NBE90JM-106X	TA E CAPACITOR	10uF 6.3V M	
C7234	NDCA1HJ-390W	C CAPACITOR	39pF 50V J	

R7001	NRSA6AJ-152W	MG RESISTOR	1.5kΩ 1/16W J	
R7002	NRSA6AJ-182W	MG RESISTOR	1.8kΩ 1/16W J	
R7003	NRSA6AJ-272W	MG RESISTOR	2.7kΩ 1/16W J	
R7004	NRSA6AJ-392W	MG RESISTOR	3.9kΩ 1/16W J	
R7005	NRSA6AJ-682W	MG RESISTOR	6.8kΩ 1/16W J	
R7006	NRSA6AJ-103W	MG RESISTOR	10kΩ 1/16W J	
R7007	NRSA6AJ-152W	MG RESISTOR	1.5kΩ 1/16W J	
R7008	NRSA6AJ-182W	MG RESISTOR	1.8kΩ 1/16W J	
R7009	NRSA6AJ-272W	MG RESISTOR	2.7kΩ 1/16W J	
R7010	NRSA6AJ-392W	MG RESISTOR	3.9kΩ 1/16W J	

△ Symbol No.	Part No.	Part Name	Description	Local
R7011	NRSA6AJ-682W	MG RESISTOR	6.8kΩ 1/16W J	
R7012	NRSA6AJ-103W	MG RESISTOR	10kΩ 1/16W J	
R7013	NRSA6AJ-103W	MG RESISTOR	10kΩ 1/16W J	
R7101	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R7102	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R7103	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R7104	NRSA6AJ-103W	MG RESISTOR	10kΩ 1/16W J	
R7105	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R7106	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R7107	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R7108	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R7109	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R7112	NRSA6AJ-100W	MG RESISTOR	10Ω 1/16W J	
R7113	NRSA6AJ-100W	MG RESISTOR	10Ω 1/16W J	
R7114	NRSA6AJ-100W	MG RESISTOR	10Ω 1/16W J	
R7116	NRSA6AJ-103W	MG RESISTOR	10kΩ 1/16W J	
R7117	NRSA6AJ-472W	MG RESISTOR	4.7kΩ 1/16W J	
R7118	NRSA6AJ-473W	MG RESISTOR	47kΩ 1/16W J	
R7119	NRSA6AJ-153W	MG RESISTOR	15kΩ 1/16W J	
R7120	NRSA6AJ-560W	MG RESISTOR	56Ω 1/16W J	
R7121	NRSA6AJ-560W	MG RESISTOR	56Ω 1/16W J	
R7122	NRSA6AJ-560W	MG RESISTOR	56Ω 1/16W J	
R7123	NRSA6AJ-560W	MG RESISTOR	56Ω 1/16W J	
R7124	NRSA6AJ-560W	MG RESISTOR	56Ω 1/16W J	
R7201	NRSA6AJ-100W	MG RESISTOR	10Ω 1/16W J	
R7202	NRSA6AJ-100W	MG RESISTOR	10Ω 1/16W J	
R7203	NRSA6AJ-100W	MG RESISTOR	10Ω 1/16W J	
R7204	NRSA6AJ-100W	MG RESISTOR	10Ω 1/16W J	
R7214	NRSA6AJ-100W	MG RESISTOR	10Ω 1/16W J	
R7215	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R7216	NRSA6AD-433W	MG RESISTOR	43kΩ 1/16W D	
R7217	NRSA6AJ-103W	MG RESISTOR	10kΩ 1/16W J	
R7218	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R7219	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R7220	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R7221	NRSA6AJ-0R0W	MG RESISTOR	0Ω 1/16W J	
R7222	NRSA6AJ-104W	MG RESISTOR	100kΩ 1/16W J	
R7224	NRSA6AJ-103W	MG RESISTOR	10kΩ 1/16W J	
R7225	NRSA6AJ-472W	MG RESISTOR	4.7kΩ 1/16W J	
R7226	NRSA6AJ-122W	MG RESISTOR	1.2kΩ 1/16W J	
R7227	NRSA6AJ-101W	MG RESISTOR	100Ω 1/16W J	
R7228	NRSA6AJ-101W	MG RESISTOR	100Ω 1/16W J	
R7230	NRSA6AJ-220W	MG RESISTOR	22Ω 1/16W J	
R7231	NRSA6AJ-220W	MG RESISTOR	22Ω 1/16W J	
L7102	NQL315K-220X	COIL	22uH K	
L7103	NQL315K-220X	COIL	22uH K	
L7104	NQL315K-220X	COIL	22uH K	
L7201	NQL315K-220X	COIL	22uH K	
L7202	NQL315K-220X	COIL	22uH K	
L7203	NQL315K-220X	COIL	22uH K	
L7205	NQL315K-100X	COIL	10uH K	
CN301	QGF0301F1-51X	CONNECTOR	FFC/FPC (1-51)	
CN302	QGF0301F1-39X	CONNECTOR	FFC/FPC (1-39)	
CN303	QGF0507F3-22X	CONNECTOR	FFC/FPC (1-22)	
CN304	QGF0503F4-06X	CONNECTOR	FFC/FPC (1-6)	
CN305	QGA1001F1-02X	CONNECTOR	W-B (1-2)	
S7001	NSW0145-001X	TACT SWITCH STOP		
S7002	NSW0145-001X	TACT SWITCH REW		
S7003	NSW0145-001X	TACT SWITCH PLAY/PAUSE		
S7004	NSW0145-001X	TACT SWITCH FF		
S7005	NSW0203-001X	PUSH SWITCH PAE		
S7006	NSW0203-001X	PUSH SWITCH S.A		
S7007	NSW0203-001X	PUSH SWITCH WHITE BALANCE		
S7008	NSW0145-001X	TACT SWITCH INDEX		
S7009	NSW0145-001X	TACT SWITCH INFO		
S7010	NSW0145-001X	TACT SWITCH NAVI		
S7011	NSW0145-001X	TACT SWITCH NAVI STORE		
S7012	NSW0145-001X	TACT SWITCH EJECT		
S7013	NSW0145-001X	TACT SWITCH FADE/WIPE		
S7014	NSW0145-001X	TACT SWITCH BLANK SEARCH		
S7015	NSW0135-001X	LEVER PUSH SWITCH MENU		
S7016	NSW0099-001X	SLIDE SWITCH DV/MPEG2		
S7017	NSW0099-001X	SLIDE SWITCH VIDEO/MEMOLY		
S7018	NSW0201-001X	PUSH SWITCH MONITOR SW		
OT1	LY30029-0S5A	SPACER(A)	C7120	
SD1	LY33592-001A	SHIELD(UPPER)		

△ Symbol No.	Part No.	Part Name	Description	Local
SD2	LY33593-001A	SHIELD(D-JACK)		

SW BOARD ASSEMBLY <07>

△ Symbol No.	Part No.	Part Name	Description	Local
PW2	YB10412A2-01	SW BOARD ASSY		
R2891	NRSA63D-473X	MG RESISTOR	47kΩ 1/16W D	
R2892	NRSA63D-203X	MG RESISTOR	20kΩ 1/16W D	
R2893	NRSA63D-563X	MG RESISTOR	56kΩ 1/16W D	
CN805	QGF0503F4-06X	CONNECTOR	FFC/FPC (1-6)	
S2891	NSW0150-001X	PUSH SWITCH		
S2892	NSW0150-001X	PUSH SWITCH		

MONI BL BOARD ASSEMBLY <08>

△ Symbol No.	Part No.	Part Name	Description	Local
PW1	YB10413A-01	MONI BL BOARD ASSY		
Q7501	2SD1664/QR/-W	TRANSISTOR		
Q7502	2SD1664/QR/-W	TRANSISTOR		
Q7503	DTA144EE-X	DIGI TRANSISTOR		
Q7504	2SC4617/QR/-X	TRANSISTOR		
D7551	UDZ4.3B-X	Z DIODE		
D7552	UDZ2.7B-X	Z DIODE		
C7501	NCZ1016-120X	C CAPACITOR	12pF 2kV J	
C7503	NFV91HJ-333X	MPPS CAPACITOR	0.033uF 50V J	
C7504	NCB31EK-103X	C CAPACITOR	0.01uF 25V K	
C7505	NBE20JM-106X	TA E CAPACITOR	10uF 6.3V M	
C7551	NCB21AK-105X	C CAPACITOR	1uF 10V K	
C7552	NCB21AK-105X	C CAPACITOR	1uF 10V K	
C7553	NCB21AK-105X	C CAPACITOR	1uF 10V K	
C7555	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
R7501	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R7502	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R7503	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R7506	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J	
R7507	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J	
R7513	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R7551	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
L7501	NQLZ010-680X	COIL	68uH	
L7502	NQLZ010-220X	COIL	22uH	
△ T7501	NQS0059-001X	SW TARNSE		
CN701	QGF0506F2-33X	CONNECTOR	FFC/FPC (1-33)	
CN702	QGF0503F1-24X	CONNECTOR	FFC/FPC (1-24)	
△ F7501	NMFZ007-R40X-K	FUSE	0.4A 50V	
OT1	LY44292-001A	EARTH SHEET		

VF BL BOARD ASSEMBLY <09>

△ Symbol No.	Part No.	Part Name	Description	Local
PW1	YB10414A-01	VF BL BOARD ASSY		
Q7001	UMD3N-W	DIGI TRANSISTOR		
Q7001	or XP4311-W	TRANSISTOR		
Q7002	PUMX1-W	PAIR TRANSISTOR		
Q7002	or UMX1N-W	PAIR TRANSISTOR		
D7001	NSCW100A0/ST/-X	LED		

△ Symbol No.	Part No.	Part Name	Description	Local
C7001	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C7002	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C7003	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
R7001	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J	
R7002	NRSA63J-561X	MG RESISTOR	560Ω 1/16W J	
R7003	NRSA63J-470X	MG RESISTOR	47Ω 1/16W J	
R7005	NRSA63J-333X	MG RESISTOR	33kΩ 1/16W J	
CN703	QGF0517F2-20X	CONNECTOR	FFC/FPC (1-20)	
CN704	QGF0505F1-16X	CONNECTOR	FFC/FPC (1-16)	

EJECT BOARD ASSEMBLY <10>

△ Symbol No.	Part No.	Part Name	Description	Local
PW1	YB10415A1	EJECT BOARD ASSY		
IC1161	RS-171-X	IC(PHOTO SENSOR)		
D1161	SML-010LT-X	LED		
C1161	NBE20JM-106X	TA E CAPACITOR	10uF 6.3V M	
R1161	NRSA63J-470X	MG RESISTOR	47Ω 1/16W J	
CN803	QGF0517F1-08X	CONNECTOR	FFC/FPC (1-8)	
S1601	NSW0150-001X	PUSH SWITCH EJECT SW		

MIC/WB BOARD ASSEMBLY <11>

△ Symbol No.	Part No.	Part Name	Description	Local
PW2	YB10415A2	MIC/WB BOARD ASSY		
Q1151	RPM-22PB	PHOTO TRANSISTOR		
C2651	NCB31HK-102X	C CAPACITOR	1000pF 50V K	
C2652	NCB31HK-102X	C CAPACITOR	1000pF 50V K	
C2653	NCB31HK-102X	C CAPACITOR	1000pF 50V K	
C2654	NCB31HK-102X	C CAPACITOR	1000pF 50V K	
R1151	NRSA63J-302X	MG RESISTOR	3kΩ 1/16W J	
R1156	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R1157	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R1158	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R1159	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R2651	NRSA63J-105X	MG RESISTOR	1MΩ 1/16W J	
R2652	NRSA63J-105X	MG RESISTOR	1MΩ 1/16W J	
R2653	NRSA63J-102X	MG RESISTOR	1kΩ 1/16W J	
R2654	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
L1151	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
L2651	NQR0251-004X	FERRITE BEADS		
L2652	NQR0251-004X	FERRITE BEADS		
L2653	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
L2661	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
L2662	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
L2663	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
CN901	QGF0503F4-10X	CONNECTOR	FFC/FPC (1-10)	
CN902	QGA1002F1-06X	CONNECTOR	W-B (1-6)	
CN903	QGA1001F1-04X	CONNECTOR	W-B (1-4)	
CN904	QGF0517F1-06X	CONNECTOR	FFC/FPC (1-6)	
CN905	QGF0517F2-06X	CONNECTOR	FFC/FPC (1-6)	
J901	QNS0147-003	3.5 JACK		
HD1	PQ40795-2-2	LED HOLDER		
WR1	WJN0099-001A	E-SH C WIRE C-C CN902-ANALOG CN207		
WR2	WJT0095-001A	E-CARD WIRE CN901-ANALOG CN206		

BOTTOM BOARD ASSEMBLY <12>

△ Symbol No.	Part No.	Part Name	Description	Local
PW3	YB10415A3	BOTTOM BOARD ASSY		
C2801	NBE20JM-106X	TA E CAPACITOR	10uF 6.3V M	
C2803	NBE20JM-106X	TA E CAPACITOR	10uF 6.3V M	
C2804	NCB30JK-105X	C CAPACITOR	1uF 6.3V K	
R2801	NRSA63J-220X	MG RESISTOR	22Ω 1/16W J	
R2802	NRSA63J-220X	MG RESISTOR	22Ω 1/16W J	
R2803	NRSA63J-220X	MG RESISTOR	22Ω 1/16W J	
R2804	NRSA63J-220X	MG RESISTOR	22Ω 1/16W J	
R2805	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J	
R2806	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J	
R2807	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J	
R2808	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J	
R2809	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J	
R2810	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J	
R2811	NRSA63J-473X	MG RESISTOR	47kΩ 1/16W J	
L2801	NQR0006-001X	FERRITE BEADS		
CN801	QGF0503F4-18X	CONNECTOR	FFC/FPC (1-18)	
CN802	NNZ0058-001X	SD CARD CONNECTOR		
S2801	NSW0203-001X	PUSH SWITCH FOCUS SW		
S2802	NSW0203-001X	PUSH SWITCH BLC SW		
WR1	WJT0096-001A	E-CARD WIRE CN801-DIGITAL CN104		

D4 BOARD ASSEMBLY <13>

△ Symbol No.	Part No.	Part Name	Description	Local
PW4	YB10415A4-02	D4 BOARD ASSY		
D3402	UDZS6.8B-X	Z DIODE		
D3402	or MA8068-X	Z DIODE		
C3401	NBZ0002-227X	TA E CAPACITOR	220uF	
C3402	NBZ0002-227X	TA E CAPACITOR	220uF	
C3403	NBZ0002-227X	TA E CAPACITOR	220uF	
C3404	NBZ0002-227X	TA E CAPACITOR	220uF	
R3401	NRSA63J-750X	MG RESISTOR	75Ω 1/16W J	
R3402	NRSA63J-750X	MG RESISTOR	75Ω 1/16W J	
R3403	NRSA63J-750X	MG RESISTOR	75Ω 1/16W J	
CN806	QGF0517F1-14X	CONNECTOR	FFC/FPC (1-14)	
J801	QNZ0620-002	D CONNECTOR		
OT1	LY30030-0C2A	SPACER(A)	BOTTOM	
OT2	LY30030-0C3B	SPACER(A)	SIDE	
OT3	LY30030-0D6A	SPACER(A)	BOTTOM2	
PW4	YB10415A4-02	D4 BOARD ASSY		
WR1	QUQ105-1403AA	FFC WIRE CN806-DIGITAL CN105		

GYRO BOARD ASSEMBLY <14>

△ Symbol No.	Part No.	Part Name	Description	Local
PW5	YB10415A5	GYRO BOARD ASSY		
C5951	NBE20JM-106X	TA E CAPACITOR	10uF 6.3V M	
C5953	NCB31EK-103X	C CAPACITOR	0.01uF 25V K	
R5951	NRSA63J-103X	MG RESISTOR	10kΩ 1/16W J	
L5951	NQL045K-100X	COIL	10uH K	
CN804	QGF0507F3-10X	CONNECTOR	FFC/FPC (1-10)	
S5951	NSW0135-001X	LEVER PUSH SWITCH EXPOSURE SW		
OT1	LY30030-0P6A	SPACER(A)		
OT2	LY30030-0P7A	SPACER(A)	SWITCH KNOB	

REAR BOARD ASSEMBLY <15>


△ Symbol No.	Part No.	Part Name	Description	Local
PW6	YB10415A6-02	REAR BOARD ASSY		
Q2851	EMX1-W	TRANSISTOR		
Q2871	EMX18-W	TRANSISTOR		
C2851	NCB31HK-472X	C CAPACITOR	4700pF 50V K	
C2852	NCB31HK-472X	C CAPACITOR	4700pF 50V K	
C2871	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C2872	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
C2881	NCB31HK-103X	C CAPACITOR	0.01uF 50V K	
C2882	NCB31CK-104X	C CAPACITOR	0.1uF 16V K	
R2851	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J	
R2852	NRSA63J-151X	MG RESISTOR	150Ω 1/16W J	
R2853	NRSA63J-151X	MG RESISTOR	150Ω 1/16W J	
R2861	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R2871	NRSA63J-332X	MG RESISTOR	3.3kΩ 1/16W J	
R2881	NRVA63D-823X	CMF RESISTOR	82kΩ 1/16W D	
R2882	NRVA63D-333X	CMF RESISTOR	33kΩ 1/16W D	
R2883	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R2884	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
R2885	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
L2851	NQR0251-004X	FERRITE BEADS		
L2852	NQR0251-004X	FERRITE BEADS		
L2853	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
L2854	NQR0251-004X	FERRITE BEADS		
L2855	NQR0251-004X	FERRITE BEADS		
L2856	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
L2857	NRSA63J-0R0X	MG RESISTOR	0Ω 1/16W J	
L2861	NQR0384-003X	CHOKE COIL		
L2871	NQR0251-004X	FERRITE BEADS		
L2872	NQR0251-004X	FERRITE BEADS		
CN601	QGA1002F1-06X	CONNECTOR	W-B (1-6)	
CN602	QGF0503F4-16X	CONNECTOR	FFC/FPC (1-16)	
CN603	QGF0503F4-08X	CONNECTOR	FFC/FPC (1-8)	
J601	QNA0035-001	DC JACK		
J602	QNS0012-001	3.5 JACK		
J603	QNZ0497-001	USB(B) CONNECTOR	USB(MINI-B)	
J604	NNZ0093-001X	M CONNECTOR		
OT1	LY44276-001A	SPACER(RGND)	PWB SILK	
OT2	LY44276-001A	SPACER(RGND)	TP607	
OT3	LY44276-001A	SPACER(RGND)	TP609	
OT4	LY30030-0P5A	SPACER(A)	AV JACK	

JVC


SERVICE MANUAL

MECHANISM ASSEMBLY


DVC MECHANISM VHS-C MECHANISM VHS MECHANISM

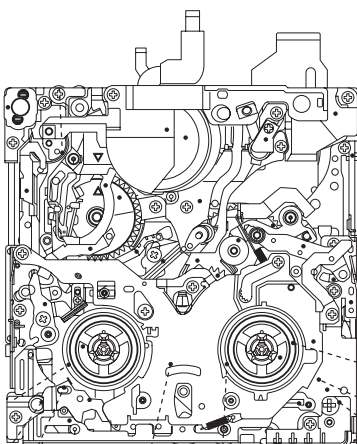

<DVC MECHANISM>

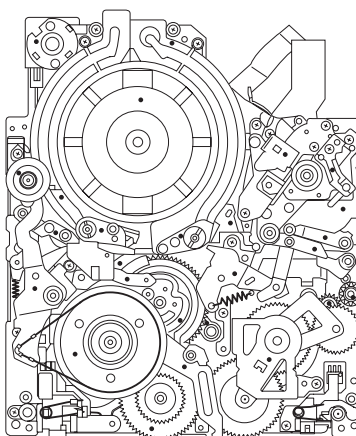

<VHS-C MECHANISM>

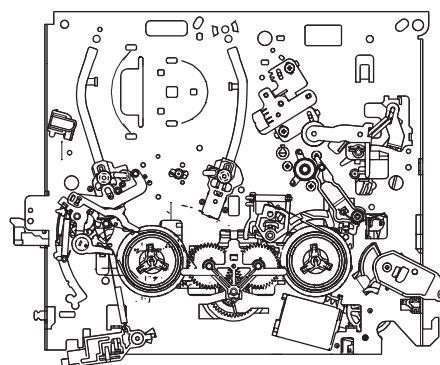

<VHS MECHANISM>

TABLE OF CONTENTS

1	JIGS AND TOOLS	1-1
2	SPECIFIC SERVICE INSTRUCTIONS	2-1
3	PARTS LIST	3-1

SECTION 1

JIGS AND TOOLS

1.1 TOOLS REQUIRED FOR ADJUSTMENTS

1. Torque driver YTU94088	2. Bit YTU94088-003
3. Tweezers P-895	4. Chip IC replacement jig PTS40844-2
5. Slit washer installation jig YTU94121A	6. Cleaning cloth KSMM-01

Fig.1-1-1

1. Torque driver

Be sure to use to fastening the mechanism and exterior parts because those parts must strictly be controlled for tightening torque.

Torque setting value of torque driver is limited. At the values over the maximum torque setting value, fasten a screw manually not to damage the screw thread.

2. Bit

This bit is slightly longer than those set in conventional torque drivers.

3. Tweezers

To be used for removing and installing parts and wires.

4. Chip IC replacement jig

To be used for replacement of part.

5. Slit washer installation jig

To be used to install slit washers.

6. Cleaning cloth

Recommended cleaning cloth to wipe down the video heads, mechanism (tape transport system), optical lens surface.

SECTION 2

SPECIFIC SERVICE INSTRUCTIONS

2.1 DVC MECHANISM

2.1.1 Precautions

- (1) When fastening parts, pay careful attention to the tightening torque of each screw. Unless otherwise specified, tighten a screw with the torque of 0.055 N•m (0.56 kgf•cm).
- (2) Be sure to disconnect the set from the power supply before fastening and soldering parts.
- (3) When disconnecting/connecting wires, be careful not to get them and their connectors damaged.
- (4) When replacing parts, be very careful neither to damage other parts nor to fit wrong parts by mistake.

2.1.2 Notes on procedure for disassembly/assembly

The disassembling procedure table (Fig. 2-1-10 on page 2-4, a part of the table is shown below for reference) shows the procedure to disassemble/reassemble mechanism parts.

Carefully read the following explanation before starting actual disassembling/reassembling work. The item numbers (circled numbers) in the following explanation correspond to those appearing under respective columns of the table.

Example

NO.	PART NAME	FIG.	POINT	NOTE	REMARKS
[1]	CASSETTE HOUSING ASSY	T	Fig.2-4-3	3(S1),(L1a)-(L1e)	NOTE 1 a,b,c,d
[2]	UPPER BASE ASSY	T	Fig.2-4-4	(S2),(L2a),(L2b)	NOTE 2
[3]	DRUM ASSY	T		(S3a),2(S3b)	NOTE 3 a,b
[4]	REEL DISK ASSY(SUP)	T	Fig.2-4-5	(W4)	NOTE 4 a
[5]	REEL DISK ASSY(TU)	T		(W5a),(W5b),(W5c)	NOTE 5 a,b
[6]	REEL COVER ASSY	T		(W6),(S6a),2(S6b)	NOTE 6

*1

*2

*3

*4

*5

*6

*7

*1 Numbers appearing in this column indicate the order to remove parts. When reassembling, follow these numbers in the reverse order. Circled numbers in this column correspond to those appearing in drawings of this section.

*2 This column shows part names corresponding to numbers in the left column.

*3 The symbol (T or B) appearing in this column shows the side which the objective part is mounted on.

T =the upper side, B =the lower side

*4 Symbols appearing in this column indicate drawing numbers.

*5 This column indicates parts and points such as screws, washers, springs, and others to be removed/fitted for disassembling/reassembling the mechanism. Besides such the parts, this column occasionally indicates working points.

P = Spring

W = Washer

S = Screw

* = Lock (L), soldering (SD), shield, connector (CN), etc.

*6 Numbers in this column represent the numbers of notes in the text.

(For parts that need phase adjustment after reassembling, refer to "MECHANISM ADJUSTMENTS".)

*7 This column indicates required after-disassembling/-reassembling work such as phase adjustment or mechanism adjustment.

Example

- Remove (W1)=Washer W1.
- Remove the solder at (SD1)=Point SD1.
- Disconnect A = Connector A.

2.1.3 DISASSEMBLY AND ASSEMBLY OF MECHANISM ASSEMBLY

2.1.3.1 General statement

The mechanism should generally be disassembled/assembled in the C.IN mode (ASSEMBLY mode). (Refer to Fig. 2-1-1,2-1-2.) However, when the mechanism is removed from the main body, it is set in the STOP mode. Therefore, after the mechanism is removed from the main body, supply 3 V DC to the electrode on the top of the loading motor to enter the mechanism mode into the C IN mode compulsory.

<Mechanism assembly/Cassette housing assembly>

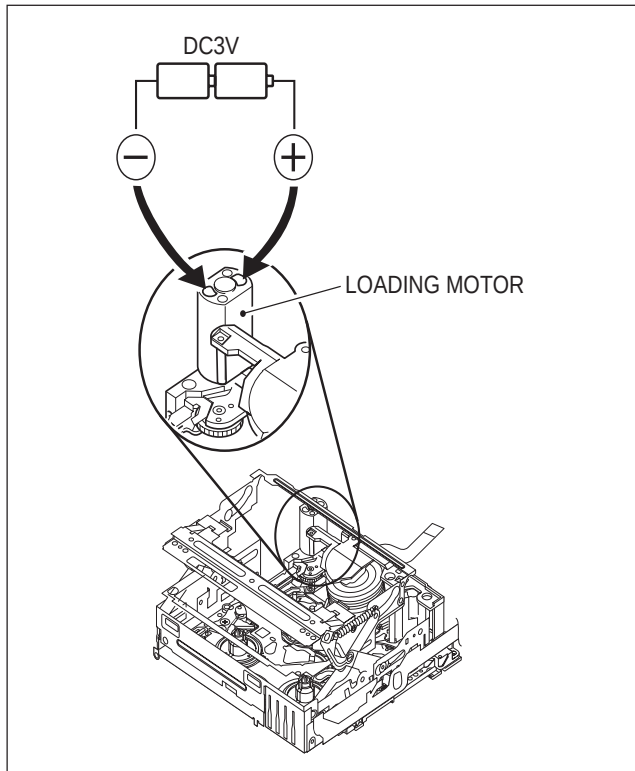


Fig.2-1-1

<Back side of the mechanism assembly>

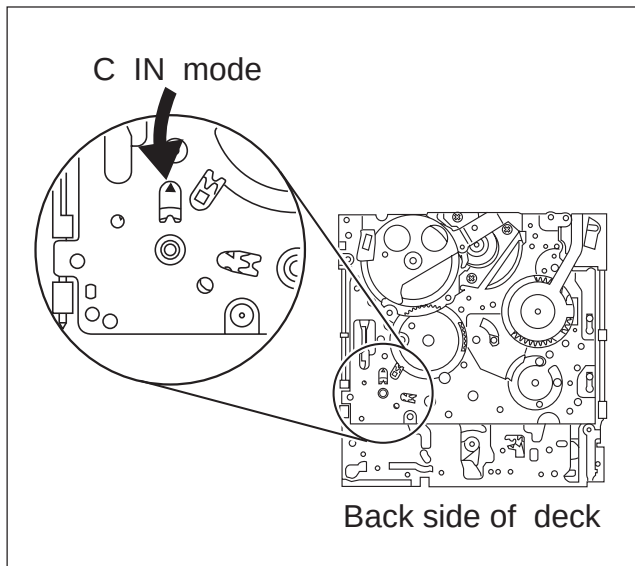


Fig.2-1-2

2.1.3.2 Explanation of mechanism mode

The mechanism mode of this model is classified into five modes as shown in Fig. 2-1-9. Each mechanism mode can be distinguished from others by the relative position of “△”, “○”, “○”, “□” marks on the sub cam gear to the inner or outer protrusion on the main deck.

Refer to Fig. 2-1-3 to 2-1-8 below.

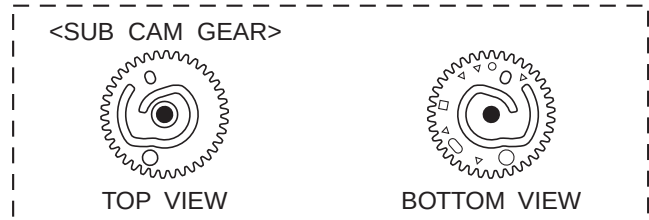


Fig.2-1-3

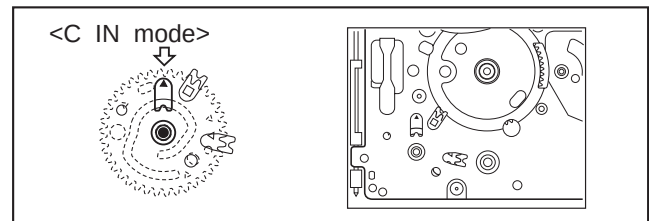


Fig.2-1-4

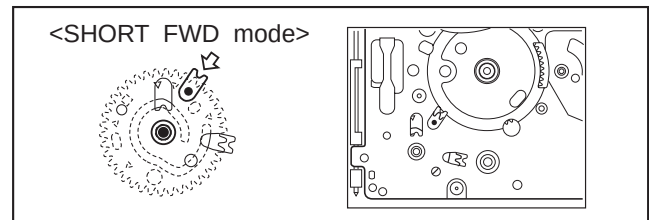


Fig.2-1-5

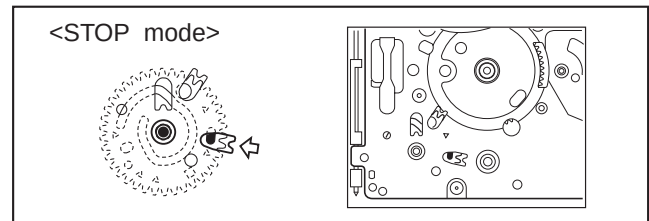


Fig.2-1-6

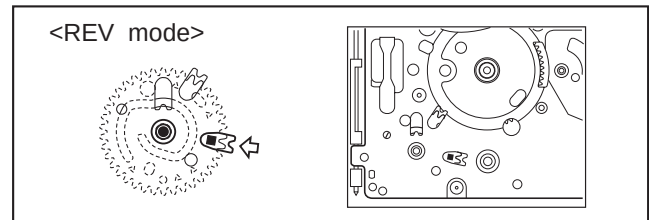


Fig.2-1-7

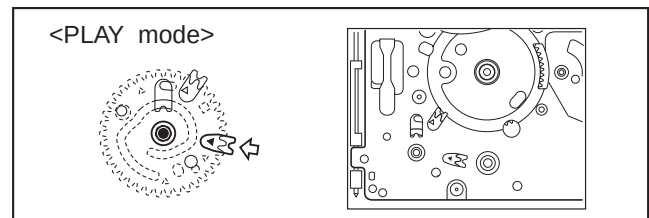


Fig.2-1-8

2.1.3.3 Mechanism timing chart

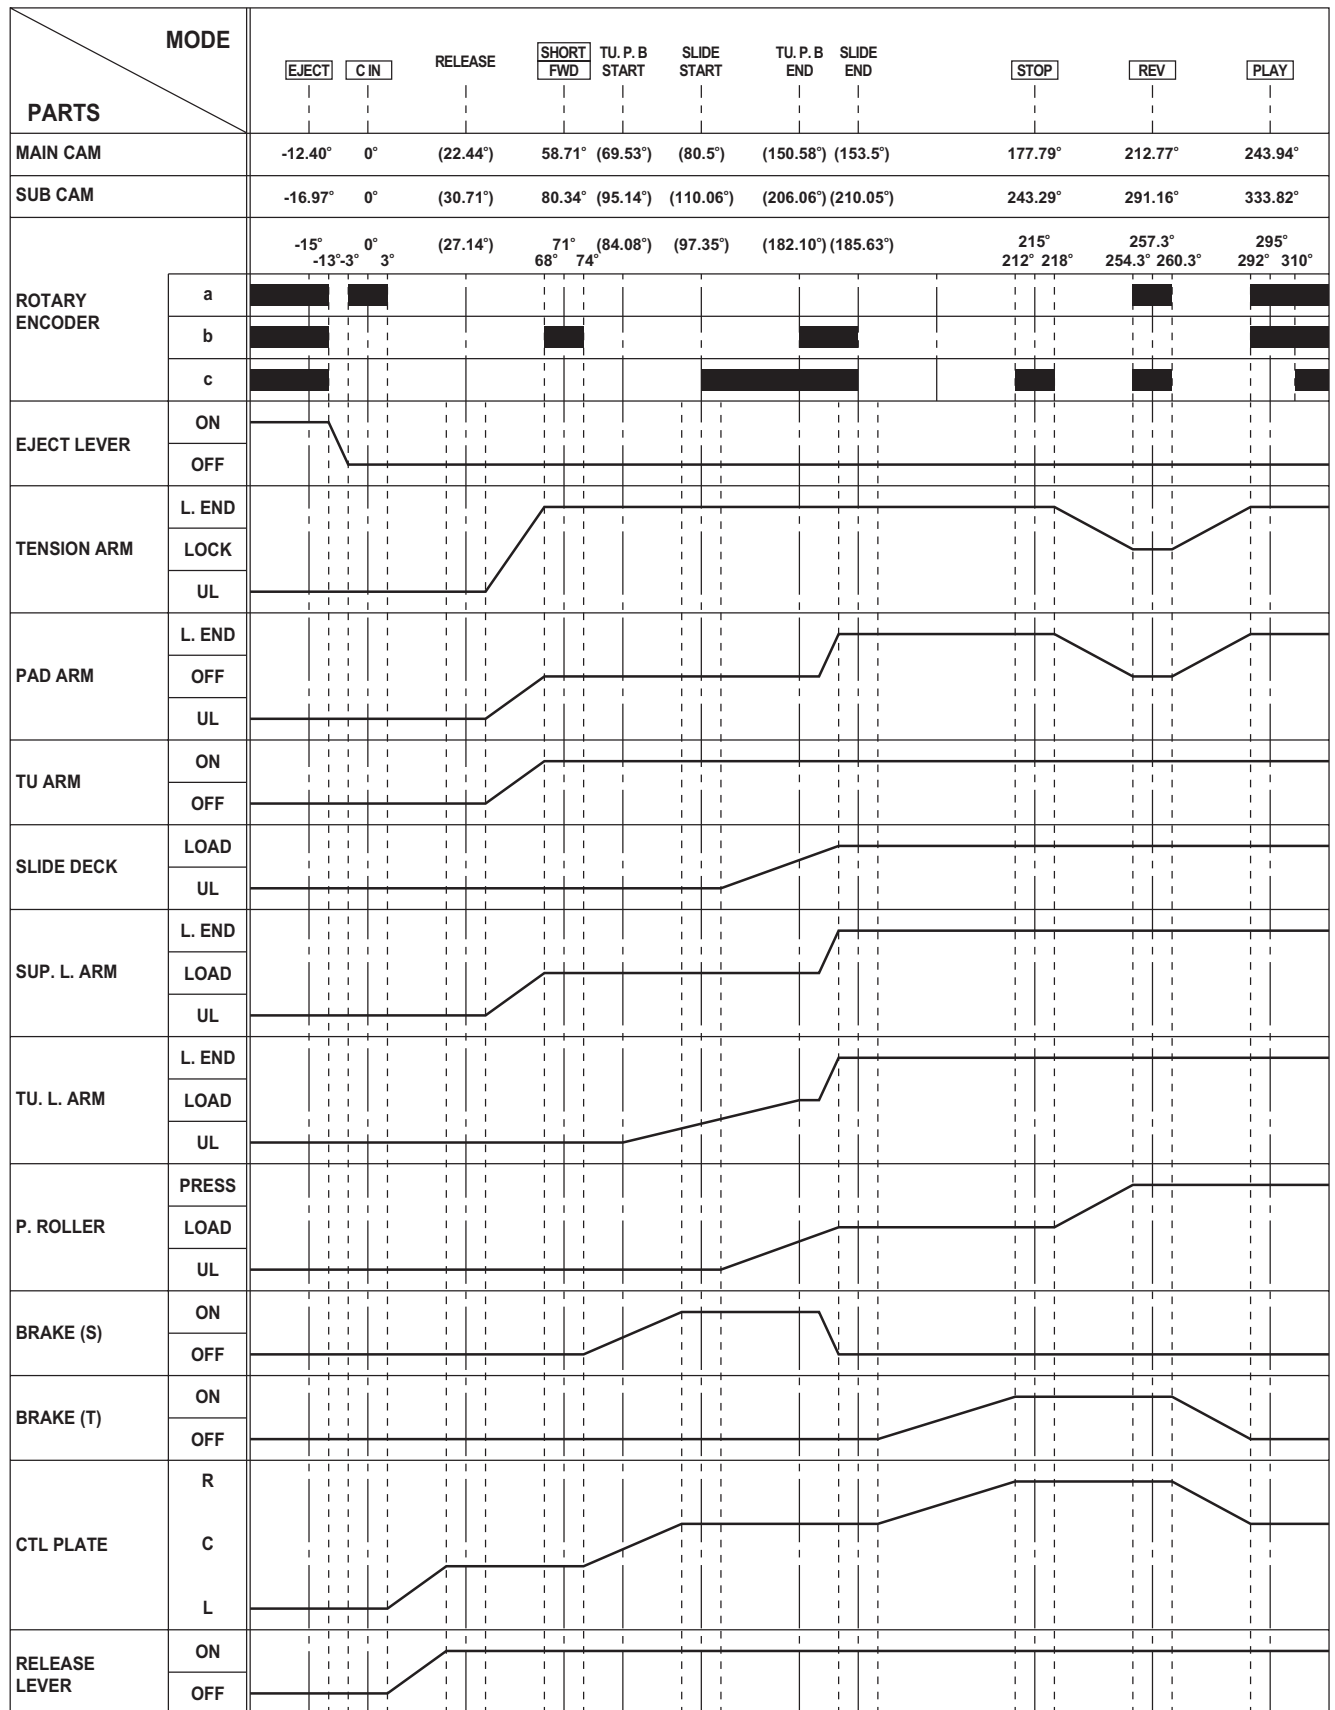


Fig.2-1-9

2.1.4 DISASSEMBLY PROCEDURE TABLE

MARK: # After assembly, perform adjustments.

NO.	PART NAME		FIG.	POINT	NOTE	REMARKS
[1]	CASSETTE HOUSING ASSY	T	Fig.2-1-14	3(S1),(L1a)-(L1e)	NOTE 1 a,b,c,d	ADJUSTMENT
[2]	UPPER BASE ASSY	T	Fig.2-1-15	(S2),(L2a),(L2b)	NOTE 2	
[3]	DRUM ASSY	T		(S3a),2(S3b)	NOTE 3 a,b	ADJUSTMENT
[4]	REEL DISK ASSY(SUP)	T	Fig.2-1-16	(W4)	NOTE 4	
[5]	REEL DISK ASSY(TU)	T		(W5a),(W5b)	NOTE 5 a,b	
[6]	REEL COVER ASSY	T		(W6),2(S6a),(S6b)	NOTE 6	
[7]	TENSION ARM ASSY	T	Fig.2-1-17	(L7)	NOTE 7	ADJUSTMENT / #
[8]	SLANT POLE ARM ASSY	T		(P8)	NOTE 8	ADJUSTMENT
[9]	TU ARM ASSY	T		(L9)	NOTE 9	ADJUSTMENT
[10]	SWING ARM ASSY	T		(S10)	NOTE 10	ADJUSTMENT
[11]	SLIDE DECK ASSY	T	Fig.2-1-18	2(S11a),(S11b),2(L11a), 2(L11b),(L11c)	NOTE 11a,b	ADJUSTMENT / #
[12]	PAD ARM ASSY	T	Fig.2-1-19	(P12),(L12),(W12)	NOTE 12	ADJUSTMENT / #
[13]	-	-		-	-	
[14]	TU BRAKE ASSY	T		(P14),(L14),(W14)	NOTE 14	ADJUSTMENT
[15]	TENSION CTL LEVER ASSY	T	Fig.2-1-20	(W15)	NOTE 15	ADJUSTMENT
[16]	CENTER GEAR	T		-	NOTE 16	
[17]	PINCH ROLLER ARM F. ASSY	T		(W17)	NOTE 17	ADJUSTMENT
[18]	TENSION CTL PLATE ASSY	T		-	NOTE 18	ADJUSTMENT
[19]	BRAKE CTL LEVER ASSY	T		-	NOTE 19	ADJUSTMENT
[20]	MOTOR BRACKET ASSY	T	Fig.2-1-21	3(S20),(L20a),2(L20b)	NOTE 20	ADJUSTMENT
[21]	GUIDE RAIL ASSY	T		2(W21),(S21),2(L21a),(L21b)	NOTE 21	ADJUSTMENT
[22]	SLIDE LEVER 2 ASSY	T		-	NOTE 22	ADJUSTMENT / #
[23]	LOADING PLATE ASSY	T		(W23)	NOTE 23	ADJUSTMENT
[24]	MODE GEAR	T		-	NOTE 24	
[25]	EJECT LEVER	T		(W25)	NOTE 25	ADJUSTMENT
[26]	BASE R ASSY	T	Fig.2-1-22	(S26a),(S26b),2(L26)	NOTE 26	ADJUSTMENT
[27]	ROTARY ENCODER	T		2(S27)	NOTE 27	PHASE ADJUSTMENT
[28]	GEAR COVER ASSY	T		(S28a),2(S28b)	-	
[29]	MAIN CAM ASSY	T		-	NOTE 29	PHASE ADJUSTMENT
[30]	SLIDE ARM ASSY	T	Fig.2-1-23	-	NOTE 30	ADJUSTMENT
[31]	CONNECT GEAR 2	T		-	NOTE 31	
[32]	SUB CAM ASSY	T		(S32)	NOTE 32	PHASE ADJUSTMENT
[33]	CONTROL ARM ASSY	T		-	NOTE 33	ADJUSTMENT
[34]	REEL GEAR 1	T		-	NOTE 34	
[35] / [36]	DRUM BASE ASSY/ CAPSTAN MOTOR	T	Fig.2-1-24	3(S35)	NOTE 35a,b	ADJUSTMENT
[36]	CAPSTAN MOTOR	T		(S36)	NOTE 36	ADJUSTMENT
[37]	MAIN DECK ASSY	T		-	-	

Fig.2-1-10

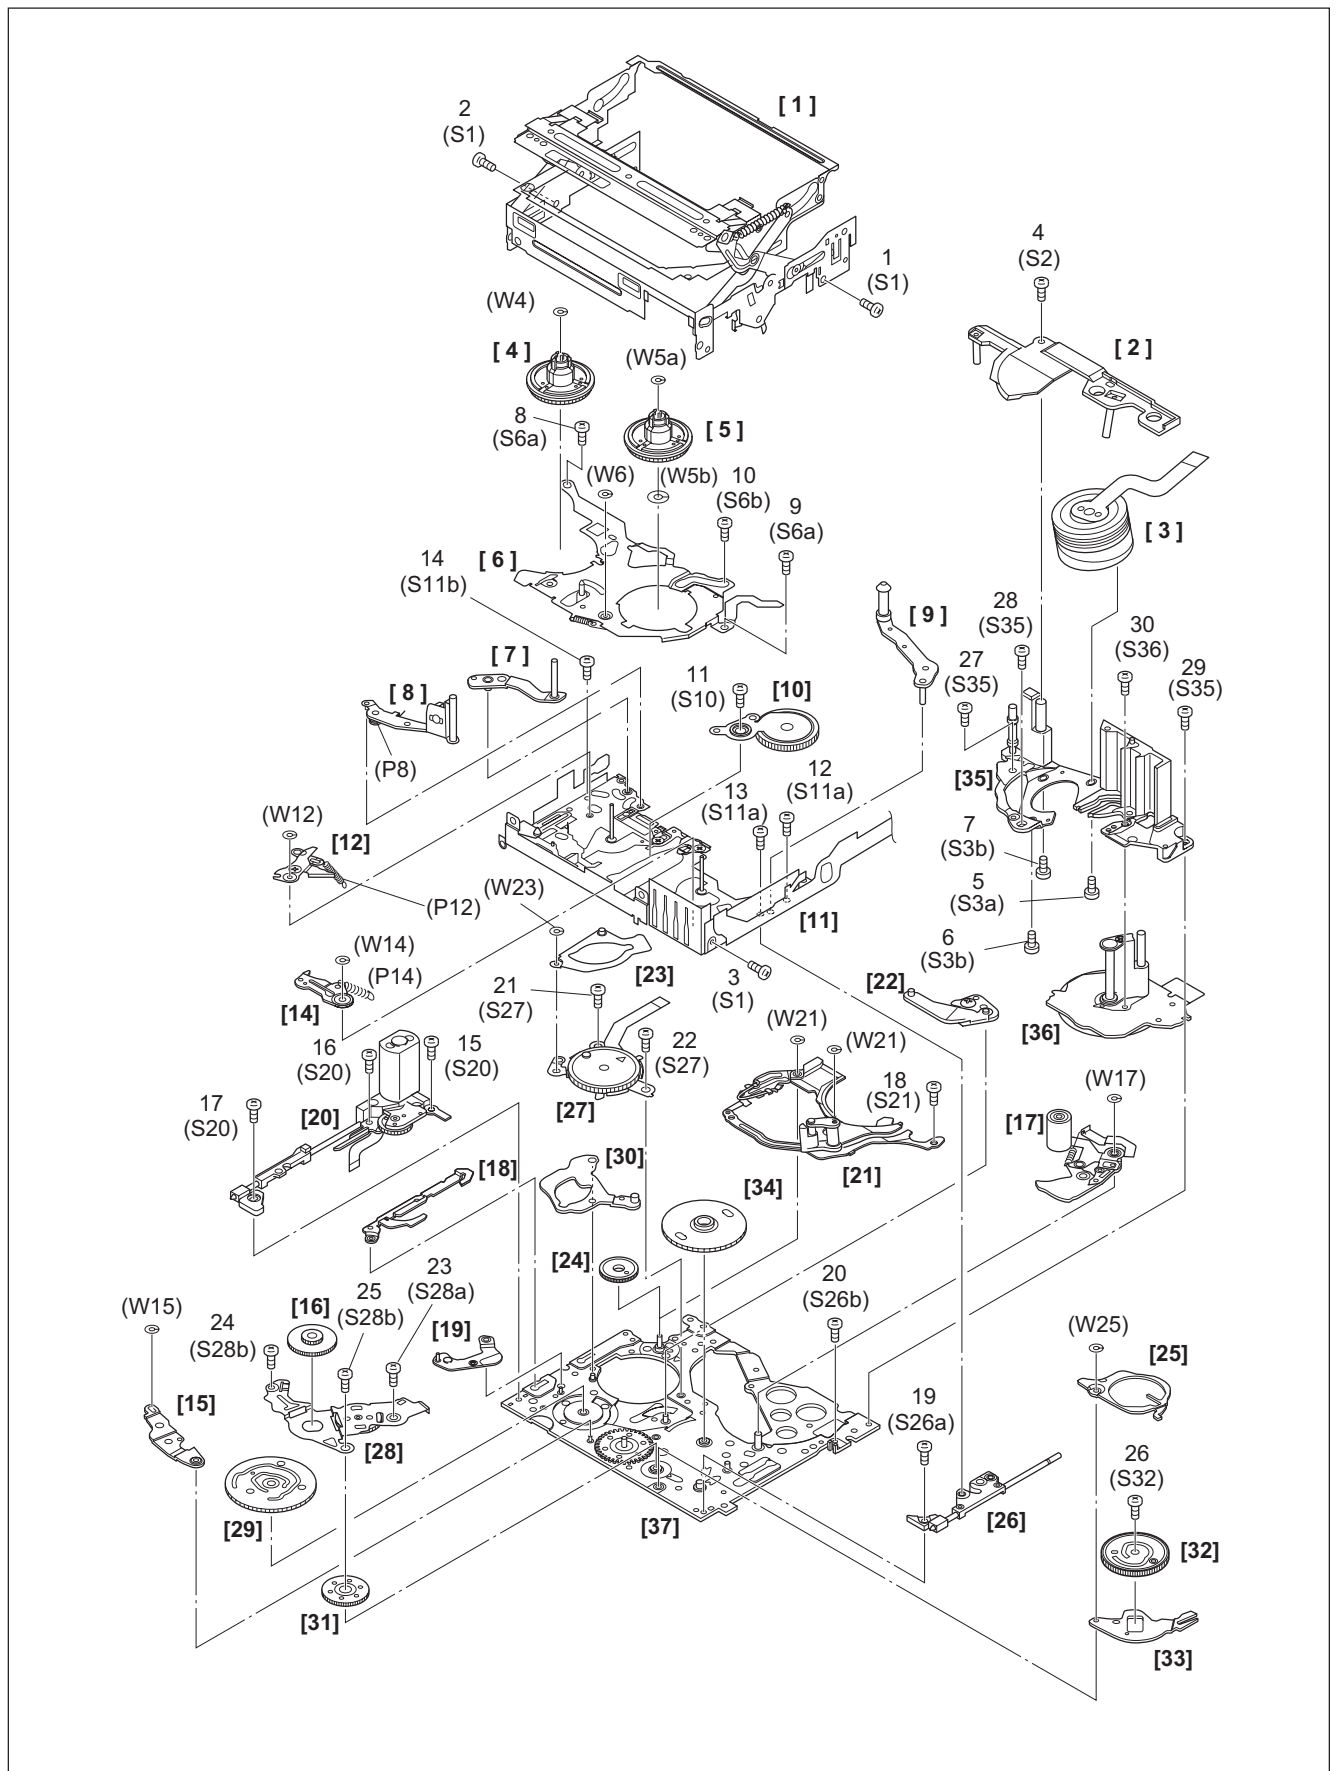


Fig.2-1-11

< TOP VIEW >

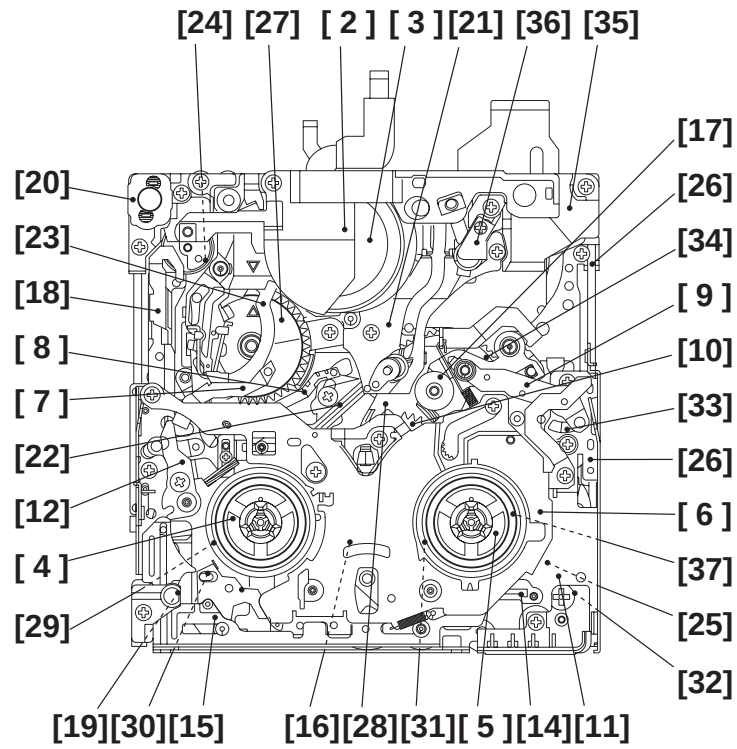


Fig.2-1-12

< BOTTOM VIEW >

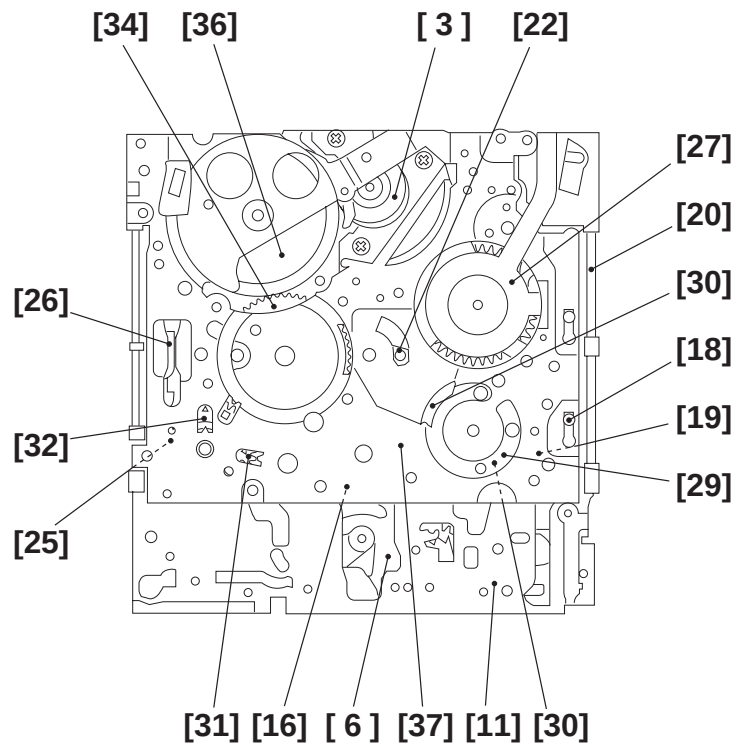


Fig.2-1-13

2.1.5 DISASSEMBLY/ASSEMBLY

2.1.5.1 [1] CASSETTE HOUSING ASSY

NOTE 1a:

Be careful not to damage any of the parts during work.

NOTE 1b:

Special care is required in mounting.

NOTE 1c:

When mounting, the CASSETTE HOUSING ASSY should be attached in the Eject status. Pay heed to the positions of the LOCK LEVER and EJECT LEVER during mounting.

NOTE 1d:

When mounting, be sure to locate the FPC in the gap.

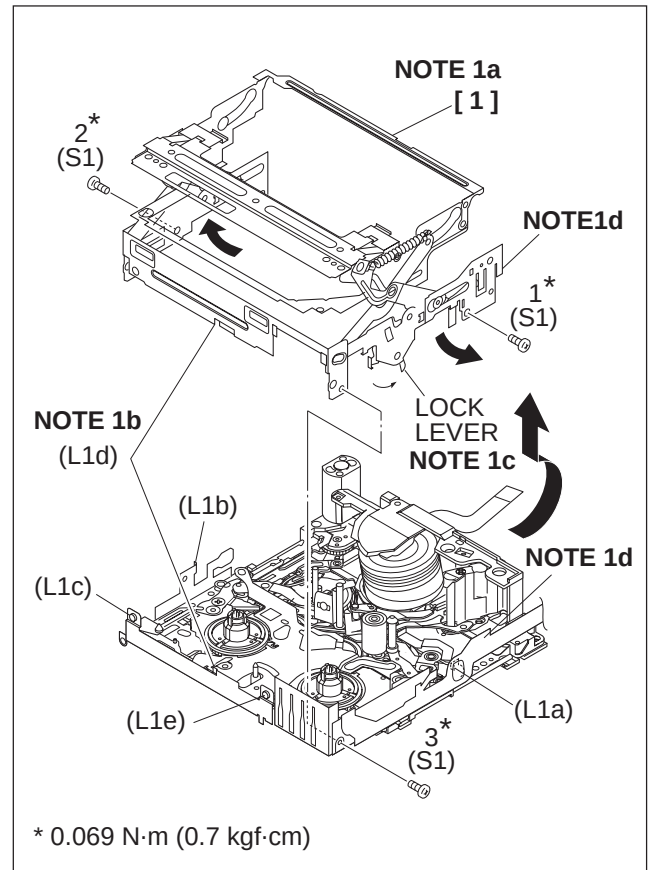
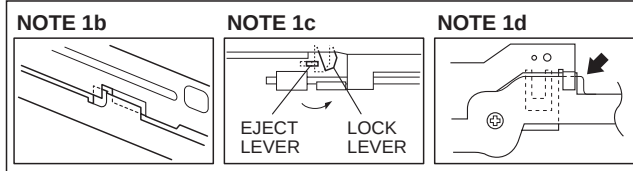


Fig.2-1-14

2.1.5.2 [2] UPPER BASE ASSY

[3] DRUM ASSY

NOTE 2:

When mounting, be sure to insert the FPC reinforcing sheet.

NOTE 3a:

Be mindful of scratches or damage during work.

NOTE 3b:

Be careful not to attach screws incorrectly.

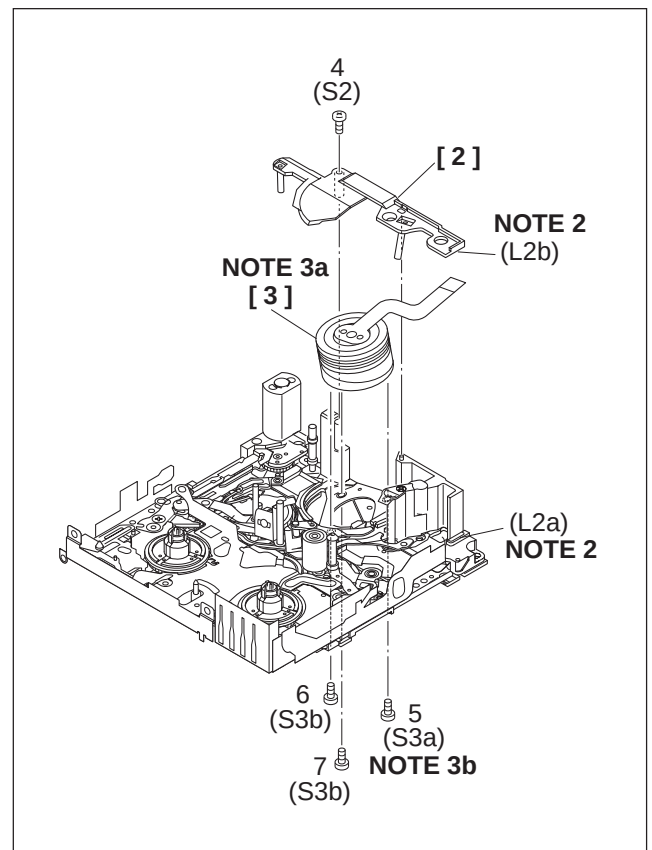
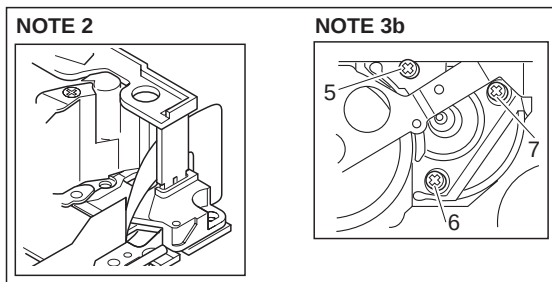


Fig.2-1-15

2.1.5.3 [4] REEL DISK ASSY(SUP)
[5] REEL DISK ASSY(TU)
[6] REEL COVER ASSY

NOTE 4:

Be careful not to attach the REEL DISK wrongly. The Supply side can be identified by the white color at the center.

NOTE 5a:

Be careful not to attach the REEL DISK wrongly. The Take-up side can be identified by the black color at the center.

NOTE 5b

The washer is inserted under the REEL DISK.

Be careful not to lose the washer.

Two washers are inserted under the REEL DISK in some products manufactured earlier, but one washer is inserted in the products manufactured recently and in the future.

See the parts list, and use the parts written in the parts list.


NOTE 6:

Perform the following steps for mounting.

- (1) Align the hole with the pin.
- (2) Attach the [17] PINCH ROLLER ARM FINAL ASSY by aligning the positions.
- (3) Attach the SLIDE DECK ASSY (POINT[A]) by aligning the positions.
- (4) Check that the parts below them are located in the correct positions.
- (5) Tighten the 2 screws.
- (6) Tighten the screw.
- (7) Attach the 1 SLIT WASHER parts.

NOTE 4, 5

REEL DISK ASSY

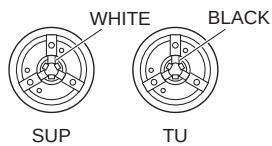

NOTE 6

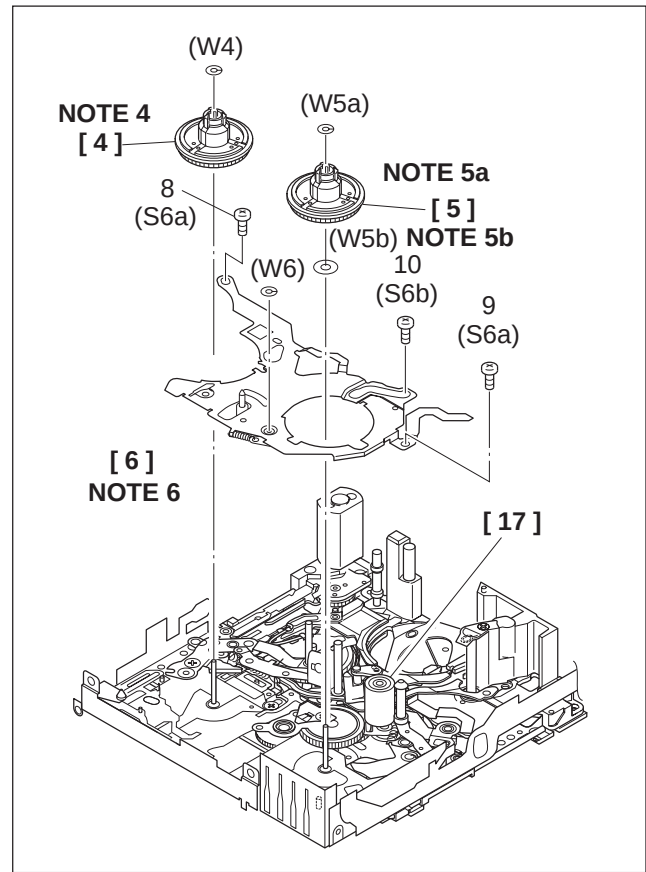
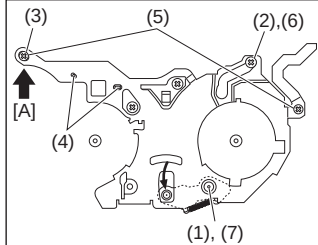


Fig.2-1-16

2.1.5.4 [7] TENSION ARM ASSY
 [8] SLANT POLE ARM ASSY
 [9] TU ARM ASSY
 [10] SWING ARM ASSY

NOTE 7:

When detaching, remove the spring of the [12] PAD ARM ASSY in advance.

Pay attention to the attachment position.

NOTE 8:

When mounting the SLANT POLE ARM ASSY, hook the spring onto the lug as in diagram A, and fit the combination onto the SLIDE DECK ASSY. After fitting, hook the spring onto the lug of the SLIDE DECK ASSY as in diagram B.

Be careful not to lose the spring.

NOTE 9:

Pay attention to the attachment position.

NOTE 10:

When detaching, remove the screw then remove the SWING ARM ASSY by pulling it up and turning it.

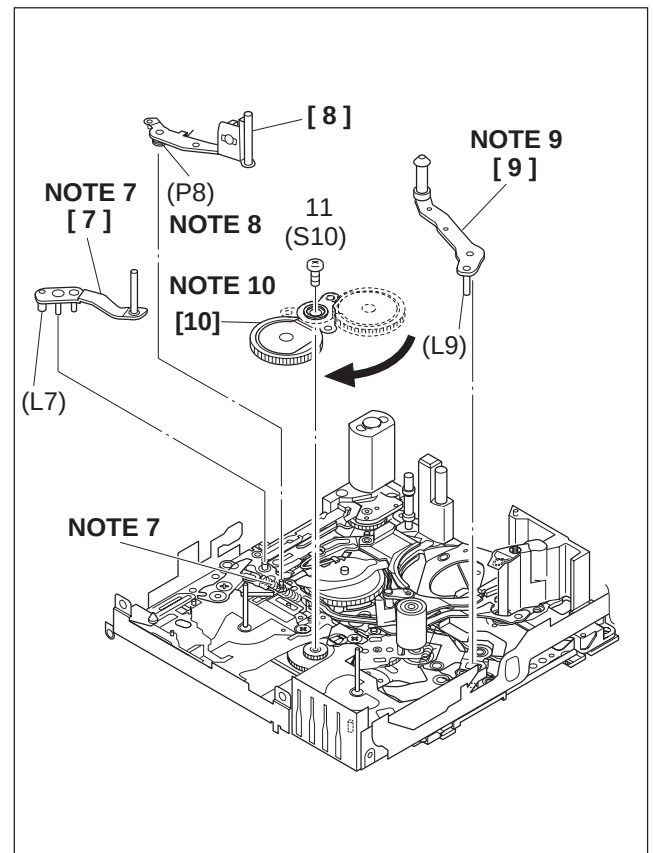
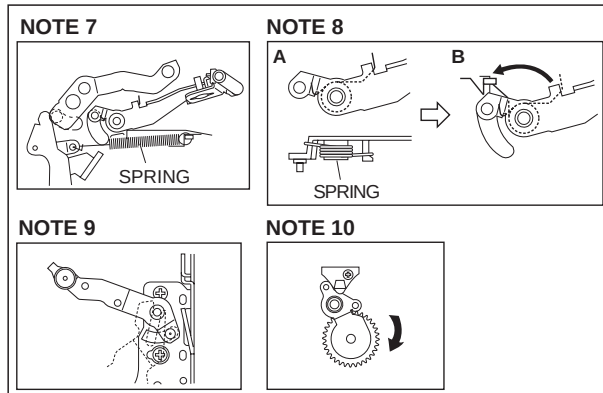


Fig.2-1-17

2.1.5.5 [11] SLIDE DECK ASSY

NOTE 11a:

Each of the parts on the SLIDE DECK ASSY can be replaced separately.

When detaching the assembly, if there is no need to replace any of its parts, remove the SLIDE DECK ASSY as it is.

NOTE 11b:

When mounting, pay attention to the positions of the [22] SLIDE LEVER 2 ASSY studs and the [19] BRAKE CTL LEVER ASSY.

When mounting, position the CONTROL PLATE on the left side.

Pay attention to the position of the SLIDE GUIDE PLATE during mounting.

NOTE 11b

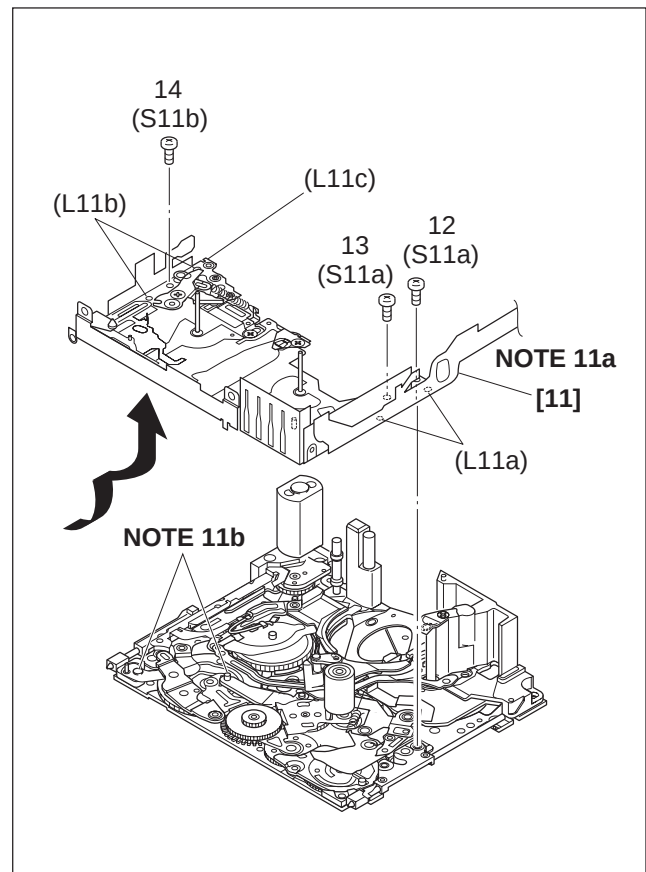
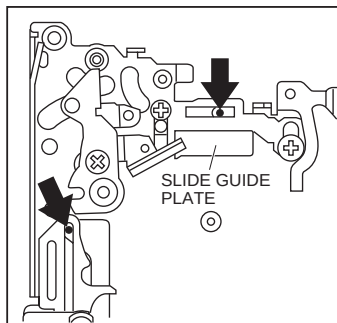


Fig.2-1-18

2.1.5.6 [12] PAD ARM ASSY

[13] -

[14] TU BRAKE ASSY

NOTE 12:

The spring may have already been disengaged when the [8] SLANT POLE ARM ASSY was removed.

NOTES 14:

When mounting, pay attention to the correct positioning. Mount the CONTROL PLATE by moving it fully toward the left side.

NOTE 12,14

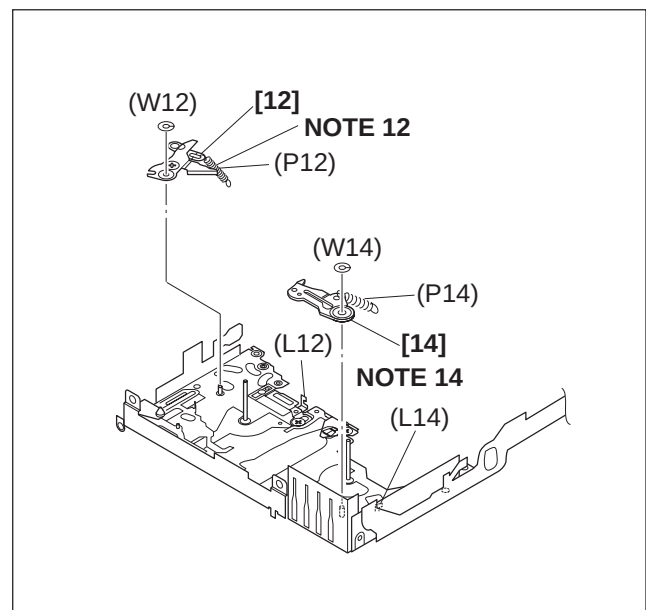
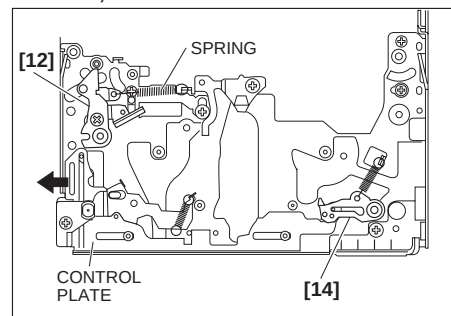


Fig.2-1-19

- 2.1.5.7 [15] TENSION CTL LEVER ASSY
 [16] CENTER GEAR
 [17] PINCH ROLLER ARM FINAL ASSY
 [18] TENSION CTL PLATE ASSY
 [19] BRAKE CTL LEVER ASSY

NOTES 15/16:

When mounting, pay attention to the correct positioning.

NOTE 17:

Take care against grease attachment during work.

NOTES 18/19:

When mounting, pay attention to the correct positioning.

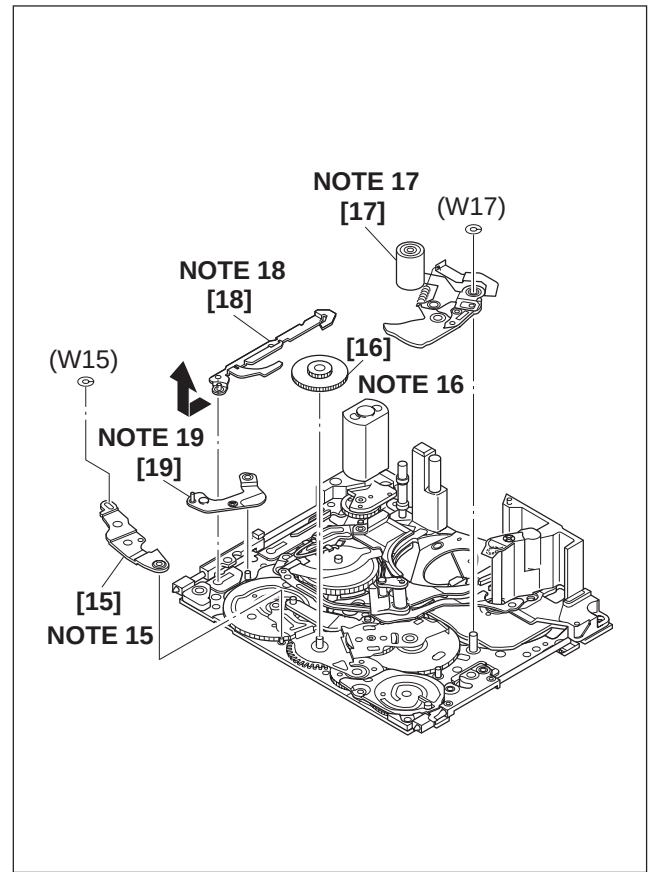
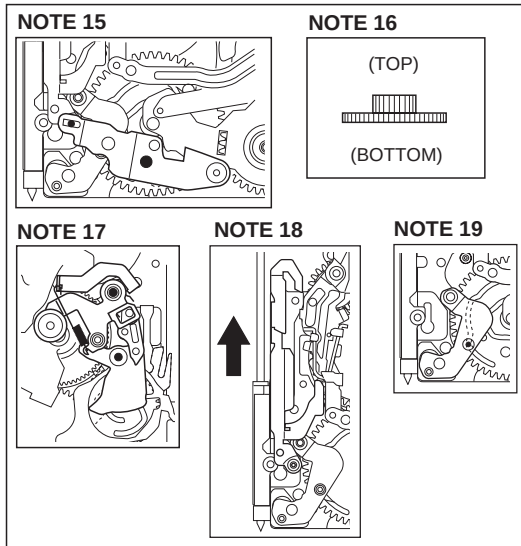


Fig.2-1-20

- 2.1.5.8 [20] MOTOR BRACKET ASSY
 [21] GUIDE RAIL ASSY
 [22] SLIDE LEVER 2 ASSY
 [23] LOADING PLATE ASSY
 [24] MODE GEAR
 [25] EJECT LEVER

NOTE 20:

When mounting, pay attention to the positioning of the sliding parts.

NOTE 21:

When mounting, take care that no part is allowed to float or rattle.

NOTES 22/23/24/25:

When mounting, pay attention to the correct positioning.

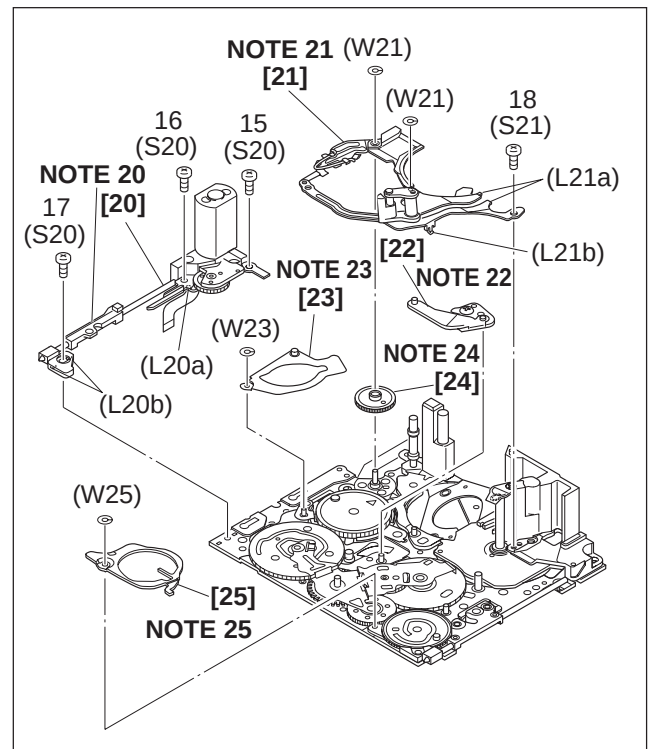
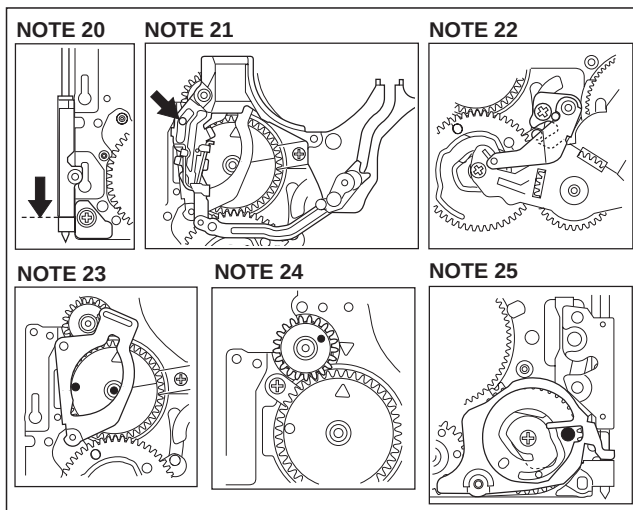


Fig.2-1-21

2.1.5.9 [26] BASE R ASSY
[27] ROTARY ENCODER
[28] GEAR COVER ASSY
[29] MAIN CAM ASSY

NOTE 26:

When mounting, fold the sliding part to the inner side.

NOTE 27:

When mounting, pay attention to the correct positioning and the FPC layout.

NOTE 29:

When mounting, pay attention to the correct positioning.

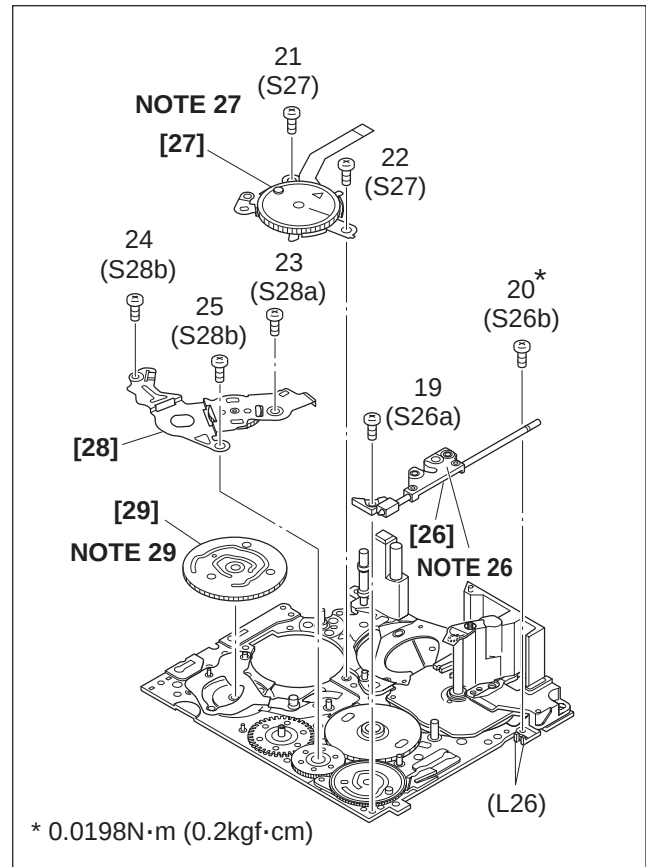
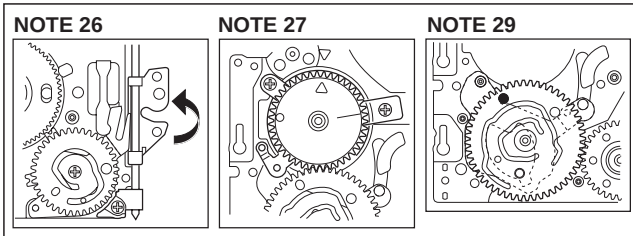


Fig.2-1-22

2.1.5.10 [30] SLIDE ARM ASSY
[31] CONNECT GEAR 2
[32] SUB CAM ASSY
[33] CONTROL ARM ASSY
[34] REEL GEAR 1

NOTE 30:

When mounting, pay attention to the correct positioning.

NOTE 31:

When mounting, pay attention to the position of the front and back.

NOTES 32/33/34:

When mounting, pay attention to the correct positioning.

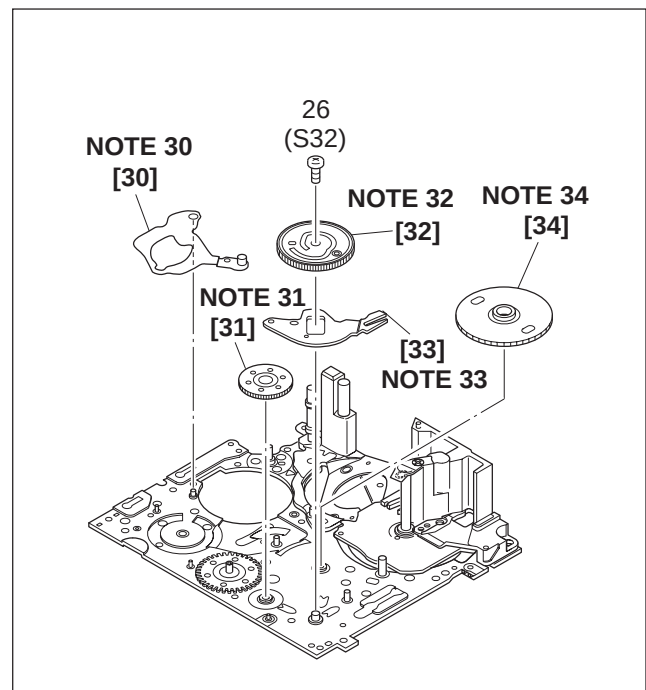
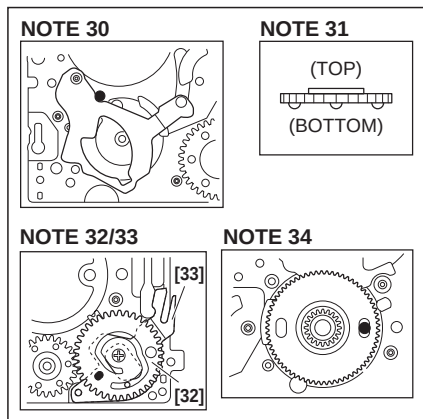


Fig.2-1-23

**2.1.5.11 [35] DRUM BASE ASSY
[36] CAPSTAN MOTOR
[37] MAIN DECK ASSY**

NOTES 35a/36:

Since [36]CAPSTAN MOTOR is attached to [35]DRUM BASE ASSY, remove [36]CAPSTAN MOTOR together with [35]DRUM BASE ASSY when removing [36]CAPSTAN MOTOR.

[36]CAPSTAN MOTOR should not be separated from [35]DRUM BASE ASSY except when replacing them.


NOTE 35b:

It is very important to attach [35]DRUM BASE ASSY to the proper position.

Especially, improper engagement of [36]CAPSTAN MOTOR with [34]REEL GEAR 1 causes operational deflection or abnormal sound. Therefore, confirm the attachment position before disassembly procedure.


See the following figure as for the proper attachment position.

NOTE 35b

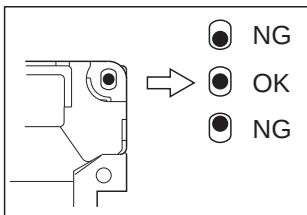

When [35]DRUM BASE ASSY is properly attached, the screw hole tends to be located at the center of the oval.

When the screw hole is located far from the center of the oval, operational deflection or abnormal sound may occur.

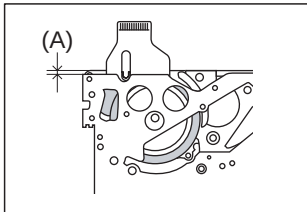

Before removing [35]DRUM BASE ASSY, confirm the position of [35]DRUM BASE ASSY by seeing the length (A), as shown in the left figure.

When reattaching [35]DRUM BASE ASSY, confirm the position to reattach [35]DRUM BASE ASSY by seeing the length (A). Be sure to reattach [35]DRUM BASE ASSY to the same position as it has been before the removing procedure.

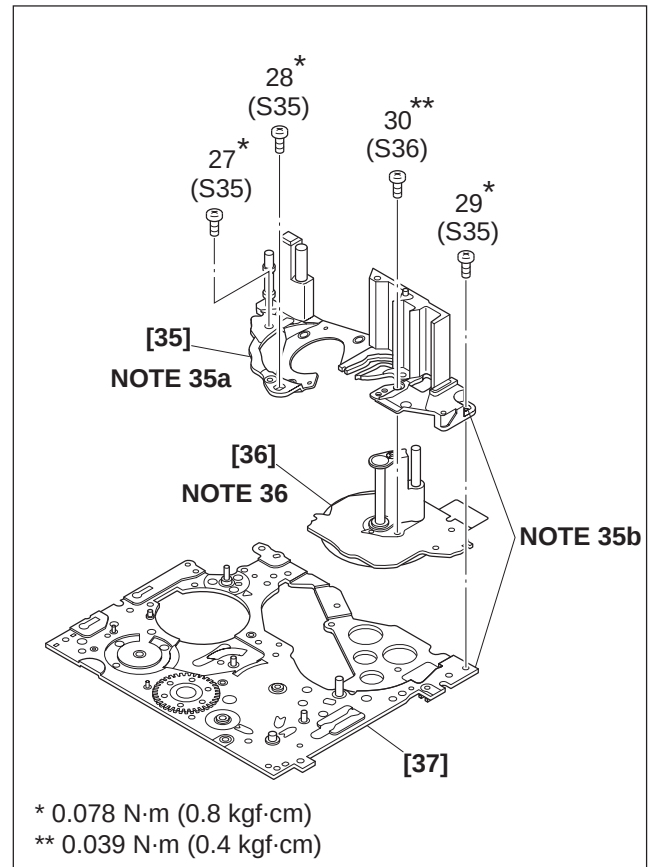


Fig.2-1-24

2.1.6 CHECKUP AND ADJUSTMENT OF MECHANISM PHASE

[24]MODE GEAR

Align the MODE GEAR with the Main Deck Assembly hole.

Note:

The MODE GEAR may be displaced during the mechanism operation, however it can be checked from the rear and realigned during manual assembly.

[27]ROTARY ENCODER

Mount the ROTARY ENCODER by aligning its mark (Δ) and the mark (∇) of the Main Deck Assembly.

Note:

Be careful when handling the FPC during mounting.

[34]REEL GEAR 1

Align the REEL GEAR 1 with the Main Deck Assembly hole.

Note:

The REEL GEAR 1 may be displaced during mechanism operation, however this can be checked from the rear and realigned during manual assembly.

[29]MAIN CAM ASSY/[30]SLIDE ARM ASSY

When mounting the SLIDE ARM ASSY align it with the Main Deck Assembly and MAIN CAM ASSY holes.

Note:

During the mounting procedure, make sure that the [32] SUB CAM ASSY is in the correct mounting position.

[32]SUB CAM ASSY/[33] CONTROL ARM ASSY

Mount the SUB CAM ASSY hole to align with the CONTROL ARM ASSY and Main Deck Assembly holes and then tighten them all together with a screw.

Note:

When mounting it, make sure that the [29]MAIN CAM ASSY is in the correct mounting position.

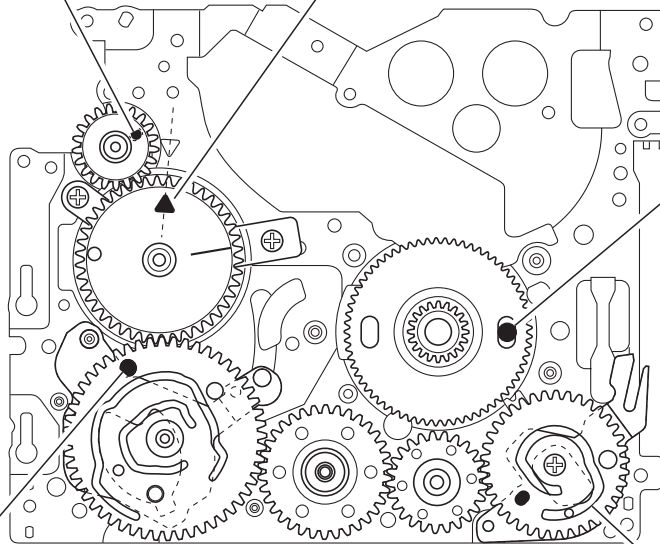


Fig.2-1-25

2.1.7 MECHANISM ADJUSTMENTS

2.1.7.1 Adjustment of the slide guide plate

Use Fig. 2-1-26 as the reference unless otherwise specified.

- (1) Set the PLAY mode. See Fig. 2-1-8.
- (2) Loosen the screws (A, B).
- (3) With the Main Deck and Slide Deck Assemblies pushed into the unit, tighten the screws (A, B) while applying pressure to the stud (shaft) on the Slide Guide plate.
The pressure applied should be enough to enable utilization of the rebounding force of the springs.
The tightening torque should be 0.069 N•m (0.7 kgf•cm).
- (4) Check the operation.
Repeat unloading and loading several times and make sure that these operations can be performed smoothly without producing rattles.

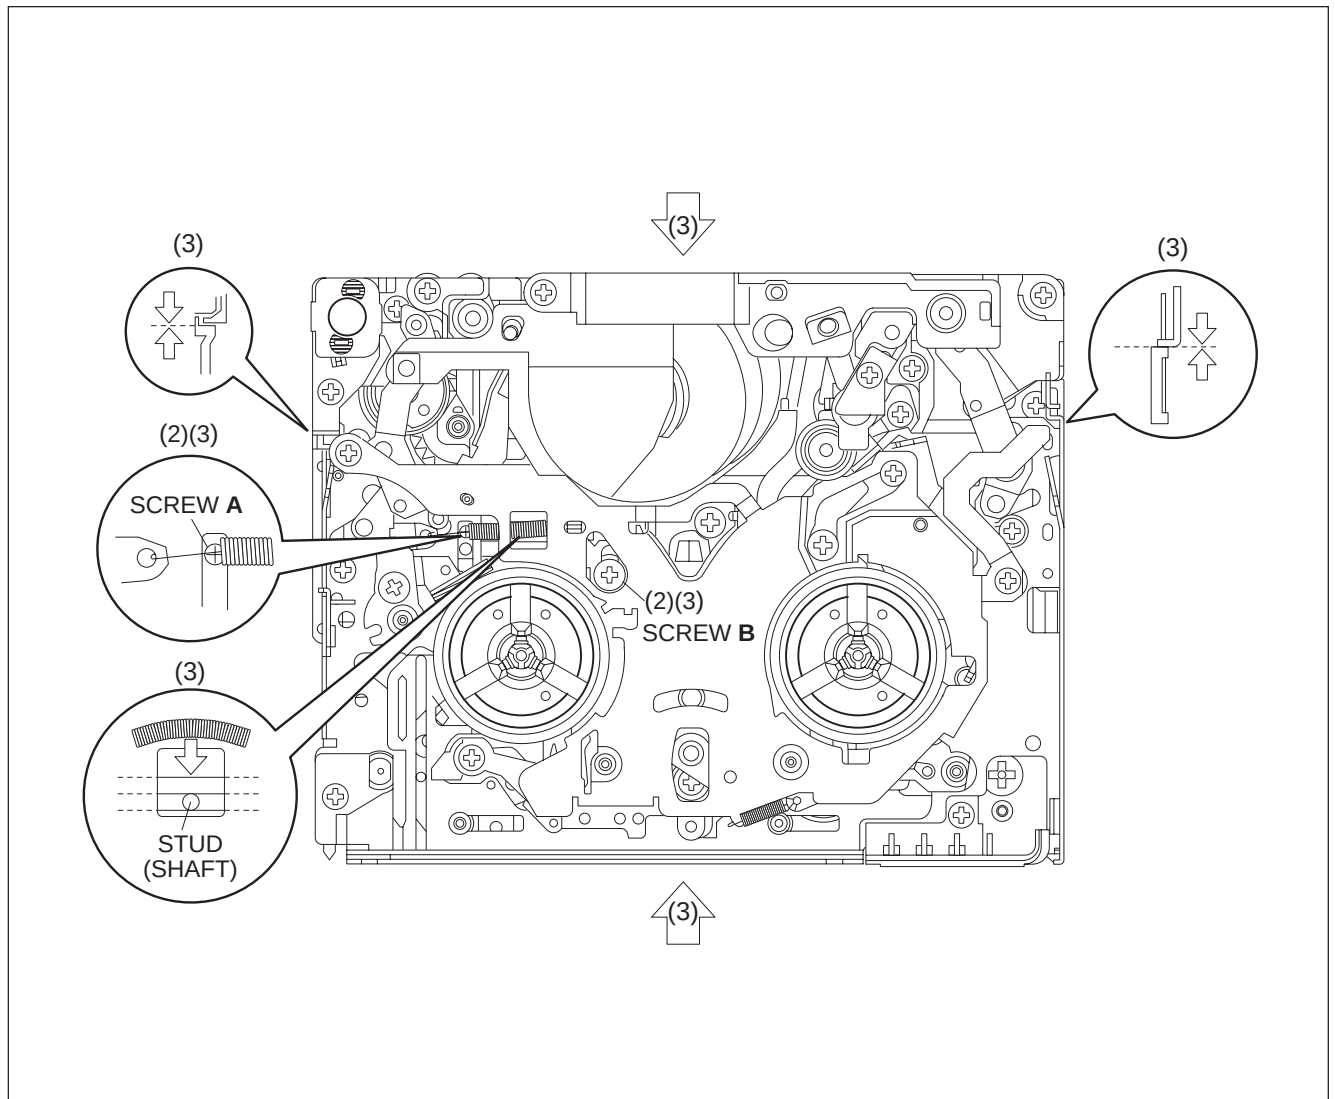


Fig.2-1-26

2.1.7.2 Adjustment of the Tension Arm and Pad Arm Assemblies

Use Fig. 2-1-27 as the reference unless otherwise specified.

- (1) Set the PLAY mode.
See Fig. 2-1-8.
- (2) Loosen the screw **A**.
- (3) With the take-up side at the bottom, align the extreme end of the Tension Arm Assembly with the crossed grooves on the screw **B** that retains the Loading Motor Assembly and then tighten the screw **A**.
The tightening torque should be 0.069 N•m (0.7 kgf•cm).
- (4) Check the operation.
Repeat unloading and loading several times and make sure that the Tension Arm Assembly is located within the normal range.

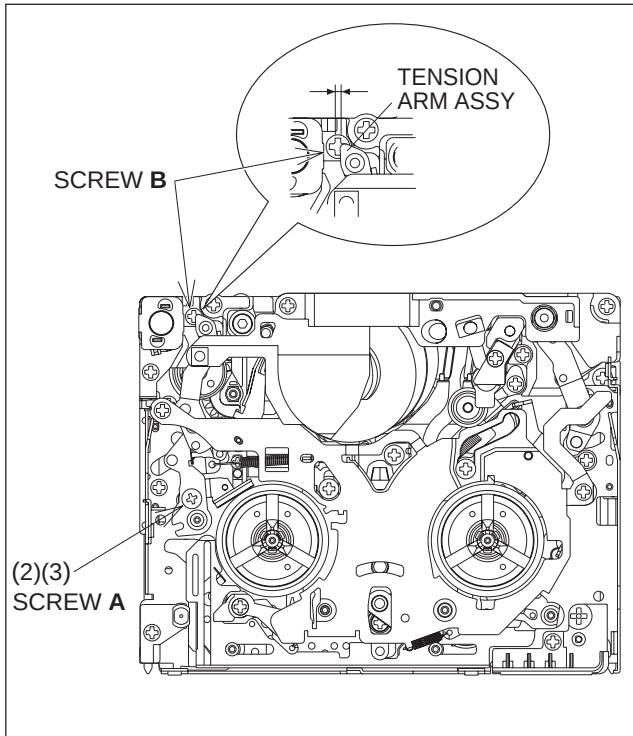


Fig.2-1-27

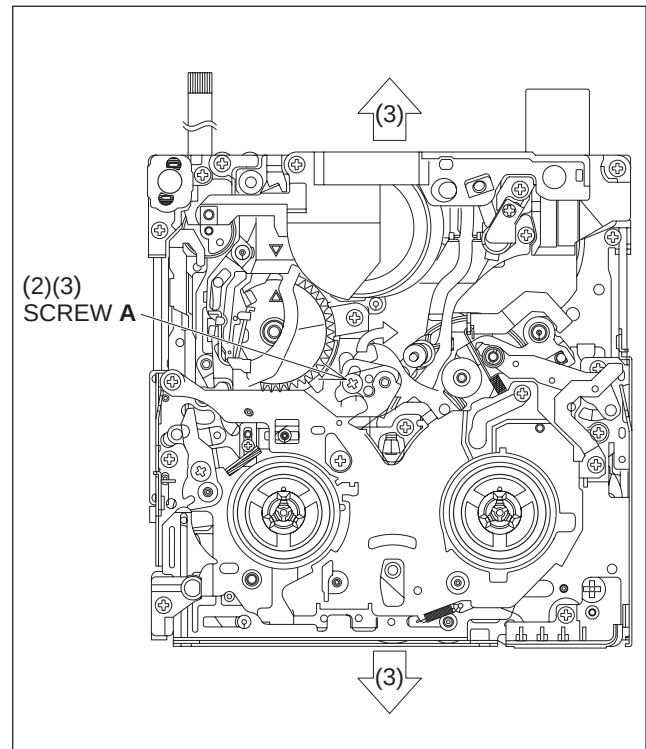


Fig.2-1-28

2.1.7.3 Adjustment of the Slide Lever 2

Use Fig. 2-1-28 as the reference unless otherwise specified.

- (1) Set the C IN mode.
See Fig. 2-1-4.
- (2) Loosen the screw **A**.
- (3) Set the Main Deck and Slide Deck Assemblies apart so that they do not rattle, then tighten the screw **A** by screwing it fully toward the Drum Assembly.
The tightening torque should be 0.069 N•m (0.7 kgf•cm).
- (4) Check the operation.
Repeat unloading and loading several times and make sure that these operations can be performed smoothly without producing rattles.

2.1.8 SERVICE NOTE

Use the following chart to manage mechanism parts that are removed for disassembling the mechanism.

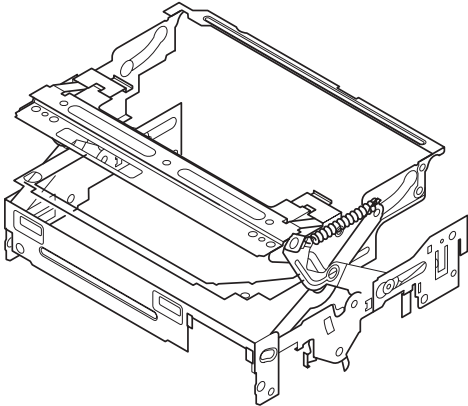
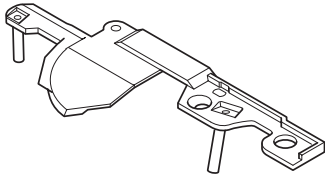
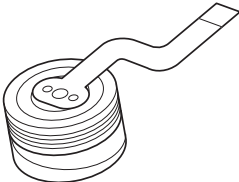


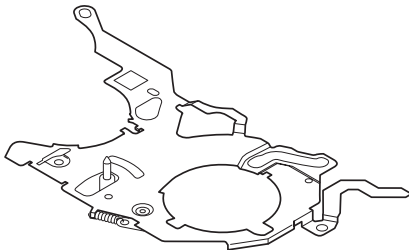


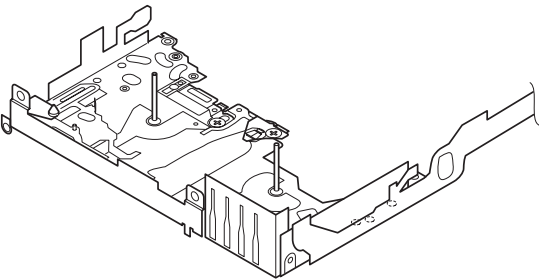

Fig.2-1-14	[1] CASSETTE HOUSING ASSY 		Fig.2-1-15		[2] UPPER BASE ASSY 	
Fig.2-1-15	[3] DRUM ASSY 	Fig.2-1-16	[4] REEL DISK ASSY(SUP)  [5] REEL DISK ASSY(TU) 	[6] REEL COVER ASSY 		
Fig.2-1-17	[7] TENSION ARM ASSY 	[8] SLANT POLE ARM ASSY 		[9] TU ARM ASSY 	[10] SWING ARM ASSY 	
Fig.2-1-18	[11] SLIDE DECK ASSY 		Fig.2-1-19	[12] PAD ARM ASSY 	[13] —	[14] TU BRAKE ASSY 

Fig.2-1-29


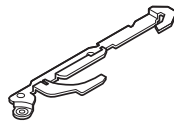
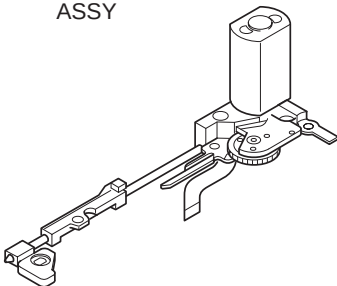
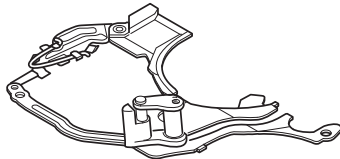

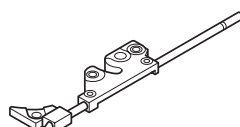
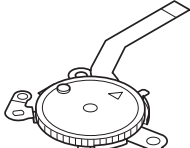


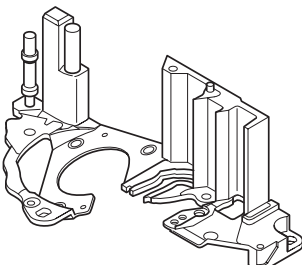
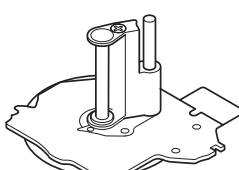
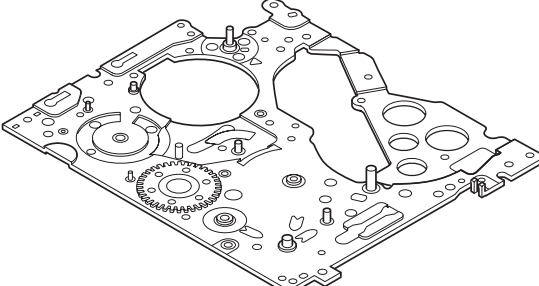
Fig.2-1-20	[15] TENSION CTL LEVER ASSY 	[16] CENTER GEAR 	[17] PINCH ROLLER ARM F ASSY 	[18] TENSION CTL PLATE ASSY 	[19] BRAKE CTL LEVER ASSY 
	[20] MOTOR BRACKET ASSY 	[21] GUIDE RAIL ASSY 	[22] SLIDE LEVER 2 ASSY 	[23] LOADING PLATE ASSY 	
Fig.2-1-21			[24] MODE GEAR 	[25] EJECT LEVER 	
Fig.2-1-22	[26] BASE R ASSY 	[27] ROTARY ENCODER 	[28] GEAR COVER ASSY 	[29] MAIN CAM ASSY 	
Fig.2-1-23	[30] SLIDE ARM ASSY 	[31] CONNECT GEAR 2 	[32] SUB CAM ASSY 	[33] CONTROL ARM ASSY 	[34] REEL GEAR 1 
Fig.2-1-24	[35] DRUM BASE ASSY 	[36] CAPSTAN MOTOR 	[37] MAIN DECK ASSY 		

Fig.2-1-30

2.1.9 SERVICE NOTE
 Use the following chart to manage screws.

Symbol No.	[1]	[2]	[3]	[6]	[10]	[11]	[20]	[21]	[22]
Removing order of screw	1 2 3	4	5 6 7	8 9 10	11	12 13 14	15 16 17	18	19 20
Place to stick screw									
Reference drawing (Fig. No.2-1-**)	14		15	16	17	18	21		22
Screw tightening torque	I	II							
									III

Symbol No.	[27]	[28]	[32]	[35]	[36]
Removing order of screw	21 22 23 24	25	26 27 28	29	30
Place to stick screw					
Reference drawing (Fig. No.2-1-**)	22		23	24	
Screw tightening torque	II			IV	V

<NOTE>

•Pay careful attention to tightening torque for each screw.

I : 0.069N・m(0.7kgf・cm)

II : 0.055N・m(0.56kgf・cm)

III : 0.0198N・m(0.2kgf・cm)

IV : 0.078N・m(0.8kgf・cm)

V : 0.039N・m(0.4kgf・cm)

Fig.2-1-31

2.1.10 REMARKS

2.1.10.1 Cleaning

- (1) For cleaning of the upper drum (particularly video heads), use fine-woven cotton cloth with alcohol soaks through. Do not move the cloth but turn the upper drum counterclockwise.

NOTE:

Make sure not to move the cloth in the vertical direction to the video head, since it may cause damage of the video heads.

- (2) For cleaning of parts of the tape transport system except the upper drum, use fine-woven cotton cloth or cotton swab soaked alcohol.
- (3) After cleaning, confirm that the cleaned parts are completely dry before loading the deck with cassette tape.

2.1.10.2 Applying oil and grease

- (1) Periodical oiling and greasing are not required but should be done to new parts when replacing. If oil and grease on the other parts of the other party are old and dirty, wipe them clean and apply new oil or grease.
- (2) For parts and points to apply oil and grease, refer to the exploded view of the 3.1 DVC MECHANISM ASSEMBLY. Fig.2-1-32 specifies oil and grease to be used.
- (3) When oiling, clean the objective parts with alcohol first and apply one or two drop(s) of oil. Too much oiling causes rotary parts to slip because of oil leakage.

Classification	Part No.	Symbol in drawing
Grease	KYODO-SH-JB	AA
Oil	YTU94027	BB
Grease (HANARL)	RX-410R	CC

specifies oil and grease to be used

Fig.2-1-32

2.2 VHS-C MECHANISM

2.2.1 Precautions

- (1) When fastening parts, pay careful attention to the tightening torque of each screw. Unless otherwise specified, tighten a screw with the torque of 0.216 N•m (2.2 kgf•cm). Torque setting value of torque driver is limited. At the values over the maximum torque setting value, fasten a screw manually not to damage the screw thread.
- (2) Be sure to disconnect the set from the power supply before fastening and soldering parts.
- (3) When disconnecting/connecting wires, be careful not to get them and their connectors damaged.
- (4) When replacing parts, be very careful neither to damage other parts nor to fit wrong parts by mistake.

Example

STEP/LOC. No.	PART NAME		FIG.	REMOVAL	INSTALLATION
				POINT	ADJUSTMENT CONDITION NOTE
[1]	ROLLER BASE ASSEMBLY	T	M1	(S1)	—
[2]	TENSION ARM ASSEMBLY	T	M1	(P1), (W1a)	—
[3]	REEL DISC (SUP)	T	M1	(W1a), (W1b)	—

↑
*1

↑
*2

↑
*3

↑
*4

↑
*5

↑
*6

2.2.2 How to read the disassembly and assembly

*1 Order of steps in Procedure

When reassembling, perform the step(s) in the reverse order. These numbers are also used as the identification (location) No. of parts Figures.

*2 Part to Name be removed or installed.

*3 Location of part.

T = The Upper side
B = The Lower side

*4 Fig. No. showing Procedure or Part Location.

M = Mechanism

*5 Identification of part to be removed, unhooked, unlocked, released, unplugged, unclamped or unsoldered.

P = Spring

W = Washer

S = Screw

* = Unhook, unlock, release, unplug or unsolder.

Example

- Remove (W1)=Washer W1.
- Remove the solder at (SD1)=Point SD1.
- Disconnect A = Connector A.

*6 Adjustment information for installation.


(+) = Refer to Exploded Views for Lubrication information.

2.2.3 DISASSEMBLY/ASSEMBLY PROCEDURE TABLE

This procedure starts with the condition that the cabinet parts and deck parts. Also, all the following procedures for adjustment and parts replacement should be performed in STOP mode. When reassembling, perform the step(s) in the reverse order.

STEP/LOC. No.	PART NAME		FIG.	REMOVAL	INSTALLATION
				POINT	ADJUSTMENT CONDITION NOTE
[1]	ROLLER BASE ASSY	T	M1	(1)	—
[2]	TENSION ARM ASSY	T	M1	(P1), (W1a)	—
[3]	REEL DISC	T	M1	(W1a), (W1b)	—
[4]	SLANT ARM ASSY	T	M1	(W1a)	—
[5]	CANCEL LEVER ASSY	T	M2	(W2)	—
[6]	EJECT LEVER ASSY	T	M2	(W2)	—
[7]	CASSETTE GUIDE (LEFT)	T	M2	(2)	—
[8]	SUPPLY CLUTCH ASSY	T	M2	(W2)	—
[9]	WHEEL GEAR	T	M2	(W2)	See, Adjustment procedure for Section 2.2.5
[10]	ROTARY ENCODER	B	M3	4(S3a)	The function of this part varies according to the ASSY (VHS/SVHS) which this part is incorporated in. (Refer to fig. 2-2-6)
[11]	TIMING BELT	B	M3	—	—
[12]	CENTER PULLEY UNIT	T/B	M3	2(S3a)	—
[13]	CASSETTE GUIDE (R) ASSY	T	M3	(S3b), (P3)	(Only use SVHS model)
[14]	TAKE UP GEAR	T	M3	(W3a)	—
[15]	BRAKE SUB GEAR	T	M3	(W3a)	—
[16]	PINCH ROLLER ARM ASSY	T	M3	(W3b)	—
[17]	TAKE UP GUIDE ARM ASSY	T	M3	(W3a)	—
[18]	LINK ARM ASSY	T	M4	(W4)	—
[19]	LED GUIDE	T	M4	(S4a)	—
[20]	A/C HEAD UNIT	T	M4	2(S4b)	—
[21]	SLANT POLE BASE ASSY	T	M5	(S5a)	—
[22]	CAPSTAN MOTOR	T	M5	3(S5a)	—
[23]	MOTOR BASE	T	M5	2(S5b), (S5c)	—
[24]	BRUSH	B	M6	(S6a)	—
[25]	DRUM FINAL ASSY	T/B	M6	2(S6b), 2(S6c) *CATCHER	—
[26]	GUIDE RAIL	T	M6	7(S6d), 8(S6d)	(Refer to part list.)
[27]	POLE BASE (S)ASSY	T	M6	—	—
[28]	POLE BASE (T)ASSY	T	M6	—	—
[29]	COVER PLATE	T	M7	—	—
[30]	DRIVE LEVER ASSY	T	M7	—	—
[31]	MOTOR BRACKET ASSY	T	M7	3(S7)	—
[32]	CONTROL CAM	T	M8	(W8a)	See, Adjustment procedure for Section 2.2.5
[33]	LINK LEVER	T	M8	—	See, Adjustment procedure for Section 2.2.5
[34]	MIDDLE GEAR	T	M8	—	—
[35]	LOADING GEAR(T) ASSY	T	M8	(W8b)	See, Adjustment procedure for Section 2.2.5
[36]	LOADING GEAR(S) ASSY	T	M8	(W8b)	—
[37]	LOADING RING ASSY	T	M8	4(S8)	See, Adjustment procedure for Section 2.2.5

Fig.2-2-1

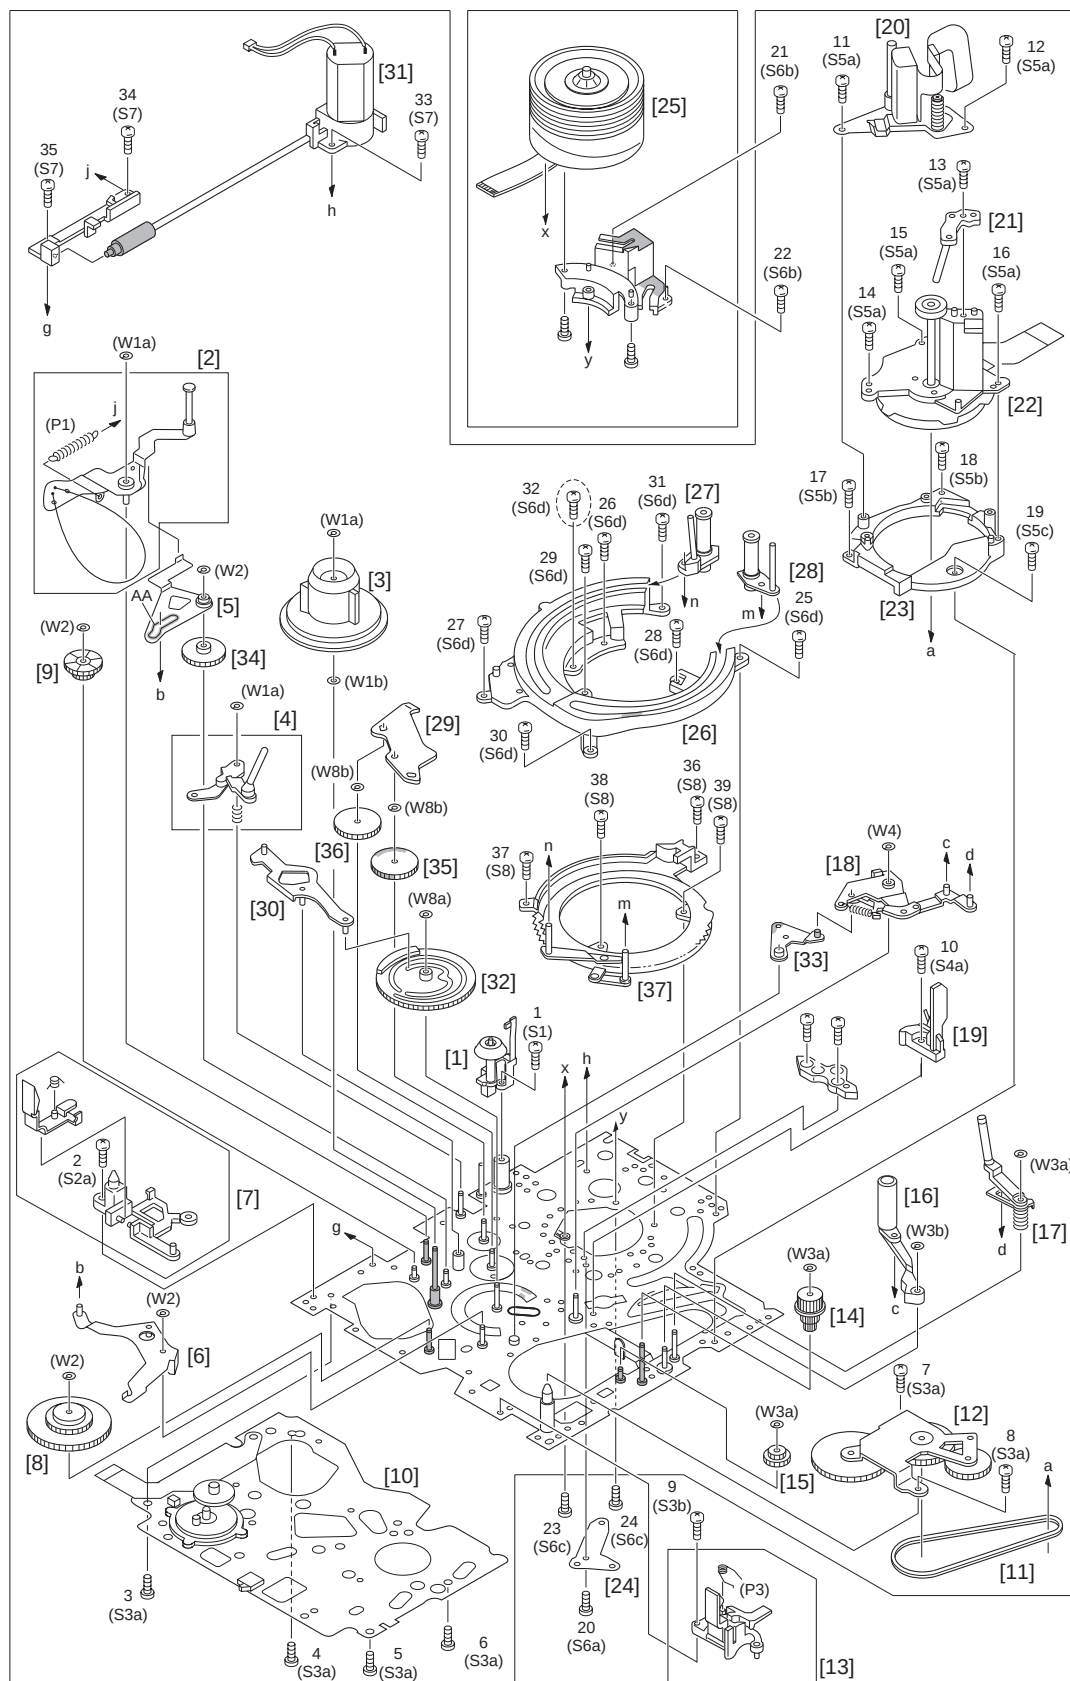

<TOP VIEW>

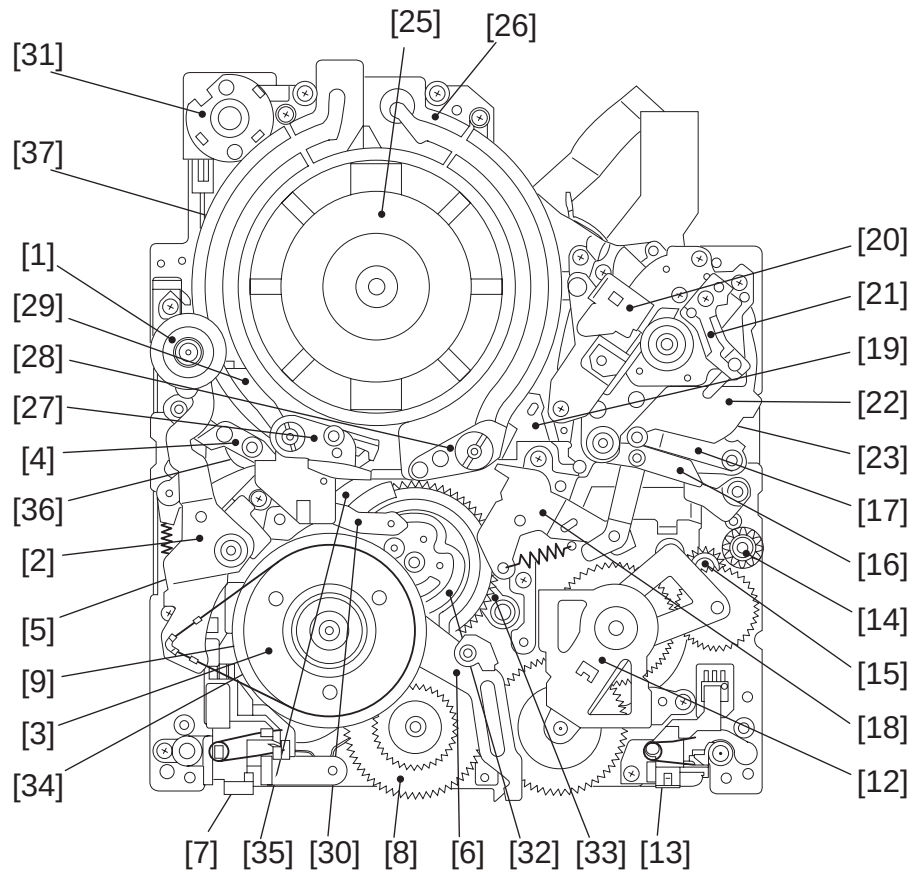


Fig.2-2-3

<BOTTOM VIEW>

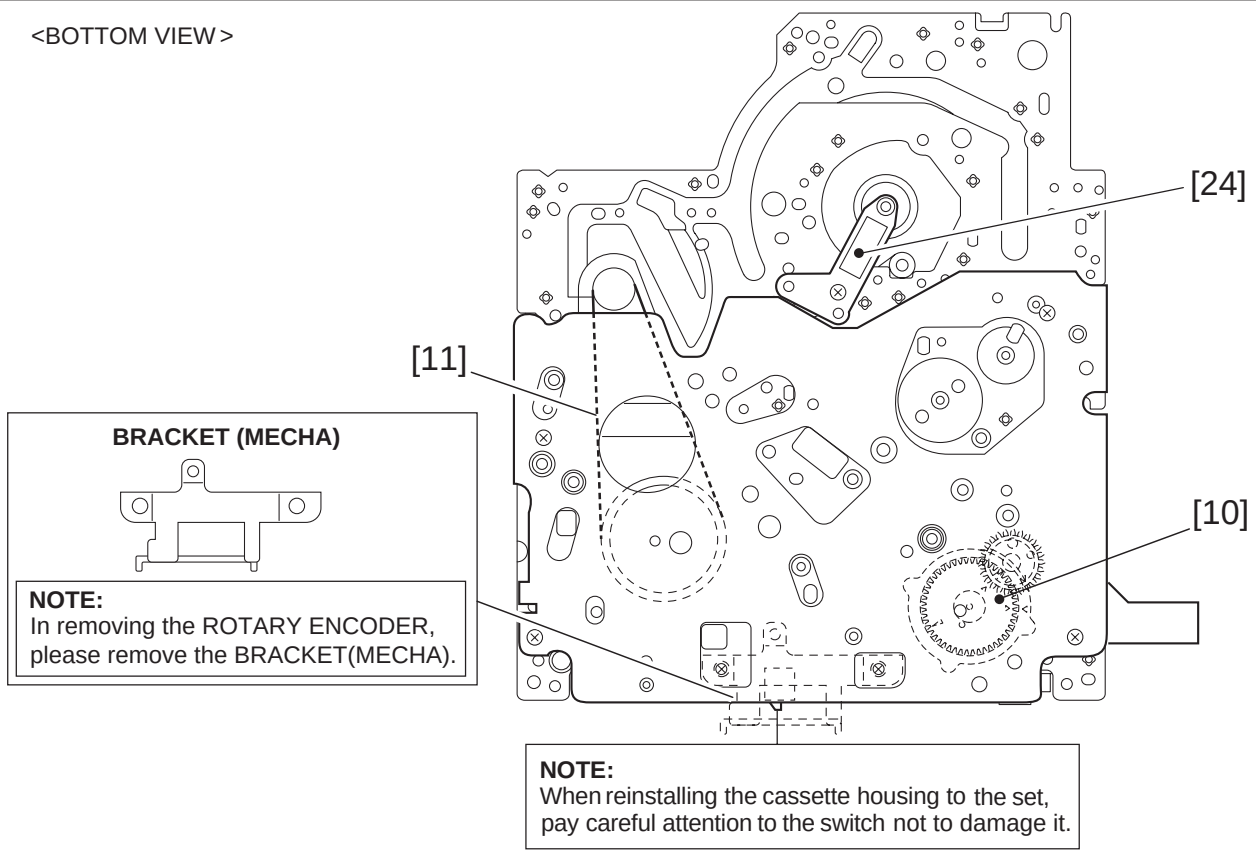


Fig.2-2-4

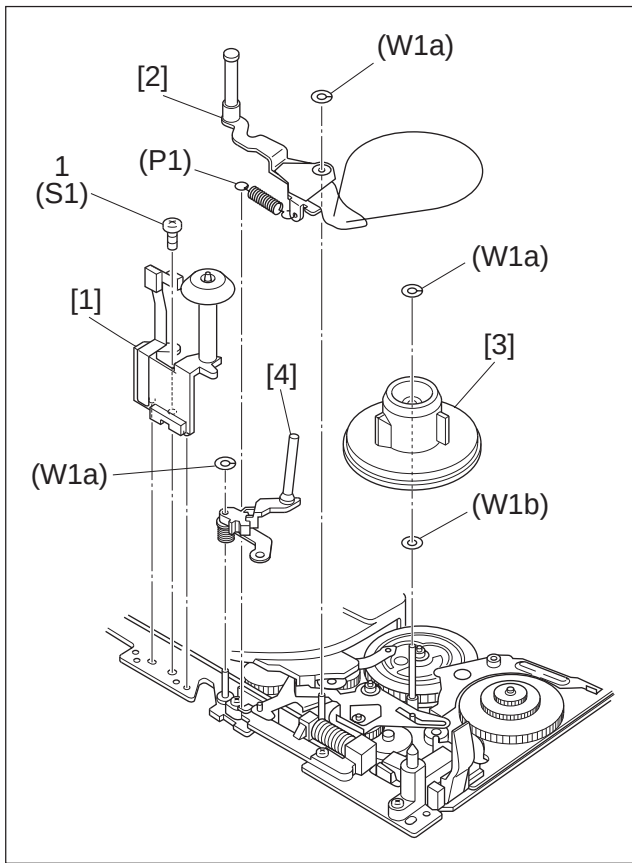


Fig.M1

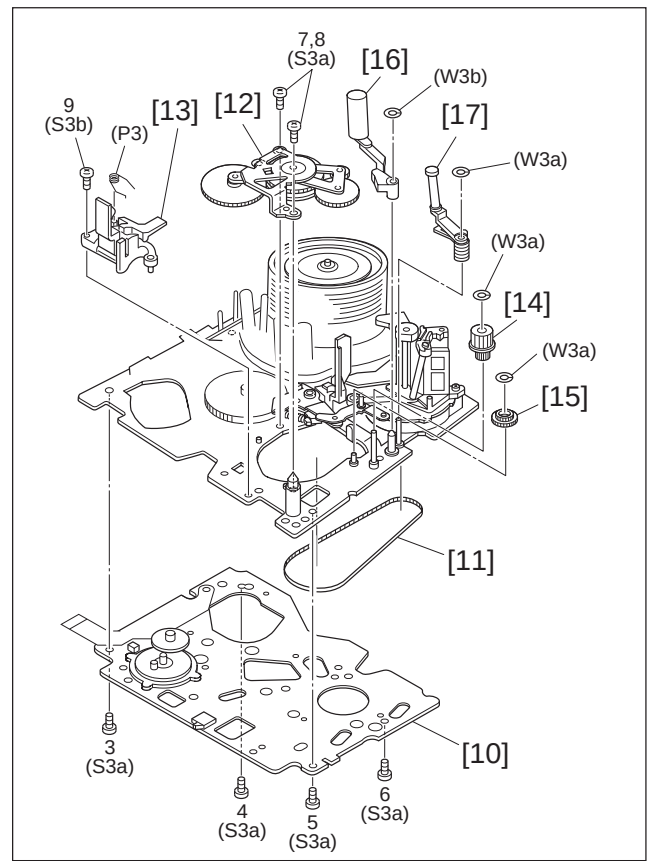


Fig.M3


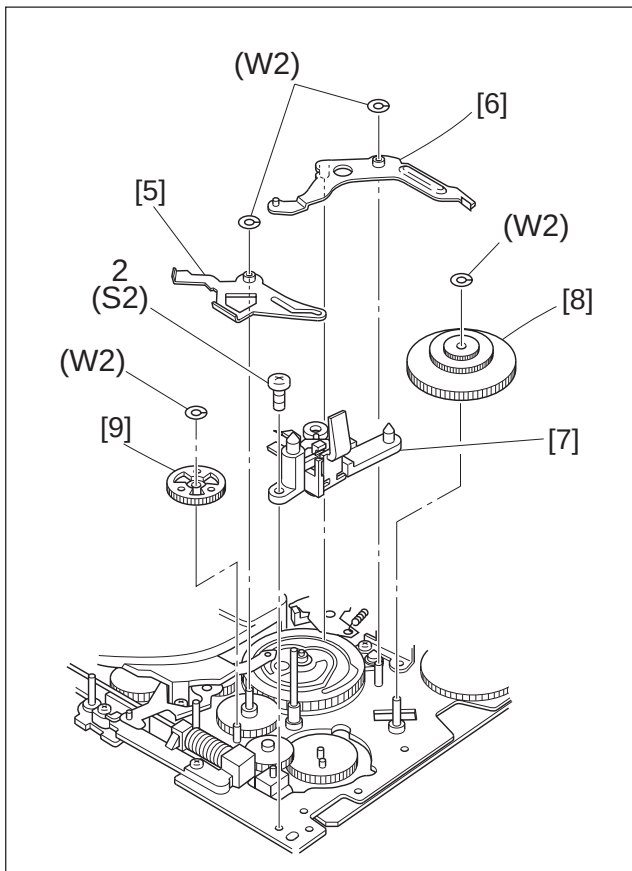


Fig.M2

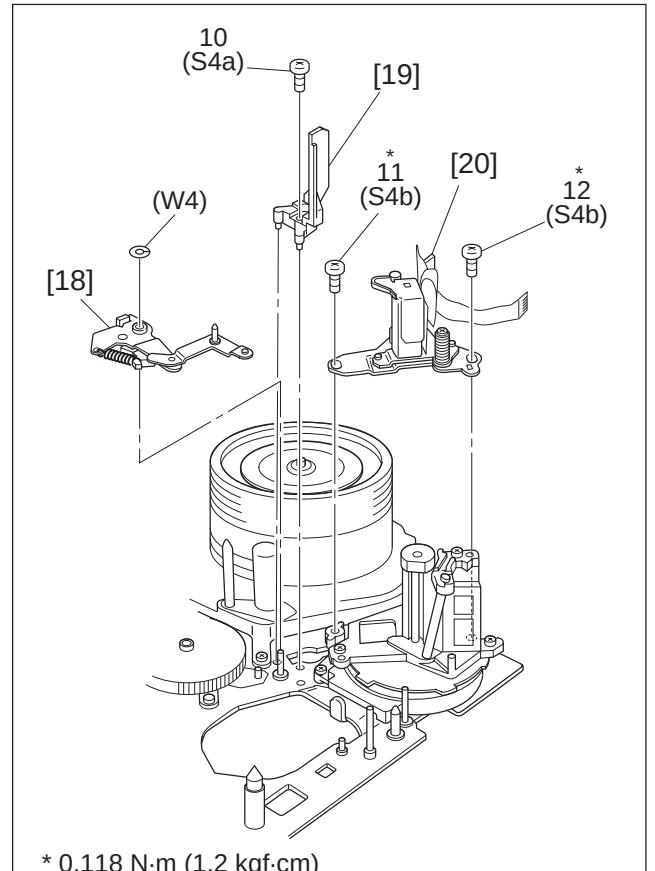

* 0.118 N·m (1.2 kgf·cm)

Fig.M4

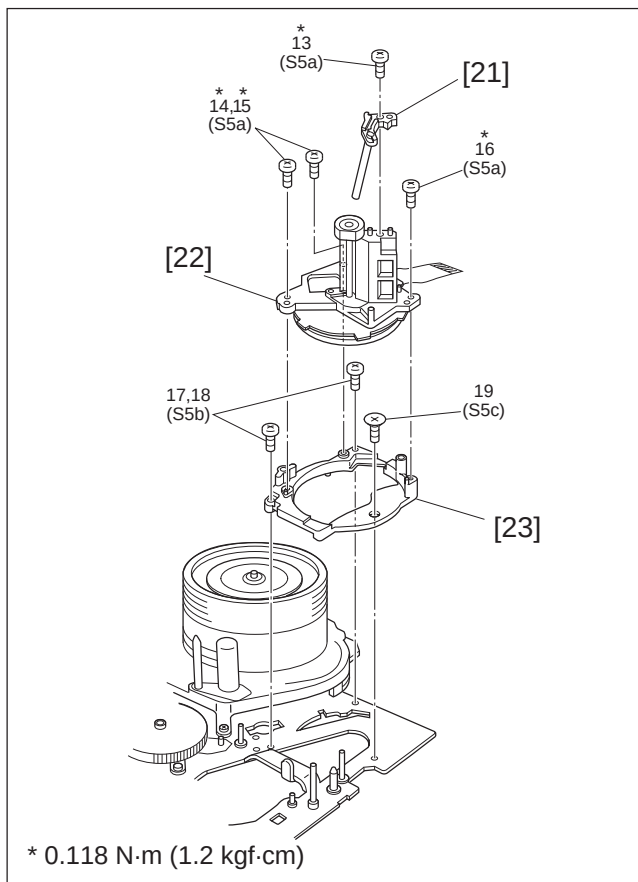


Fig.M5

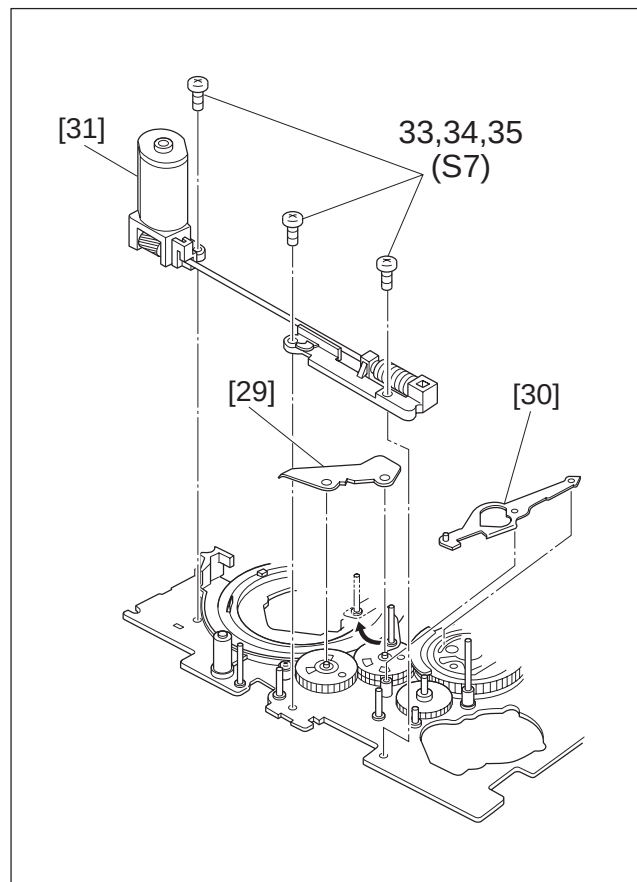


Fig.M7

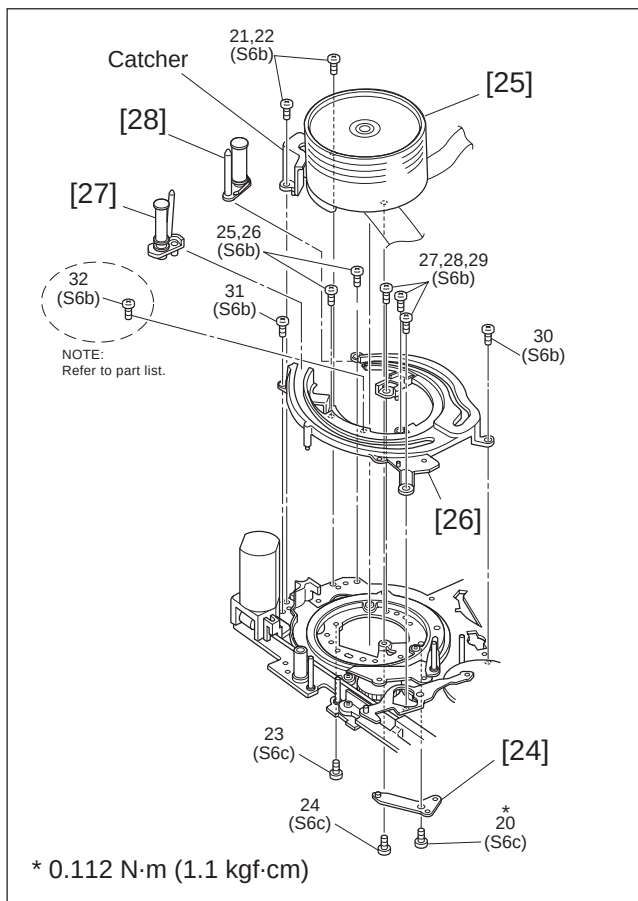


Fig.M6

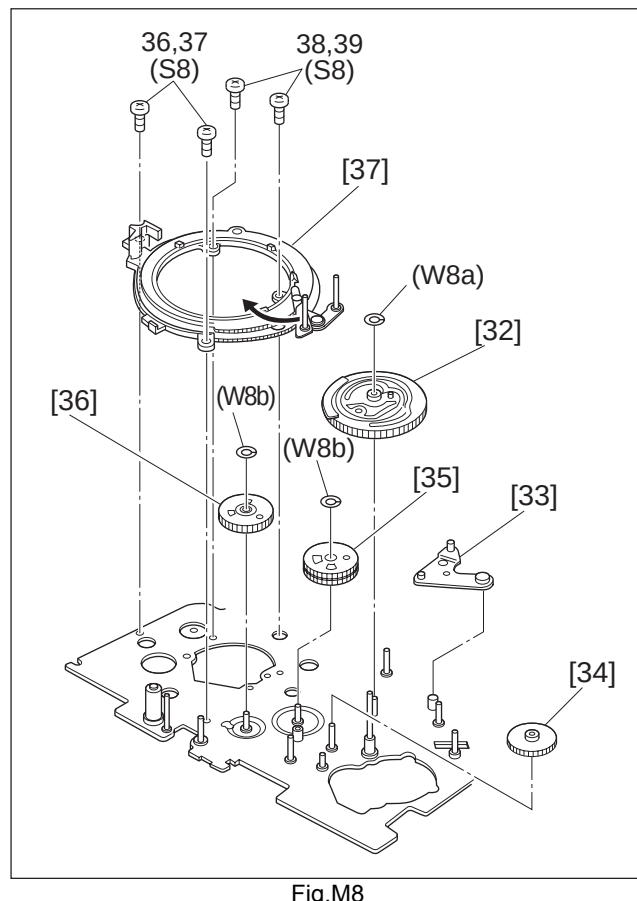


Fig.M8

2.2.4 CHECKUP AND ADJUSTMENT OF MECHANISM PHASE

NOTE:

Pay careful attention to the installing order and phase of mechanism parts of the loading system.

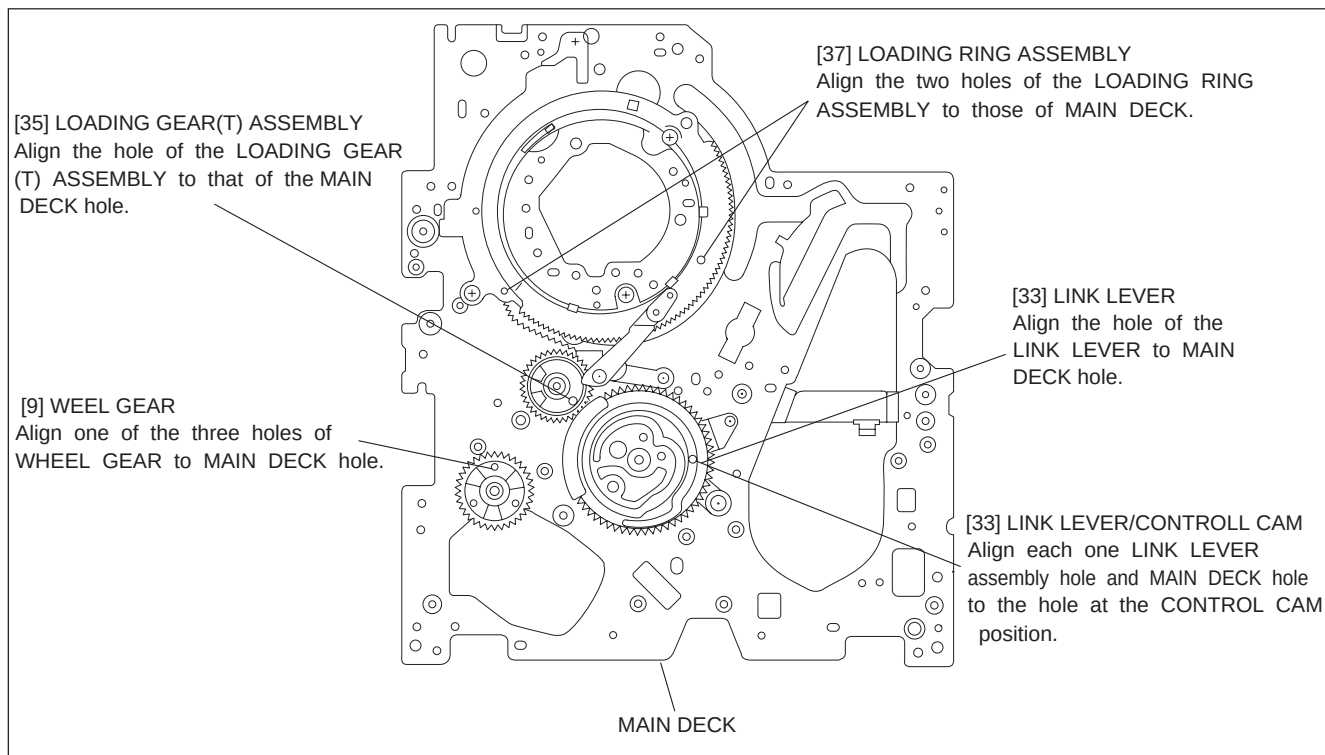


Fig.2-2-5 Top of main deck

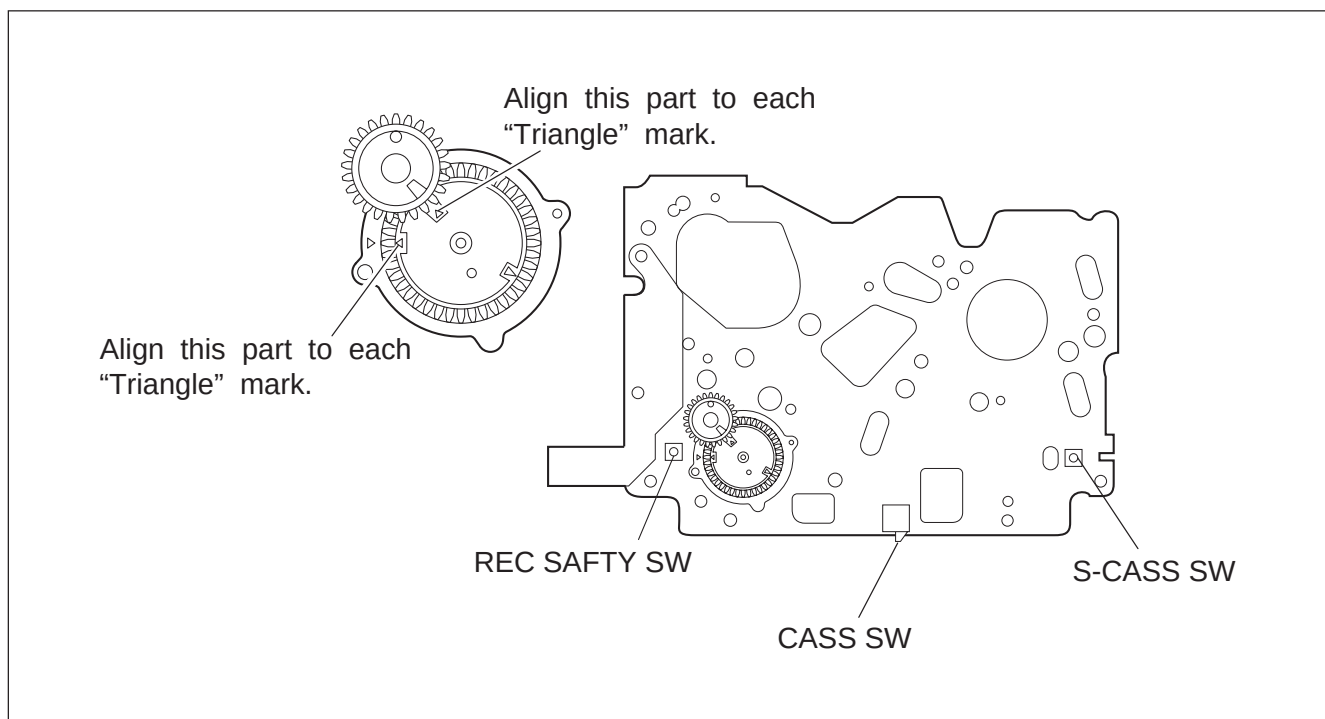


Fig.2-2-6 Rotary encoder

2.2.5 SERVICE NOTE

Use the following chart to manage screws.

Symbol No.	[1]	[7]	[10]				[12]	[13]	[19]	[20]	[21]	[22]	[23]								
Removing order of screw	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19		
Place to stick screw																					
Reference drawing (Fig. No.)	M1	M2	M3								M4	M5									
Screw tightening torque	I										II										I

Symbol No.	[24]	[25]				[26]				[31]	[37]									
Removing order of screw	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39
Place to stick screw																				
Reference drawing (Fig. No.)						M6				M7	M8									
Screw tightening torque	III	I																		

Fig.2-2-7

<NOTE>

· Pay careful attention to tightening torque for each screw.
Torque setting value of torque driver is limited. At the values over the maximum torque setting value, fasten a screw manually not to damage the screw thread.

I : 0.216N・m(2.2kgf・cm) II : 0.118N・m(1.2kgf・cm) III : 0.112N・m(1.1kgf・cm)

2.2.6 REMARKS

2.2.6.1 Cleaning

- (1) For cleaning of the upper drum (particularly video heads), use fine-woven cotton cloth with alcohol soaks through. Do not move the cloth but turn the upper drum counterclockwise.

NOTE:

Make sure not to move the cloth in the vertical direction to the video head, since it may cause damage of the video heads.

- (2) For cleaning of parts of the tape transport system except the upper drum, use fine-woven cotton cloth or cotton swab soaked alcohol.
- (3) After cleaning, confirm that the cleaned parts are completely dry before loading the deck with cassette tape.

2.2.6.2 Applying oil and grease

- (1) Periodical oiling and greasing are not required but should be done to new parts when replacing. If oil and grease on the other parts of the other party are old and dirty, wipe them clean and apply new oil or grease.
- (2) For parts and points to apply oil and grease, refer to the exploded view of the 3.2 VHS-C MECHANISM ASSEMBLY. Fig.2-2-8 specifies oil and grease to be used.
- (3) When oiling, clean the objective parts with alcohol first and apply one or two drop(s) of oil. Too much oiling causes rotary parts to slip because of oil leakage.

Classification	Part No.	Symbol in drawing
Grease	KYODO-SH-JB	AA
Oil	YTU94027	BB

specifies oil and grease to be used

Fig.2-2-8

2.3 VHS MECHANISM

2.3.1 Notes

This model's mechanism relates closely to the rotary encoder and system control circuit (the rotary encoder is meshed with the control cam).

The system control circuit detects the mechanism condition using the rotary encoder's phase (internal switch phase). Therefore, the parts such as the rotary encoder, control plate, loading gear and control cam need to be installed correctly in order for the mechanism to operate properly. (For the mechanism phase adjustment, refer to the installation of each part.)

- Before using a soldering iron, be sure to disconnect the power plug from the AC outlet.
- Do not touch any of the adjustment points until a defect position is specified.
- When plugging or unplugging the connector, be sure not to damage the wire.
- Be sure the springs are hooked all the way around and in the correct direction.
- When performing repairs, take care not to damage a catch, etc.

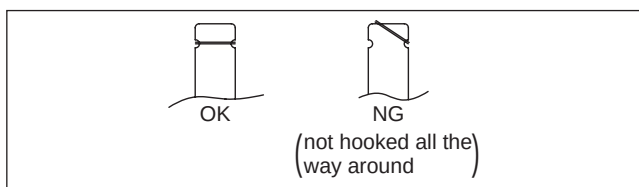


Fig.2-3-1

2.3.2 Mechanism operation check

When the mechanism is operated without a cassette loaded, operate the mechanism in the mechanism service mode.

2.3.3 Setting the mechanism assembling mode

The mechanism-assembling mode is provided with this mechanism. When disassembling and assembling, it is required to engage this mode.

Set the mode by adopting the following procedures.

- (1) Remove the mechanism assembly using the disassembling procedure.
- (2) Turn gear (a) of the loading motor manually to set the mechanism assembly to the eject end mode. Make sure that the main deck is connected to the guide hole (a) of the drive lever and the seal (a) of the main deck is connected to the mark "E" of the control plate. This condition is called the mechanism-assembling mode.

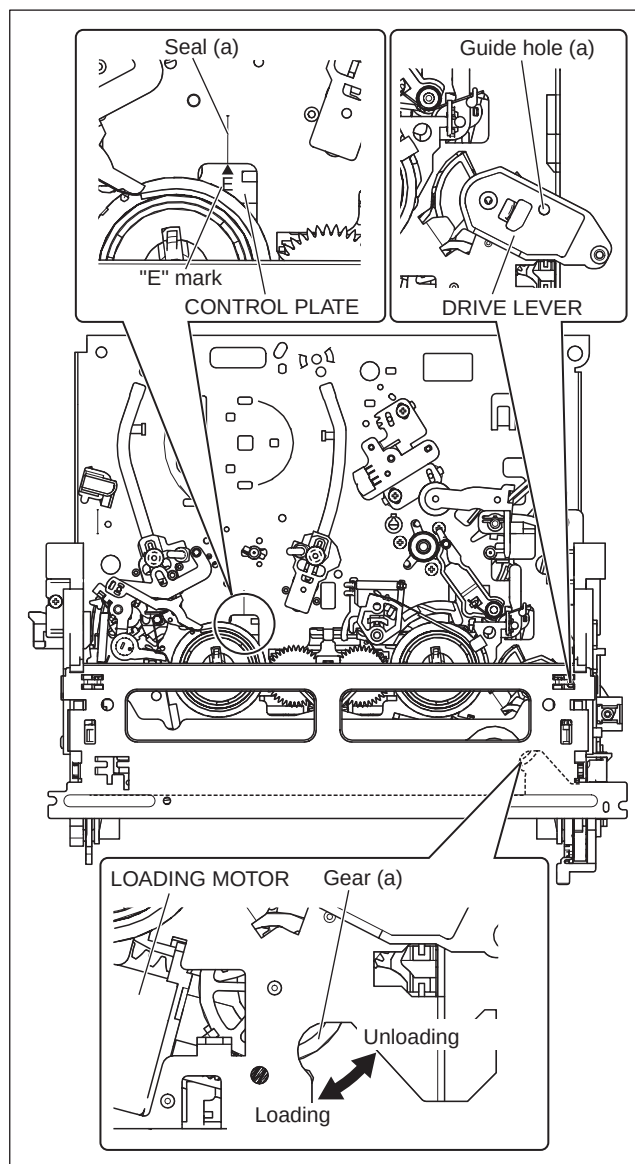


Fig.2-3-2

2.3.4 Layout of the main mechanism parts

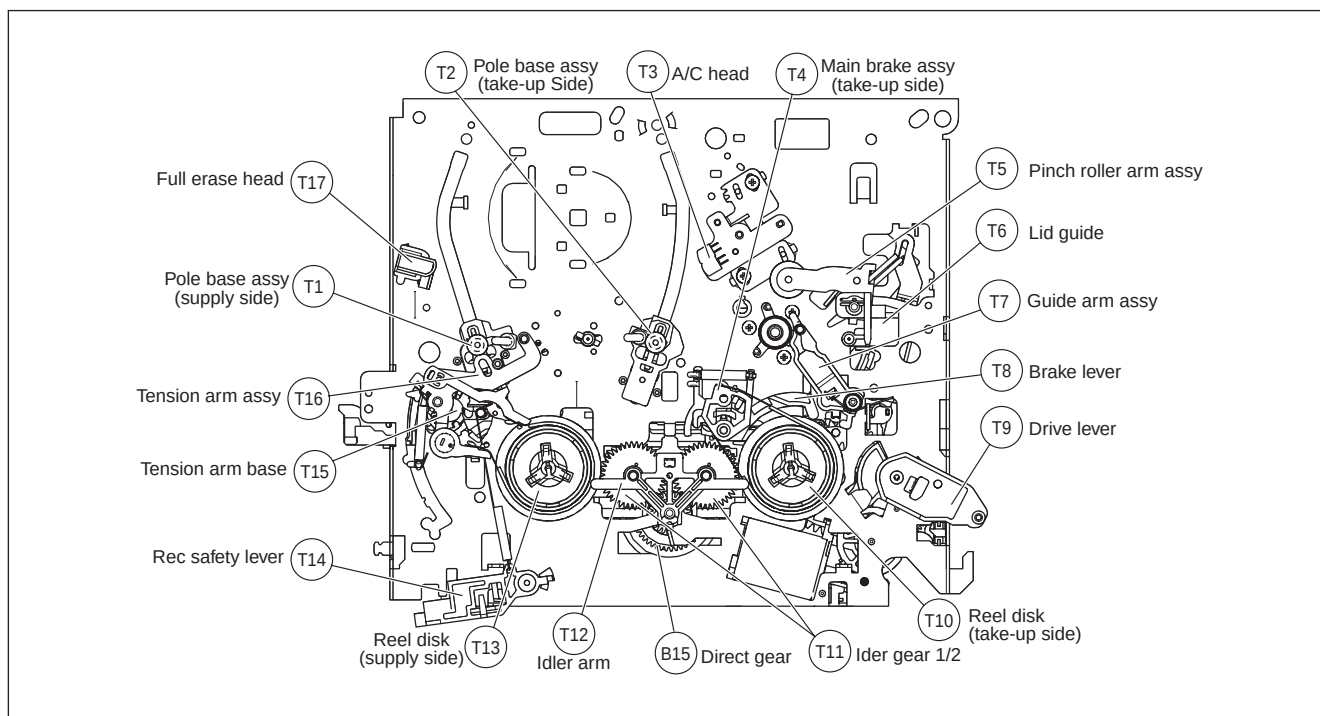


Fig.2-3-3

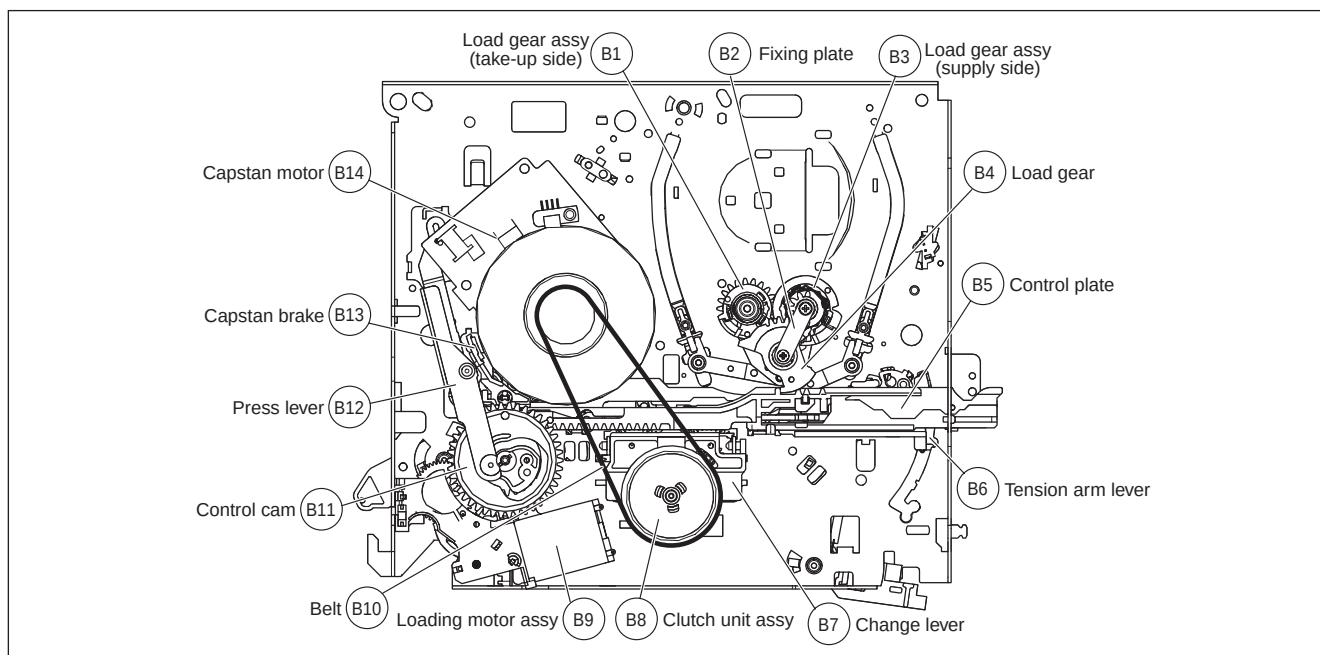


Fig.2-3-4

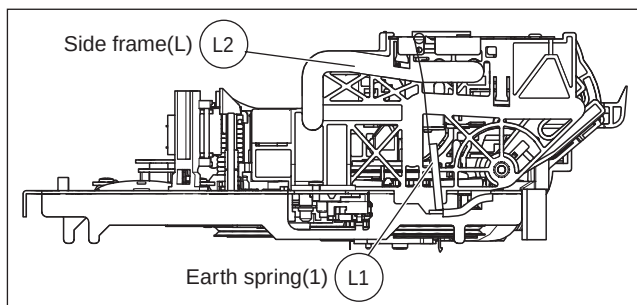


Fig.2-3-5

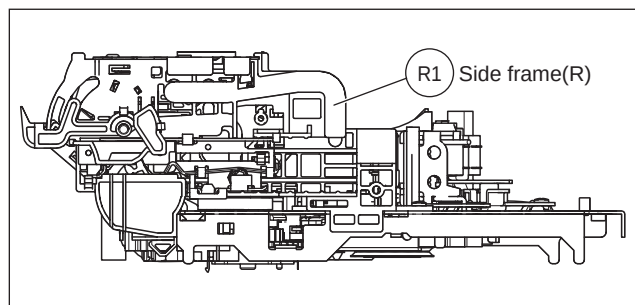


Fig.2-3-6

2.3.5 Disassembling procedure table

This table shows the order of parts removal when replacing each part. For replacement, remove the parts in the order of 1 to 13 shown in the table and install the parts in the reverse order.

The symbol number before each part name shows the number in the figure "Layout of the main mechanism parts". T and B on the right of each part name show the side from which the part should be removed (T: From the front of the mechanism, B: From the rear of the mechanism, T/B: From both sides).

Symbols and numbers	Symbols and numbers			L1	-	-	L2	-	R1	T6	T12	T11	T4	T10	T16	T15	B12	B11	B13	B9	B10	B2	B4	B3	B1	B5	B8	B15
	Removal parts (Reference items) Replacement parts	Front(T)/Back(B) of mechanism	Number of removal steps	Earth spring (1)	Top frame	Cassette holder	Side frame (L)	Drive arm	Side frame (R)	Lid guide	Idler arm	Idler gear 1/2	Main brake (T)	Reel disk (T)	Tension arm	Tension arm base	Press lever	Control cam	Capstan brake assy	Loading motor assy	Belt	Fixing plate	Load gear	Loading gear assy (S)	Loading gear assy (T)	Control plate	Clutch unit	Direct gear
L1	2.1 Earth spring (1)	T	1																									
-	2.1 Top frame	T	2	1																								
-	2.1 Cassette holder	T	3	1	2																							
L2	2.1 Side frame (L)	T	3	1	2																							
-	2.1 Drive arm	T	5	1	2	3	4																					
R1	2.1 Side frame (R)	T	3	1	2																							
T3	2.2 A/C head	T	1																									
T17	- FE head	T/B	1																									
T7	2.3 Guide arm assy	T	1																									
T6	2.3 Lid guide	T	1																									
T5	2.3 Pinch roller arm assy	T	2							1																		
T12	2.4 Idler arm	T	4	1	2	3																						
T11	2.4 Idler gear 1/2	T	5	1	2	3					4																	
T4	2.5 Main brake assy (T)	T	6	1	2	3					4	5																
T10	2.5 Reel disk (T)	T	7	1	2	3					4	5	6															
T16	2.5 Tension arm	T	6	1	2	3					4	5																
T13	2.5 Reel disk (S)	T	7	1	2	3					4	5			6													
T15	2.5 Tension arm base	T	7	1	2	3					4	5			6													
-	- T-up head	T	8	1	2	3					4	5			6	7												
-	- T-up lever	T	8	1	2	3					4	5			6	7												
T8	2.5 Brake lever	T	8	1	2	3					4	5	6	7														
T14	2.5 Rec safety lever	T	7	1	2	3	4	5	6																			
B12	2.6 Press lever	B	1																									
B11	2.6 Control cam	B	2														1											
B13	2.6 Capstan brake assy	B	3														1	2										
B9	2.6 Loading motor assy	B	4														1	2	3									
B10	2.7 Belt	B	1																									
B14	2.7 Capstan motor	T/B	2																		1							
-	- Wire holder	T/B	1																									
B2	2.7 Fixing plate	B	1																									
B4	2.7 Load gear	B	2																			1						
B3	2.7 Loading gear assy(S)	B	3																			1	2					
B1	2.7 Loading gear assy(T)	B	4																			1	2	3				
T1	- Pole base assy(S)	T/B	4																			1	2	3				
T2	- Pole base assy(T)	T/B	5																			1	2	3	4			
-	- Load gear base	B	5																			1	2	3	4			
B5	2.7 Control plate	B	6														1	2			3	4	5					
T9	- Drive lever	T/B	10	1	2	3	4	5	6								7	8		9								
B8	2.8 Clutch unit	B	2																		1							
B15	2.8 Direct gear	B	3																		1							2
B7	- Change lever	T/B	6								1	2									3						4	5
B6	- Tension arm lever	T/B	14	1	2	3					4	5			6	7	8	9			10	11	12			13		

2.3.6 REPLACEMENT OF THE MAIN MECHANISM PARTS

2.3.6.1 Cassette holder

2.3.6.1.1 Removal

- (1) Remove the screws (a) and (b).
- (2) Hold up the top frame, cassette holder assembly, drive arm assembly and side frames (L/R) all together and remove them by releasing the hooks (a) and (b).

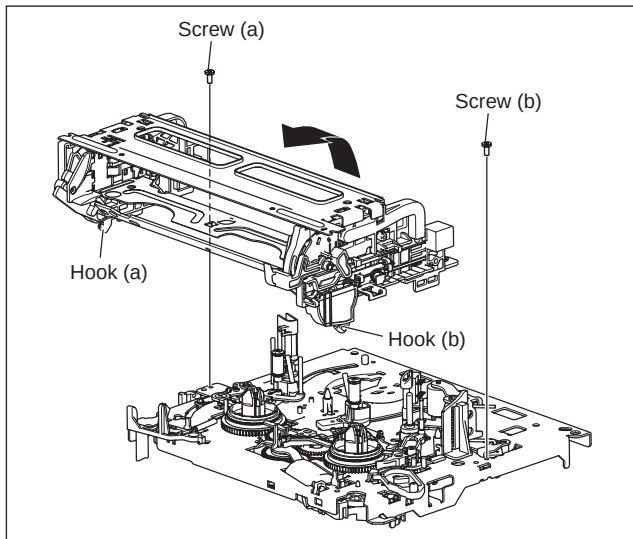


Fig.2-3-7

2.3.6.1.2 Installation (phase adjustment)

- (1) Turn gear (a) of the loading motor assembly so that the main deck connects to the guide hole (a) of the drive lever.
- (2) Hook the main deck to hooks (a) and (b).
- (3) Place the projection of the drive lever to section (a) of the side frame (R) and install the cassette holder to the main deck. Make sure that the bosses of the side frame (L/R) connect with the holes (a) and (b) of the main deck.
- (4) Secure screws (a) and (b).

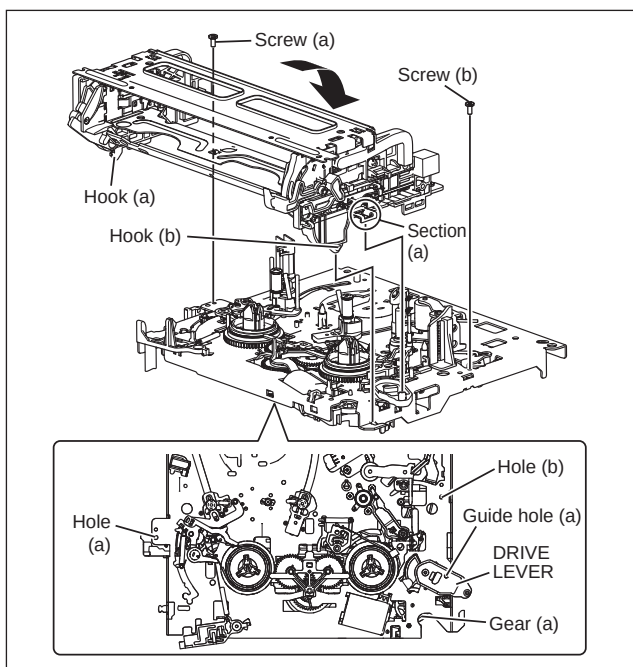


Fig.2-3-8

2.3.6.1.3 Disassembling

- (1) Release hook (a) to remove the earth spring (1) from the top frame.
- (2) Release the catches (a) and (b) and pull the top frame in the direction shown by the arrow (a) to remove it.
- (3) Pull out the side frame (R).
- (4) Pull out the cassette holder assembly and drive arm assembly from the side frame (L).

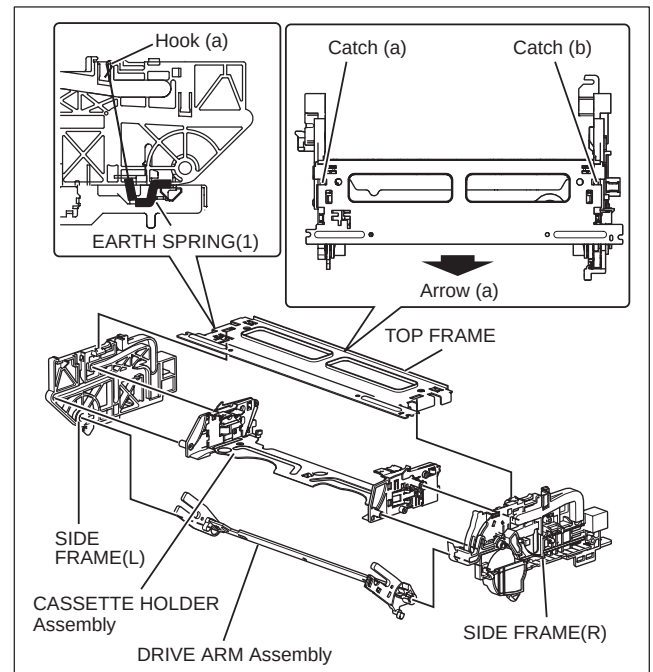


Fig.2-3-9

2.3.6.1.4 Assembling (installation and phase adjustment)

- (1) Turn gear (a) of the loading motor assembly so that the main deck connects to the guide hole (a) of the drive lever.
- (2) Place the projection of the drive lever on section (a) of the side frame (R) and install the side frame (R) to the main deck.
- (3) Secure screw (b).
- (4) Place section (b) of the drive arm on the gear of the side frame (R). Make sure that the pin of the door opener connects with section (c) of the drive arm.
- (5) Place the drive arm on section (d) of the side frame (L) and install the side frame (L) on the main deck. Be sure to connect the earth spring (1) to the side frame (L).
- (6) Secure screw (a).
- (7) Turn gear (a) of the loading motor assembly until the drive arm is vertical.
- (8) Place the slit of the side frame (L/R) at the foot of the cassette holder assembly and install the cassette holder.
- (9) Place the top frame on the position guide (a) of the side frame (L/R) and push it in the direction shown by the arrow (a) for installation.
- (10) Hook the earth spring (1) to the hook (a) of the top frame.

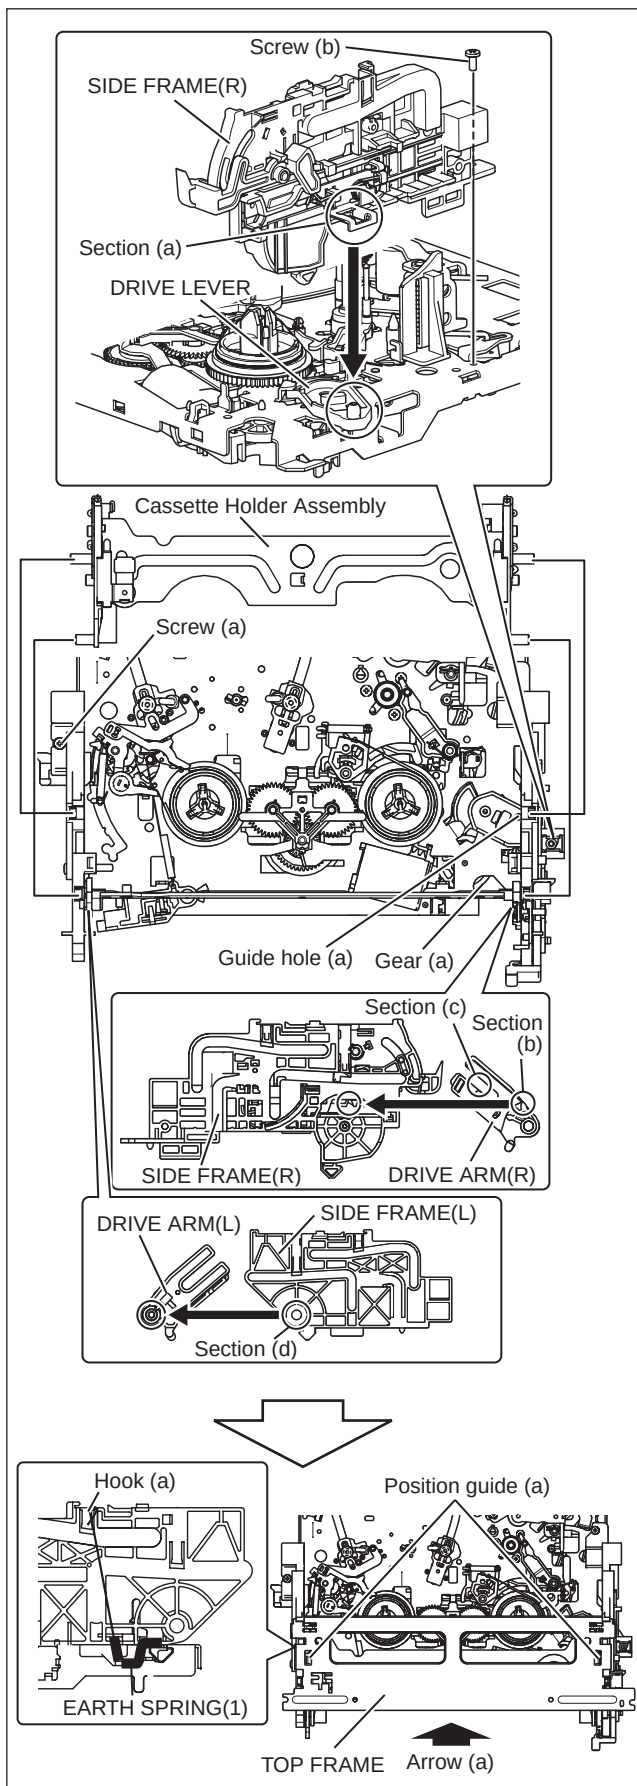


Fig.2-3-10

2.3.6.2 A/C head

2.3.6.2.1 Removal

- (1) Remove screws (a) and (b).
- (2) Remove the A/C head together with the head base.
- (3) Remove the screws (c), (d) and (e) to remove the spring (a) and the A/C head from the Head base.

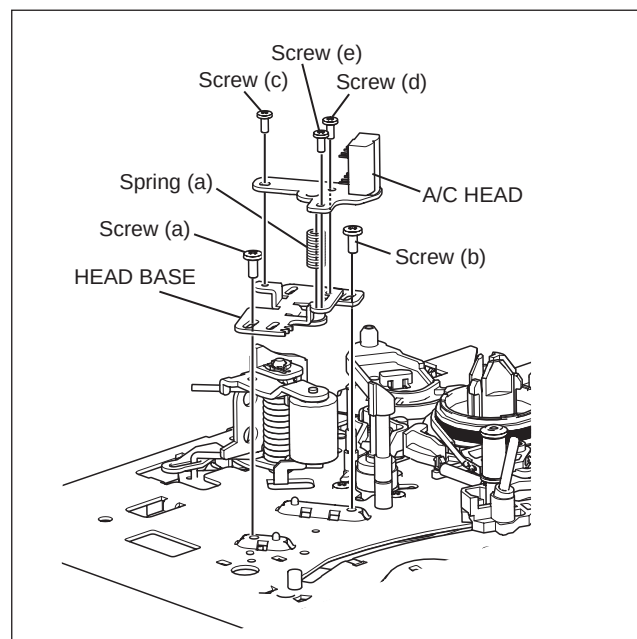


Fig.2-3-11

2.3.6.2.2 Installation (initial setting)

To install the A/C head to the head base, secure the screws in the order of (c), (d) and (e). To make the adjustment easy, temporarily elevate the A/C head.

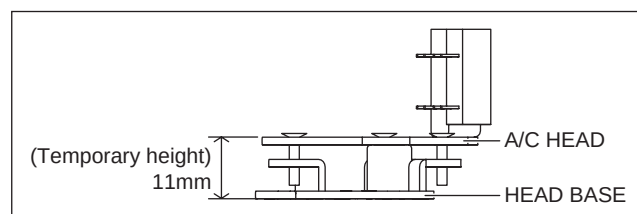


Fig.2-3-12

2.3.6.3 Guide arm, pinch roller arm

2.3.6.3.1 Removal

- (1) Remove the spring (a) from the hook (a) and detach the guide arm assembly.
- (2) Release the catch (a) to remove the lid guide.
- (3) Remove the spring (b) from the hook (b) and detach the pinch roller arm assembly.

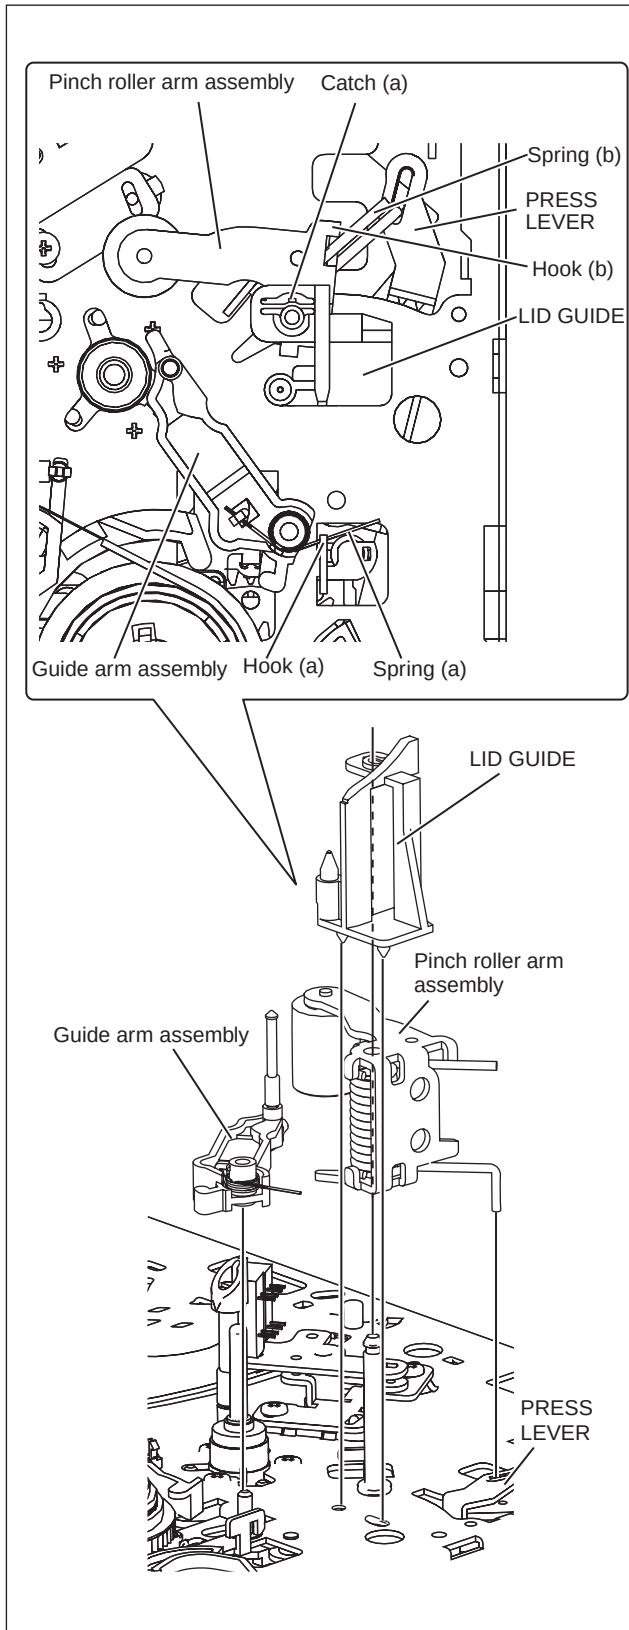


Fig.2-3-13

2.3.6.4 Idler arm, idler gear 1/2

2.3.6.4.1 Removal

- (1) Release the catches (a) and (b) to detach the idler arm.
- (2) Detach the idler gear 1/2.

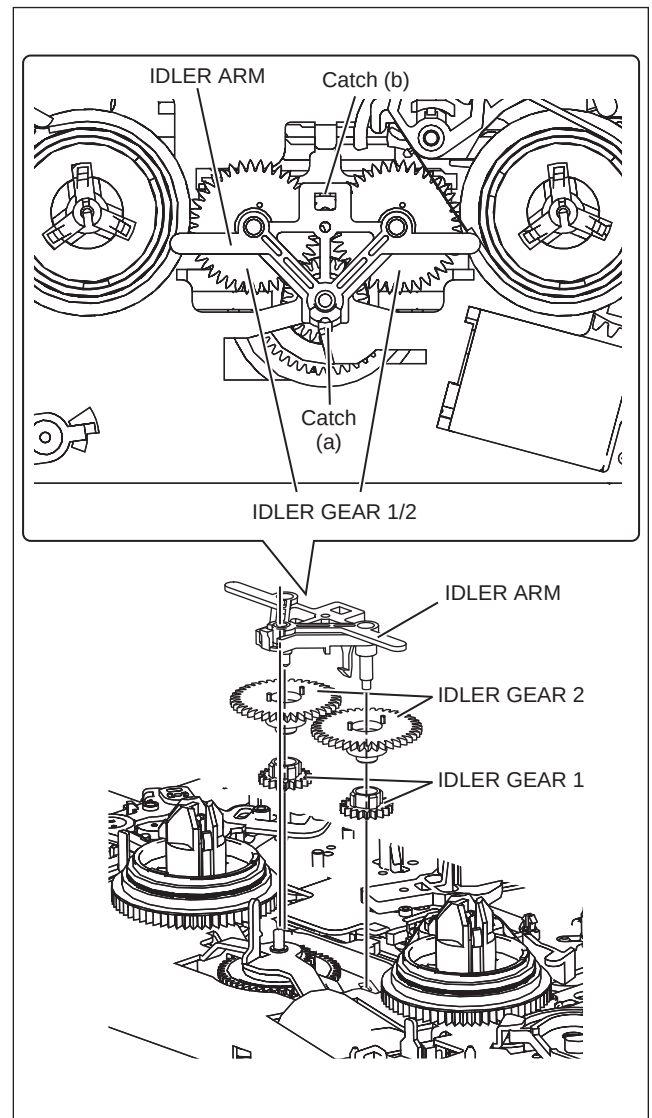


Fig.2-3-14

2.3.6.5 Main brake (T), brake lever, tension arm, reel disk (S/T), Rec safety lever

2.3.6.5.1 Removal

- (1) Remove the spring (a). (Detach section (b) of the spring (a).)
- (2) Release the catch (a) to detach the main brake (T).
- (3) Release the catch (b) to detach the reel disk (T) and the spacer.
- (4) Lift up and turn section (b) of the brake lever counterclockwise to remove the brake lever.
- (5) Remove the spring (b) from the hook (a).
- (6) Release the catch (c) to detach the tension arm.
- (7) Release the catch (d) to detach the reel disk (S) and the spacer.
- (8) Remove the spring (c) from the hook (b).
- (9) Turn the tension arm base in the direction shown by arrow (a) to release catch (e). Place the projections of the tension arm base to the holes (a) to detach the tension arm base.
- (10) While releasing the catch (f), turn the Rec safety lever counterclockwise to remove it.

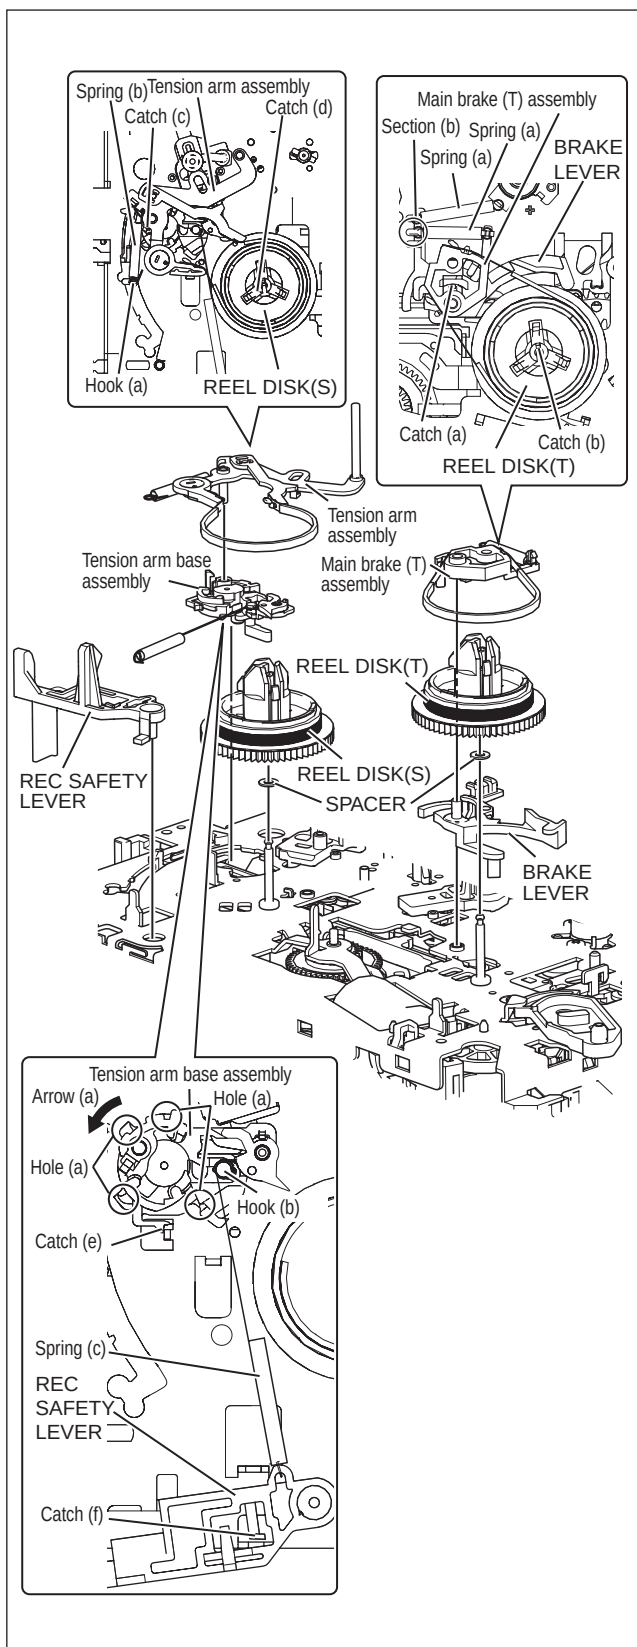


Fig.2-3-15

2.3.6.6 Press lever, control cam, capstan brake assembly, loading motor assembly

2.3.6.6.1 Removal

- (1) Remove the slit washer (a) to detach the press lever.
- (2) Release the slit washer (b) to detach the control cam.
- (3) Release the catch (b) to detach the capstan brake assembly.
- (4) Remove the solder (a).
- (5) Remove the screw (a).
- (6) Release the catches (c) and (d) to detach the loading motor assembly.

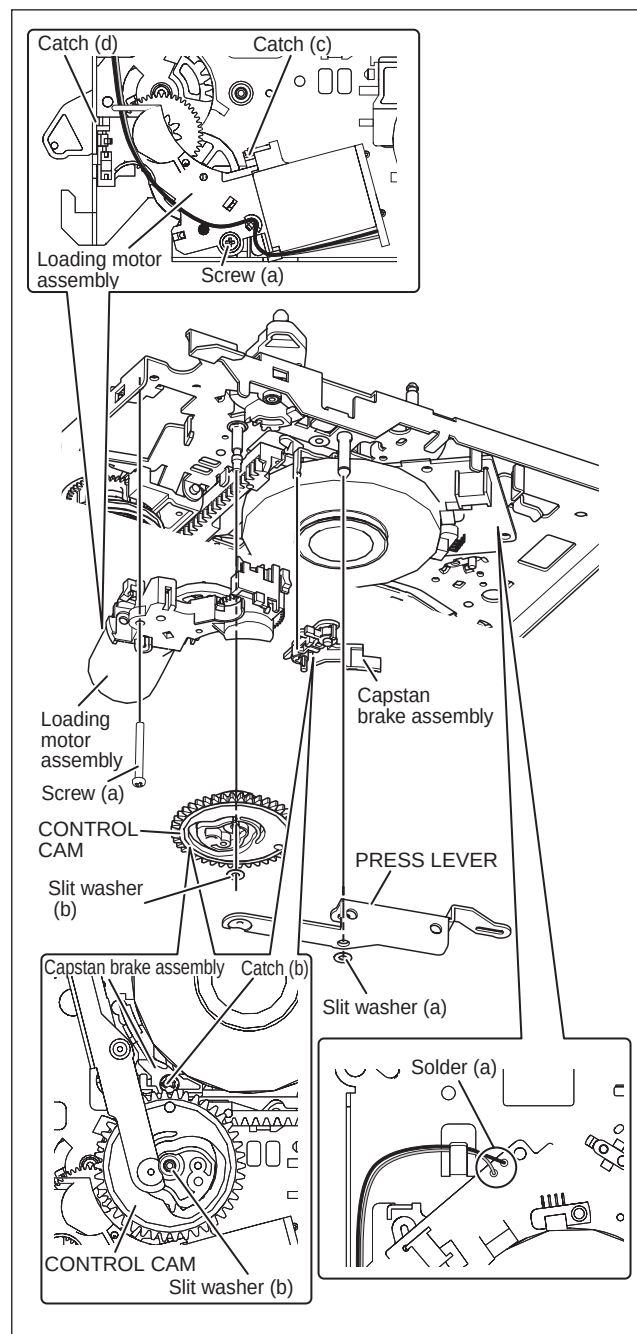


Fig.2-3-16

2.3.6.6.2 Installation (phase adjustment)

- (1) Attach the loading motor assembly to the main deck.
- (2) Secure the screw (a).
- (3) Solder the wire to section (a).
- (4) Arrange the wire along with the position guide (b).
- (5) Attach the capstan brake assembly to the main deck.
- (6) Place the main deck on the guide hole (a) of the control plate.
- (7) Place the main deck on the guide hole (b) of the drive lever.
- (8) Place the main deck on guide hole (c) of the control cam to install the control cam.
- (9) Move the capstan brake in the direction shown by the arrow (a) to attach the press lever to the shaft (a). Make sure that the boss of the press lever fits in the control cam, and that the shaft (b) of the pinch roller arm assembly connects with the hole of the press lever.
- (10) Attach slit washer (a) to shaft (a).

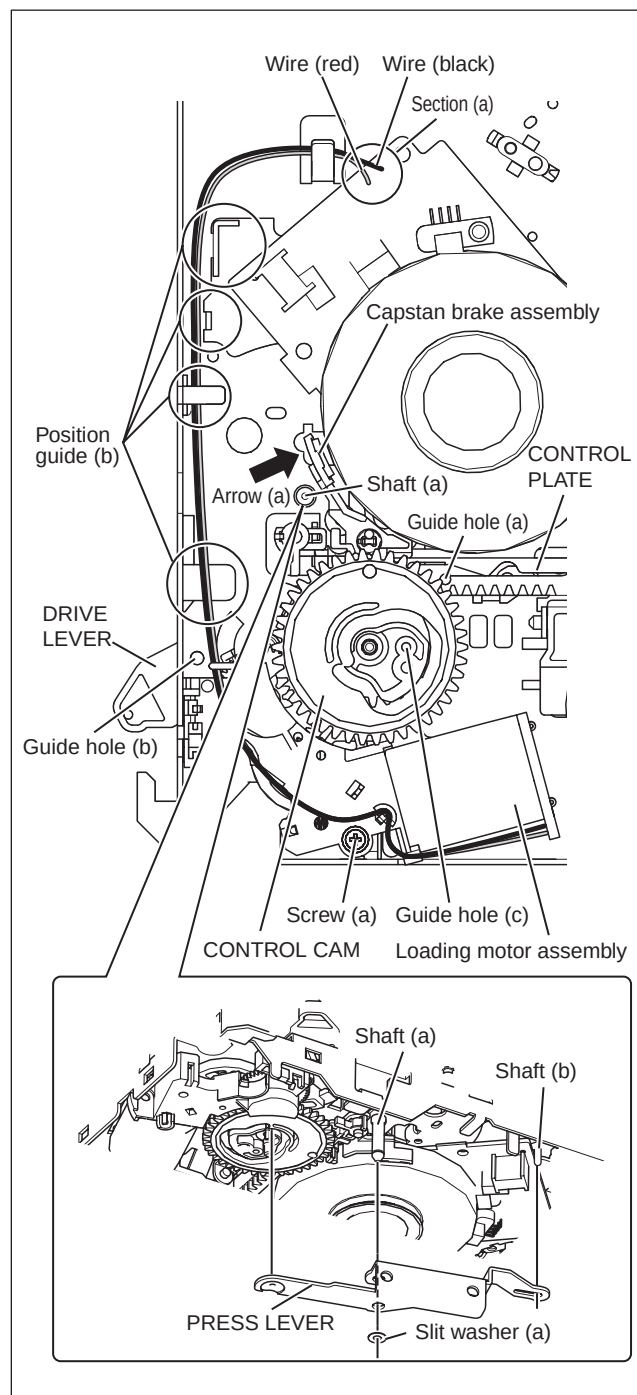


Fig.2-3-17

Note:

- When replacing the worm bearing of the loading motor assembly, attach it according to the following specification.

If worm bearing is not attached correctly, a mechanism noise may occur. (See Fig. 2-3-18)

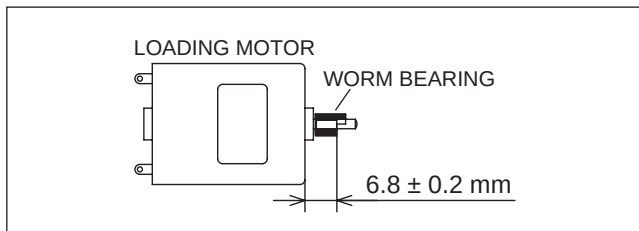


Fig.2-3-18

2.3.6.7 Capstan motor, load gear, control plate

2.3.6.7.1 Removal

- (1) Detach the belt.
- (2) Check that the FFC connector on the drum is disconnected.
- (3) Release the catch (a) to remove the FFC wire.
- (4) Remove the screws (a) to detach the capstan motor.
- (5) Remove the screws (b) to detach the fixing plate.
- (6) Release the catch (b) to detach the load gear.
- (7) Turn the load gear (S/T) in the loading direction to detach it.
- (8) Remove the control plate.

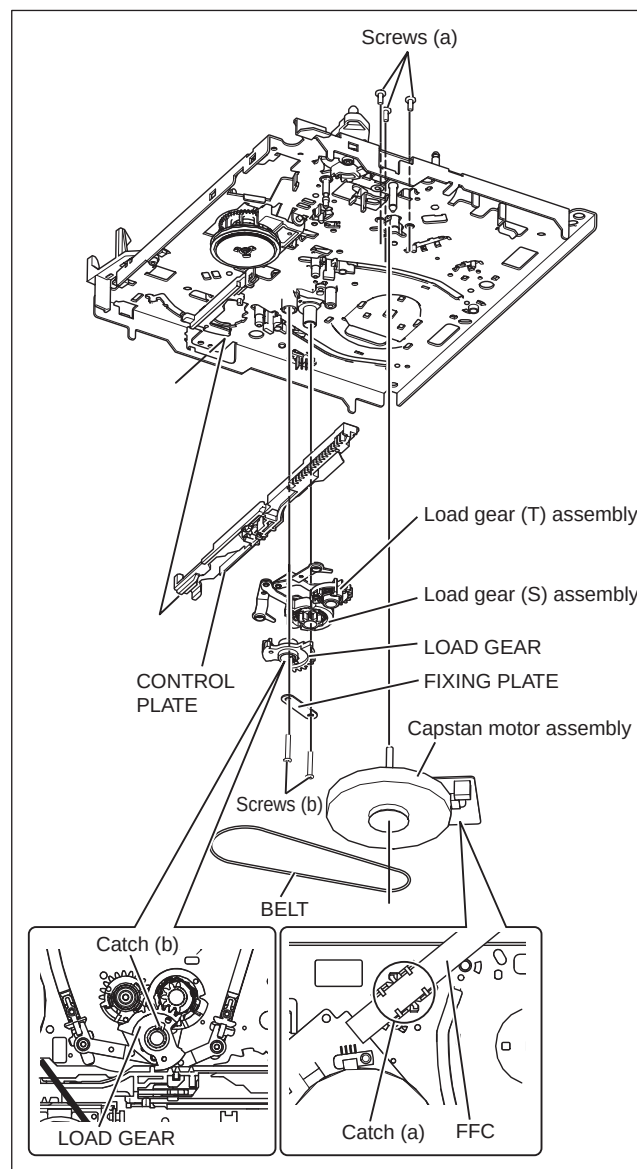


Fig.2-3-19

2.3.6.7.2 Installation (phase adjustment)

- (1) Place the main deck on the guide hole (a) of the tension arm lever.
- (2) Place the main deck on the guide hole (b) of the brake lever.
- (3) Attach the control plate to align with the position guide (a).
- (4) Place the hole (c) of the load arm (T) on the pole base (T) and the load gear (T) on the load gear base.
- (5) Place the hole (d) of the load arm (S) on the pole base (S) and the load gear (S) on the load gear base. Be sure to align the guide mark (e) of the load gear (T) to that of the load gear (S).
- (6) Turn the load gear (S/T) in the unloading direction to place the main deck on the guide hole (f) of the load gear (T).
- (7) Place the main deck on the guide hole (g) of the control plate.
- (8) Attach the load gear on the load gear base so that the control plate is placed on the edge (h) of the load gear.
- (9) Place the fixing plate on the shaft of the load gear base and secure the screws (b).

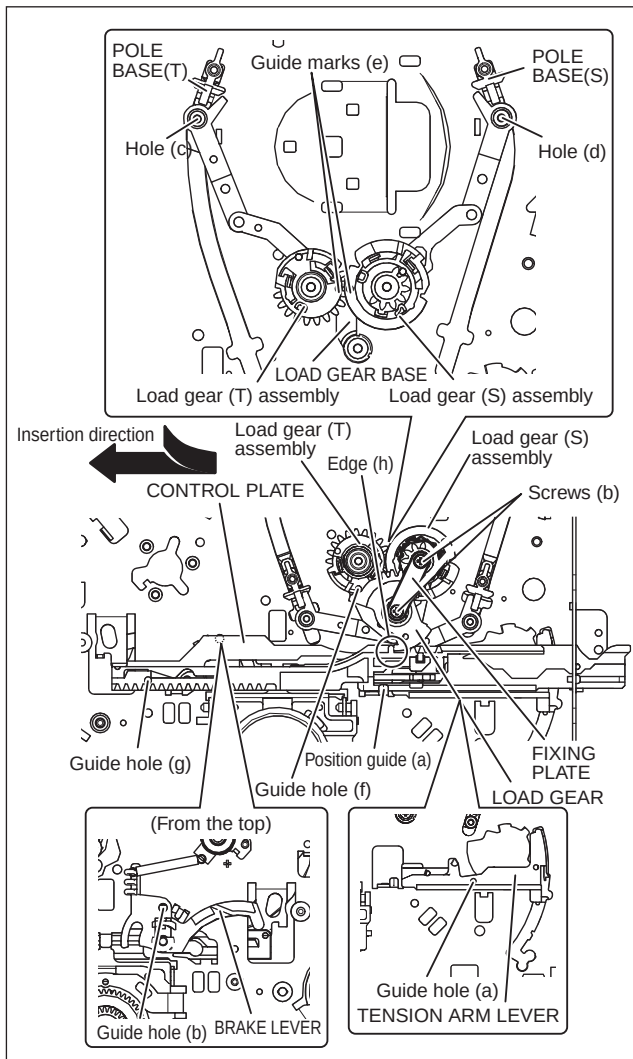


Fig.2-3-20

2.3.6.8 Clutch unit assembly, direct gear

2.3.6.8.1 Removal

- (1) Remove the slit washer (a) to detach the clutch unit assembly.
- (2) Remove the spring (a) and the direct gear.


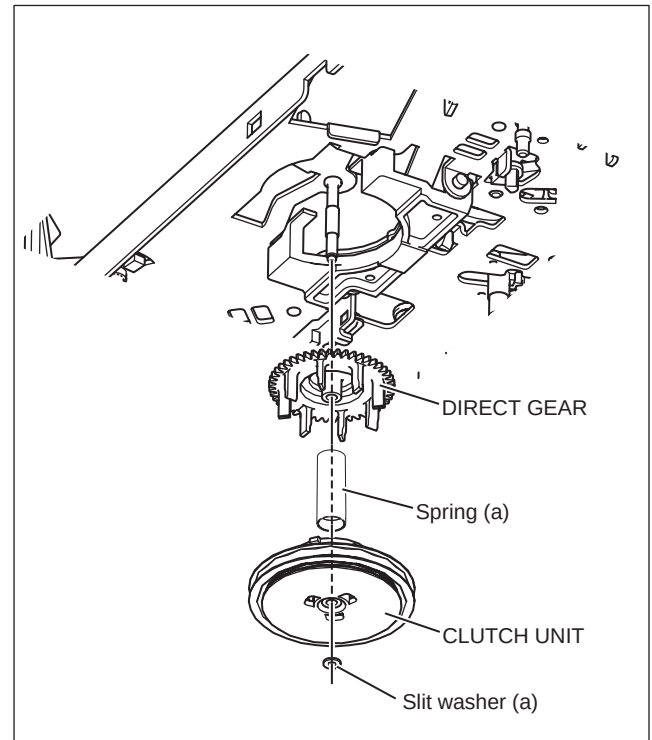


Fig.2-3-21

2-40 (No.86700)

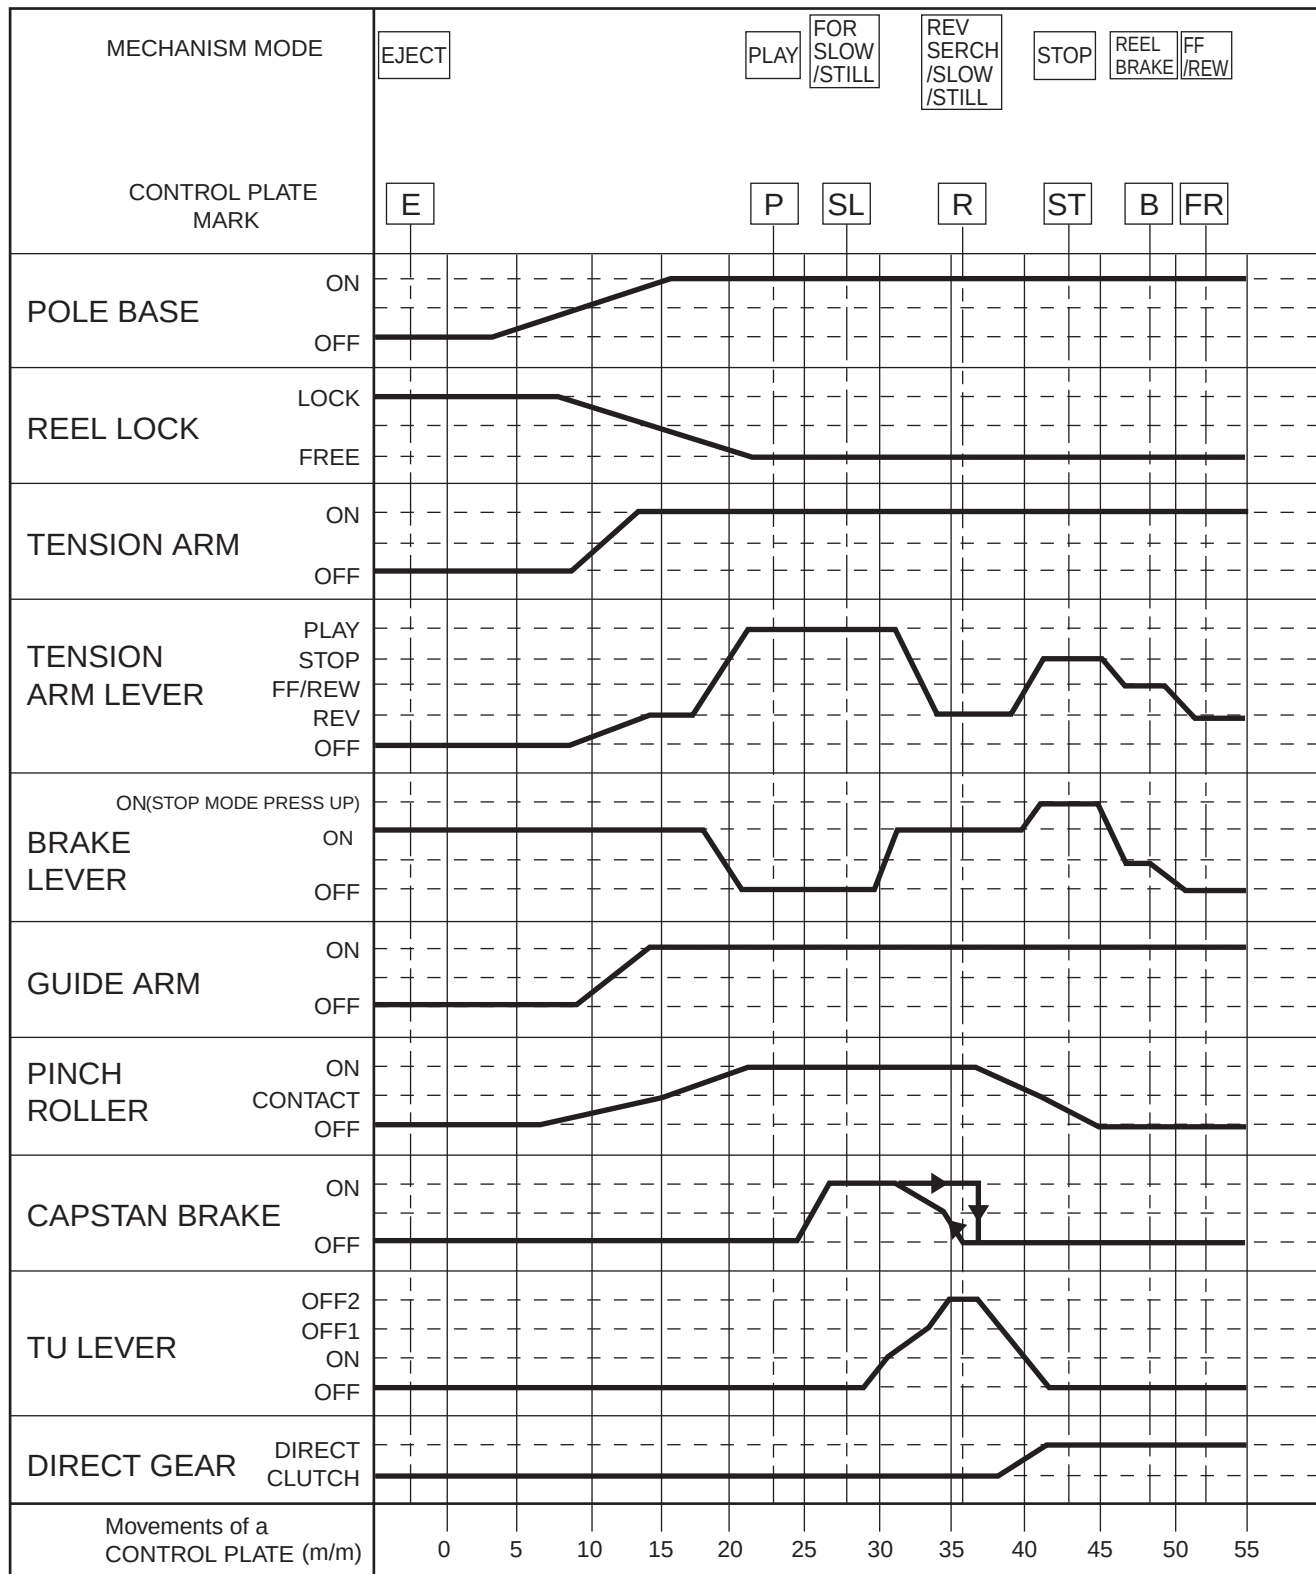

2.3.8 REMARKS

2.3.8.1 Cleaning

- (1) For cleaning of the upper drum (particularly video heads), use fine-woven cotton cloth with alcohol soaks through. Do not move the cloth but turn the upper drum counterclockwise.

NOTE:

Make sure not to move the cloth in the vertical direction to the video head, since it may cause damage of the video heads.

- (2) For cleaning of parts of the tape transport system except the upper drum, use fine-woven cotton cloth or cotton swab soaked alcohol.
- (3) After cleaning, confirm that the cleaned parts are completely dry before loading the deck with cassette tape.

2.3.8.2 Applying oil and grease

- (1) Periodical oiling and greasing are not required but should be done to new parts when replacing. If oil and grease on the other parts of the other party are old and dirty, wipe them clean and apply new oil or grease.
- (2) For parts and points to apply oil and grease, refer to the exploded view of the 3.3 VHS MECHANISM ASSEMBLY. Fig.2-3-22 specifies oil and grease to be used.
- (3) When oiling, clean the objective parts with alcohol first and apply one or two drop(s) of oil. Too much oiling causes rotary parts to slip because of oil leakage.

Classification	Part No.	Symbol in drawing
Grease	KYODO-SH-JB	AA
Oil	COSMO-HV56	BB

specifies oil and grease to be used

Fig.2-3-22



VICTOR COMPANY OF JAPAN, LIMITED

AV & MULTIMEDIA COMPANY CAMCORDER CATEGORY 12, 3-chome, Moriya-cho, kanagawa-ku, Yokohama, kanagawa-prefecture, 221-8528, Japan

(No.86700)



Printed in Japan
200304WPC

SECTION 3

PARTS LIST

3.1 DVC MECHANISM ASSEMBLY

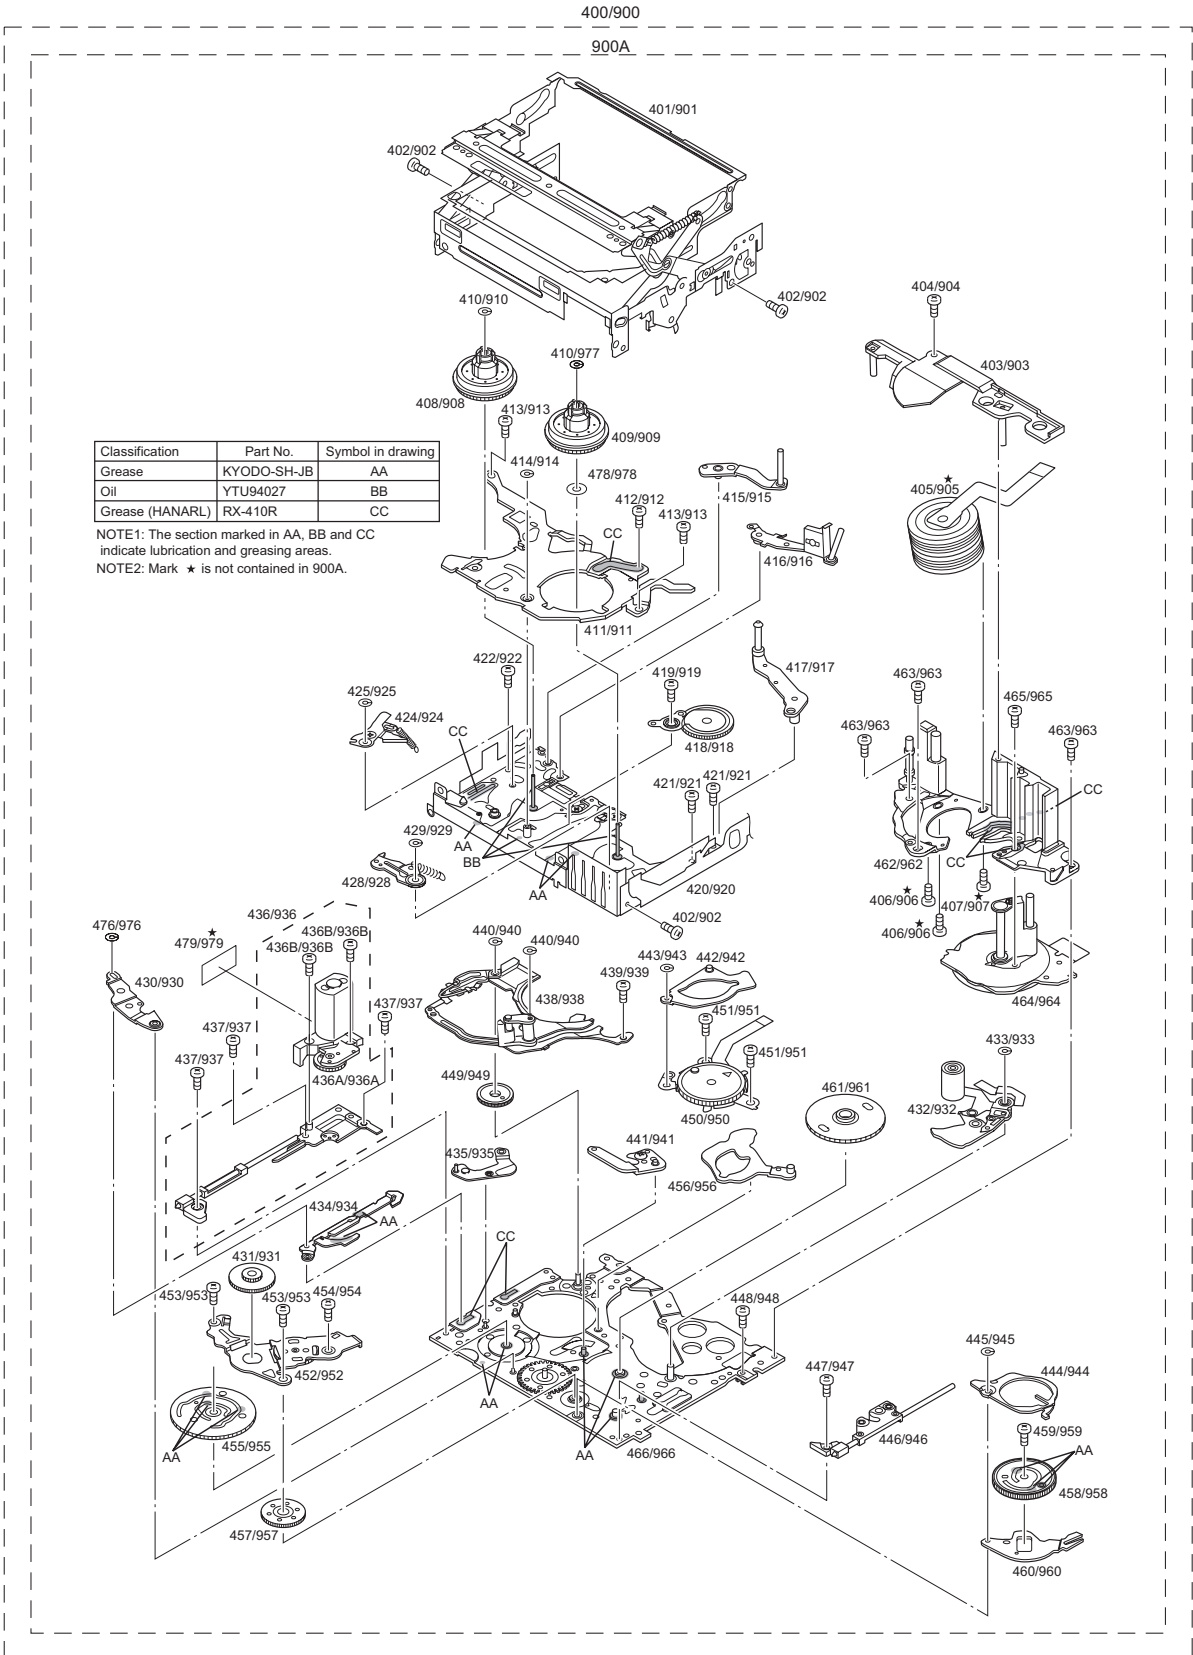


Fig.3-1-1

3.1.1 DVC MECHANISM ASSEMBLY PART LIST

- Since parts numbers described here are the numbers at the time of manual issue, they are subject to change without notice. Therefore, be sure to see a parts list in the service manual of each model as for parts numbers.
- To distinguish the mechanism assembly with the symbol number of 400-499 from the mechanism assembly with the symbol number of 900-999, see the following procedures.

(1) See the numbers on the backside of the MAIN DECK ASSY.

For example, "29D*****" is printed on the backside of the mechanism assembly with the symbol number of 900-999 (YMA0029D in this example). See the first three characters and numbers from the left.

(2) See the color of the SLIT WASHER on the REEL DISK (TU).

A red slit washer is used (the same color as a slit washer of CASSETTE GUIDE (SUP)) in the mechanism assembly with the symbol number of 400-499. A black slit washer is used in the mechanism assembly with the symbol number of 900-999.

However, the black slit washer may be changed into a red one for the purpose of parts unification.


(3) See the color of the CASSETTE GUIDE(SUP).

Light-brown CASSETTE GUIDE(SUP) is used in the mechanism assembly with the symbol number of 400-499.

Black CASSETTE GUIDE(SUP) is used in the mechanism assembly with the symbol number of 900-999.

(4) See the shape of the LED PRISM. LED PRISM consists of only resin in the mechanism assembly with the symbol number of 400-499.

Upper part of the LED PRISM is covered with black metal in the mechanism assembly with the symbol number of 900-999.

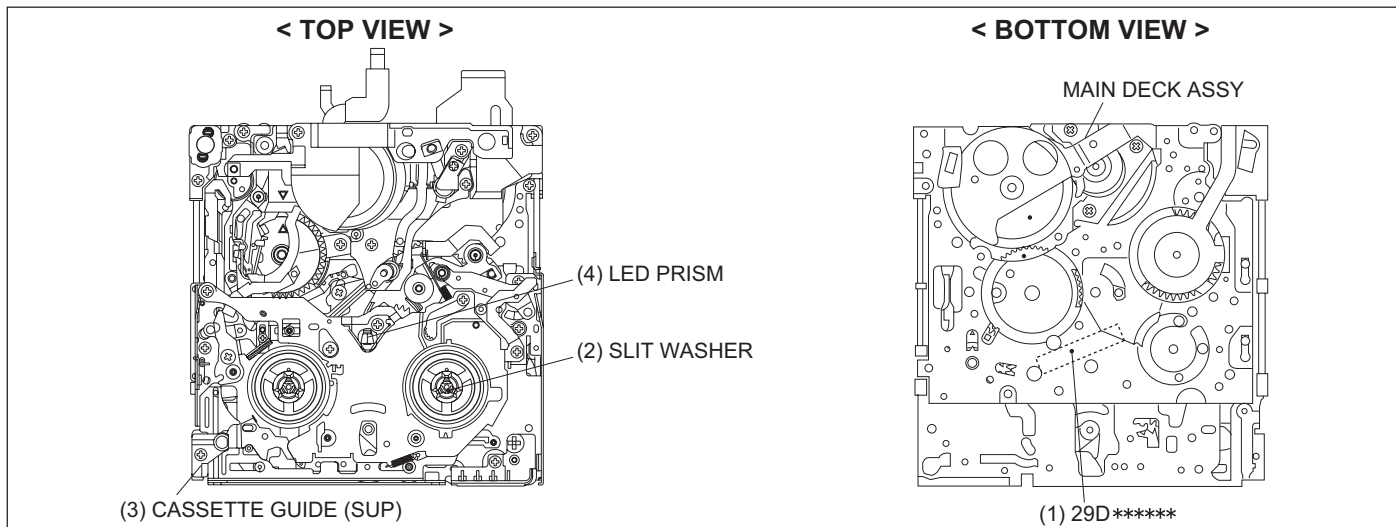

Part Name	Symbol No.	Part No.	Part No.	Part No.	Symbol No.	Part No.	Patr No.
MECHA(A) ASSY	400	YMA0029C	YMA0029M	YMA0029L	900	YMA0029H	YMA0029E
MECHA(A) ASSY	-	-	-	-	900A	YMA0029D	-
CASSETTE HOUSING ASSY	401	LY31543-002E*	LY31543-002H	←	901	LY32870-001G*	LY32870-001J
MINI SCREW,X3	402	YQ43893-8	←	←	902	←	←
UPPER BASE ASSY	403	LY31542-001J	←	←	903	LYH30420-001A	←
MINI SCREW	404	YQ43893*	QYSPSPU1425M	←	904	←	←
DRUM ASSY	405	**	**	**	905	**	**
DAMP.SCREW ASSY,X2	406	LY42820-001A	←	←	906	←	←
DAMP.SCREW ASSY	407	LY42820-002A	←	←	907	←	←
REEL DISK ASSY (SUP)	408	LY31538-001B*	LY31538-001F	←	908	←	←
REEL DISK ASSY (TU)	409	LY31538-002B*	LY31538-002H	LY31538-002G	909	LY31538-002H	←
SLIT WASHER,X2 or X1	410	YQ44246,(x2)	←,(x2)	←,(x2)	910	←*,(x1)	←,(x2)
REEL COVER ASSY	411	LY10217-001A*	LY10217-001F	←	911	LY10372-001D	←
MINI SCREW	412	LY42120-001A*	LY42120-002A	←	912	←	←
MINI SCREW,X2	413	LY41945-003A	←	←	913	←	←
SLIT WASHER	414	YQ44246	←	←	914	←	←
TENSION ARM ASSY	415	LY42025-001C	←	←	915	LY43725-001D	←
SLANT POLE ARM ASSY	416	LY31535-001F	←	←	916	LYH40269-001A	←
TU ARM ASSY	417	LY42031-001G*	LY42031-001K	←	917	LY43731-001F	←
SWING ARM ASSY	418	LY31531-001D	←	←	918	←	←
MINI SCREW	419	YQ43893	←	←	919	←	←
SLIDE DECK FINAL ASSY	420	LY20530-003B*	LY20530-003E	←	920	LYH30424-001A	←

Part Name	Symbol No.	Part No.	Part No.	Part No.	Symbol No.	Part No.	Patr No.
MINI SCREW,X2	421	YQ43893	←	←	921	←	←
MINI SCREW	422	LY43023-001A	←	←	922	←	←
PAD ARM ASSY	424	LY31533-001E	←	←	924	LYH30419-001A	←
SLIT WASHER	425	YQ44246	←	←	925	←	←
TU BRAKE ASSY	428	LY42016-001B	←	←	928	LYH40270-001A	←
SLIT WASHER	429	YQ44246	←	←	929	←	←
TENSION CONTROL LEVER ASSY	430	LY41959-001B	←	←	930	LY43684-001A	←
CENTER GEAR	431	LY31525-001B	←	←	931	LY32861-001A	←
PINCH ROLLER ARM FINAL ASSY	432	LY31516-001E	←	LY31516-001F	932	←	←
SLIT WASHER	433	YQ44246	←	←	933	←	←
TENSION CONTROL PLATE ASSY	434	LY41956-001C	←	←	934	LY43681-001A	←
BRAKE CONTROL LEVER ASSY	435	LY41962-001B*	LY41962-001C	←	935	LY43687-001A	←
MOTOR BRACKET ASSY	436	LY20525-002C	←	←	936	LYH30421-001A	←
LOADING MOTOR	436A	QAR0138-001	←	←	936A	←	←
TAPPING SCREW,x2	436B	LY41940-001A	←	←	936B	←	←
MINI SCREW,x3	437	YQ43893	←	←	937	←	←
GUIDE RAIL ASSY	438	LY20528-001R*	LY20528-001U	←	938	LYH30422-001A	←
MINI SCREW	439	YQ43893	←	←	939	←	←
SLIT WASHER,X2	440	YQ44246	←	←	940	←	←
SLIDE LEVER2 ASSY	441	LY31498-001C	←	LY31498-001D	941	LY32843-001A	←
LOADING PLATE ASSY	442	LY41965-001A	←	←	942	LY43690-001A	←
SLIT WASHER	443	YQ44246	←	←	943	←	←
EJECT LEVER	444	LY31522-001B	←	←	944	LY32858-001A	←
SLIT WASHER	445	YQ44246	←	←	945	←	←
BASE R ASSY	446	LY41929-001E*	LY41929-001F	←	946	LYH40271-001A	←
MINI SCREW	447	YQ43893	←	←	947	←	←
MINI SCREW	448	LY41945-001B	←	←	948	←	←
MODE GEAR	449	LY41930-001A	←	←	949	LY43665-001A	←
ROTARY ENCODER	450	QSW0876-003	←	←	950	←	←
MINI SCREW,X2	451	YQ43893	←	←	951	←	←
GEAR COVER ASSY	452	LY31524-001A	←	←	952	LY32860-001A	←
MINI SCREW,X2	453	YQ43893	←	←	953	←	←
MINI SCREW	454	YQ43893-4	←	←	954	←	←
MAIN CAM ASSY	455	LY41948-001C	←	←	955	LY43676-001A	←
SLIDE ARM ASSY	456	LY41941-001B	←	←	956	←	←
CONNECT GEAR 2	457	LY41951-001B	←	←	957	LY43678-001A	←
SUB CAM ASSY	458	LY41954-001B	←	LY41954-001E	958	←	←
MINI SCREW	459	LY42120-001A	←	←	959	←	←
CONTROL ARM ASSY	460	LY41952-001A	←	←	960	LY43692-001A	←
REEL GEAR 1	461	LY31523-001B	←	←	961	LY32859-001A	←
DRUM BASE ASSY	462	LY31508-002A*	LY31508-002B	LY33372-001A	962	LY31508-002B	←
SCREW,X3	463	QYSPSPU1425M	←	←	963	←	←
CAPSTAN MOTOR	464	QAR0142-001	←	←	964	←	←
MINI SCREW	465	YQ43893	←	←	965	←	←
MAIN DECK ASSY	466	LY10210-001D*	LY10210-001G	←	966	LY10367-001D*	LY10367-001E
SLIT WASHER	476	YQ44246	←	←	976	←	←
SLIT WASHER	477	-	-	-	977	YQ44246-6	-
WASHER	478	-	-	-	978	LY42047-005A	←
SPACER	479	-*	LY43987-001B	←	979	←	←

NOTE:


MARK ← is same as left.

MARK - is not used.

MARK * reference model was also changed.

MARK ** shows different parts number, depending on models.

3-4 (No.86700)

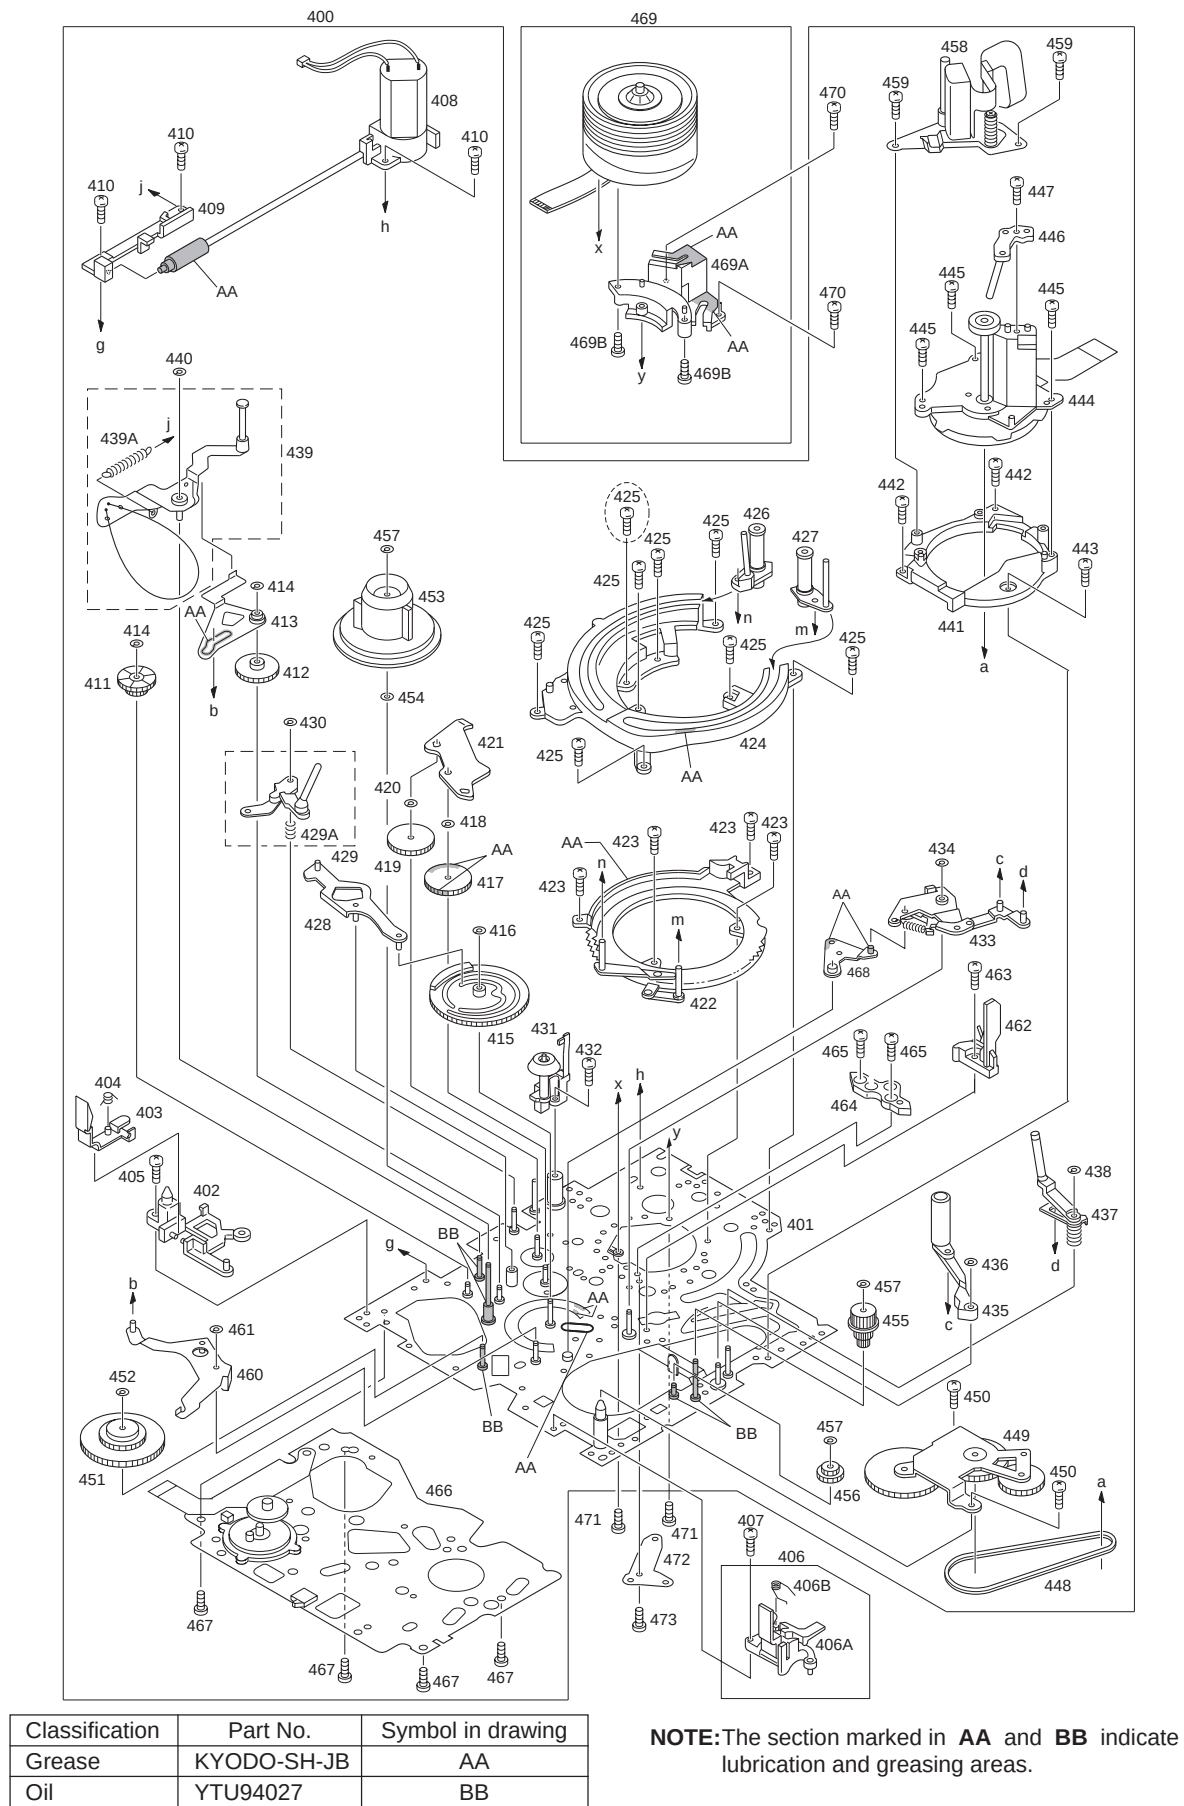

3.2.1 VHS-C MECHANISM ASSEMBLY PARTS LIST

- Since parts numbers described here are the numbers at the time of manual issue, they are subject to change without notice. Therefore, be sure to see a parts list in the service manual of each model as for parts numbers.

Part Name	Symbol No.	Part No.	Part No.	Part No.	Part No.	Part No.
MECHA(B) ASSY	400	YMA0033A-E	YMA0042A-E	YMA0034A-E	YMA0036A-E	YMA0040A-E
MAIN DECK ASSY	401	LY20612-001B	←	←	←	←
CASSETTE GUIDE (LEFT)	402	LY31817-001A	←	←	←	←
SW LEVER (LEFT)	403	LY31815-001A	←	←	←	←
TORSION SPRING	404	LY42581-001A	←	←	←	←
SCREW	405	LY42722-001A	←	←	←	←
CASSETTE GUIDE ASSY(RIGHT)	406	-	-	YQ44339A-7	←	←
SW.LEVER(RIGHT)	406A	-	-	YQ32162-1-3	←	←
TORSION SPRING	406B	-	-	YQ44340-1-4	←	←
SCREW	407	-	-	LY42819-001A	←	←
MOTOR BRACKET ASSY	408	LY31826-001A	←	←	←	←
WORM BRACKET	409	YQ20793	LY20951-001A	YQ20793	←	LY20951-001A
SCREW,X3	410	LY42722-001A	←	←	←	←
WHEEL GEAR	411	LY31925-001A	←	←	←	←
MIDDLE GEAR	412	LY42730-001A	←	←	←	←
CANCEL LEVER ASSY	413	LY42521-001A	←	←	←	←
SLIT WASHER,X2	414	LY42754-003A	←	←	←	←
CONTROL CAM	415	YQ20827-2-1	←	←	←	←
SLIT WASHER	416	PQM30017-25	←	←	←	←
LOADING GEAR(T)ASSY	417	LY42733-001A	←	←	←	←
SLIT WASHER	418	LY42754-003A	←	←	←	←
LOADING GEAR(S)ASSY	419	LY42732-001A	←	←	←	←
SLIT WASHER	420	LY42754-003A	←	←	←	←
COVER PLATE	421	LY42403-001A	←	←	←	←
LOADING RING ASSY	422	LY42452-001A	←	←	←	←
SCREW,X4	423	LY42728-001A	←	←	←	←
GUIDE RAIL	424	LY10239-001A	←	←	←	←
SCREW,X8 or X7	425	LY42728-001A,(X8)	←,(X7)	←,(X8)	←,(X8)	←,(X7)
POLE BASE(S)ASSY	426	LY30161-001B	←	←	←	←
POLE BASE(T)ASSY	427	LY30162-002A	←	←	←	←
DRIVE LEVER ASSY	428	LY42523-001A	←	←	←	←
SLANT ARM ASSY	429	LY42545-001B	LY44000-001B	LY42545-001B	←	LY44000-001B
TORSION SPRING(S)	429A	LY42547-001A	LY43992-001A	LY42547-001A	←	LY43992-001A
SLIT WASHER	430	LY42754-003A	←	←	←	←
ROLLER BASE ASSY	431	LY42739-003A	←	←	←	←
SCREW	432	LY42722-001A	←	←	←	←
LINK ARM ASSY	433	LY42494-001A	←	←	←	←
SLIT WASHER	434	PQM30017-25	←	←	←	←
PINCH ROLLER ARM ASSY	435	LY40018-002A	←	←	LY40018-005A	←
SLIT WASHER	436	PQM30017-25	←	←	←	←
TAKE UP GUIDE ARM ASSY	437	LY42541-001B	←	←	←	←
SLIT WASHER	438	LY42754-003A	←	←	←	←
TENSION ARM ASSY	439	LY42571-001A	←	←	←	←
TENSION SPRING	439A	LY42669-001A	←	←	←	←
SLIT WASHER	440	LY42754-003A	←	←	←	←
MOTOR BASE	441	YQ20797-1-5	←	←	←	←
SCREW,X2	442	LY42722-001A	←	←	←	←
SCREW	443	YQ44460	←	←	←	←
CAPSTAN MOTOR	444	QAR0212-001	QAR0212-002	QAR0212-001	QAR0212-002	←
TAPPING SCREW,X3	445	YQ44304	←	←	←	←
SLANT POLE BASE ASSY	446	LY42731-001A	←	←	←	←
TAPPING SCREW	447	YQ44304	←	←	←	←
TIMING BELT	448	YQ43710-2	←	←	←	←
CENTER PULLEY UNIT	449	LY42678-001A	←	←	←	LY42678-003A

Part Name	Symbol No.	Part No.	Part No.	Part No.	Part No.	Part No.
SCREW,X2	450	LY42722-002A	←	←	←	←
SUPPLY CLUTCH ASSY	451	LY42670-001A	←	←	←	←
SLIT WASHER	452	LY42754-003A	←	←	←	←
REEL DISC	453	YQ31861-1-7	←	←	←	←
WASHER	454	LY42755-001A	←	←	←	←
TAKE UP GEAR	455	LY31924-001A	←	←	←	←
BRAKE SUB GEAR	456	LY42738-001A	←	←	←	←
SLIT WASHER,X3	457	LY42754-003A	←	←	←	←
A/C HEAD UNIT	458	LY42544-001B	LY42544-002A	LY42544-001B	←	LY42544-002A
SCREW,X2	459	SPSN1750Z	←	←	←	←
EJECT LEVER ASSY	460	LY42517-001A	←	←	←	←
SLIT WASHER	461	LY42754-003A	←	←	←	←
LED GUIDE	462	YQ31833-1-1	←	←	←	←
SCREW	463	LY42722-001A	←	←	←	←
DRUM SPACER	464	LY42729-001A	←	←	←	←
SCREW,X2	465	LY42722-001A	←	←	←	←
ROTARY ENCODER	466	QSW0888-001	←	QSW0888-002	←	←
SCREW,X4	467	LY42722-002A	←	←	←	←
LINK LEVER	468	LY31814-001A	←	←	←	←
DRUM FINAL ASSY	469	**	**	**	**	**
CATCHER	469A	YDM1003-1-5	←	←	←	←
SCREW,X2	469B	QYSPSPU1735M	←	←	←	←
SCREW,X2	470	LY42722-001A	←	←	←	←
SCREW,X2	471	SPSH1740Z	←	←	←	←
BRUSH	472	LY43542-001A	←	←	←	←
SCREW	473	LY42722-003A	←	←	←	←
CASSETTE HOUSING FINAL ASSY	*155/481	LY31808-001C	LY31808-002C	LY31808-001C	LY31808-001D	LY31808-002C
SCREW,X4	*156/482	LY42722-003A	←	←	←	←
BRACKET(MECHA)	*161/484	LY32326-001A	←	←	←	←
SCREW,X2	*162/485	LY42722-003A	←	←	←	←
SIDE BRACKET L	*164/487	LY31807-001A	←	←	←	←
SCREW	*165/488	LY42722-003A	←	←	←	←

NOTE:

MARK ← is same as left.

MARK - is not used.

MARK * are shown in the parts list of FINAL ASSY of service manual of each model.

MARK ** shows different parts number, depending on models.

3.3 VHS MECHANISM ASSEMBLY

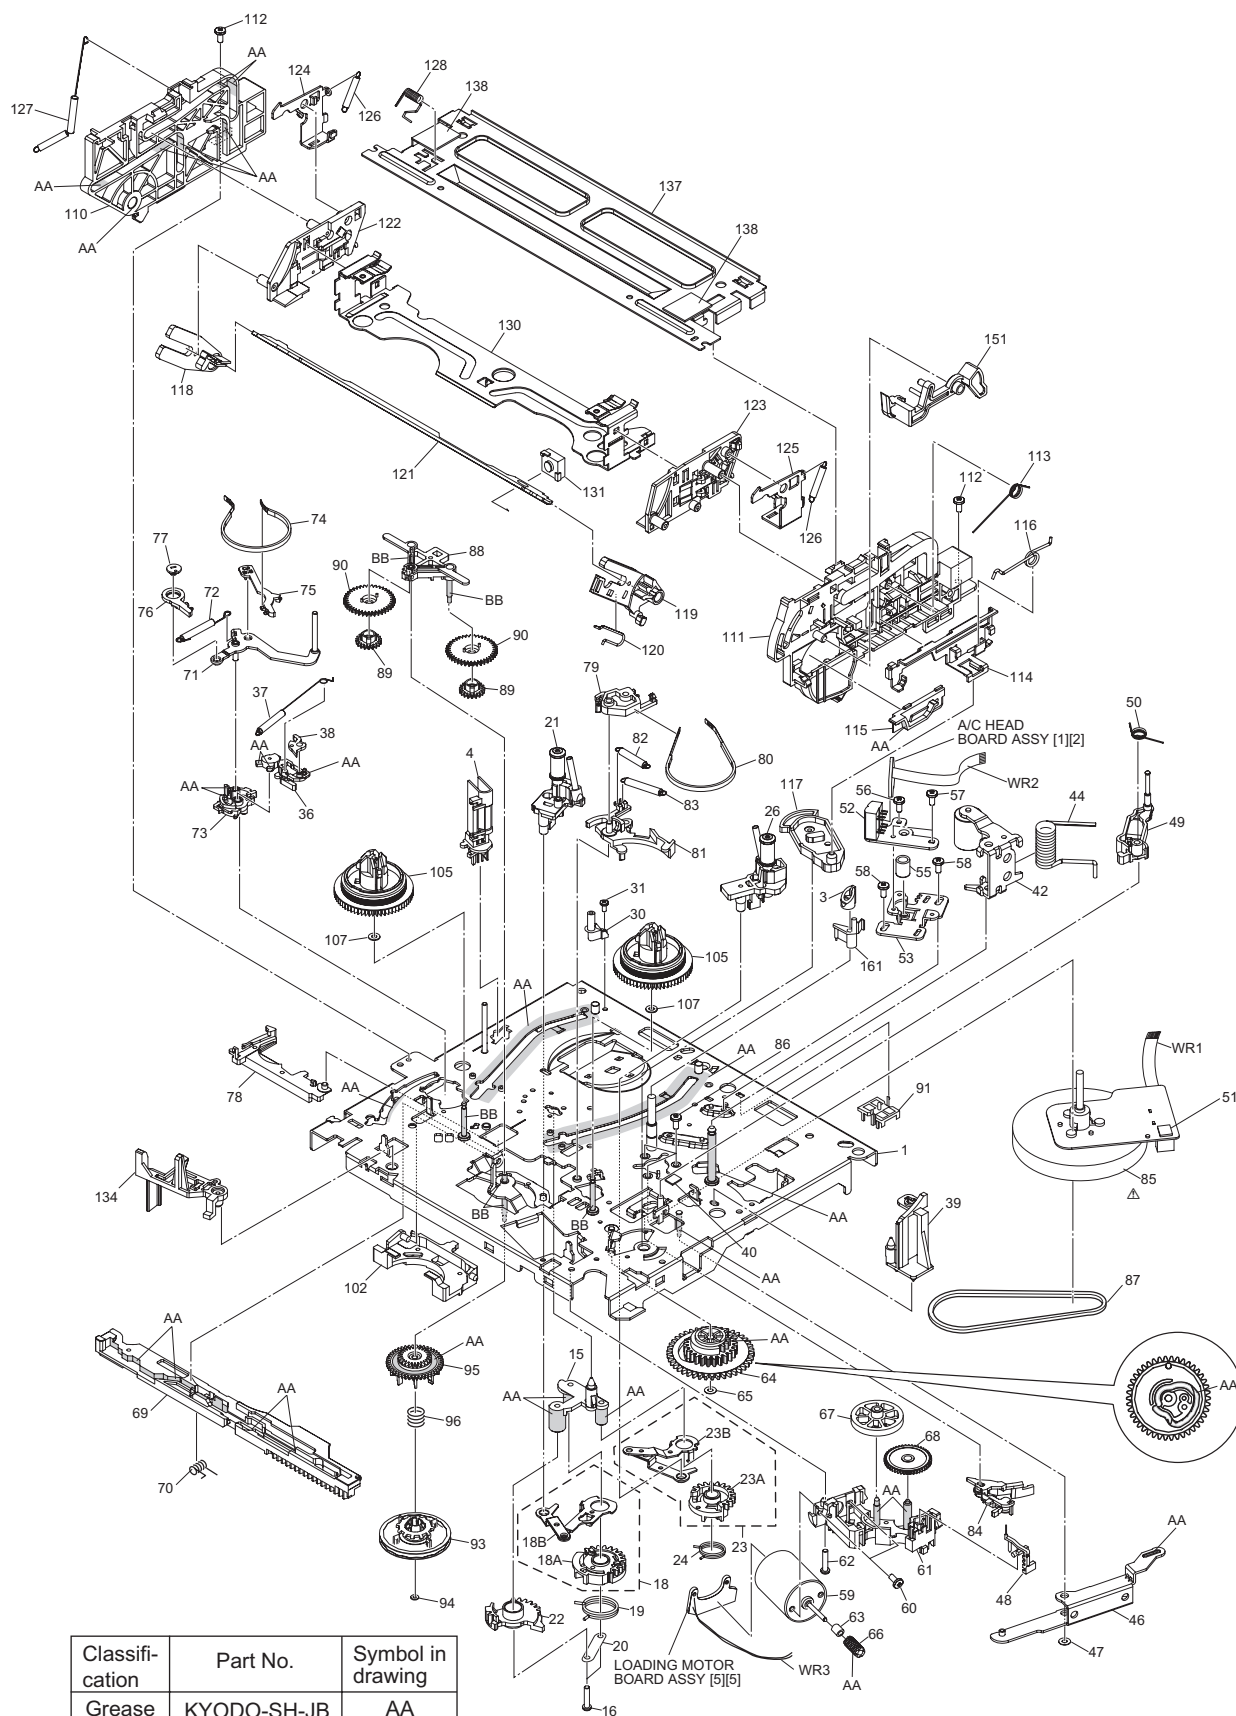


Fig.3-3-1

3.3.1 VHS MECHANISM ASSEMBLY PARTS LIST

- Since parts numbers described here are the numbers at the time of manual issue, they are subject to change without notice. Therefore, be sure to see a parts list in the service manual of each model as for parts numbers.

System		VHS		S-VHS	
**Job No.		V15D Series	V16D Series	V15S Series	V16S Series
Part Name	Symbol No.	Part No.	Part No.	Part No.	Part No.
MAIN DECK ASSY	1	LP21039-001N	LP21039-001S	LP21039-001R	LP21039-001S
GUIDE POLE CAP	3	LP40097-002D	←	←	←
FULL ERASE HEAD	4	QAH0082-001	←	←	←
LOAD.GEAR BASE	15	LP30958-001B	←	←	←
SCREW,X2	16	QYTPST2620Z	←	←	←
LORD.GEAR(SUPPLY) ASSY	18	LP40798-001A	←	←	←
LORD.GEAR(SUPPLY)	18A	LP21040-001A	←	←	←
LORD.ARM(SUPPLY) ASSY	18B	LP40799-001A	←	←	←
TORSION SPRING(SUPPLY)	19	LP40837-001A	←	←	←
FIXING PLATE	20	LP40903-001A	←	←	←
POLE BASE ASSY(SUPPLY)	21	LP40806-001D	←	←	←
LOAD GEAR	22	LP30959-002A	←	←	←
LORD. GEAR(TAKE UP) ASSY	23	LP40802-001B	LP40802-001C	LP40802-001B	LP40802-001C
LORD. GEAR(TAKE UP)	23A	LP21041-001B	LP21041-001C	LP21041-001B	LP21041-001C
LORD.ARM(TAKE UP) ASSY	23B	LP40803-001A	←	←	←
TORSION SPRING(TAKE UP)	24	LP40838-001A	←	←	←
POLE BASE ASSY(TAKE UP)	26	LP40808-001F	LP40808-001E	←	←
ARM BASE	30	-	←	LP31020-004A	←
SCREW	31	-	←	QYTDST2606Z	-
TU LEVER	36	LP21055-001E	←	←	←
TENSION SPRING	37	LP40943-001A	←	←	←
T-UP HEAD	38	LP40859-001D	←	←	←
LID GUIDE	39	LP30961-001C	←	←	←
SPACER	40	LP30002-0B7A	←	←	-
PINCH ROLLER ARM ASSY	42	LP40810-001A	←	←	←
TORSION SPRING	44	LP40840-001C	LP40840-001D	←	←
PRESS LEVER	46	LP30963-001B	←	←	←
SLIT WASHER	47	PQM30017-24	←	←	←
S-SWITCH	48	-	←	LP40930-002E	←
GIDE ARM ASSY	49	LP40813-001D	←	←	←
TORSION SPRING	50	LP40841-001A	←	←	←
SPACER	51	LP30002-090A	←	←	-
A/C HEAD	52	QAH0081-001	←	←	←
HEAD BASE	53	LP30965-001A	←	←	←
COMPRESSION SPRING	55	LP40842-001A	LP40842-001D	LP40842-001A	LP40842-001D
SCREWX1 A/C HEAD	*56	QYTDST2006M	←	←	←
A/C HEAD SCREW,X2	*57	LP41036-001A	←	←	←
SCREW,X2 A/C HEAD	*58	QYTDST2606Z	←	←	←
LOADING MOTOR	59	QAR0023-001	←	←	←
SCREW,X2	60	QYTPSP3003Z	←	←	←
MOTOR BRACKET	61	LP21056-002F	LP21056-002G	←	←
TAP SCREW	62	QYTPST2620Z	←	←	←
WORM BEARING	63	LP40814-001B	←	←	←
CONTROL CAM	64	LP21044-001D	←	←	←
SLIT WASHER	65	PQM30017-24	←	←	←
WORM GEAR	66	LP40815-001A	←	←	←
HELICAL GEAR	67	LP40816-001B	←	←	←
CONNECT GEAR	68	LP40817-001A	←	←	←

System		VHS		S-VHS	
**Job No.		V15D Series	V16D Series	V15S Series	V16S Series
Part Name	Symbol No.	Part No.	Part No.	Part No.	Part No.
CONTROL PLATE	69	LP10400-001H	←	←	LP10400-001J
TORTION SPRING	70	LP40843-001A	←	←	←
TENSION ARM ASSY	71	LP40818-001B	←	←	←
TENSION SPRING	72	LP40844-001C	LP40844-001E	LP40844-001D	LP40844-001E
TENSION ARM BASE	73	LP21045-001D	←	←	←
TENSION BAND ASSY	74	LP40821-001A	←	←	←
BAND HOLDER-1	75	LP30967-001B	←	←	←
BAND HOLDER-2	76	LP30968-001C	←	←	←
ADJUST PIN	77	LP40822-002B	←	←	←
TENSION ARM LEVER	78	LP31000-005E	←	←	←
MAIN BRAKE(TAKE UP)	79	LP21046-001C	←	←	←
BAND BRAKE ASSY	80	LP40824-001A	←	←	←
BRAKE LEVER	81	LP30969-002A	LP30969-002B	LP30969-002A	LP30969-002B
TENSION SPRING	82	LP30003-033B	←	←	←
TENSION SPRING	83	LP30003-035B	←	←	←
CAPSTAN BRAKE ASSY	84	LP40825-001B	←	←	←
CAPSTAN MOTOR	85	QAR0204-002	←	←	←
SCREW,X3 CAPSTAN MOTOR	86	QYTPSG2606M	QYTPSG2606Z	QYTPSG2606M	QYTPSG2606Z
BELTCAPSTAN MOTOR	87	LP30005-010A	←	←	←
IDLER ARM	88	LP30970-001A	←	←	←
IDLER GEAR 1,X2	89	LP40828-004A	←	←	←
IDLER GEAR 2,X2	90	LP40829-001B	LP40829-002A	LP40829-001B	LP40829-002A
WIRE HOLDER	91	LP31014-001A	←	←	←
CLUTCH UNIT	93	LP40934-001B	←	←	←
SLIT WASHER	94	PQM30017-47	←	←	←
DIRECT GEAR	95	LP30973-001A	←	←	←
COMPRESS. SPRING	96	LP40939-001A	←	←	←
CHANGE LEVER	102	LP30974-001B	←	←	←
REEL DISK,X2	105	LP21049-001A	←	←	←
SPACER,X2	107	LP30017-004A	←	←	←
SIDE FRAME(L)	110	LP10401-001F	LP10401-001H	LP10401-001F	LP10401-001H
SIDE FRAME(R)	111	LP10402-001F	LP10402-001K	LP10402-001G	LP10402-001K
SCREW,X2	112	QYTDST2606Z	←	←	←
TORSION SPRING	113	LP40917-001C	LP40917-001D	←	←
SIDE PLATE	114	LP30976-001D	LP30976-001E	←	←
LIMIT PLATE	115	LP30977-002D	←	←	←
LIMIT SPRING	116	LP40846-001C	←	←	←
DRIVE LEVER	117	LP31100-001B	←	←	←
DRIVE ARM(L)	118	LP30978-001B	←	←	←
DRIVE ARM(R)	119	LP30979-001H	LP30979-001N	LP30979-001H	LP30979-001N
TORSION SPRING	120	LP40847-001B	←	←	←
CONNECT PLATE	121	LP30980-001A	LP30980-001E	LP30980-001B	LP30980-001E
SIDE HOLDER(L)	122	LP10403-001C	←	←	←
SIDE HOLDER(R)	123	LP10404-001D	LP10404-001E	←	←
LOCK LEVER(L)	124	LP30983-001A	LP30983-001B	LP30983-001A	LP30983-001B
LOCK LEVER(R)	125	LP30984-001A	LP30984-001B	LP30984-001A	LP30984-001B
TENSION SPRING,X2	126	LP40924-001C	LP40924-001D	←	←
EARTH SPRING(1)	127	LP40856-001A	←	LP40856-001B	LP40972-001A
EARTH SPRING(2)	128	LP40857-001B	←	←	←
C.HOLDER ASSY	130	LP30981-001E	LP30981-001G	LP30981-001F	LP30981-001G
C.H STOPPER	131	LP31135-001A	-	LP31135-001A	-

System		VHS		S-VHS	
**Job No.		V15D Series	V16D Series	V15S Series	V16S Series
Part Name	Symbol No.	Part No.	Part No.	Part No.	Part No.
R.SAFETY LEVER	134	LP21051-002C	←	←	←
TOP FRAME	137	LP21052-001F	LP21052-001J	LP21052-001H	LP21052-001J
SPACER	138	LP30002-0A7A	-	LP30002-0A7A	-
DOOR OPENER	151	LP30985-001G	←	←	←
TAPE GUIDE	161	-	LP40993-001A	-	LP40993-001A
E-CARD WIRE DRUM.M	WR1	WJT0059-001C	WJT0059-001E	WJT0059-001D	WJT0059-001E
E-CARD WIRE AC HEAD CN2001	WR2	WJT0067-001B	←	←	←
E-FL/RB WIRE LOADING MOTOR	WR3	WJS0022-001A	←	←	←
MEMO	-	PMD0035B-C	PMD0040A-C	PMD0036B-C /PMD0039A-C	PMD0037A-C /PMD0041A-C

NOTE:

MARK ← is same as left.

MARK - is not used.

MARK * shows that Symbol No. and Parts No. may sometimes be different from those in each manual. See the table below for final Symbol No. and Parts No.

MARK ** is Job No.

To identify a model, see the Job No. of the model.

Job No. is shown just above the service manual number at the lower right of the service manual of each model.